






DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

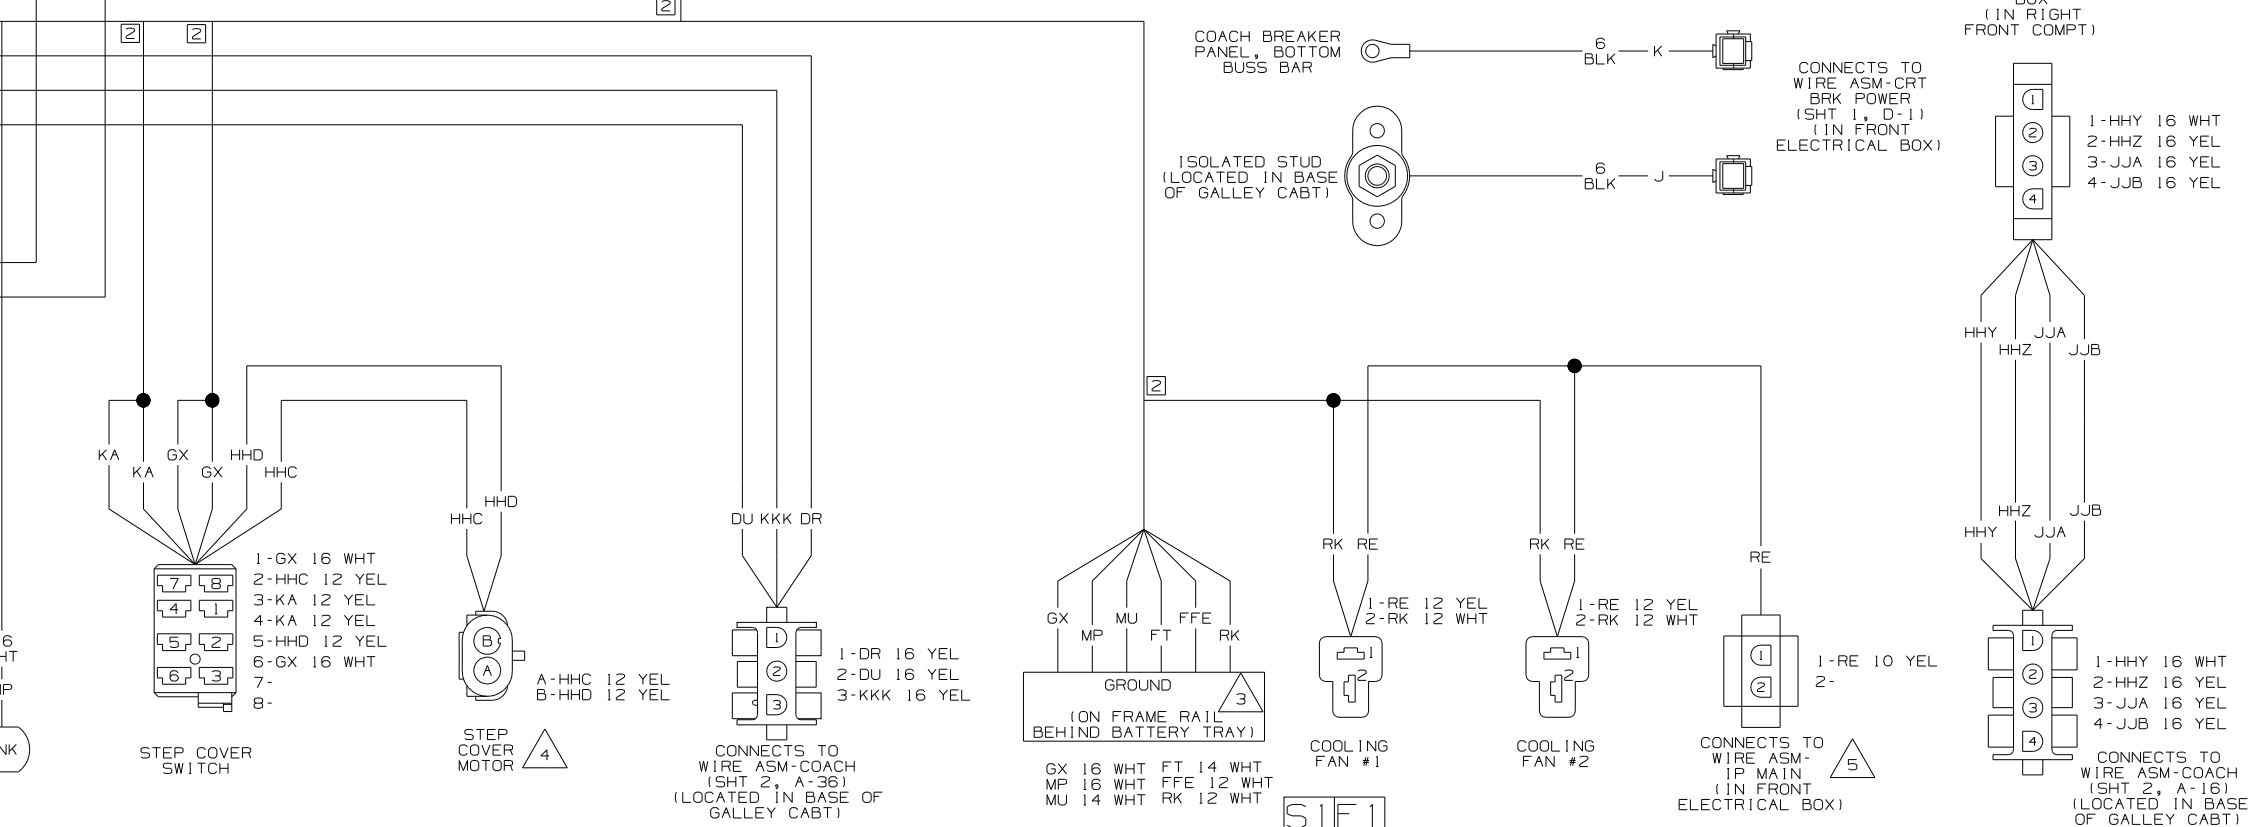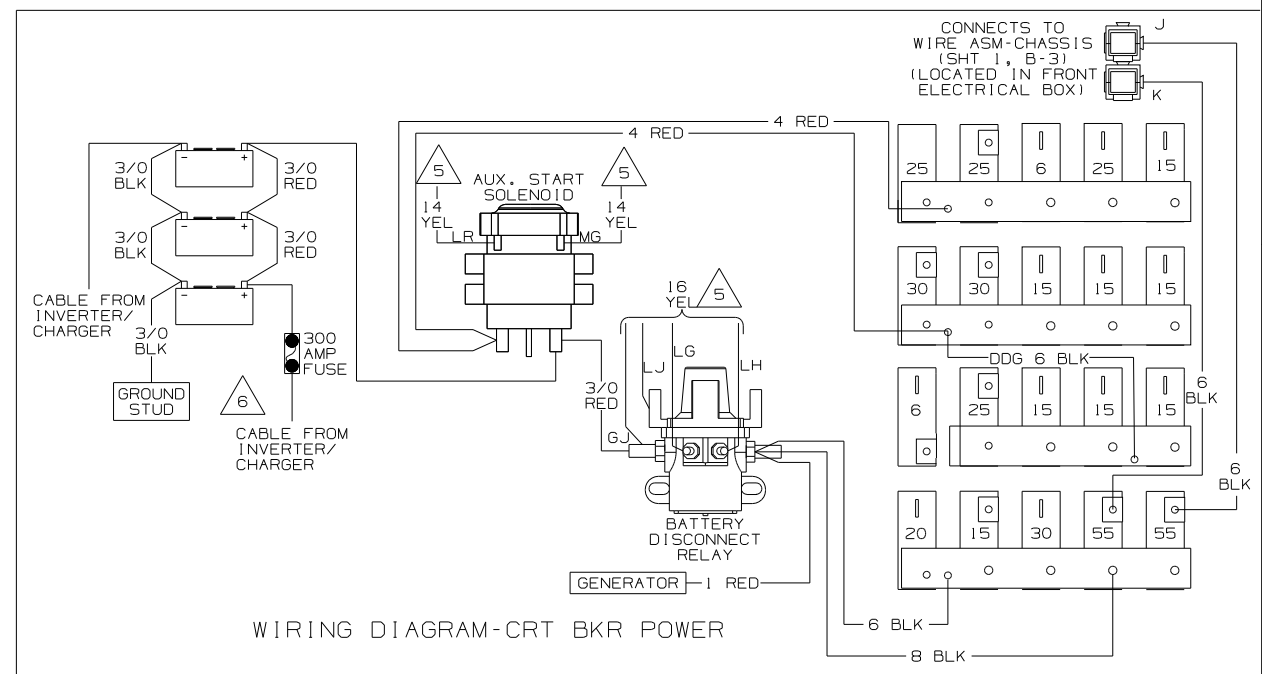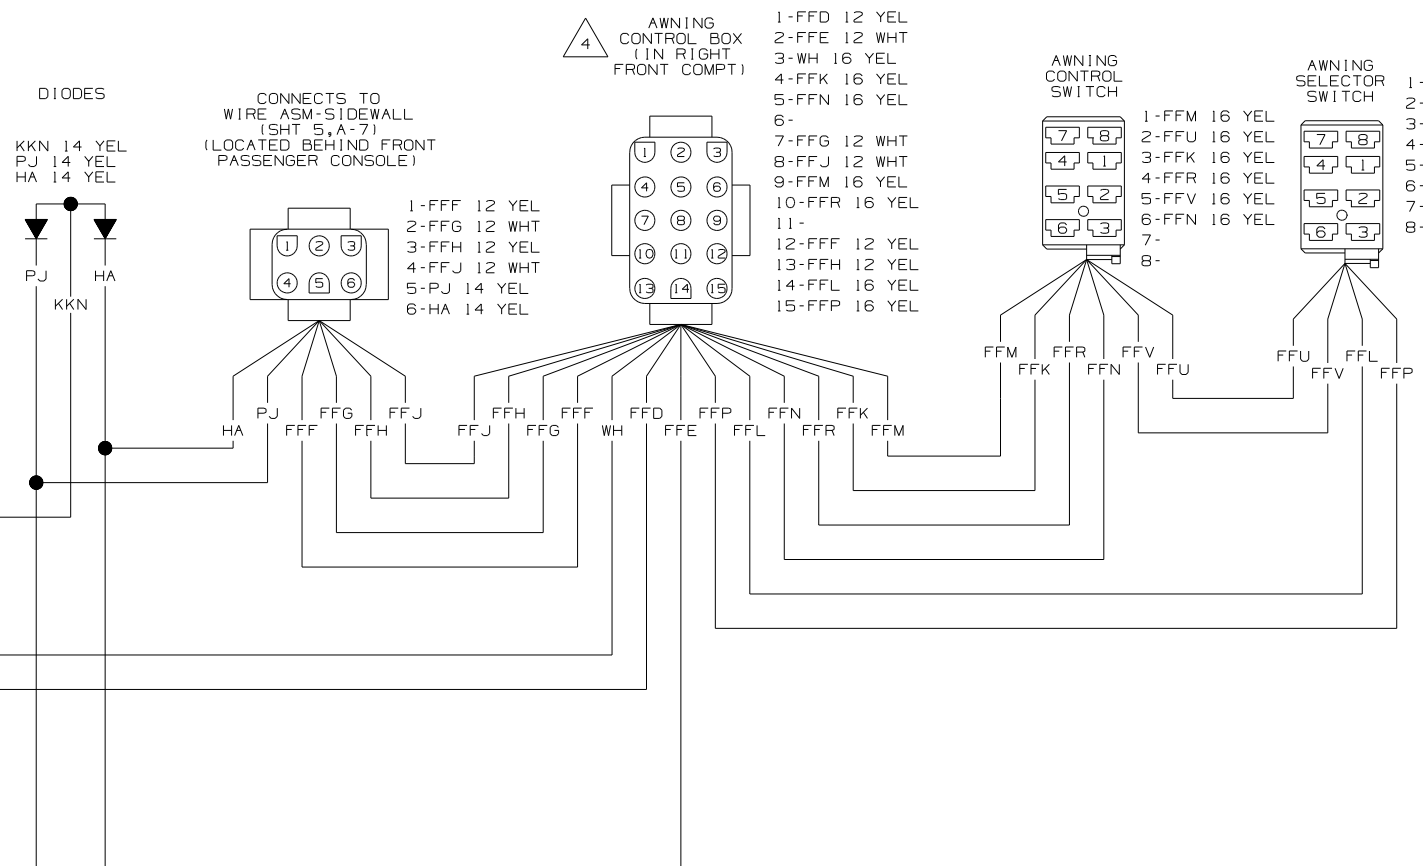

WINNEBAGO

DFTR	ORIG. DATE
CHNR	ALL DIMENSIONS ARE IN MILLIMETERS
P.E.	FIRST USED
M.E.	05 P32T
DSNR	UNSPECIFIED TOLERANCES ARE:
	MATERIAL:
	WHOLE DIM (X) :
	ONE-PLACE (X, X) :
	TWO-PLACE (X, XX) :
	ANGLE :
	THIRD ANGLE PROJECTION





DO NOT SCALE DRAWING

TITLE: **WIRING DIAGRAM-BODY, 12V**


SHEET 1 of 6 PART NO 151722

S1F1


- A1-AAX 16 WHT
- A2-EEA 12 WHT
- A3-FS 14 YEL
- B1-DDT 12 YEL
- B2-DDU 12 WHT
- B3-DDV 12 YEL
- B4-DDW 12 WHT
- C1-DDZ 12 YEL
- C2-HHM 16 YEL
- D1-LL 16 WHT
- D2-LM 16 WHT
- D3-LN 16 WHT
- D4-HU 16 YEL
- E1-MM 14 YEL
- F1-MK 14 YEL
- F2-LP 16 YEL
- G1-DL 16 YEL
- G2-DM 16 WHT
- G3-DJ 16 YEL
- G4-DK 16 WHT
- H1-HHN 16 YEL
- H2-PX 16 YEL
- J1-KKN 14 YEL
- J2-WH 16 YEL
- J3-ER 16 YEL
- J4-PY 16 WHT
- K1-FFD 12 YEL
- K2-KA 12 YEL
- K3-AAW 16 YEL

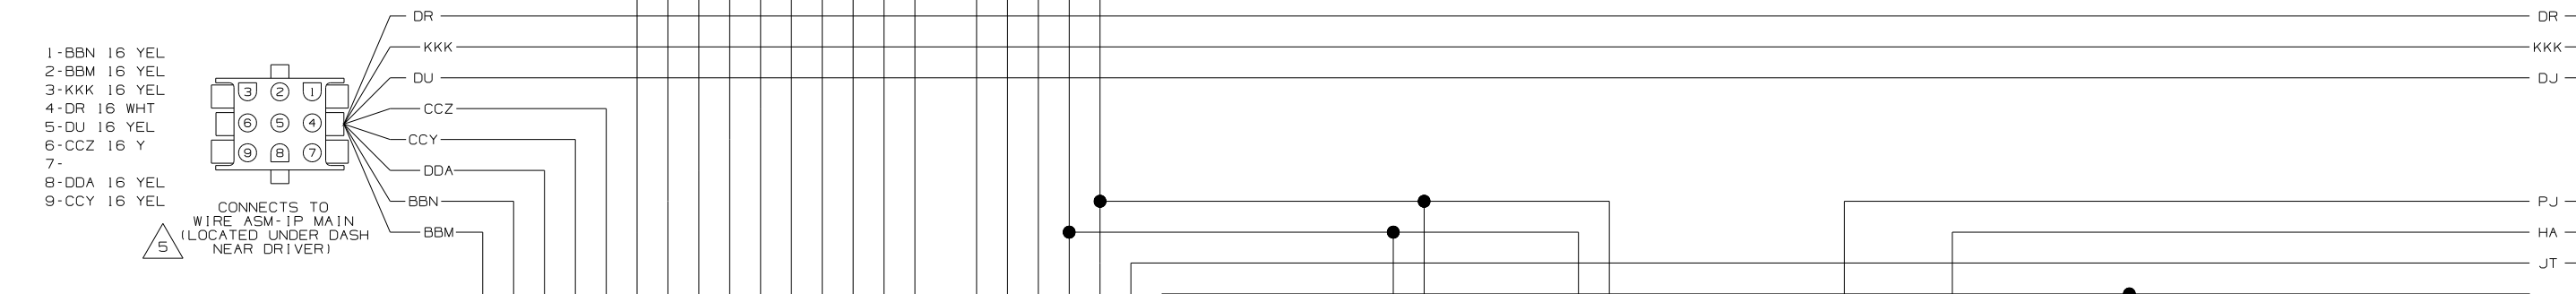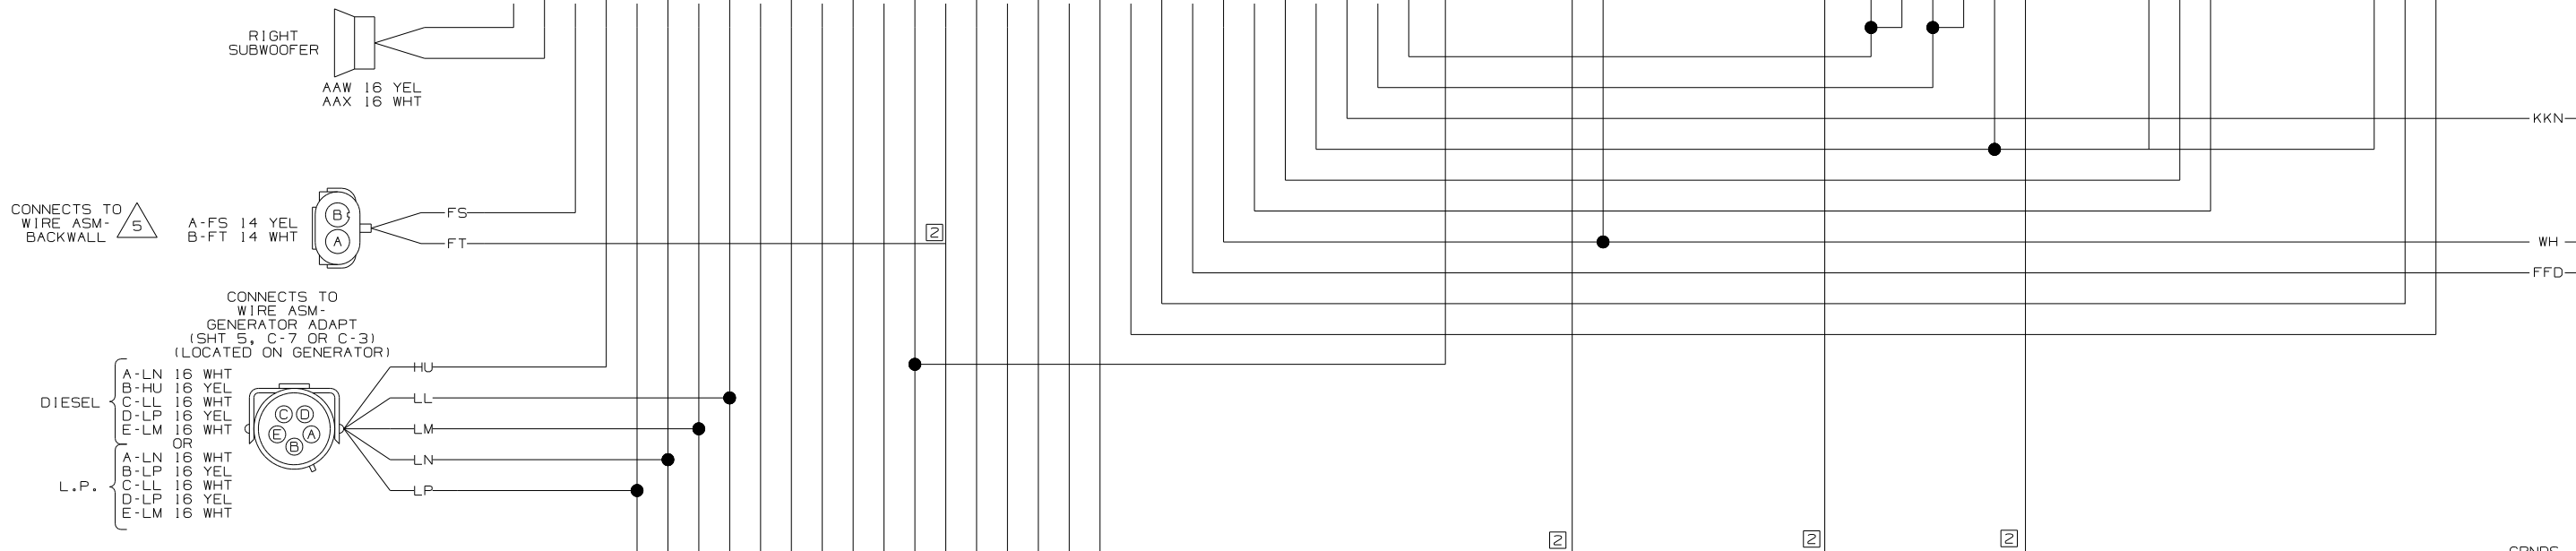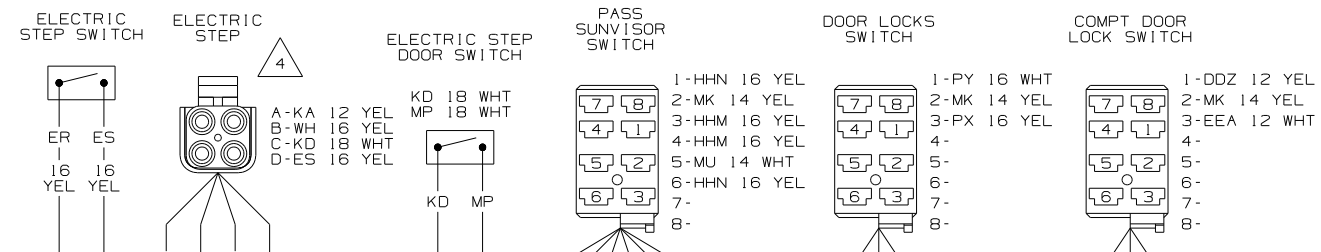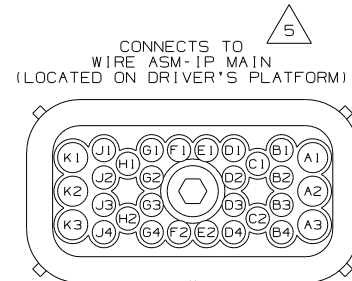




- NOTES:
- 1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.
 - 2. NOT A SPLICE POINT. INDICATES ENTRY INTO WIRING HARNESS.
 - 3. GROUNDS ARE SHOWN AS A SINGLE LINE FOR EASE IN TRACING. EACH GROUND CIRCUIT IS SEPERATE IN THE HARNESS.
 - 4. SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.
 - 5. SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.
 - 6. WITHOUT INVERTER-CHARGER THERE ARE ONLY TWO BATTERIES AND NO 300 AMP FUSE.

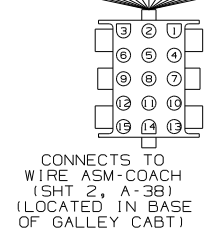


- 1-BBM 16 YEL
- 2-BBN 16 YEL
- 3-DDA 16 YEL
- 4-CCY 16 YEL
- 5-CCZ 16 YEL
- 6-DM 16 WHT
- 7-DJ 16 YEL
- 8-DK 16 WHT
- 9-LL 16 WHT
- 10-LM 16 WHT
- 11-LN 16 WHT
- 12-LP 16 YEL
- 13-IHS 16 YEL
- 14-MM 14 YEL
- 15-ER 16 YEL

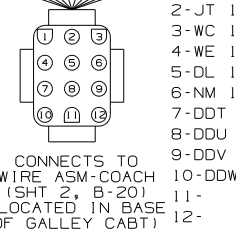

- 1-NW 14 YEL
- 2-JT 16 YEL
- 3-WC 14 YEL
- 4-WE 14 WHT
- 5-DL 16 YEL
- 6-NM 14 YEL
- 7-DDT 12 YEL
- 8-DDU 12 WHT
- 9-DDV 12 YEL
- 10-DDW 12 WHT
- 11-
- 12-

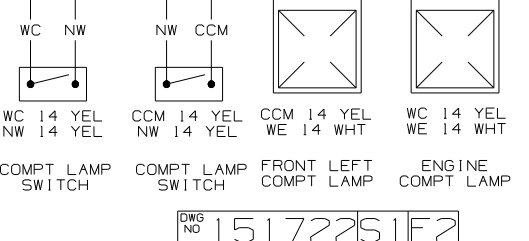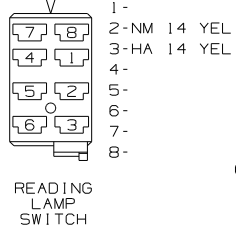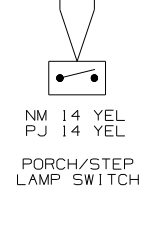


- EED 12 WHT
- UK 16 WHT
- HHB 14 WHT
- GL 16 WHT
- ND 14 WHT
- NC 14 WHT
- PM 14 WHT
- JX 14 WHT
- NE 14 WHT
- MS 14 WHT
- JM 14 WHT
- NF 14 WHT
- EU 16 WHT
- IHT 16 WHT
- JY 12 WHT
- WE 14 WHT
- JP 14 WHT
- U 6 GRN
- L 6 GRN

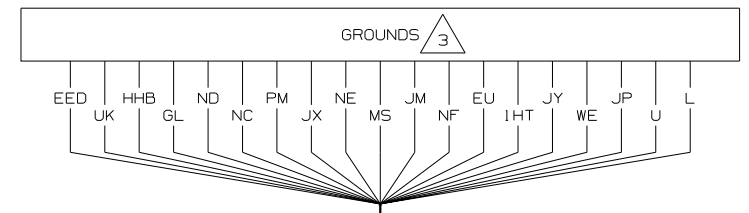


CONNECTS TO WIRE ASM-RESISTOR,FAN (SHT 5, D-2) (LOCATED BEHIND BDRM CEILING FAN SWITCH)

HALL LAMP SWITCH

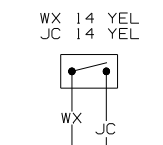


FAN SWITCH

- FFY 14 YEL
- JG 14 YEL
- GGX 14 YEL

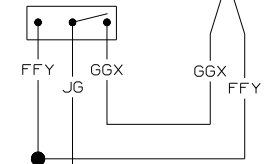


CONNECTS TO WIRE ASM-SIDEWALL,RR (SHT 4, A-4) (LOCATED IN BASE OF GALLEY CABT)

 - 1-JF 14 YEL
- 2-NF 14 WHT




CONNECTS TO WIRE ASM-SIDEWALL, RIGHT (SHT 5, B-7) (LOCATED IN BASE OF GALLEY CABT)

- 1-PM 14 WHT
- 2-PL 14 YEL
- 3-FFW 14 YEL
- 4-FFX 14 YEL
- 5-JG 14 YEL
- 5-JN 14 WHT

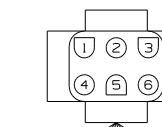


LOUNGE CEILING LAMP SWITCH

 

- FFW 14 YEL
- NM 14 YEL
- FFX 14 YEL

 CONNECTS TO LP DETECTOR 4




- 1-UK 16 WHT
- 2-NM 14 YEL
- 3-WB 16 YEL

CONNECTS TO REAR SPLITTER (LOCATED BEHIND BEDROOM TV)



 YEL



CABLE JACK (LOCATED IN EXT ENT CTR)

CONNECTS TO WIRE ASM-ROOF



RED

 


CABLE INPUT (LOCATED IN POWERCORD COMPT)


CONNECTS TO WIRE ASM-ROOF



GLD




CABLE INPUT (LOCATED IN POWERCORD COMPT)

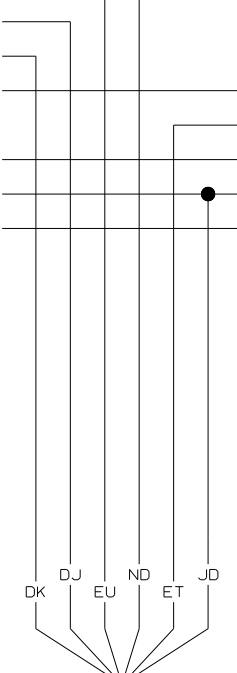

- 1-JD 14 YEL
- 2-ND 14 WHT
- 3-EU 16 WHT
- 4-ET 16 YEL
- 5-DJ 14 YEL
- 6-DK 14 WHT

 CONNECTS TO WIRE ASM-SIDEWALL, LEFT (SHT. 4, D-1) (LOCATED UNDER FRONT DINETTE SEAT)




- 1-EEC 12 YEL
- 2-EED 12 WHT

CONNECTS TO WIRE ASM-SOFA (SHT 6, C-5) (LOCATED BEHIND SOFA)



 
CONVERTER CHASSIS GROUND



CONVERTER OUTPUT




ISOLATED STUD (LOCATED IN BASE OF GALLEY CABT)

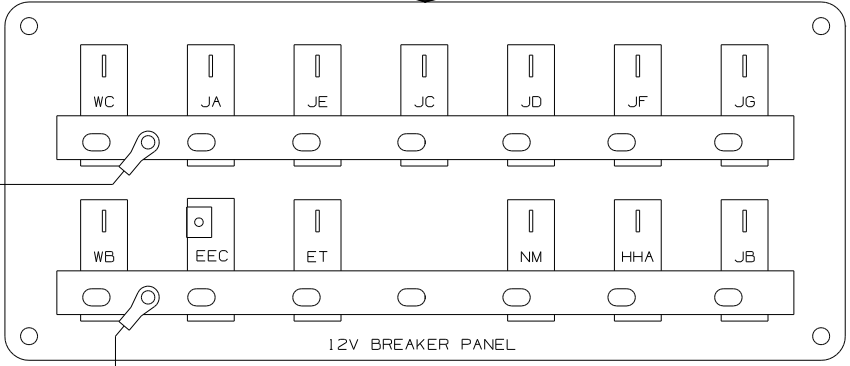



- JA 12 YEL
- JF 14 YEL
- JD 14 YEL
- NM 14 YEL
- JC 14 YEL
- WC 14 YEL
- JE 14 YEL
- JB 14 YEL
- HHA 14 YEL
- WB 16 YEL
- ET 16 YEL
- EEC 12 YEL

WIRING DIAGRAM-COACH (WIRE ASM 151719 REV-A)


FIRST USED	05 P32T	
TITLE	DO NOT SCALE DRAWING	
TITLE	WIRING DIAGRAM-BODY, 12V	
SHEET	2	PART NO 151722

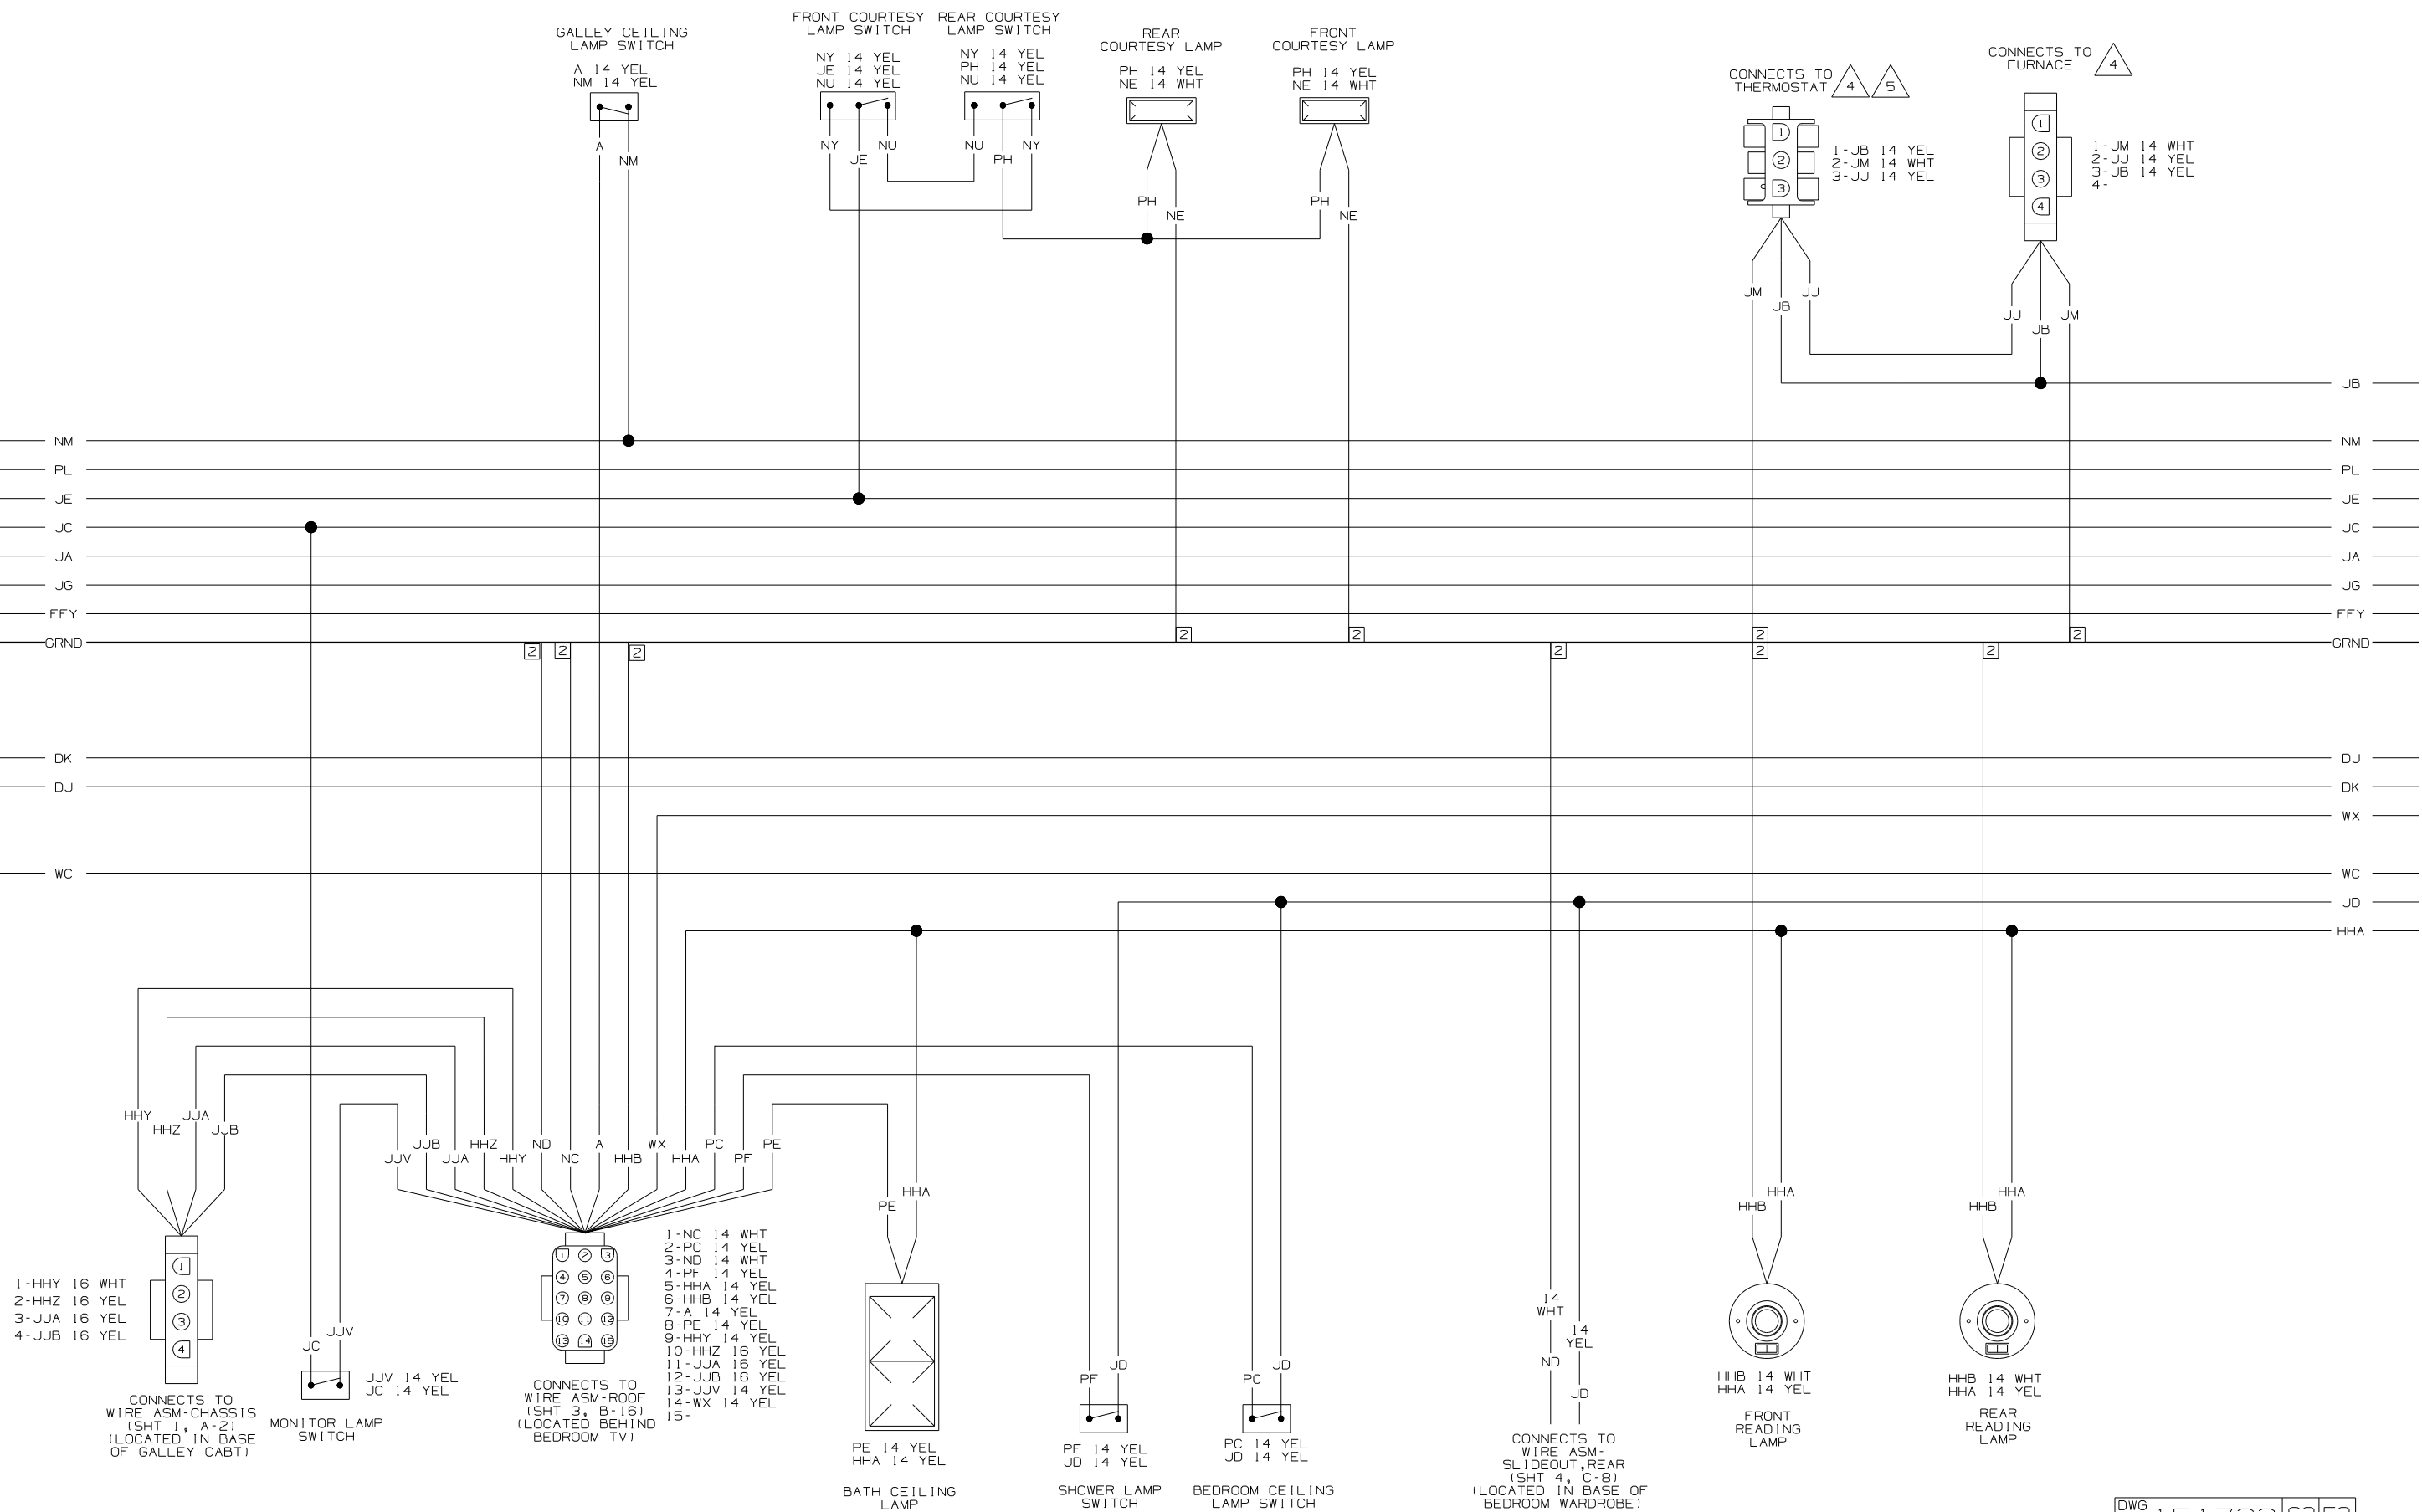

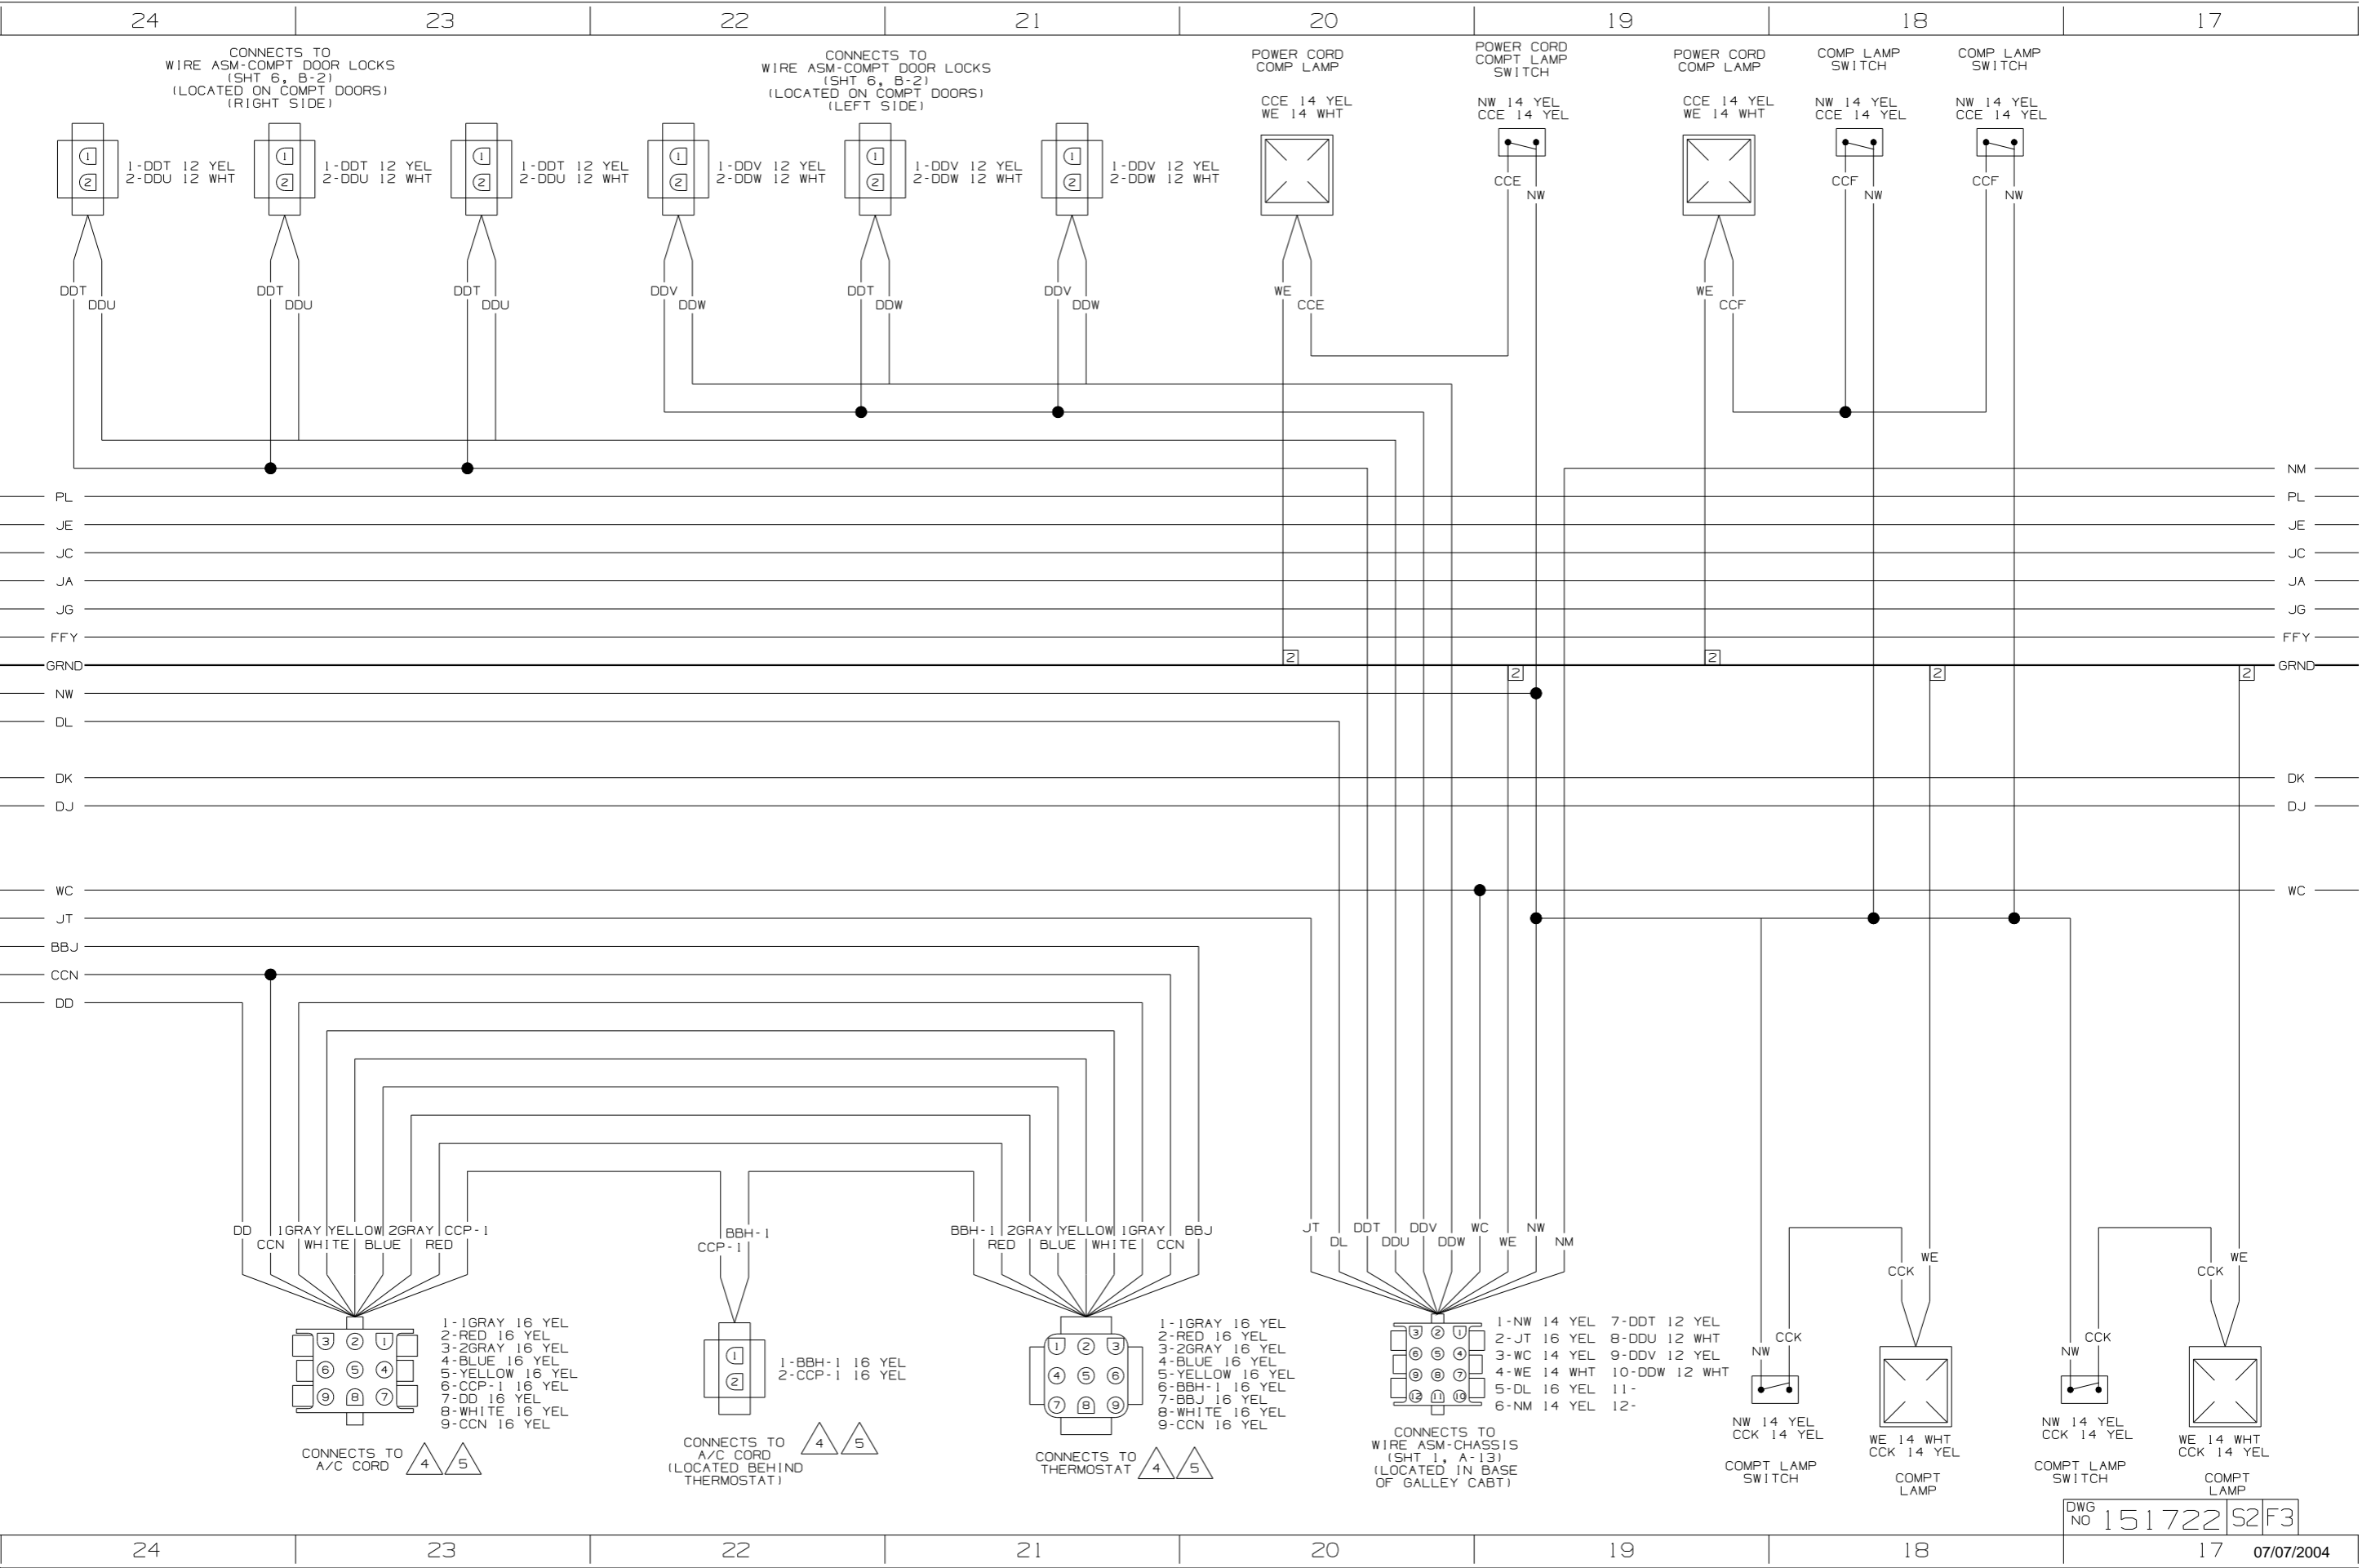

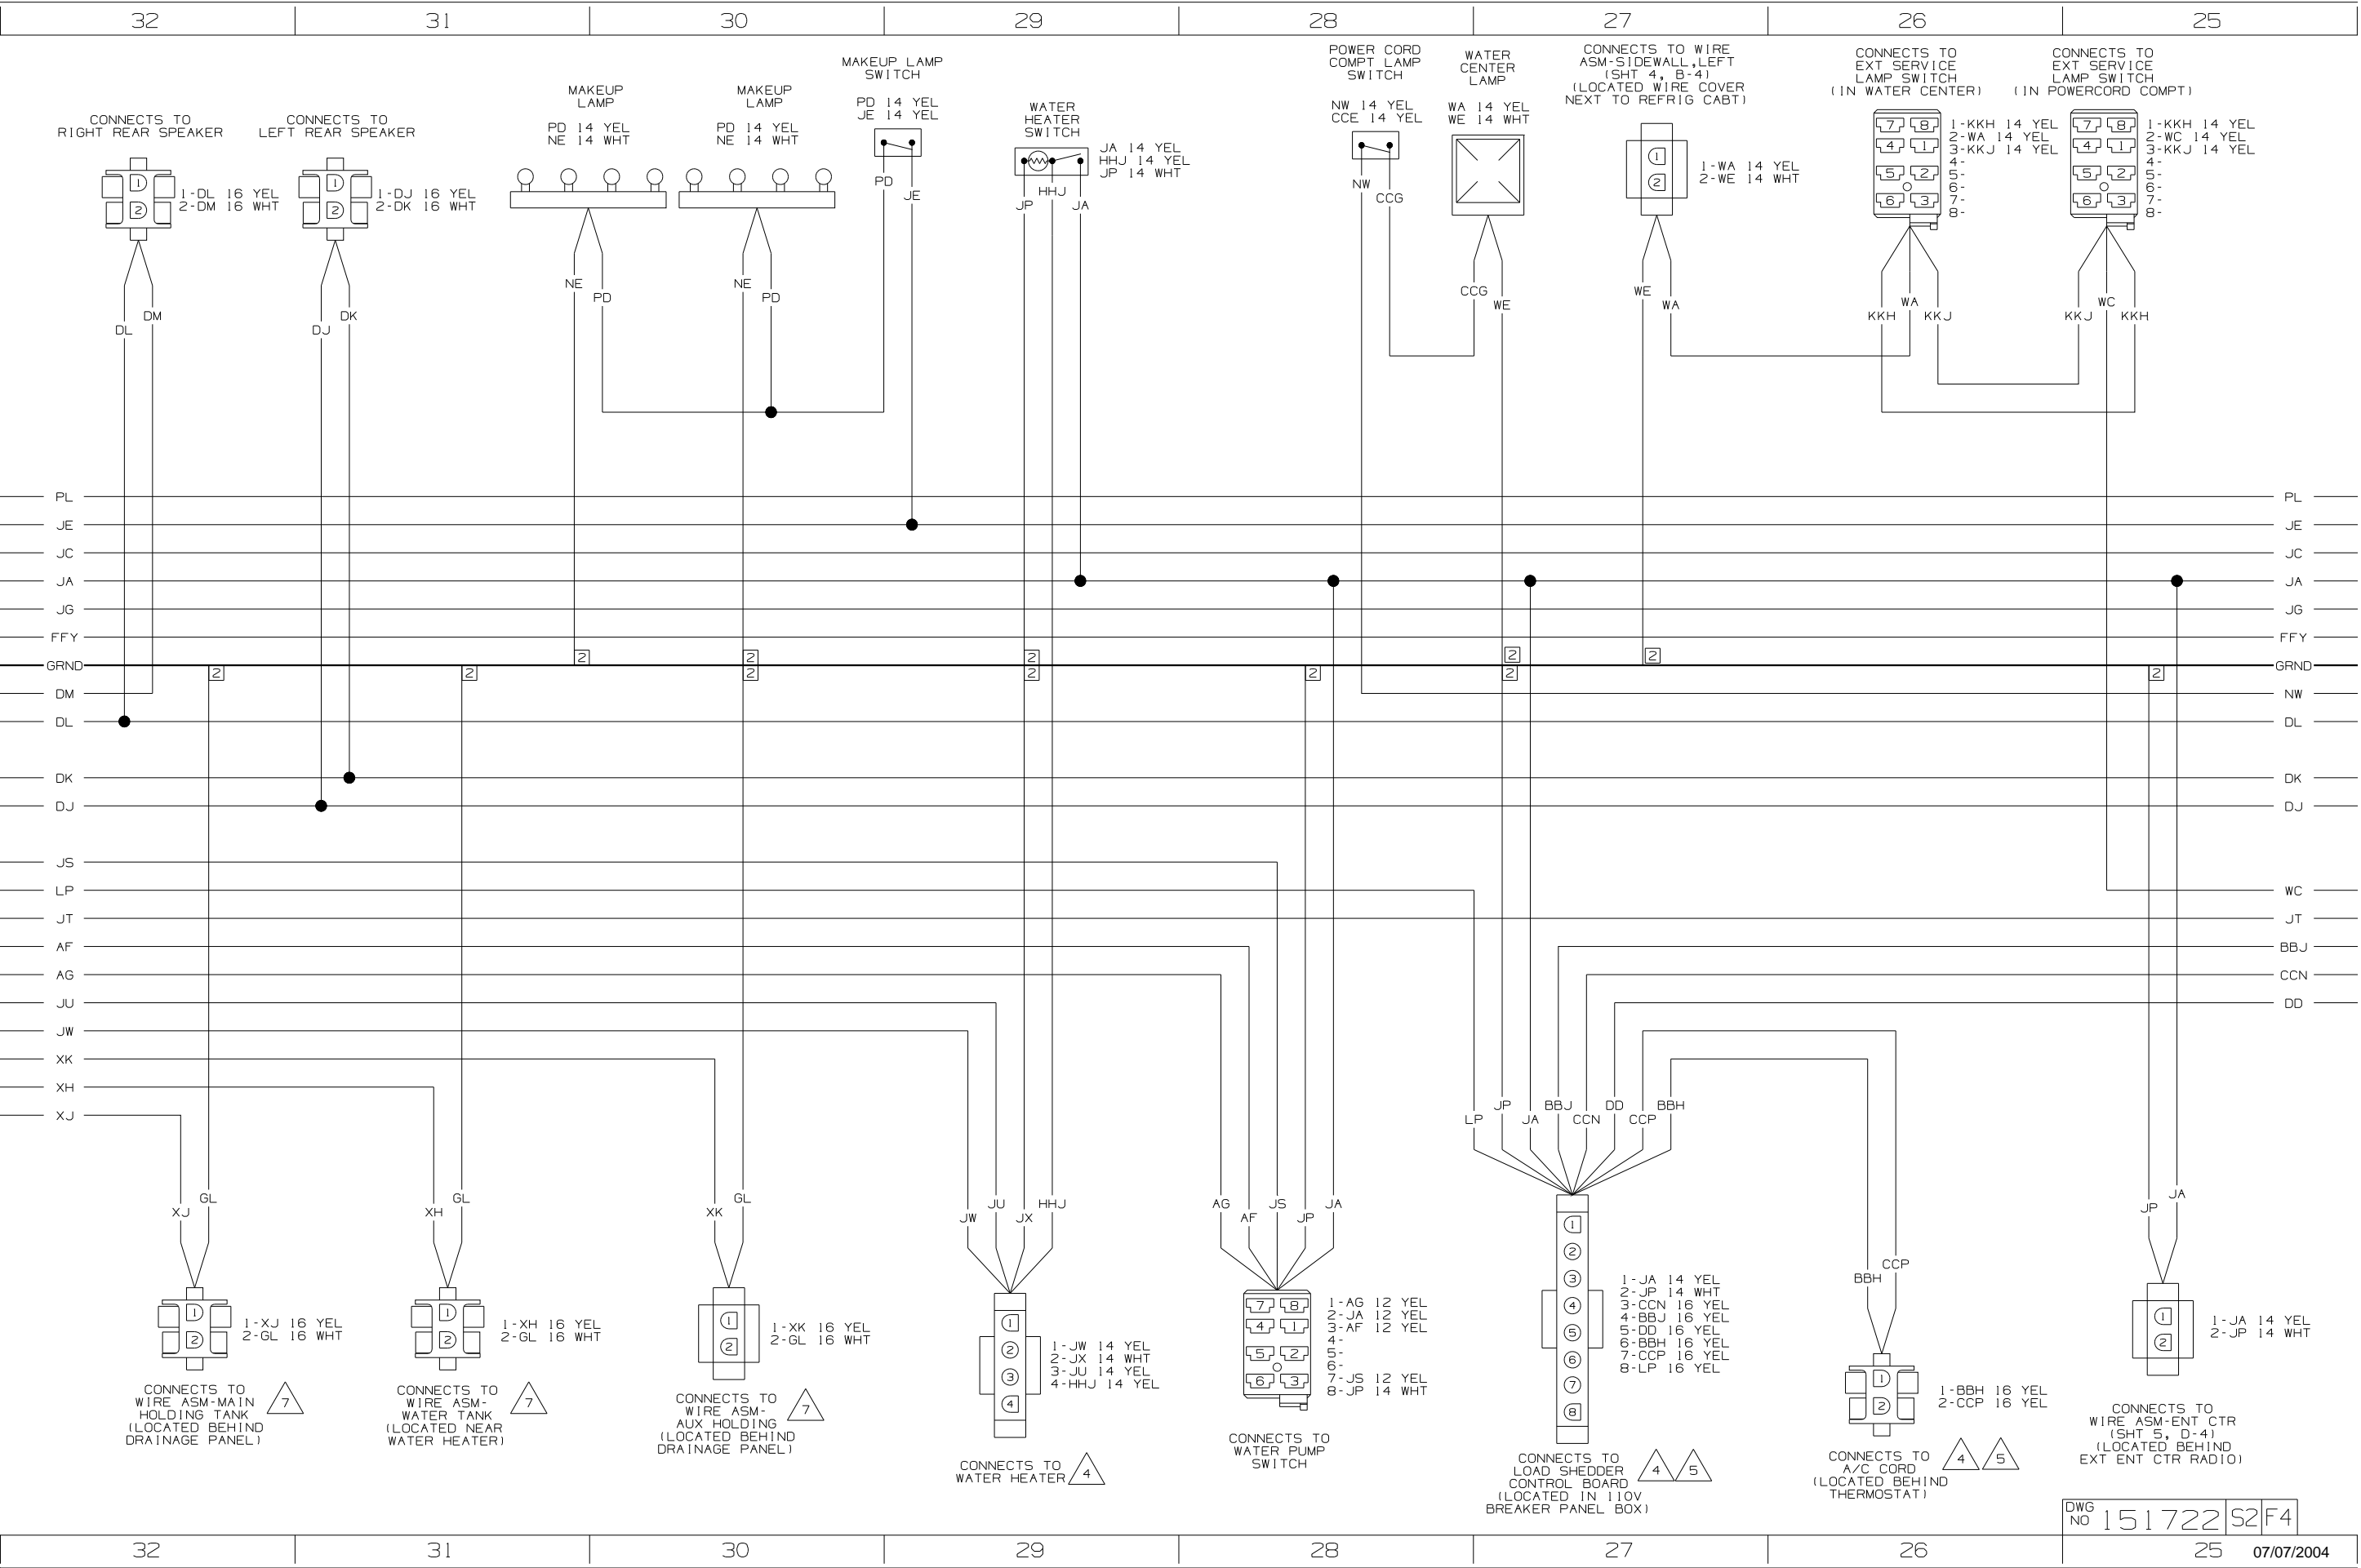


CONNECTS TO RIGHT REAR SPEAKER
CONNECTS TO LEFT REAR SPEAKER

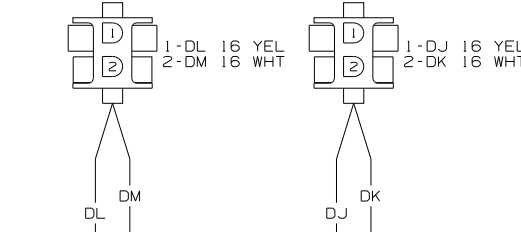

MAKEUP LAMP
MAKEUP LAMP


PD 14 YEL
NE 14 WHT

PD 14 YEL
NE 14 WHT

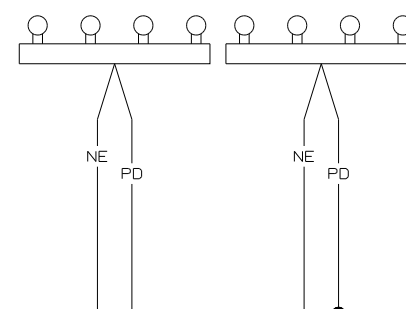


MAKEUP LAMP SWITCH

 PD 14 YEL
JE 14 YEL




WATER HEATER SWITCH

 JA 14 YEL
HHJ 14 YEL
JP 14 WHT




POWER CORD COMPT LAMP SWITCH

 NW 14 YEL
CCE 14 YEL




WATER CENTER LAMP

 WA 14 YEL
WE 14 WHT




CONNECTS TO WIRE ASM-SIDEWALL, LEFT (SHT 4, B-4) (LOCATED WIRE COVER NEXT TO REFRIG CABT)

1-WA 14 YEL
2-WE 14 WHT

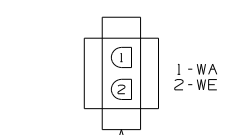



CONNECTS TO EXT SERVICE LAMP SWITCH (IN WATER CENTER)

1-KKH 14 YEL
2-WA 14 YEL
3-KKJ 14 YEL

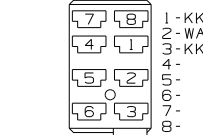


CONNECTS TO EXT SERVICE LAMP SWITCH (IN POWERCORD COMPT)

1-KKH 14 YEL
2-WC 14 YEL
3-KKJ 14 YEL

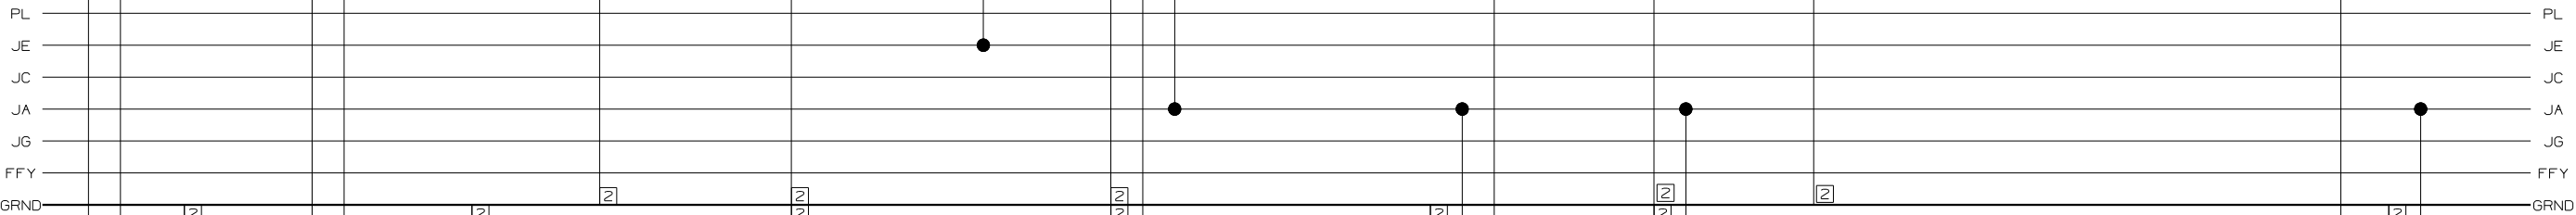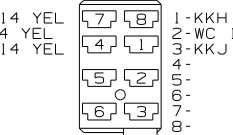

 
CONNECTS TO WIRE ASM-MAIN HOLDING TANK (LOCATED BEHIND DRAINAGE PANEL)




CONNECTS TO WIRE ASM-WATER TANK (LOCATED NEAR WATER HEATER)



 
CONNECTS TO WIRE ASM-AUX HOLDING TANK (LOCATED BEHIND DRAINAGE PANEL)




CONNECTS TO WATER HEATER

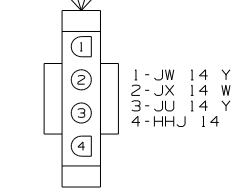


CONNECTS TO WATER PUMP SWITCH

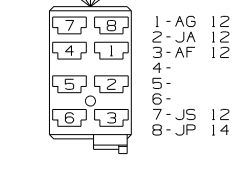


CONNECTS TO LOAD SHEDDER CONTROL BOARD (LOCATED IN 110V BREAKER PANEL BOX)

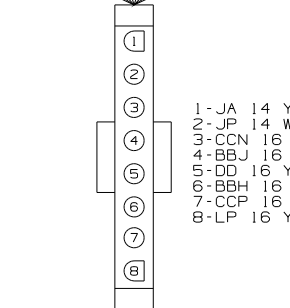



CONNECTS TO A/C CORD (LOCATED BEHIND THERMOSTAT)

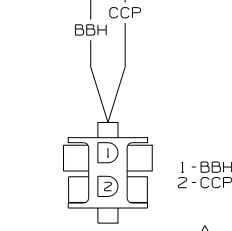

CONNECTS TO WIRE ASM-ENT CTR (LOCATED BEHIND EXT ENT CTR RADIO)

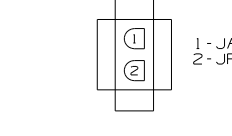

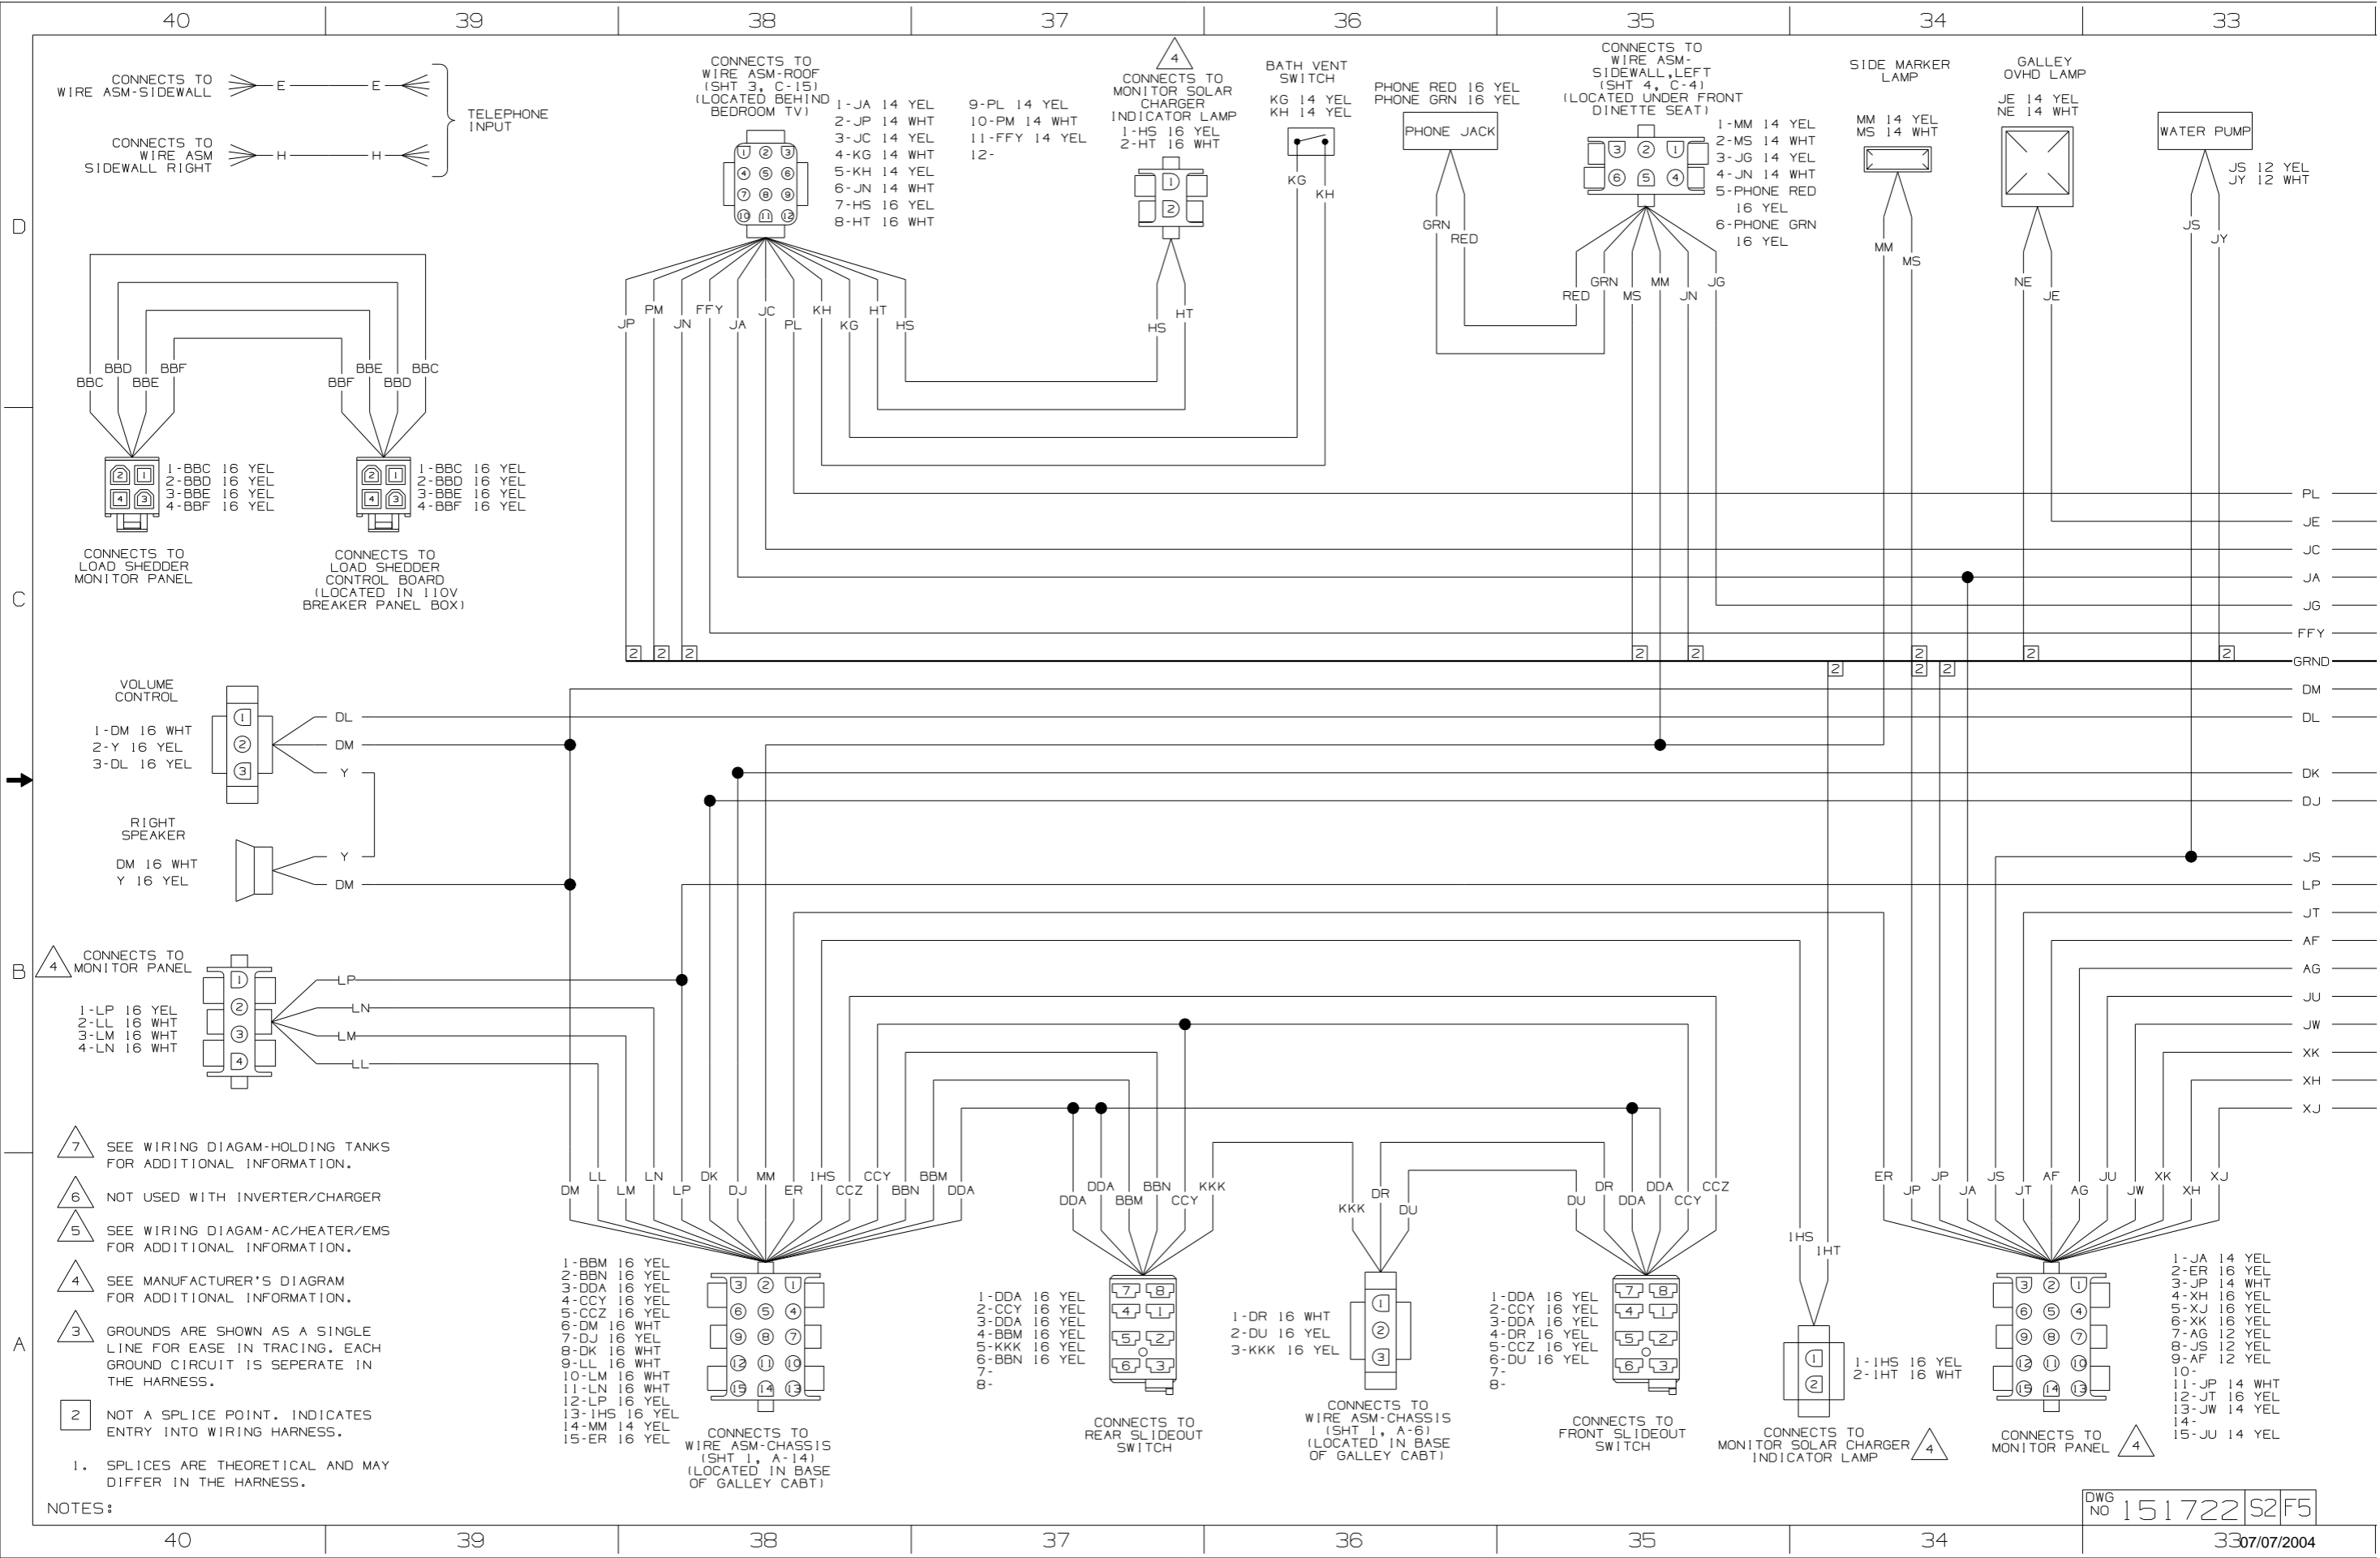


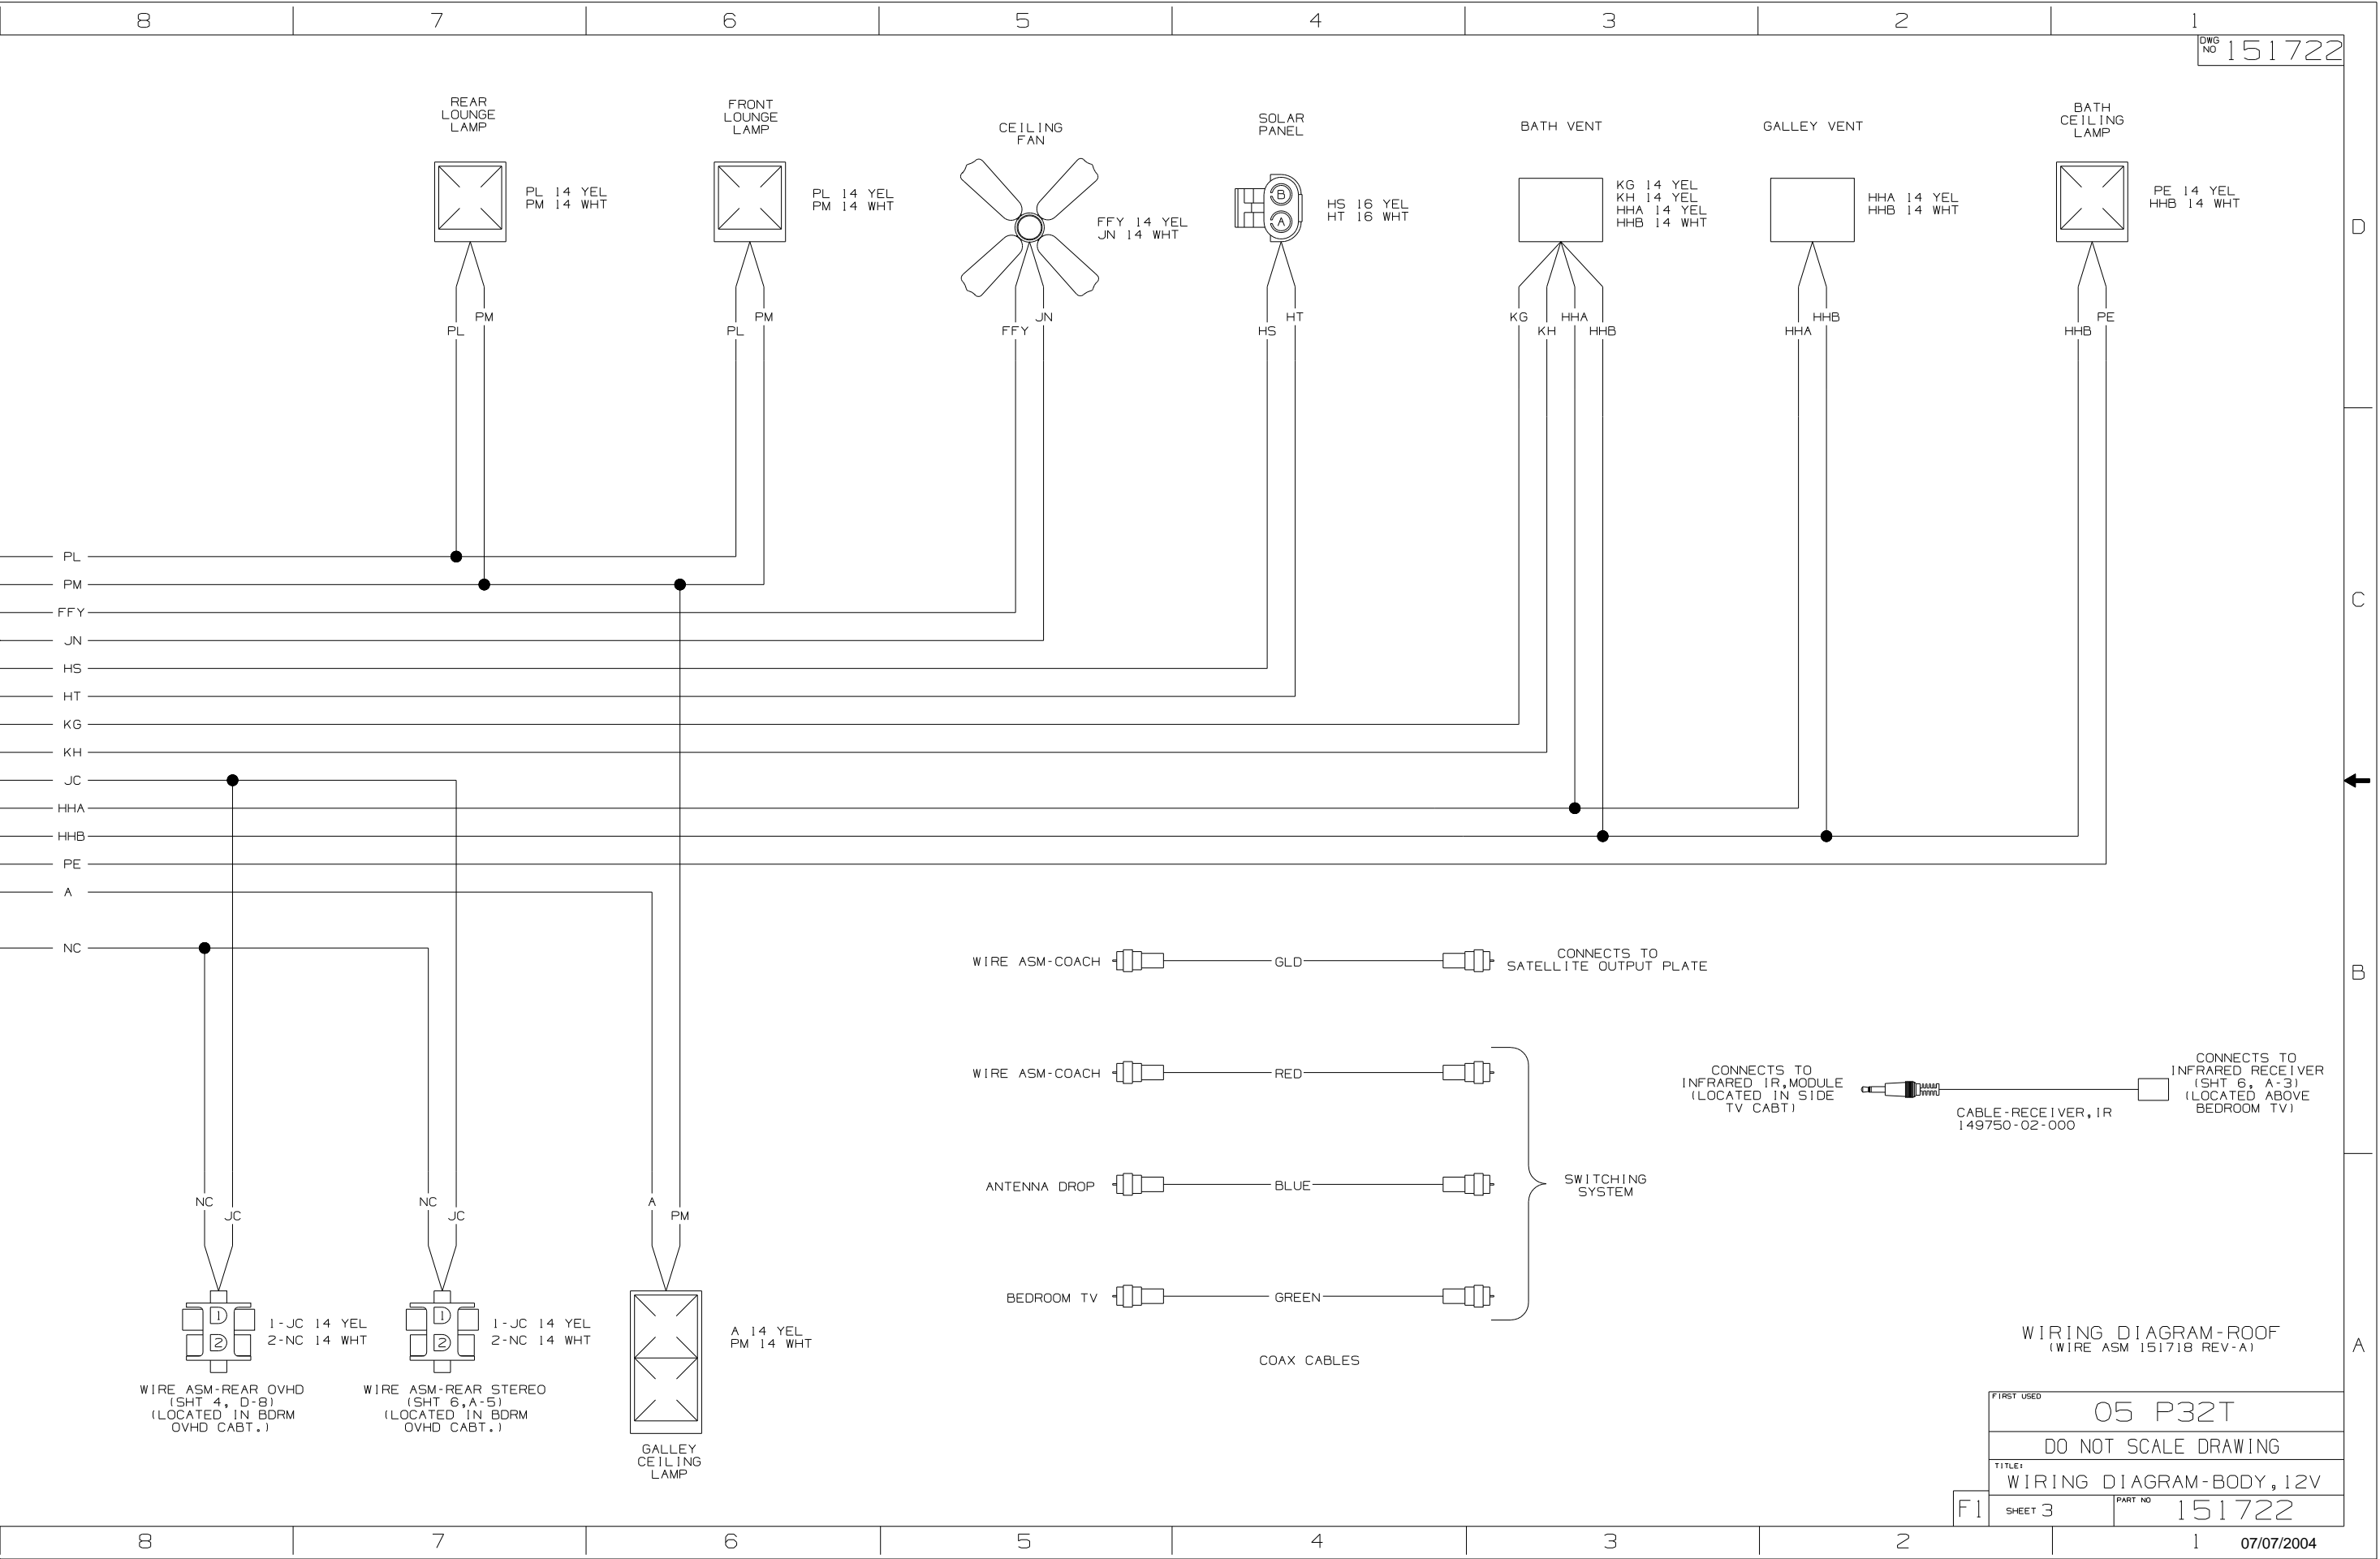


WIRING DIAGRAM-ROOF
(WIRE ASM 151718 REV-A)

FIRST USED	05 P32T	
TITLE	DO NOT SCALE DRAWING	
TITLE	WIRING DIAGRAM-BODY, 12V	
SHEET 3	PART NO	151722









D
C
B
A

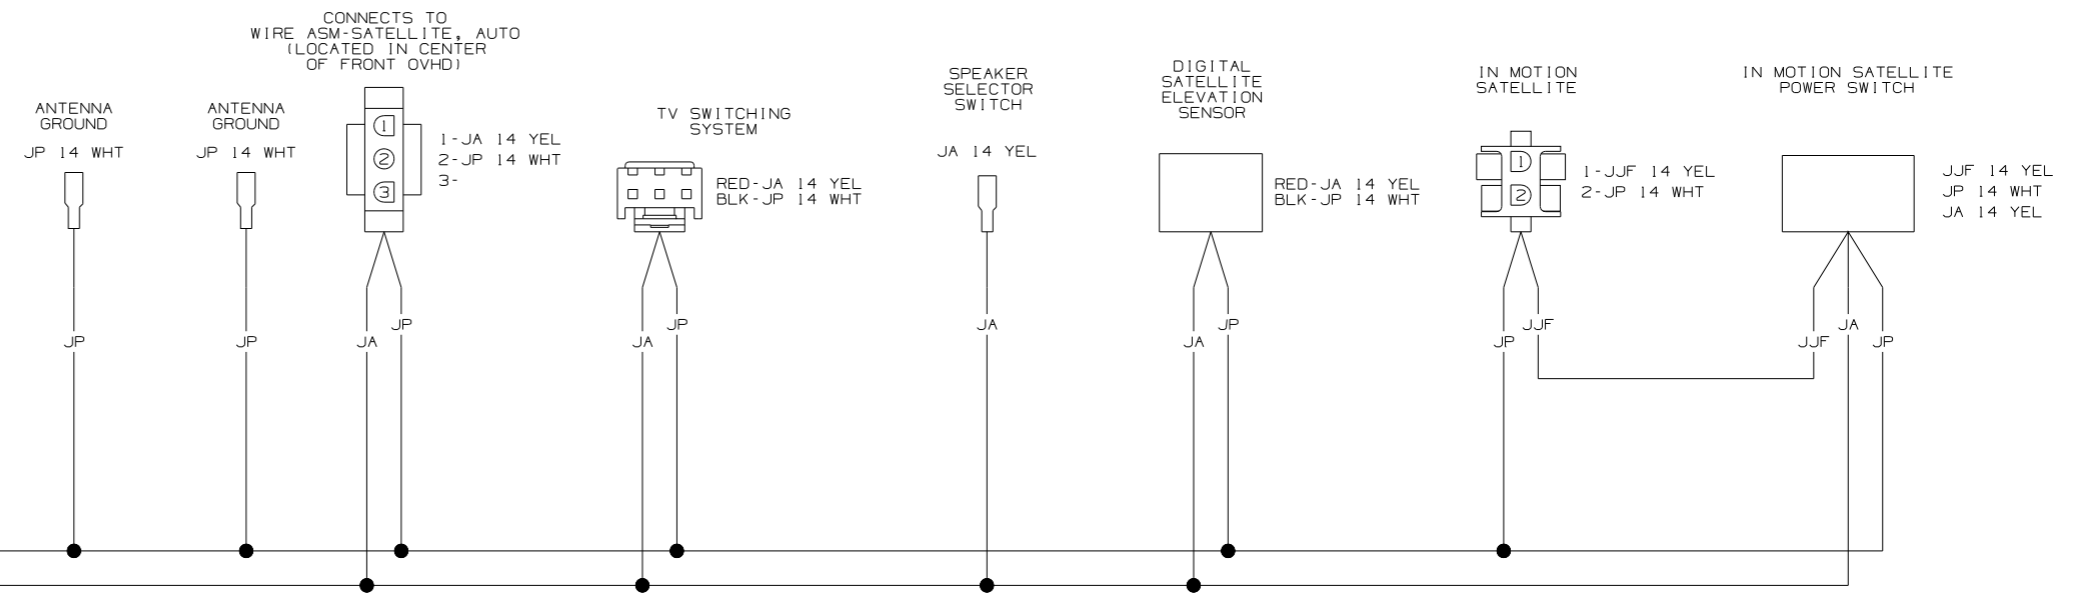

- 1-JA 14 YEL
- 2-JP 14 WHT
- 3-JC 14 YEL
- 4-KG 14 YEL
- 5-KH 14 YEL
- 6-JN 14 WHT
- 7-HS 16 YEL
- 8-HT 16 WHT
- 9-PL 14 YEL
- 10-PM 14 WHT
- 11-FFY 14 YEL
- 12-



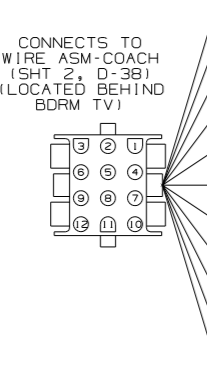


- 1-NC 14 WHT
- 2-PC 14 YEL
- 3-ND 14 WHT
- 4-PF 14 YEL
- 5-HHA 14 YEL
- 6-HHB 14 WHT
- 7-A 14 YEL
- 8-PE 14 YEL
- 9-HHY 16 WHT
- 10-HHZ 16 YEL
- 11-JJA 16 YEL
- 12-JJB 16 YEL
- 13-JJV 14 YEL
- 14-WX 14 YEL
- 15-

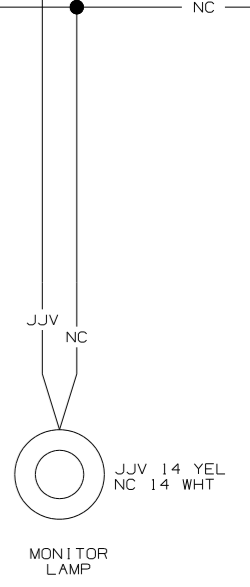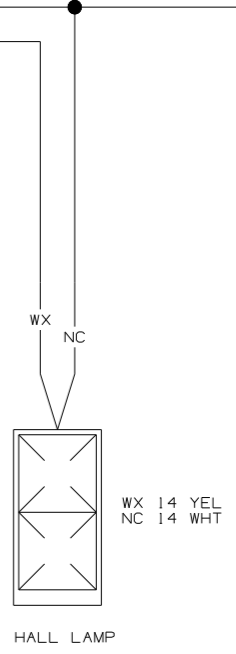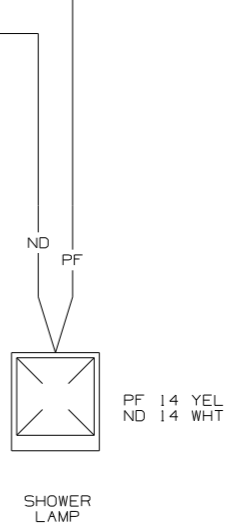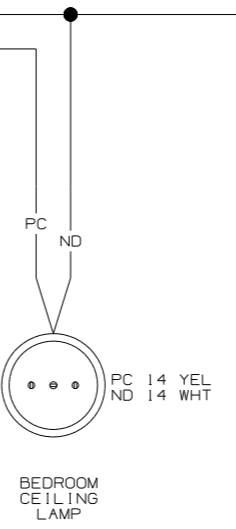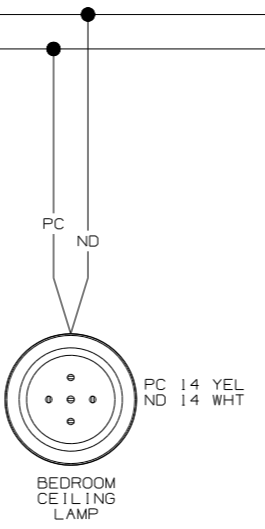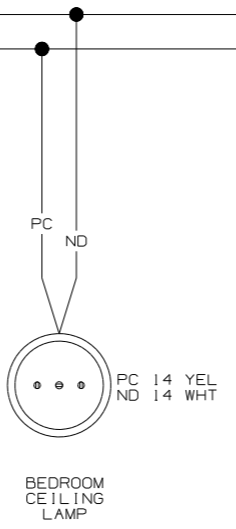
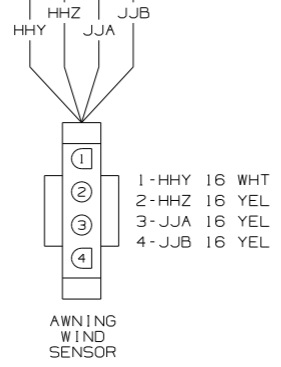
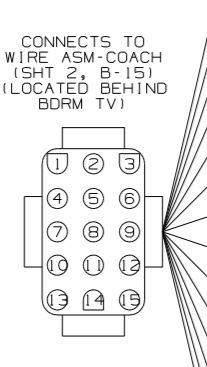


3. GROUNDS ARE SHOWN AS A SINGLE LINE FOR EASE IN TRACING. EACH GROUND CIRCUIT IS SEPERATE IN THE HARNESS.
2. NOT A SPLICE POINT. INDICATES ENTRY INTO WIRING HARNESS.
1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.






NOTES:

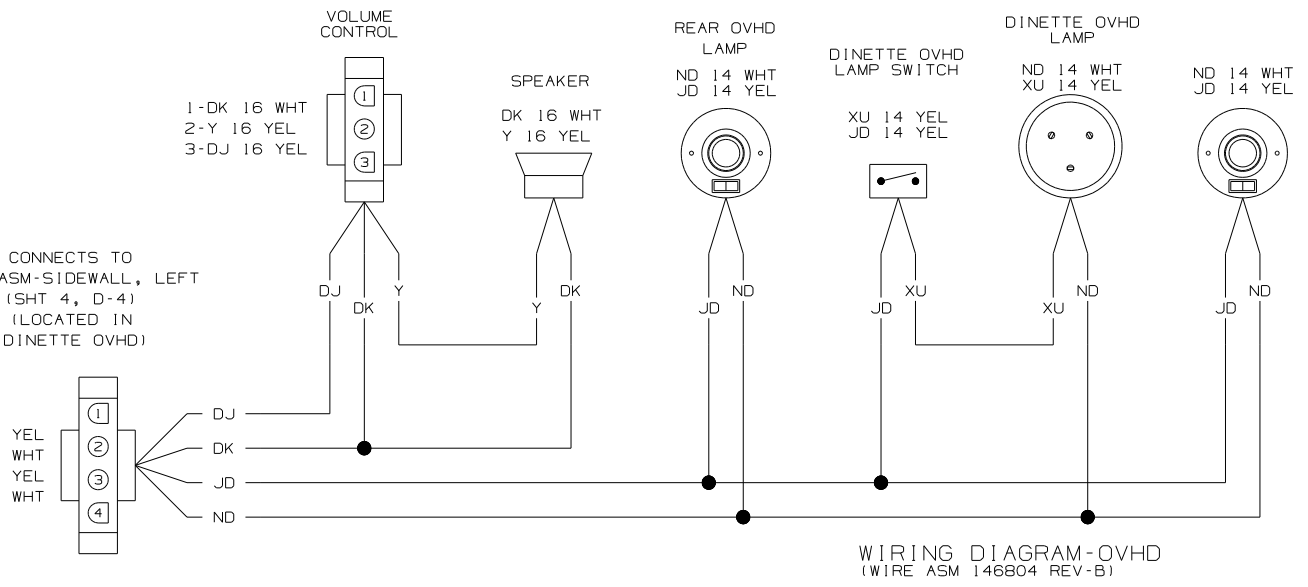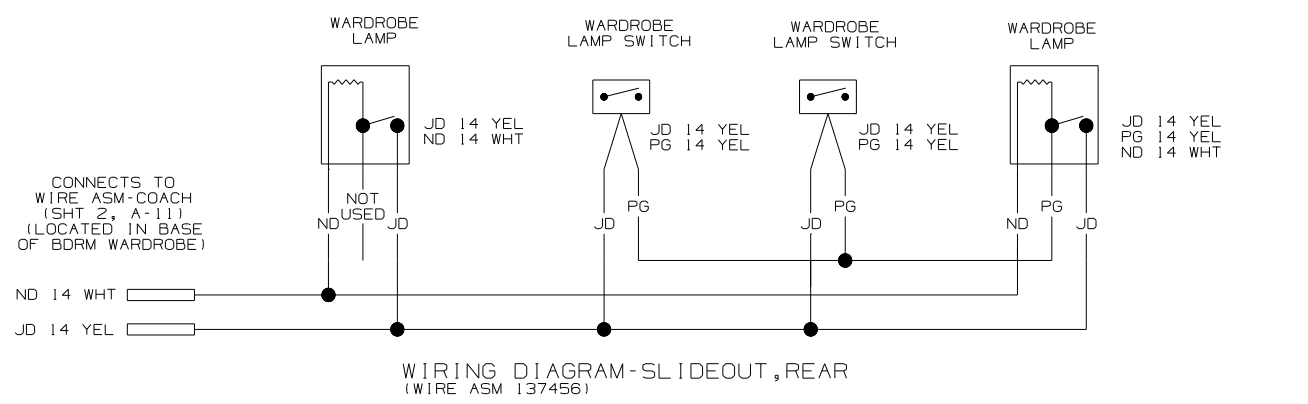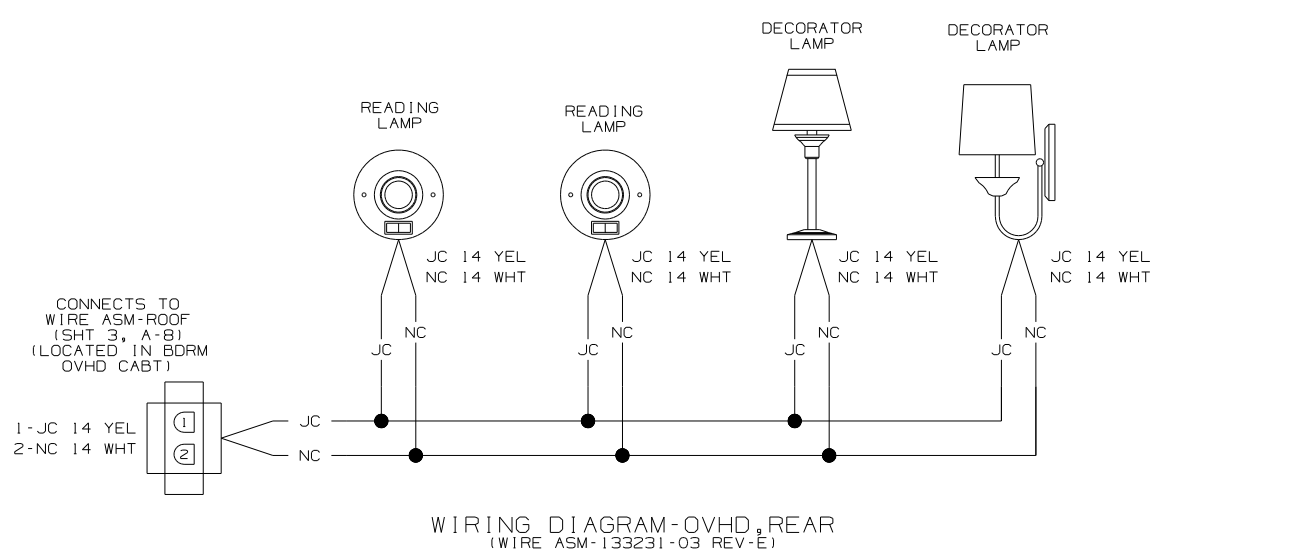

NOTES:
1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.



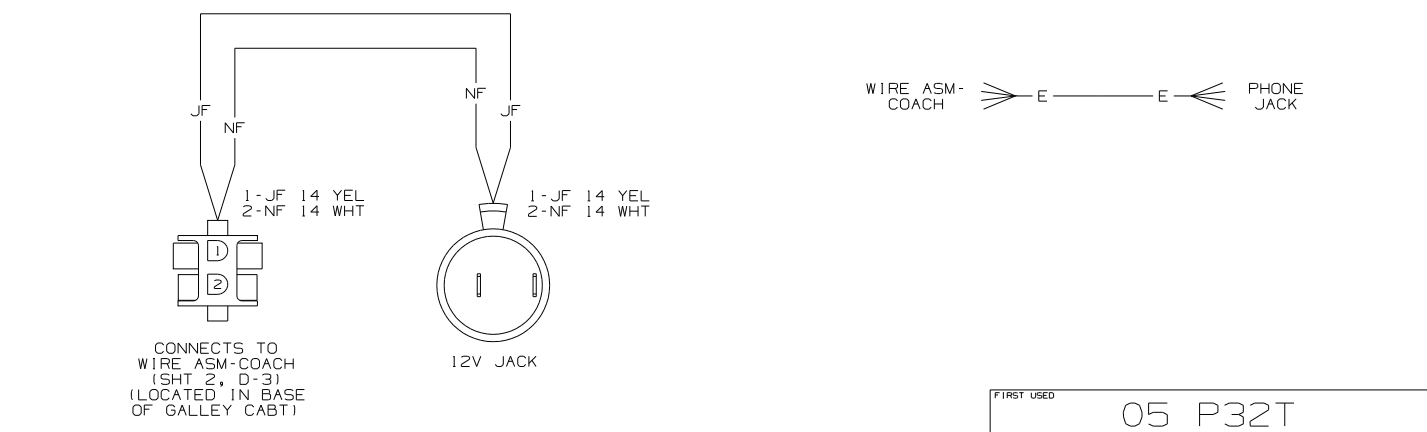
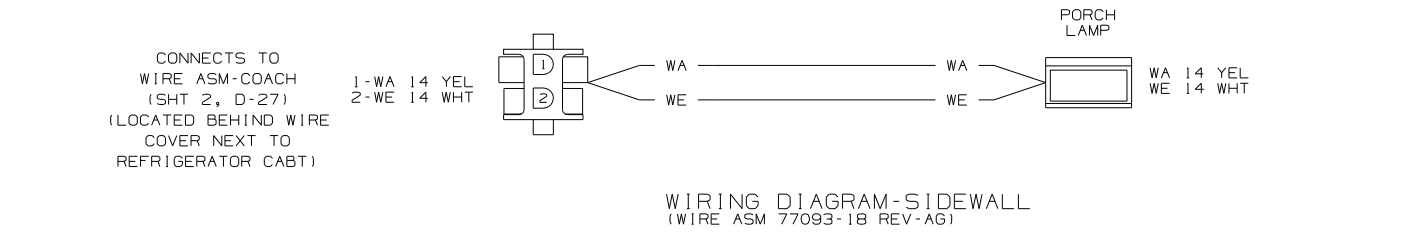
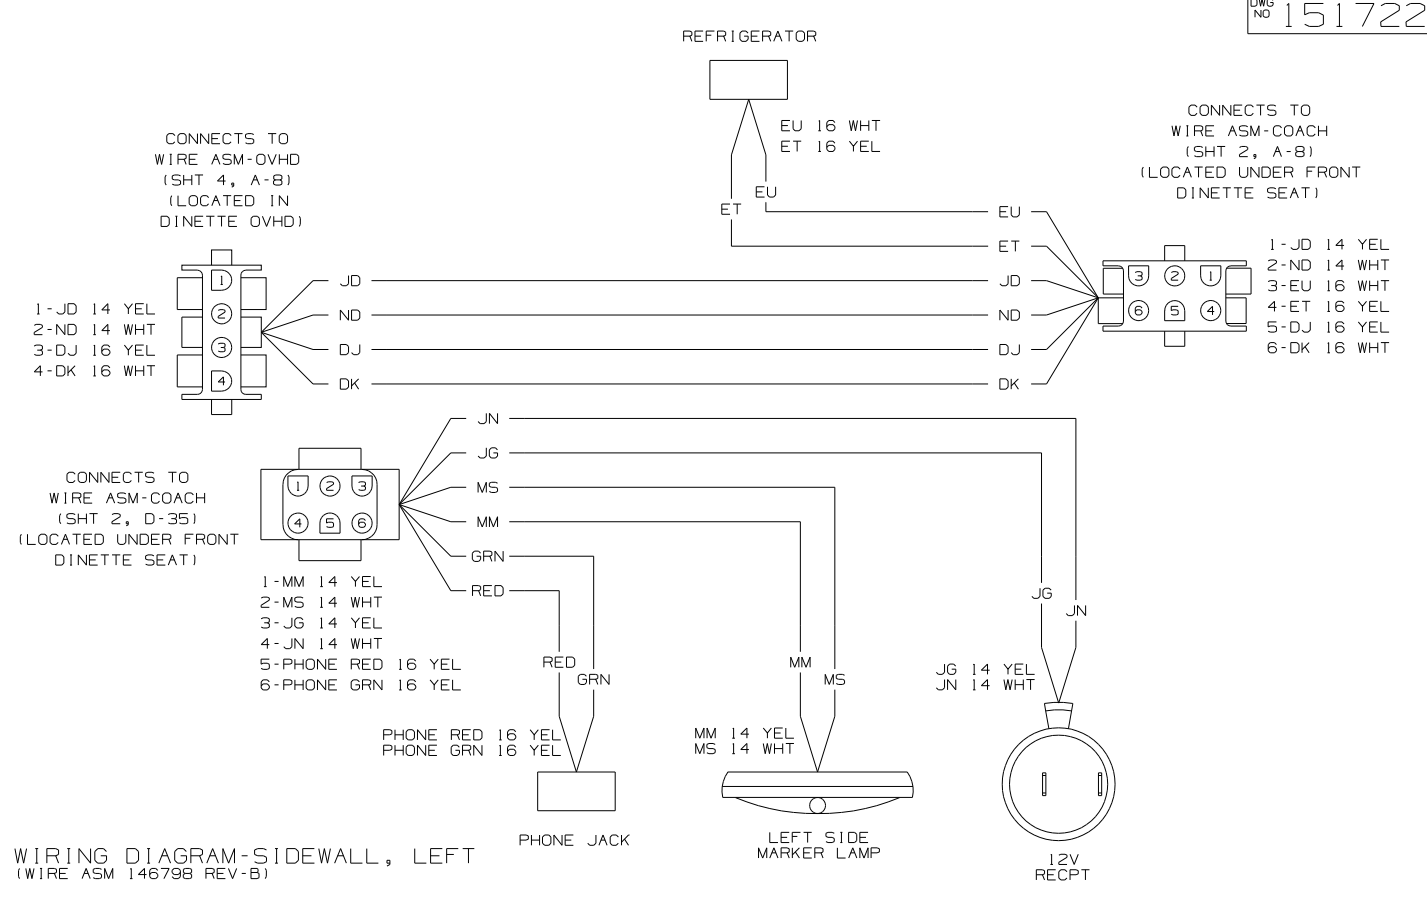


FIRST USED	05 P32T
TITLE	DO NOT SCALE DRAWING
TITLE	WIRING DIAGRAM-BODY, 12V
SHEET 4	PART NO 151722

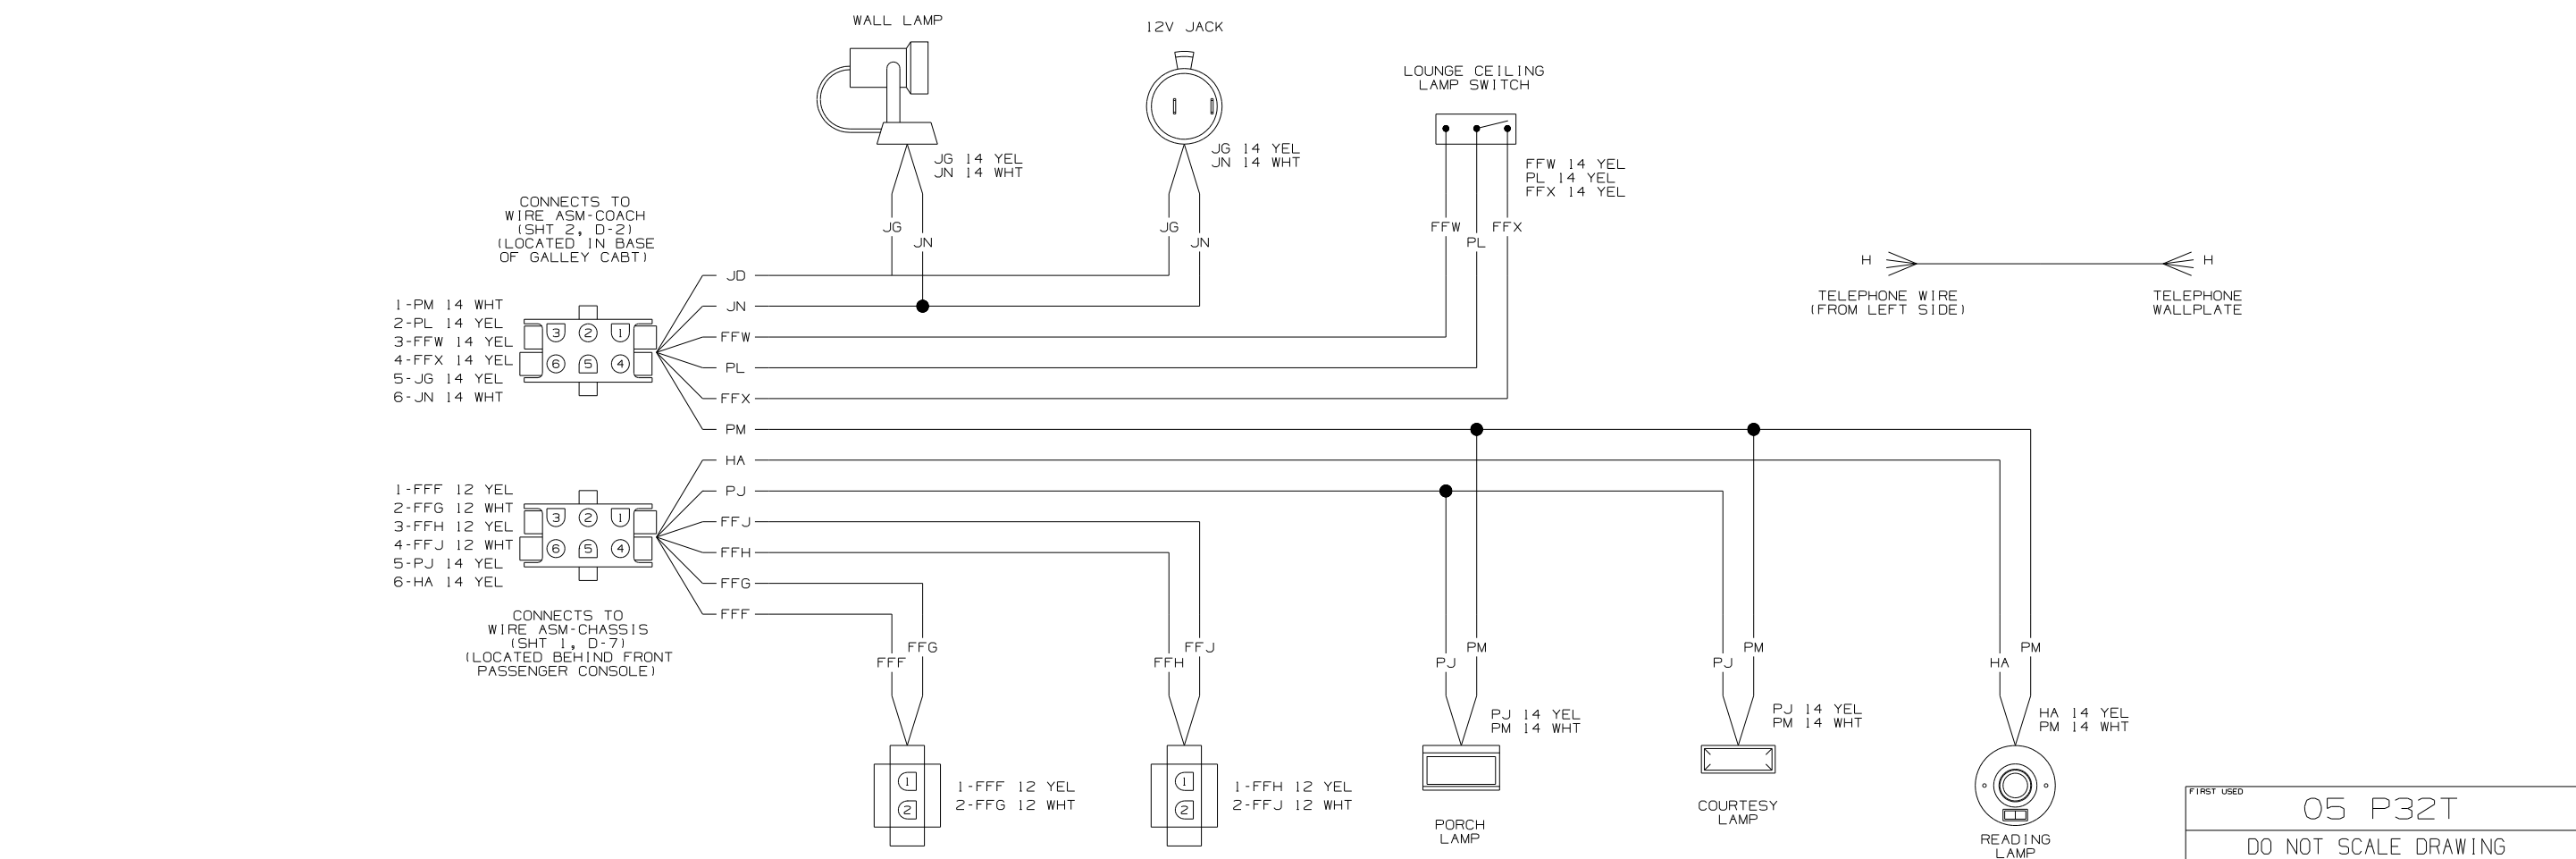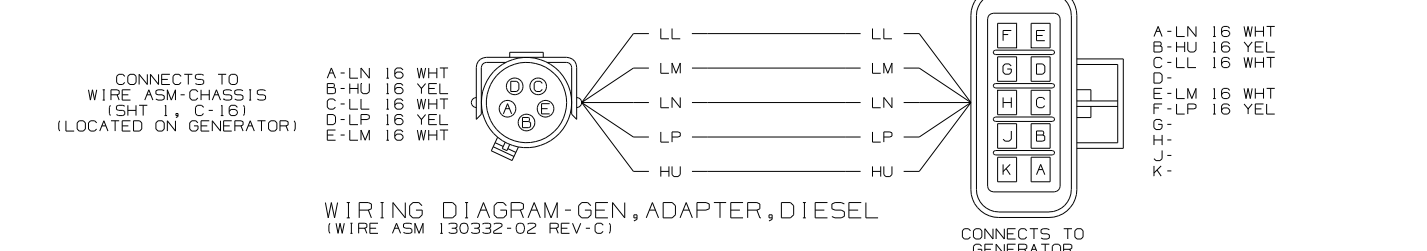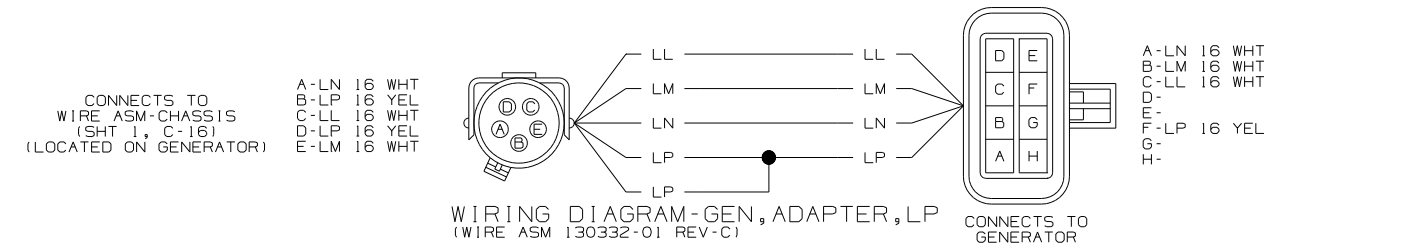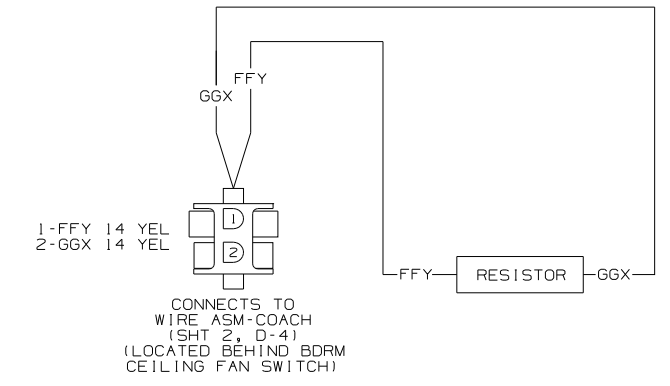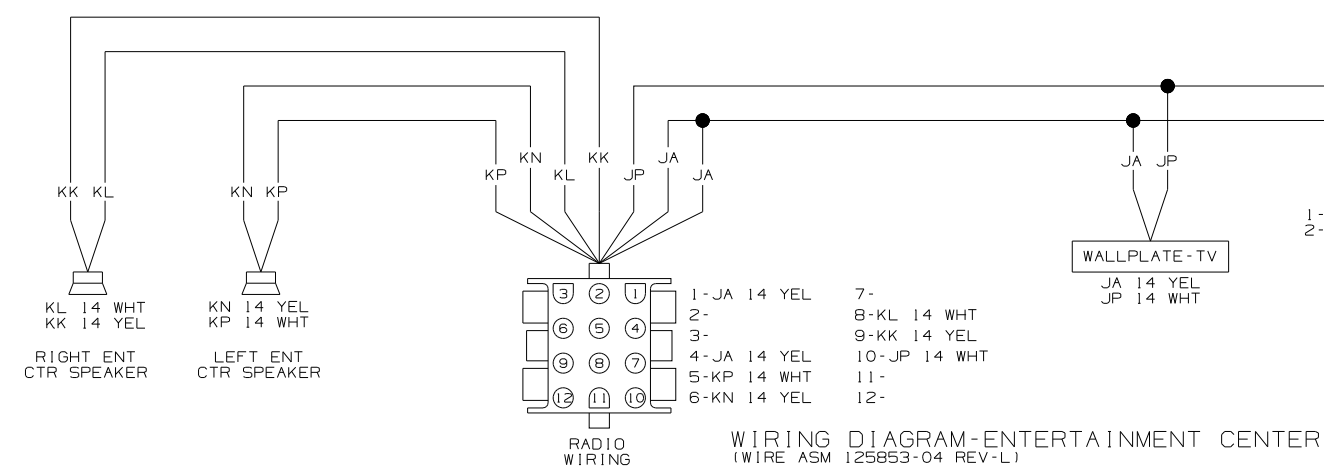

NOTES:
1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

FIRST USED	05 P32T
TITLE	DO NOT SCALE DRAWING
	WIRING DIAGRAM-BODY, 12V
SHEET 5	PART NO 151722

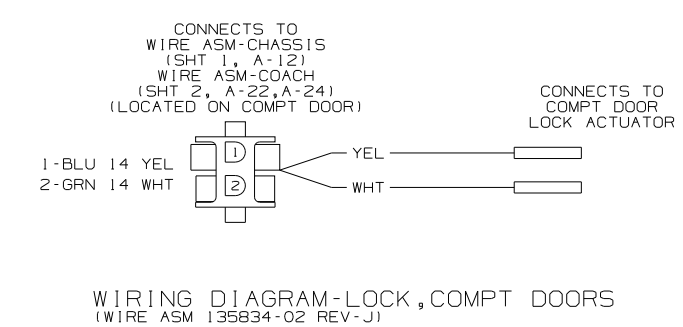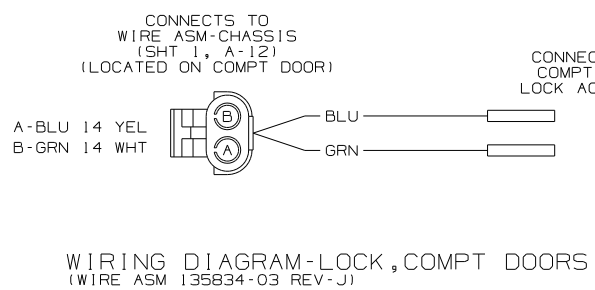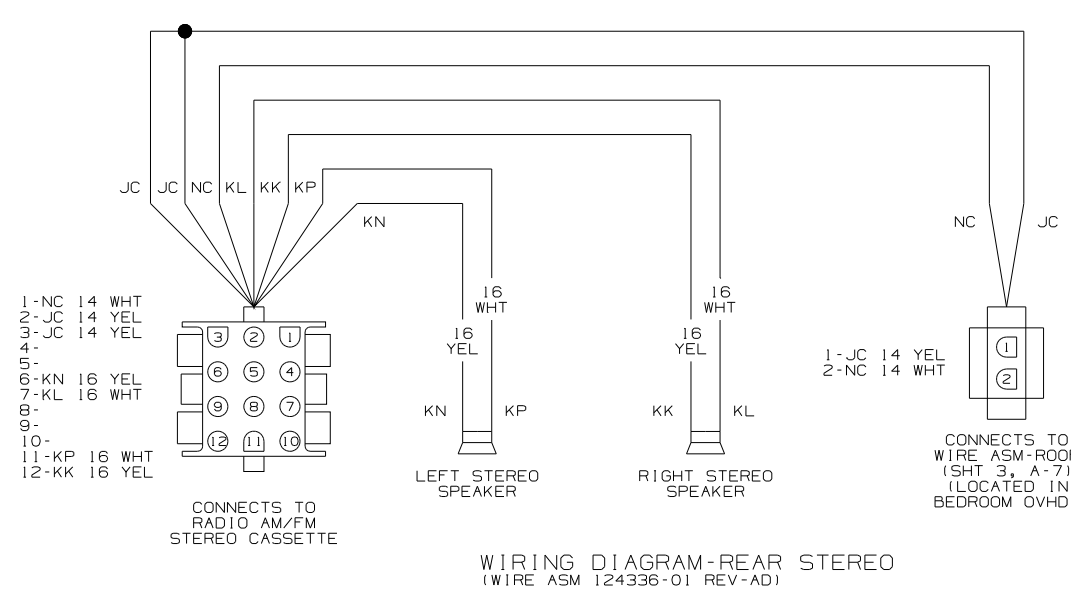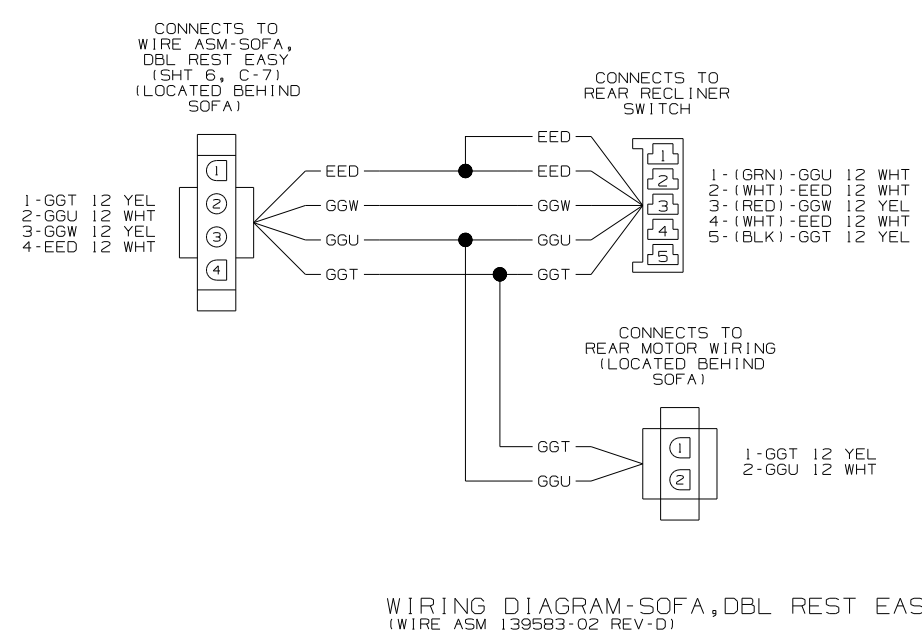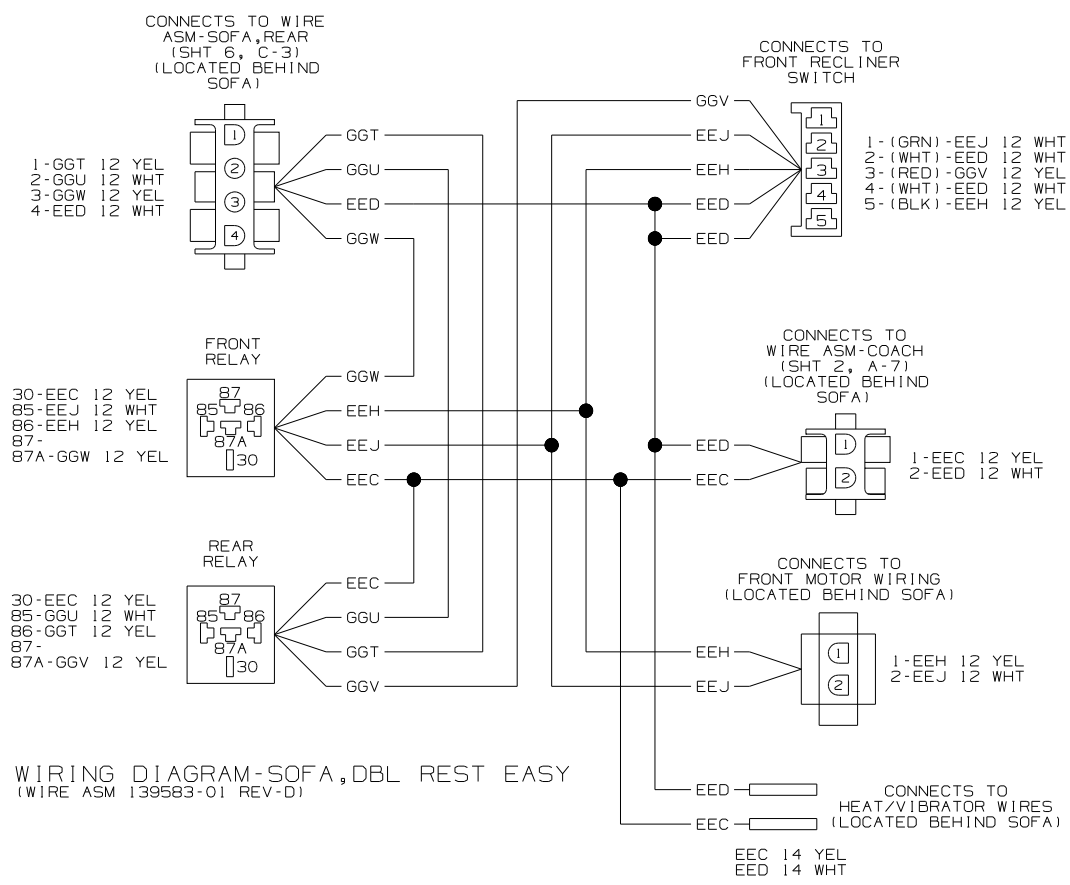

NOTES:
1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

FIRST USED	05 P32T
TITLE	DO NOT SCALE DRAWING
TITLE	WIRING DIAGRAM-BODY, 12V
SHEET 6	PART NO 151722