




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

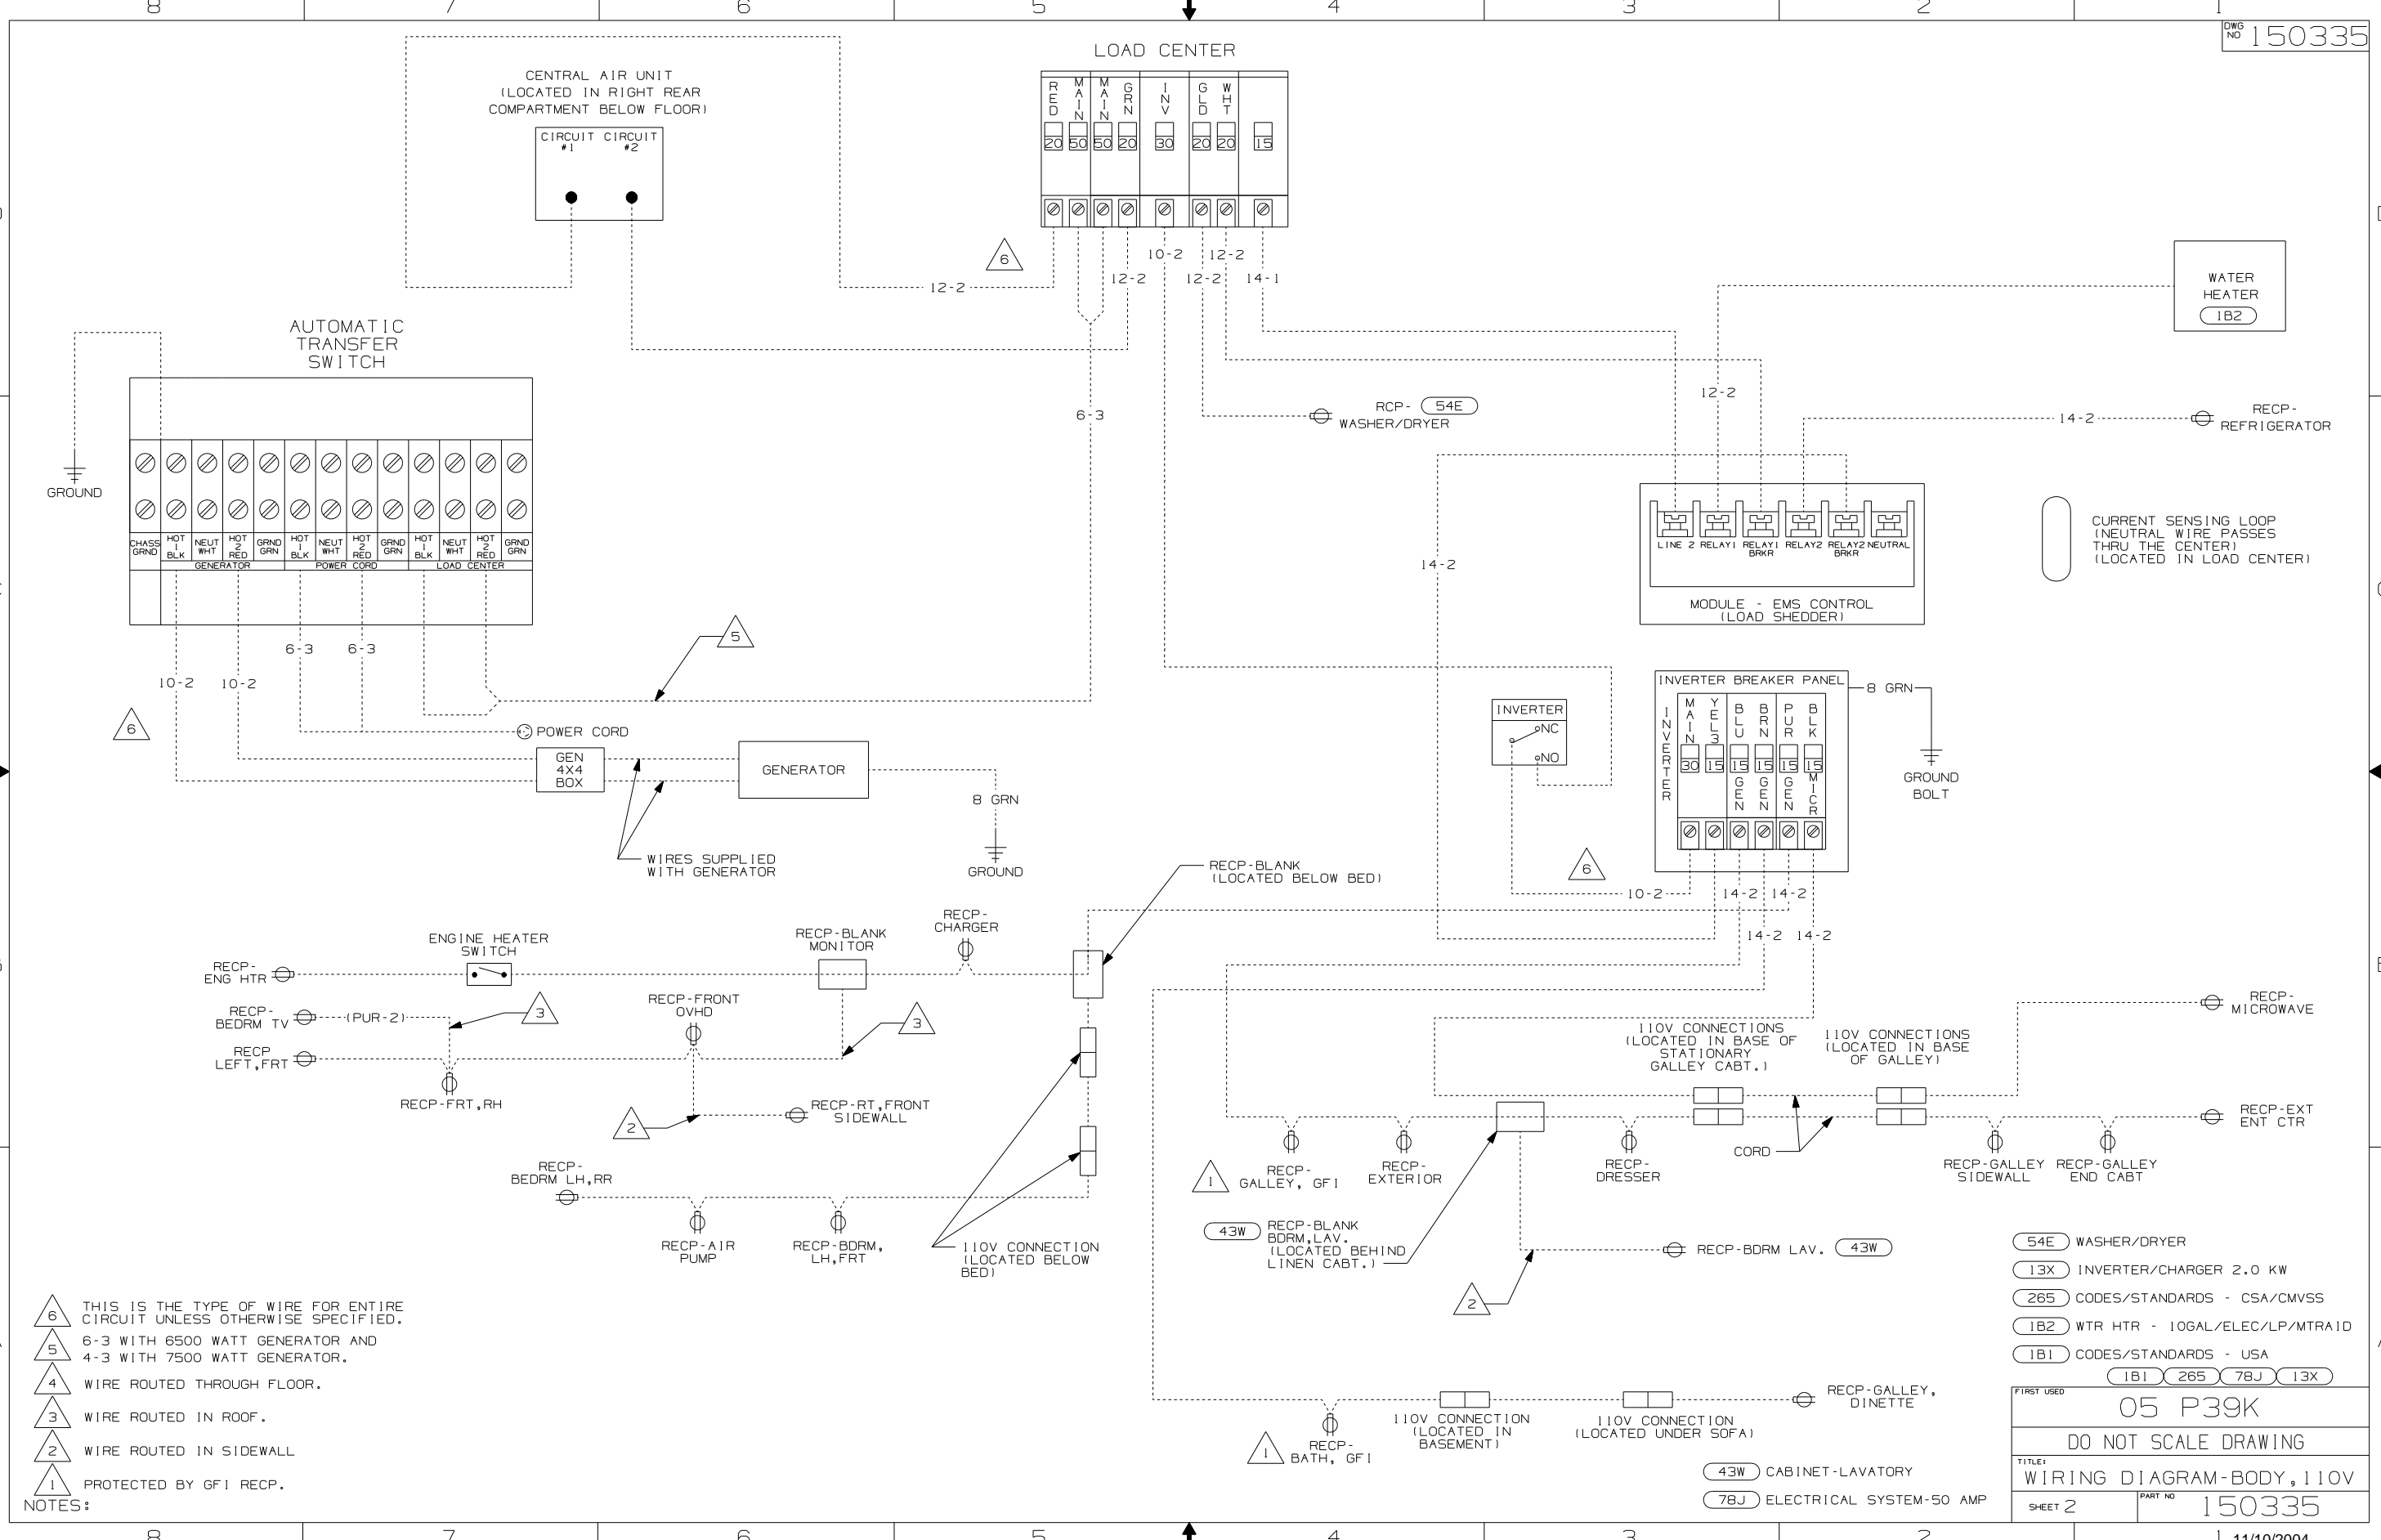

- NOTES:
- △6 THIS IS THE TYPE OF WIRE FOR ENTIRE CIRCUIT UNLESS OTHERWISE SPECIFIED.
 - △5 6-3 WITH 6500 WATT GENERATOR AND 4-3 WITH 7500 WATT GENERATOR.
 - △4 WIRE ROUTED THROUGH FLOOR.
 - △3 WIRE ROUTED IN ROOF.
 - △2 WIRE ROUTED IN SIDEWALL
 - △1 PROTECTED BY GF1 RECP.

(54E)	WASHER/DRYER
(13X)	INVERTER/CHARGER 2.0 KW
(265)	CODES/STANDARDS - CSA/CMVSS
(1B2)	WTR HTR - 10GAL/ELEC/LP/MTR/1D
(1B1)	CODES/STANDARDS - USA
(1B1)	(265) (78J) (13X)
FIRST USED	
05 P39K	
DO NOT SCALE DRAWING	
TITLE:	
WIRING DIAGRAM-BODY, 110V	
SHEET 2	PART NO 150335

- (43W) CABINET-LAVATORY
- (78J) ELECTRICAL SYSTEM-50 AMP