



DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.





CAUTION


If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.





		COPYRIGHT 2004 WINNER-BACO INDUSTRIES, INC.	
0 1 2 3 4 5 6 7 8 9 A B C D		ORIG. DATE	
OFTR CHKR		ALL DIMENSIONS ARE IN MILLIMETERS	
P.E.V. J.E.		FIRST USED 05 S40KD	
DSGNR		UNDESIGNED TOLERANCES ARE :	
WHOLE DIM (X) :		MATERIAL :	
ONE-PLACE (X,X) :		(Empty space for material specification)	
TWO-PLACE (X,XX) :		(Empty space for material specification)	
ANGLE :		(Empty space for material specification)	
THIRD ANGLE PROJECTION			
DO NOT SCALE DRAWING			
TITLE:			
WIRING DIAGRAM-BODY, 12V			
SHEET 1 OF 7		PART NO 150112	

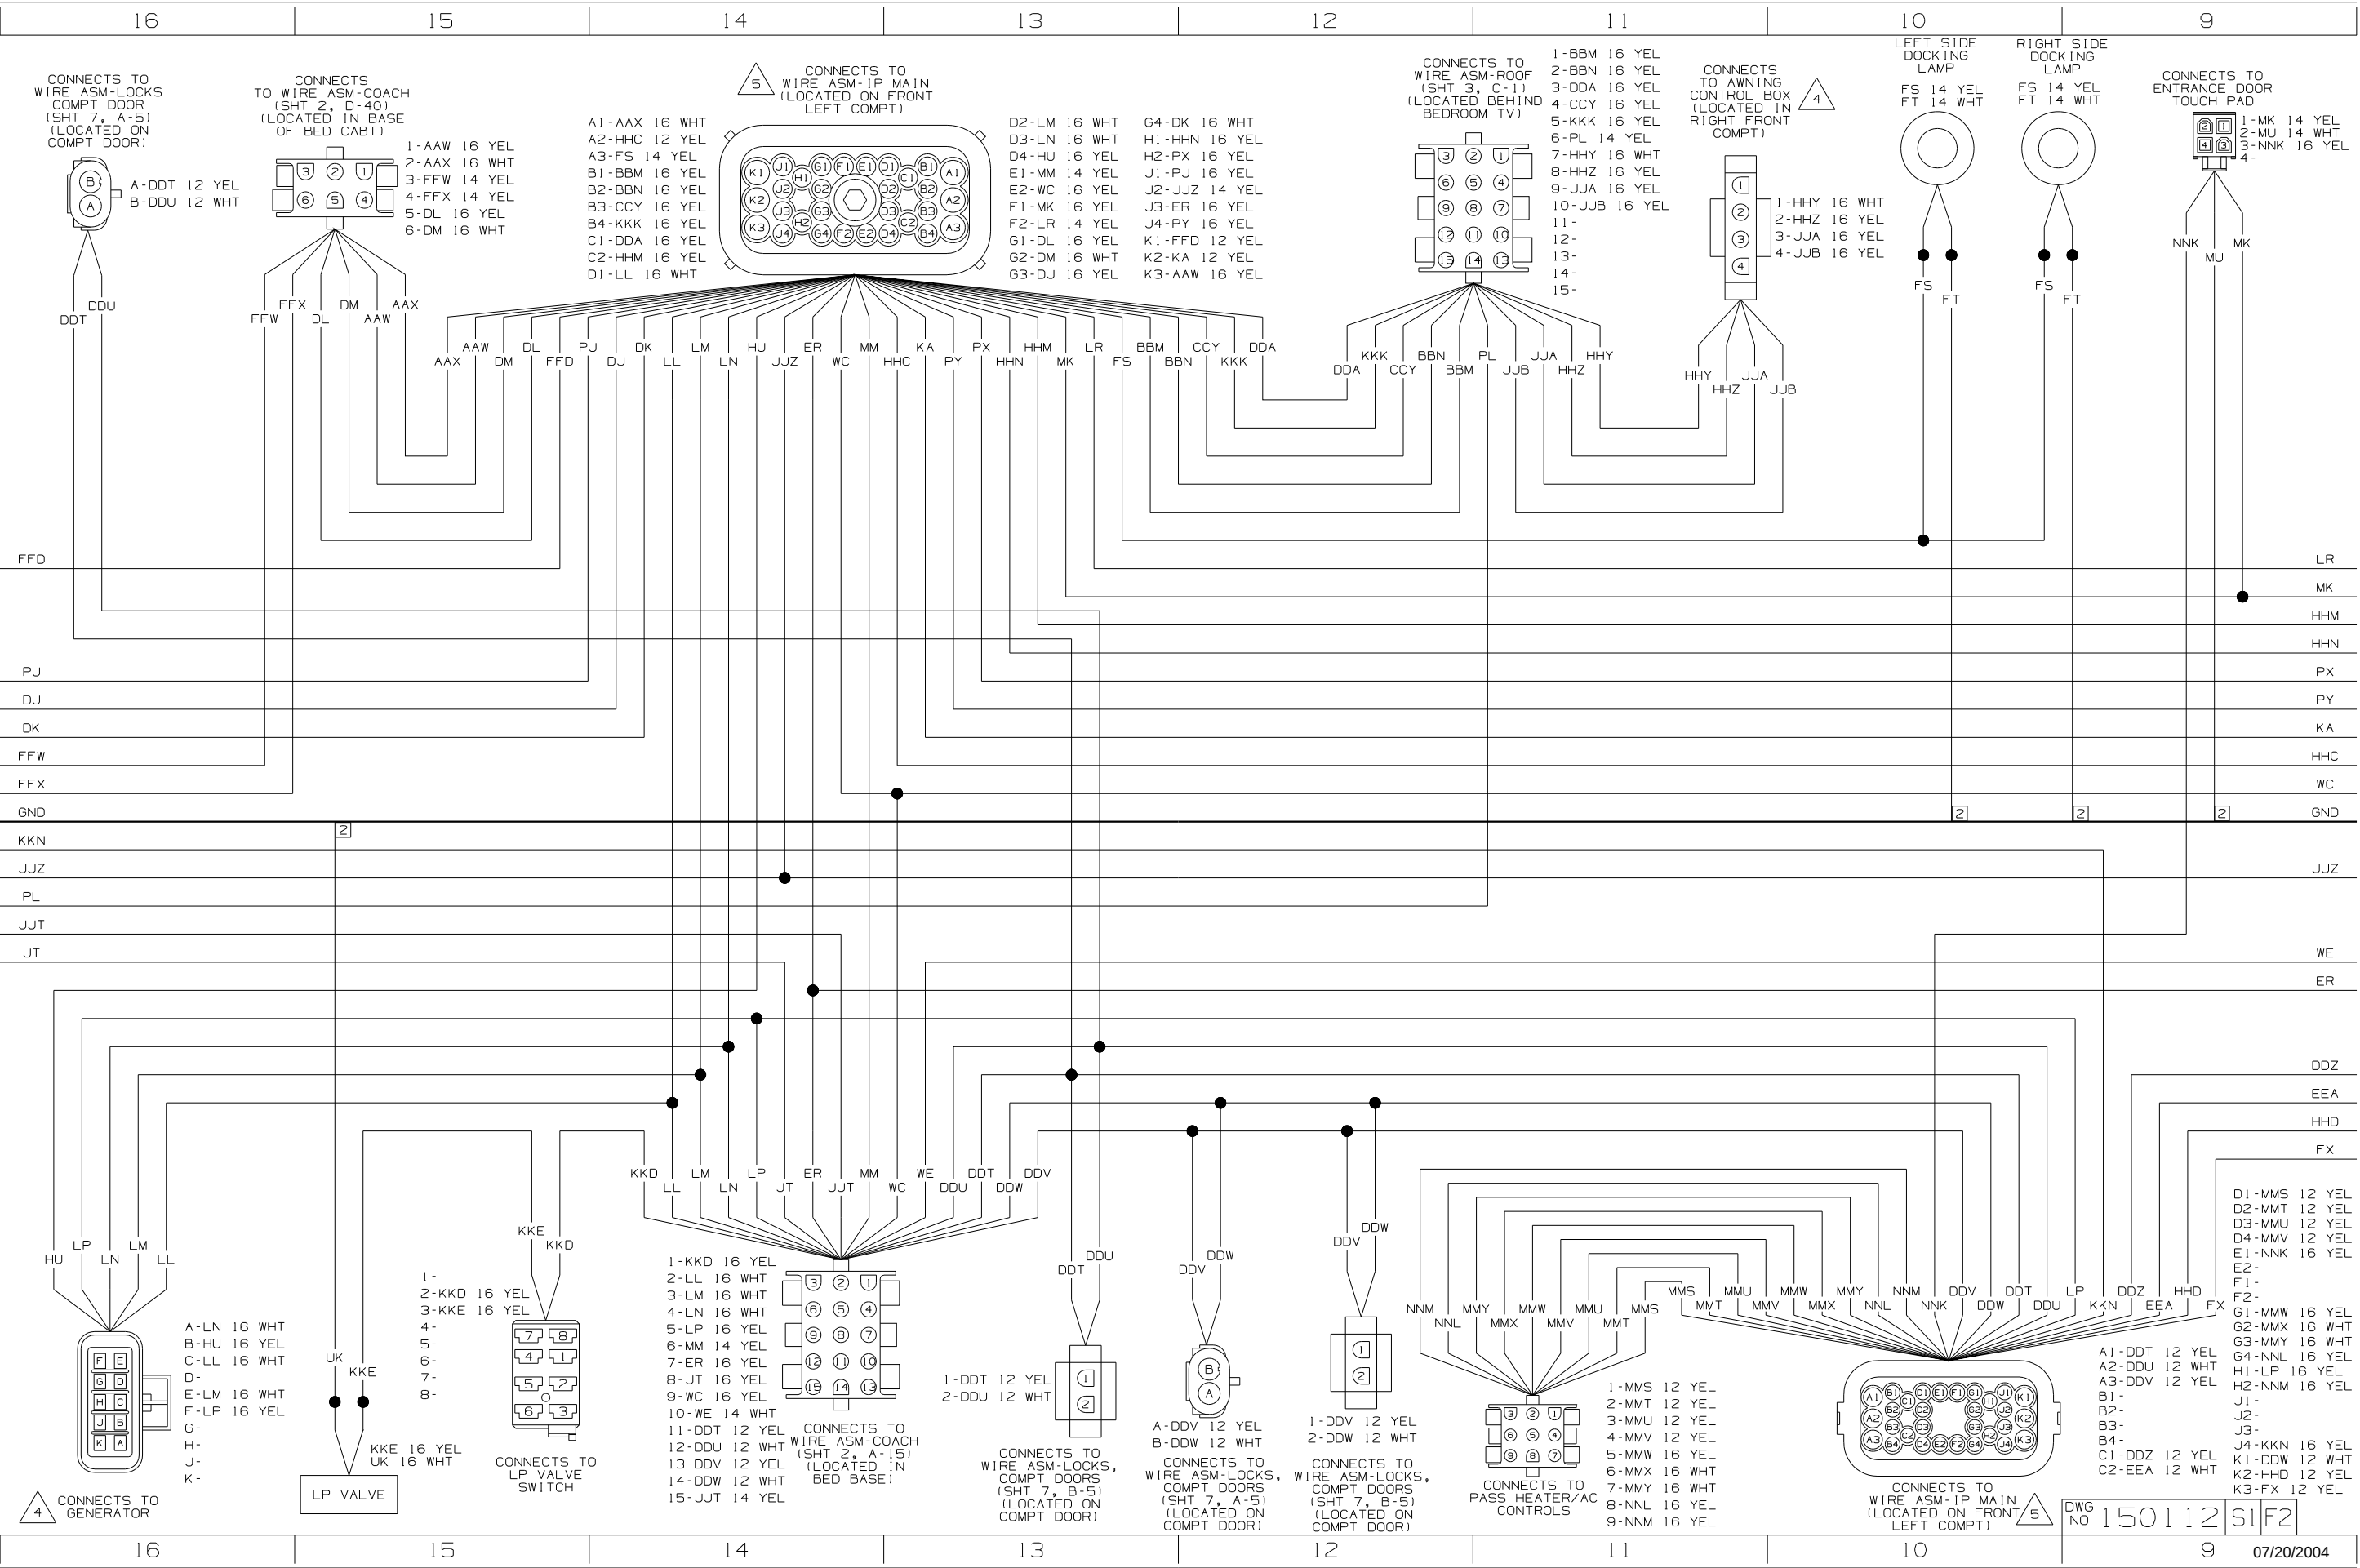


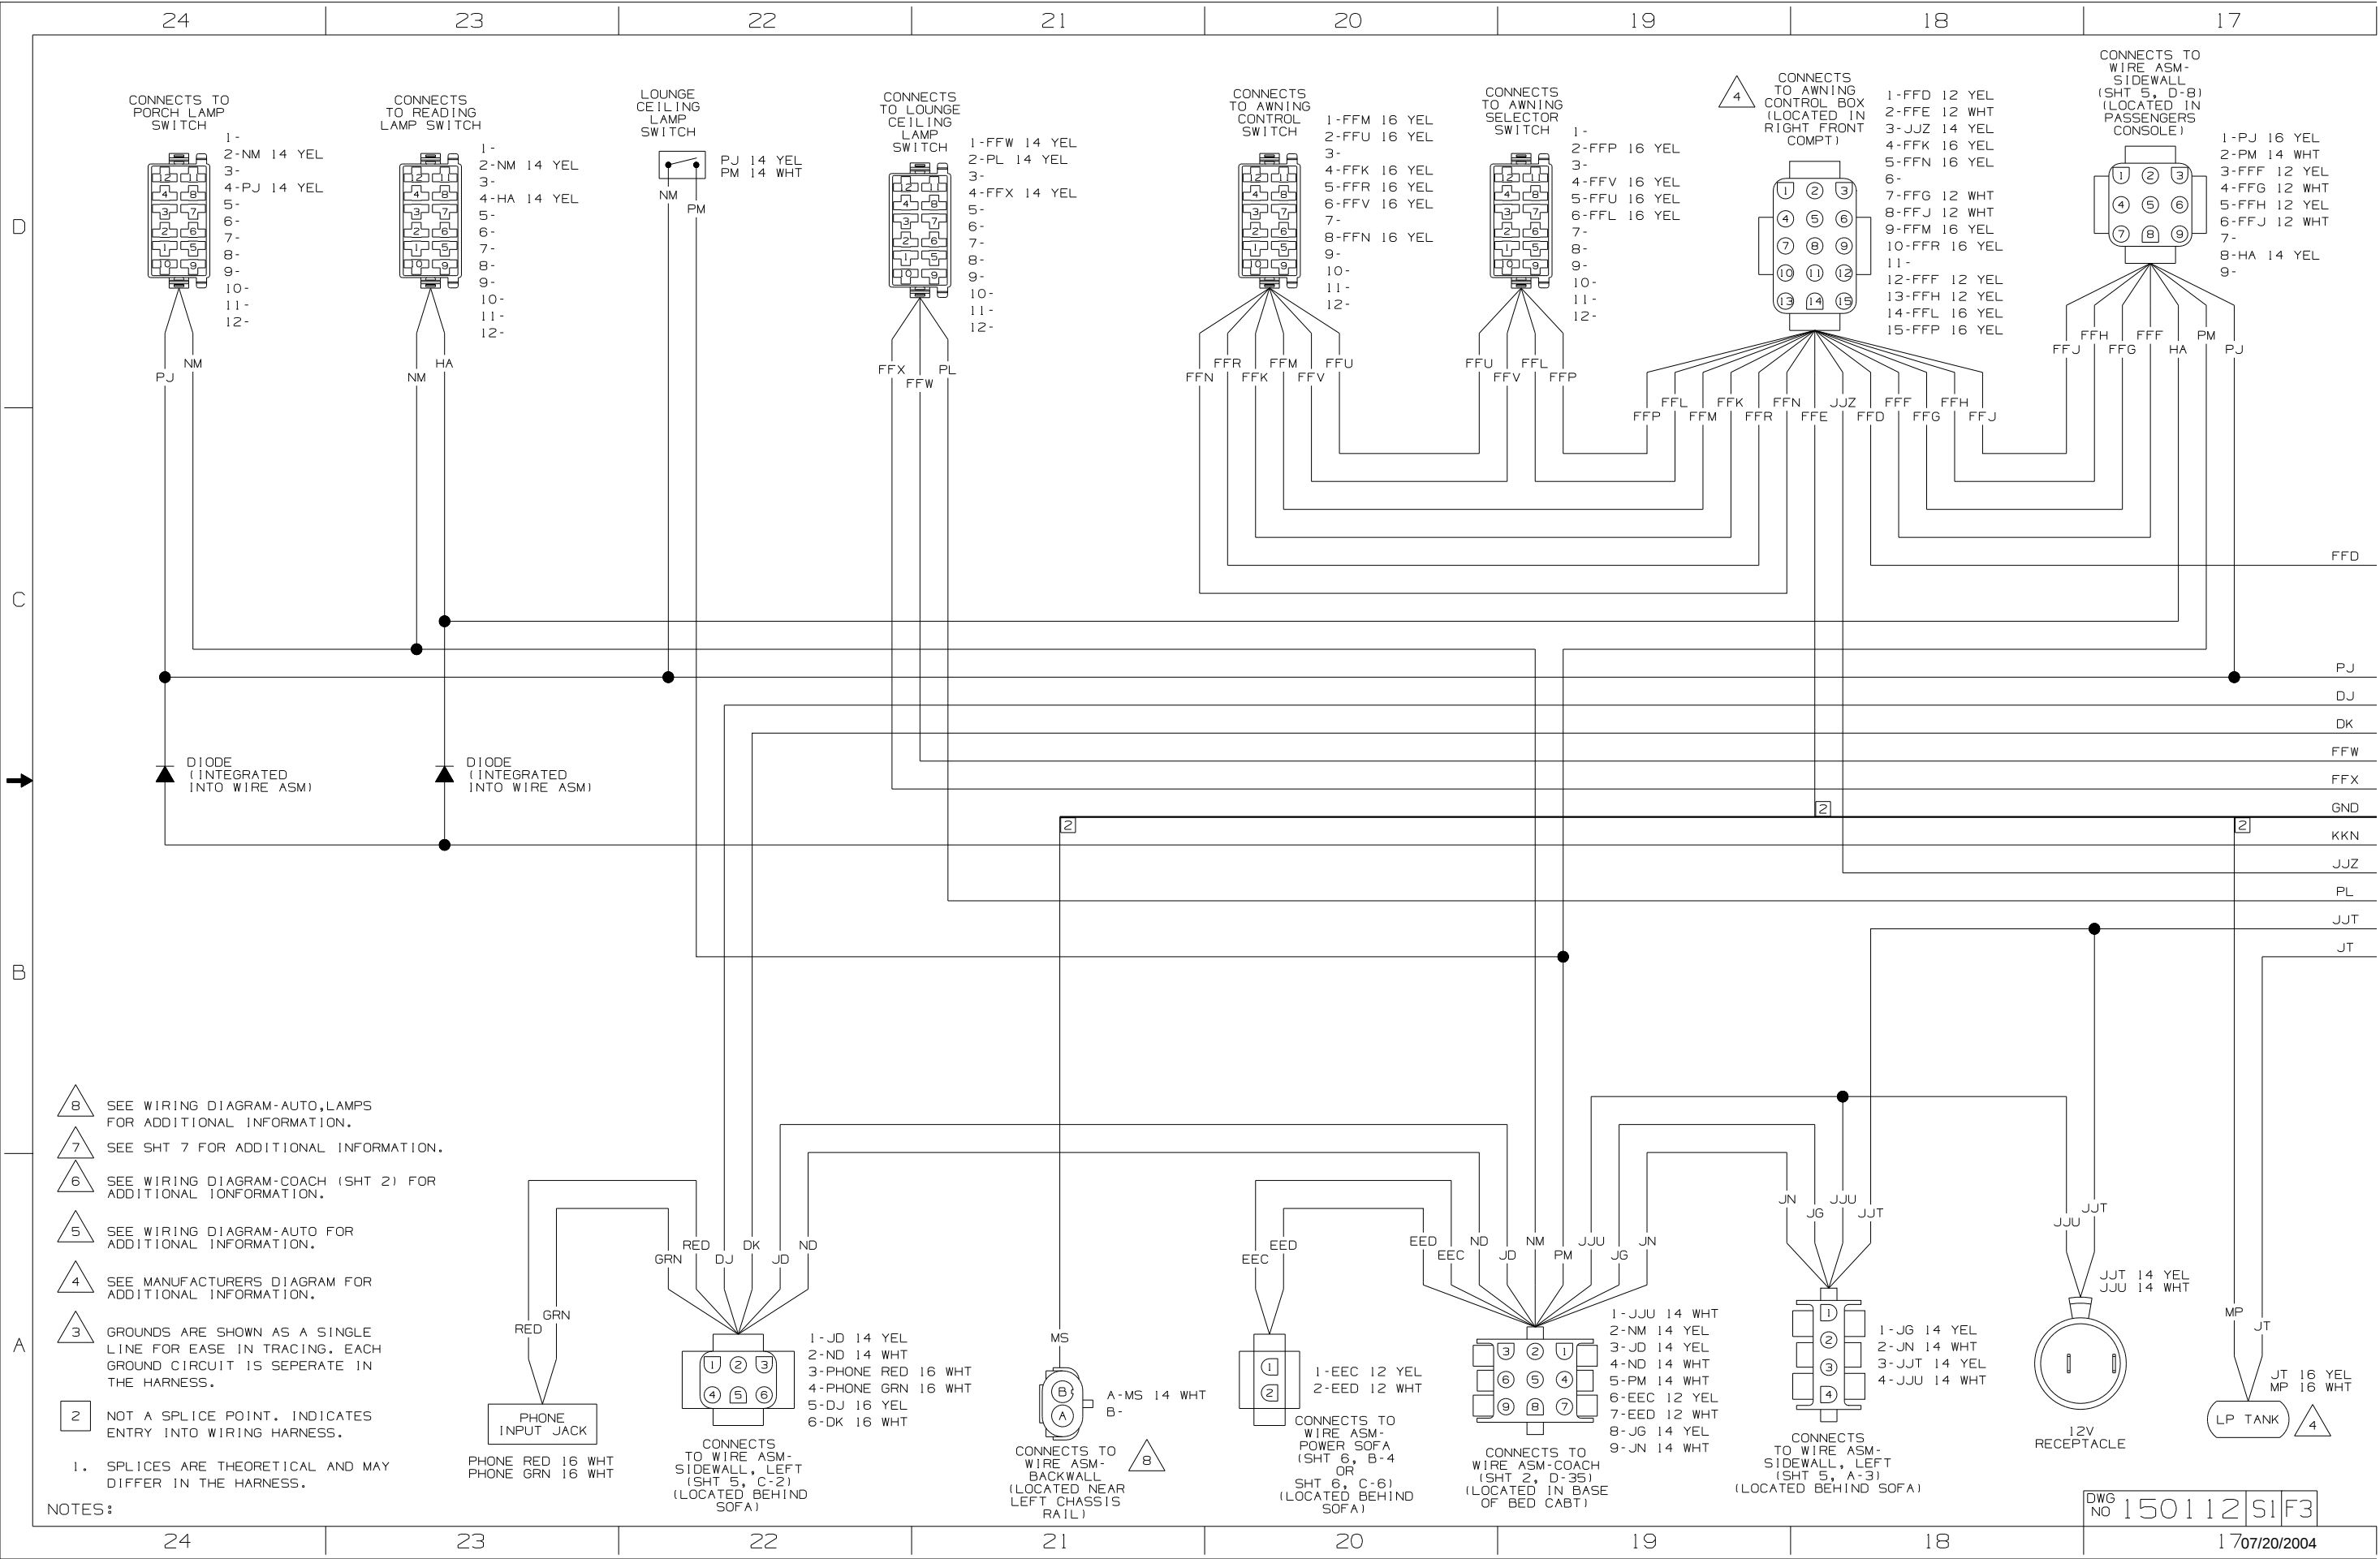


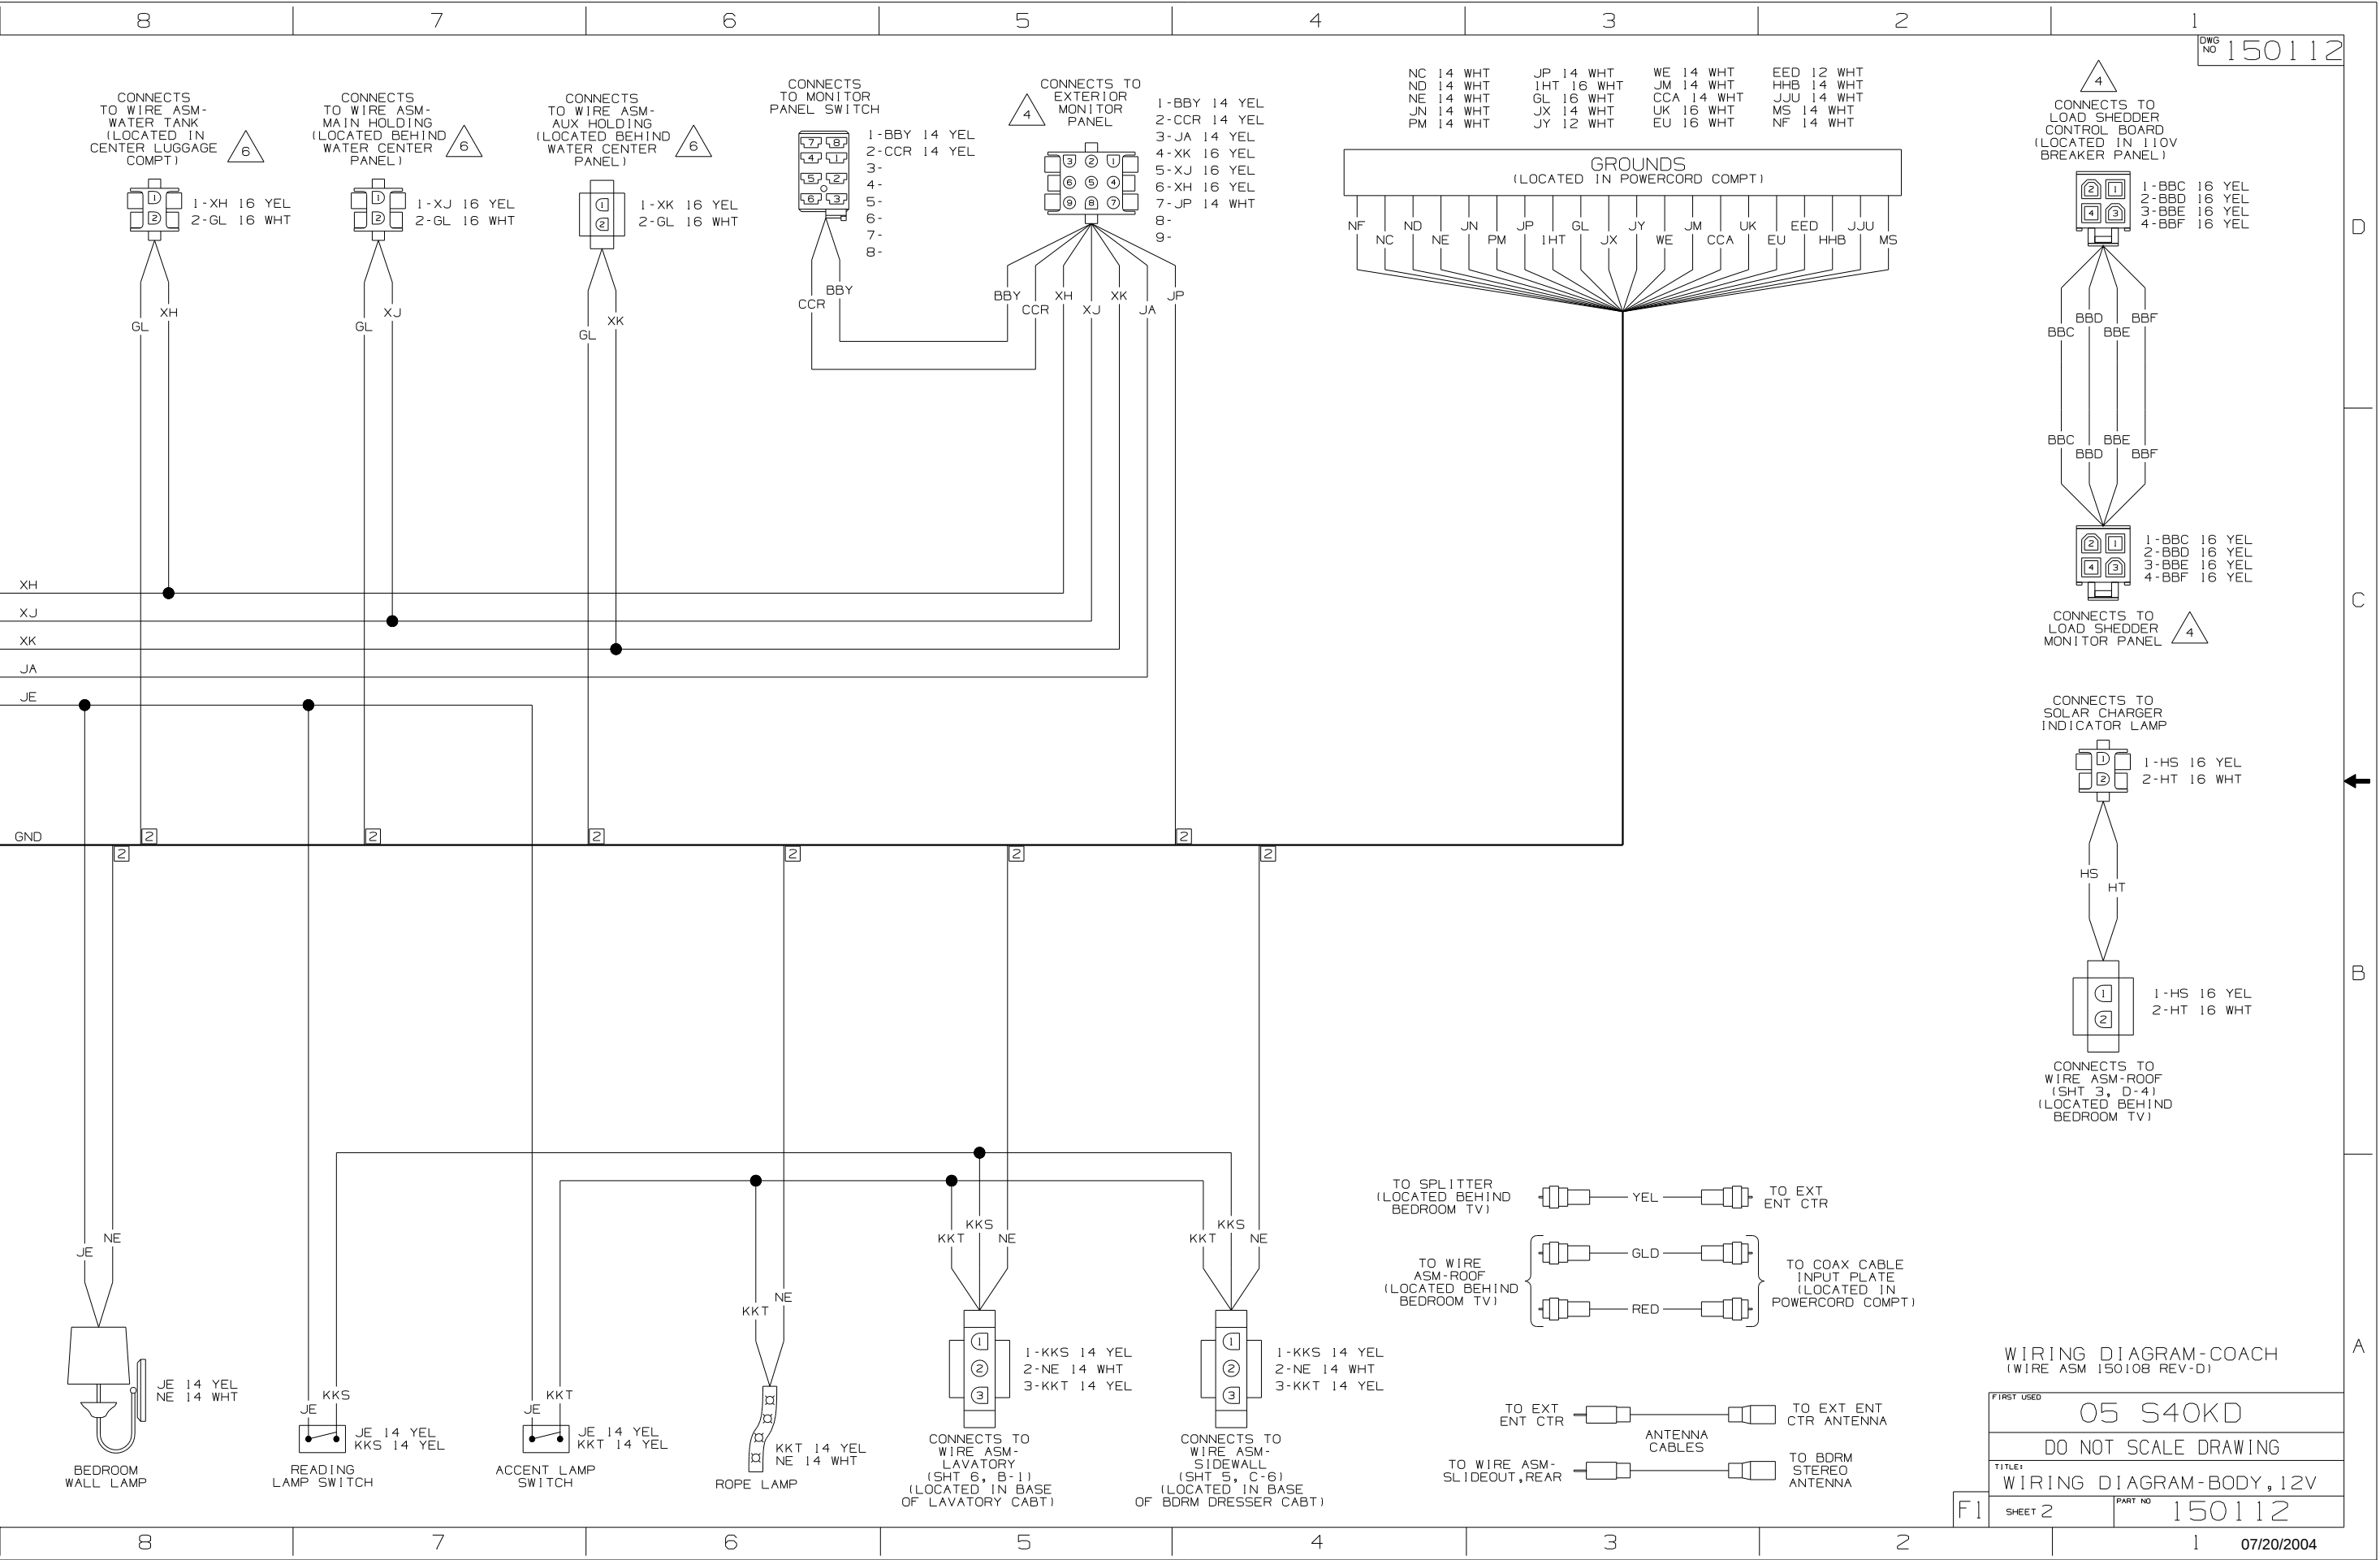


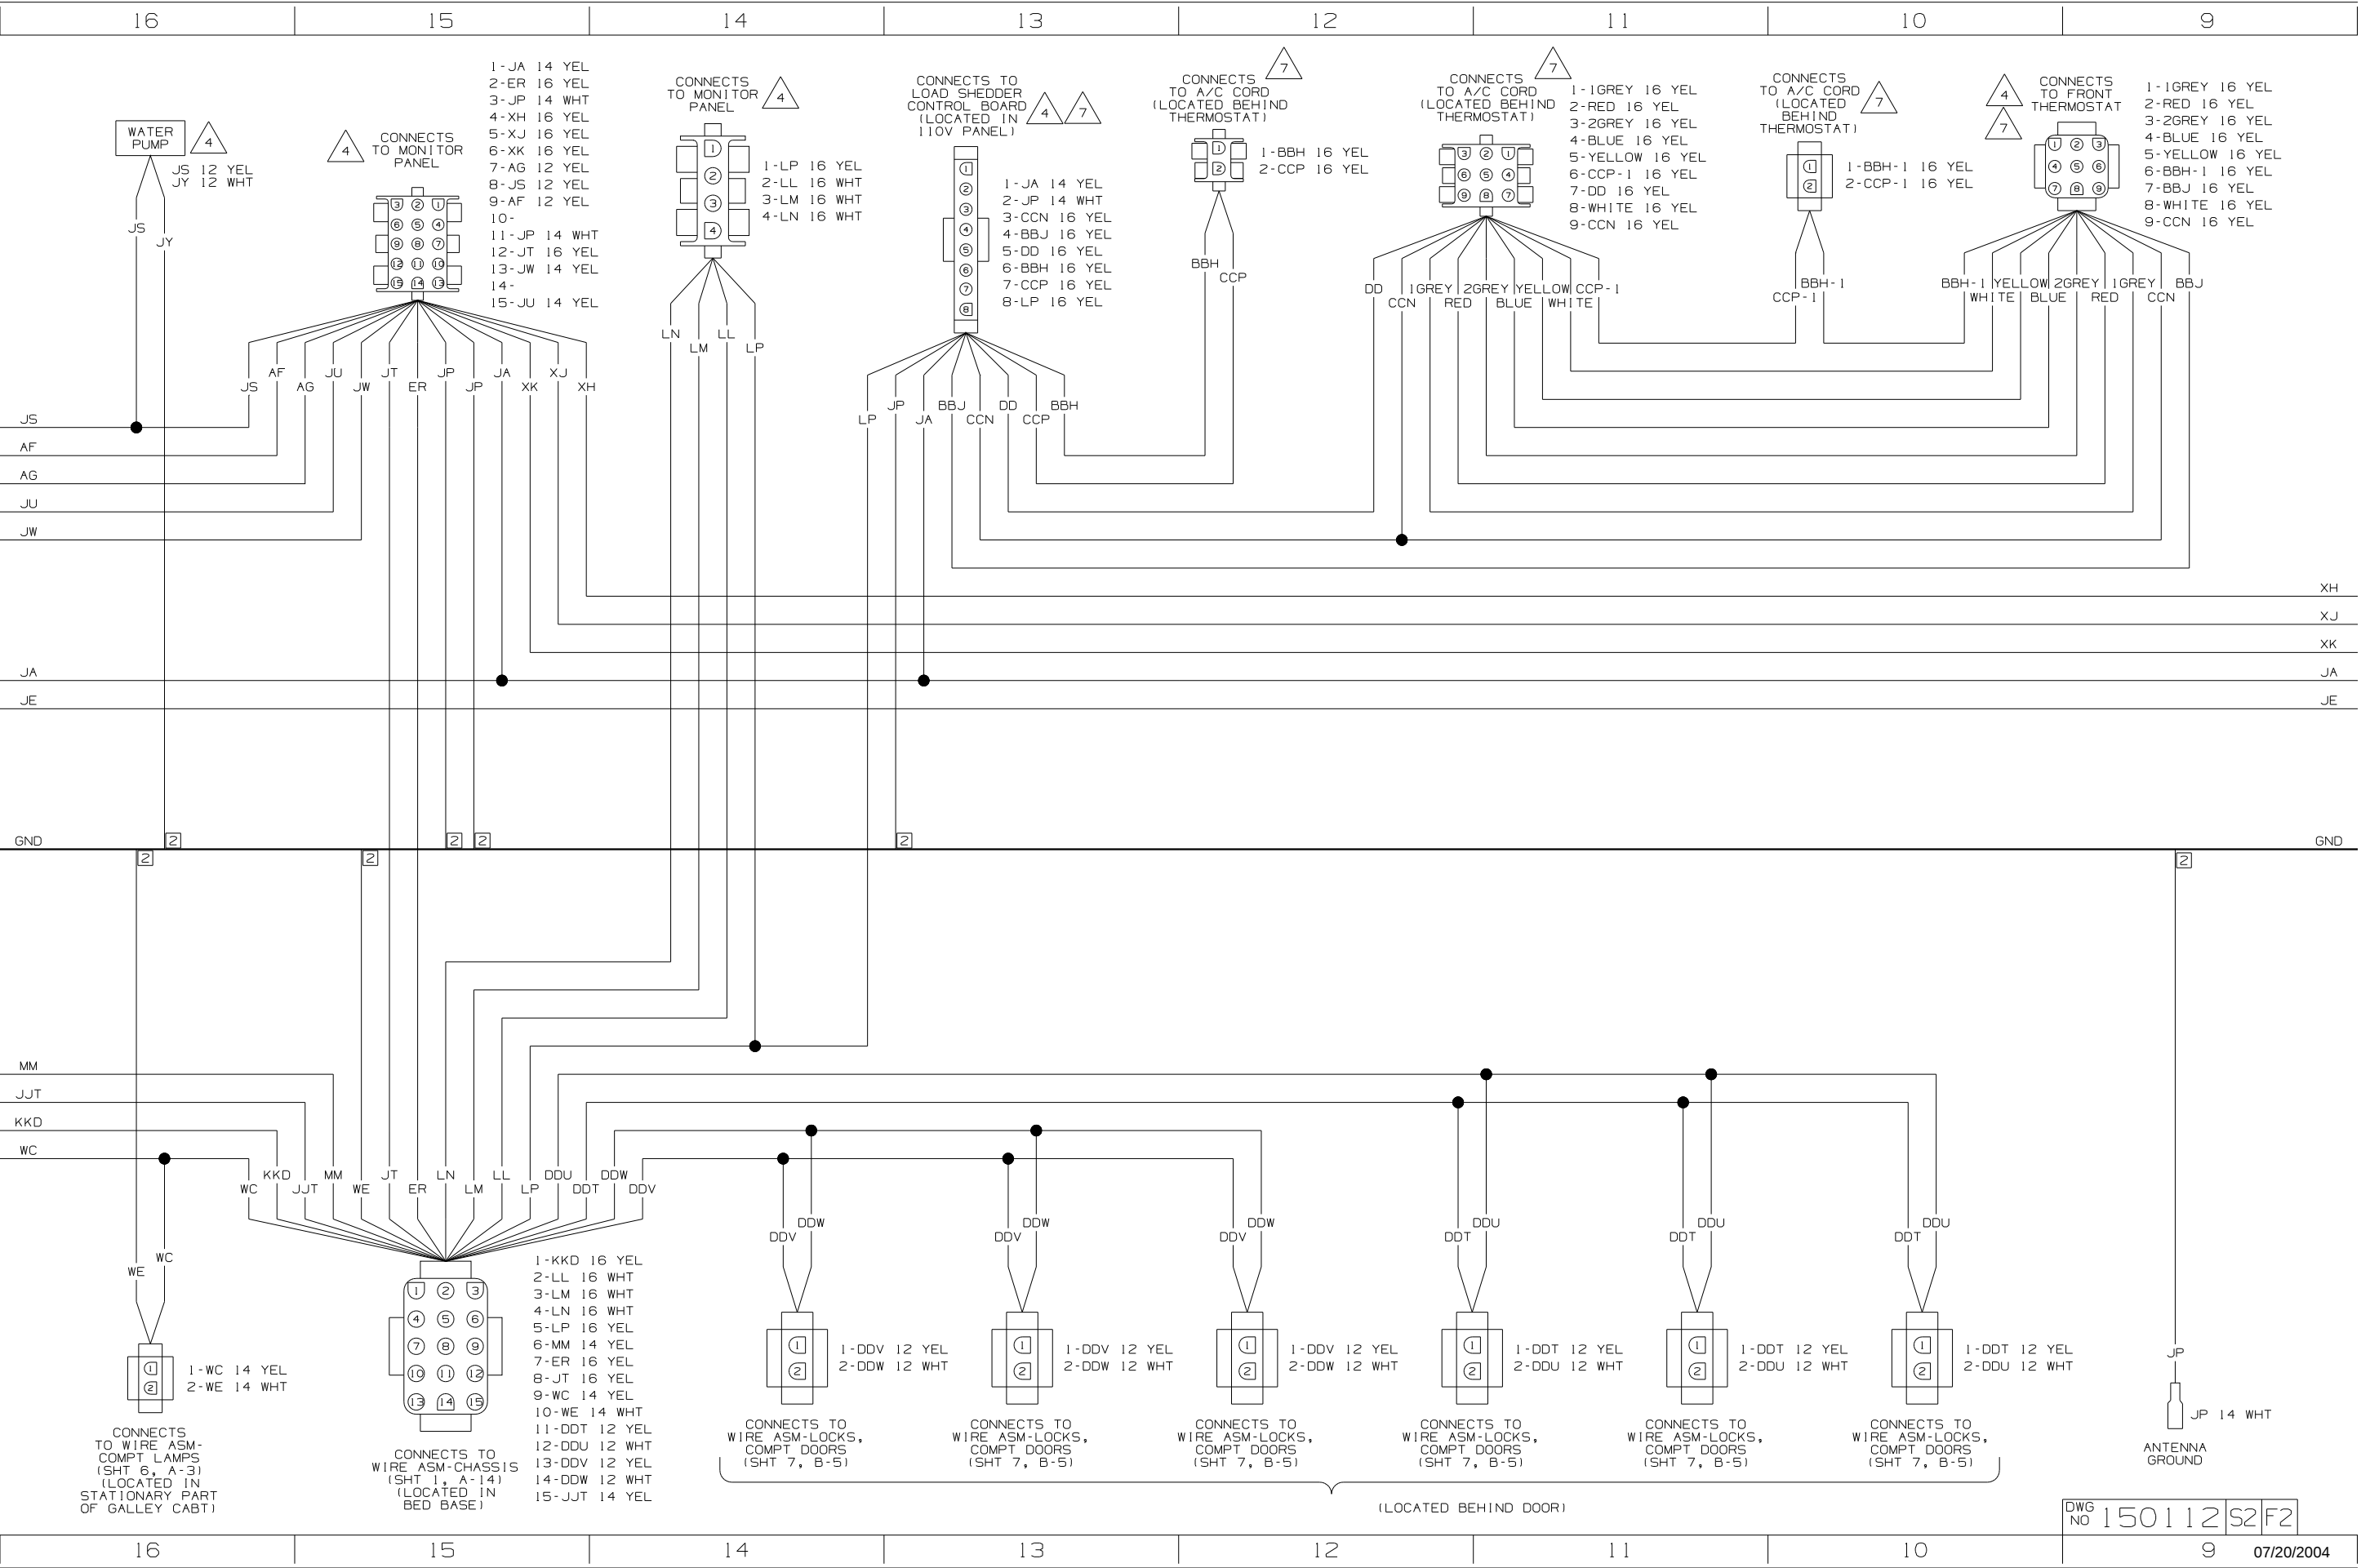



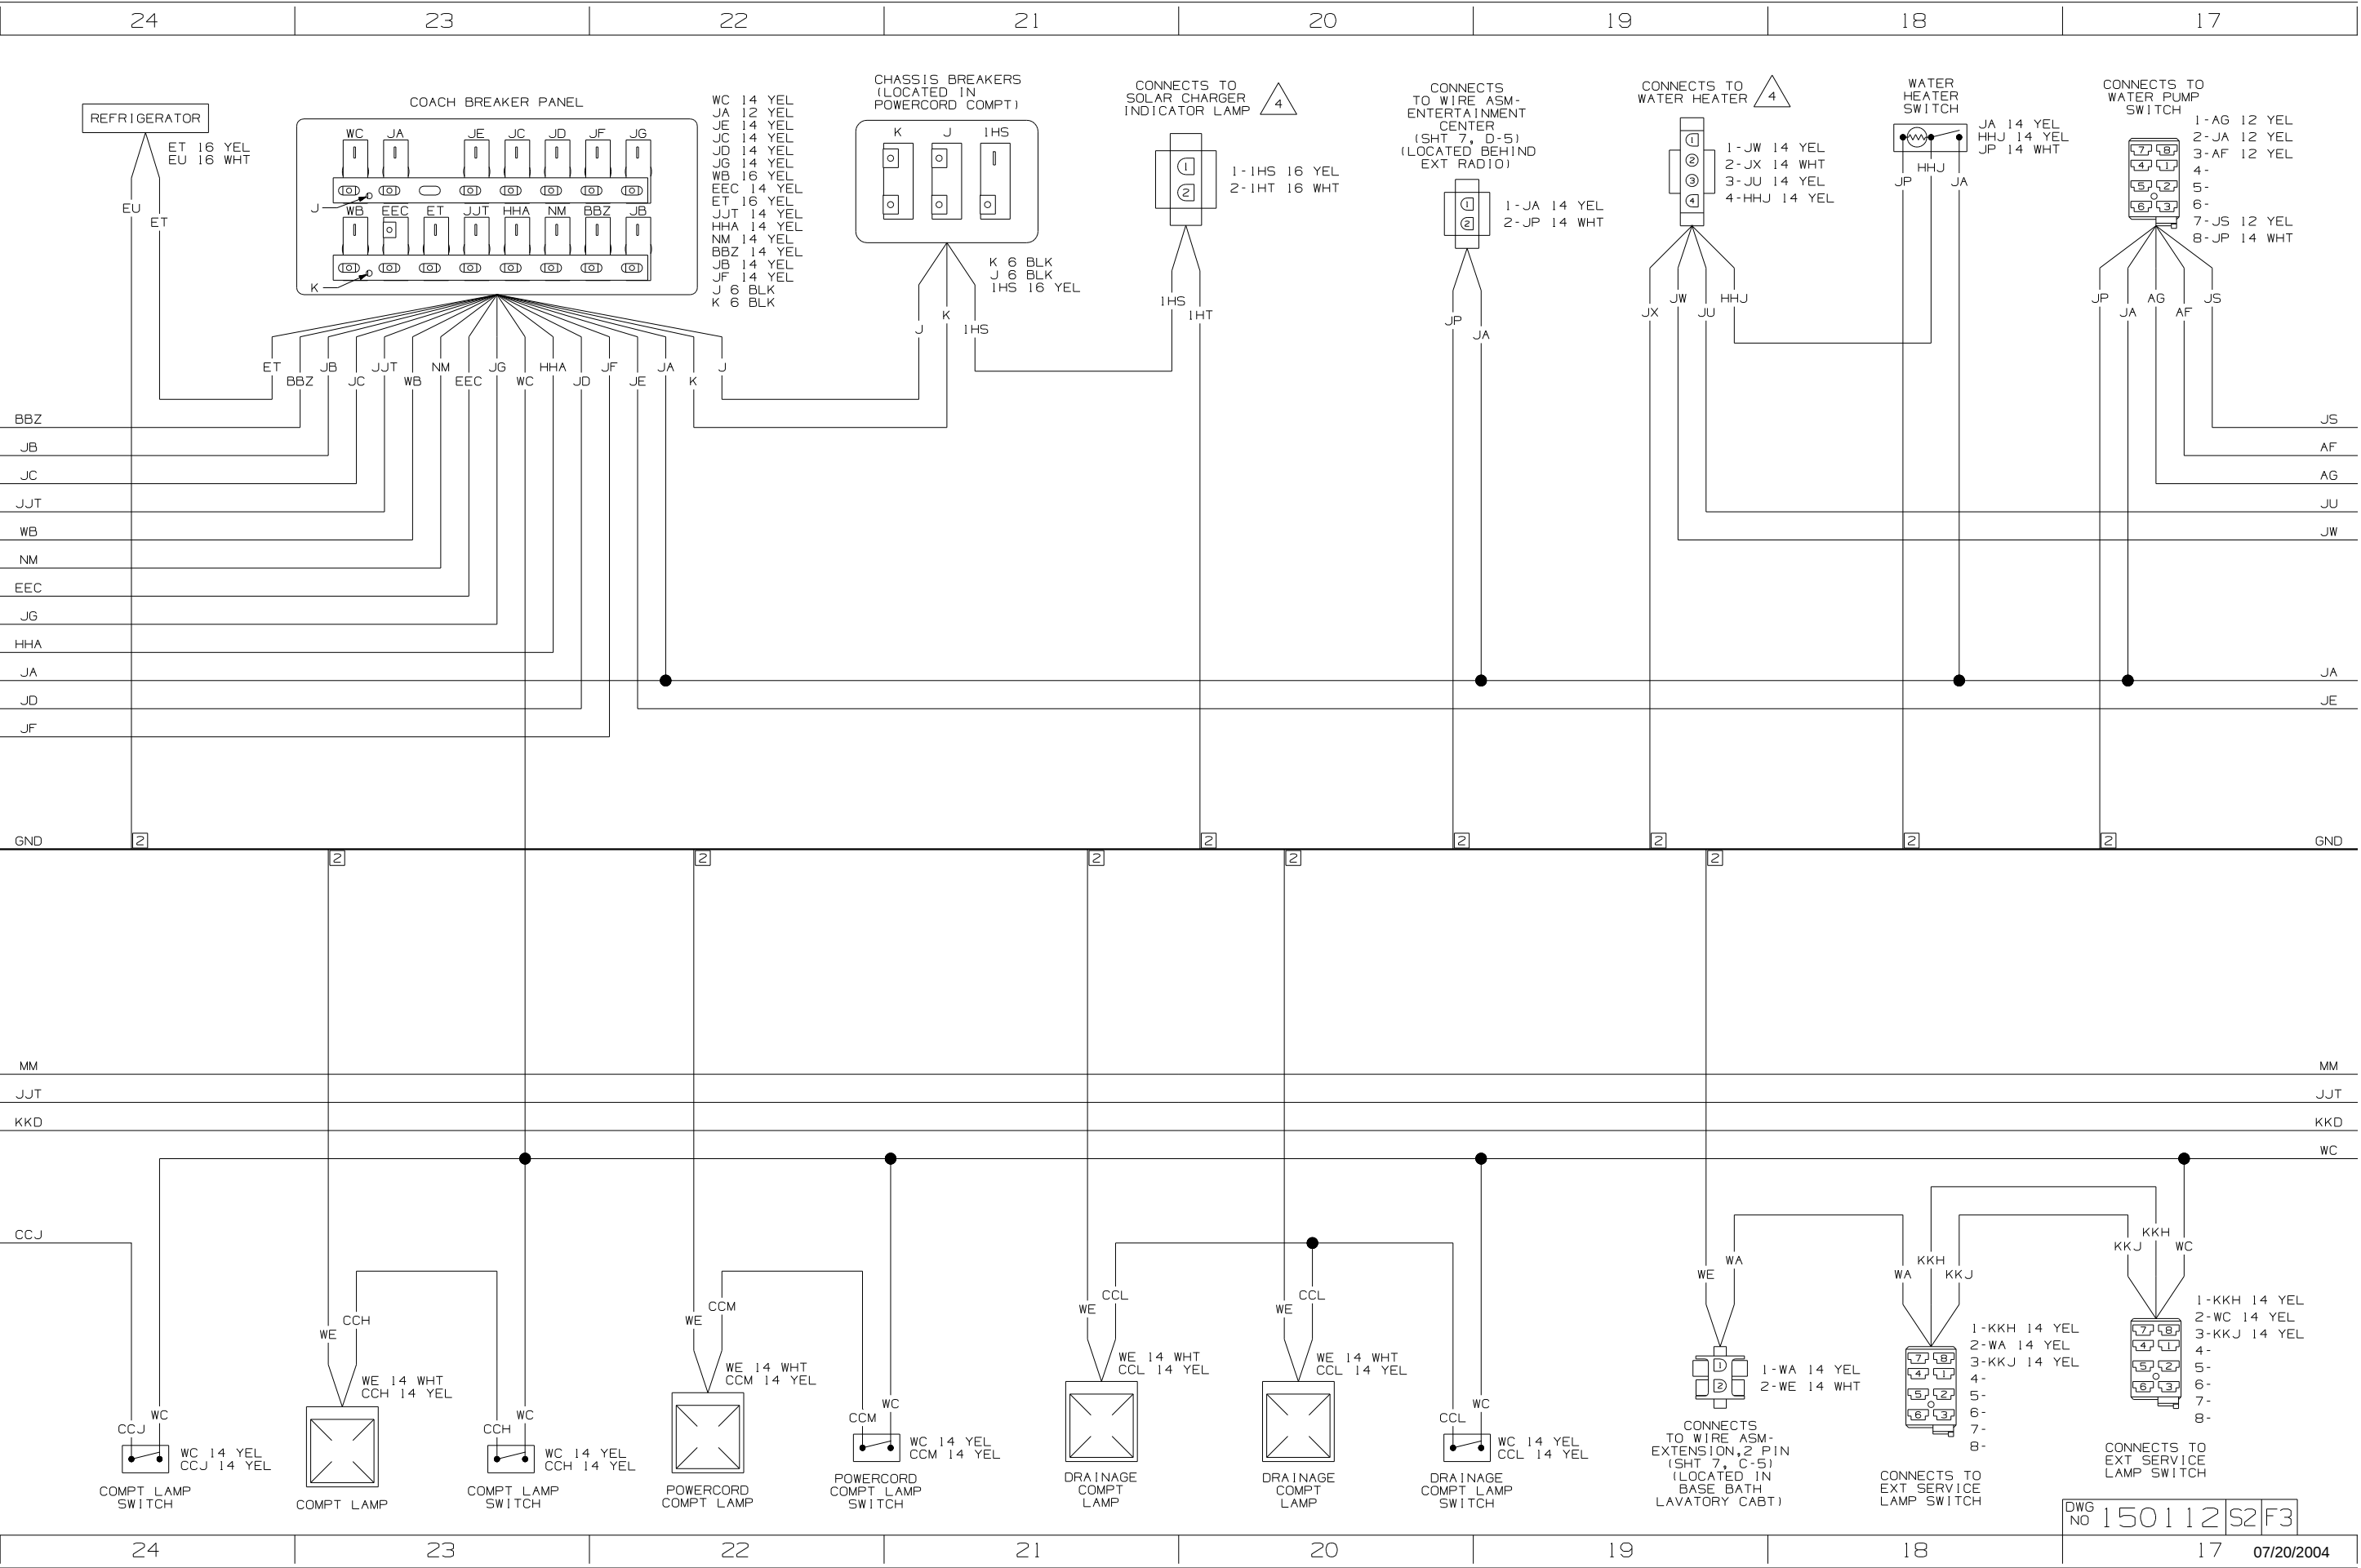







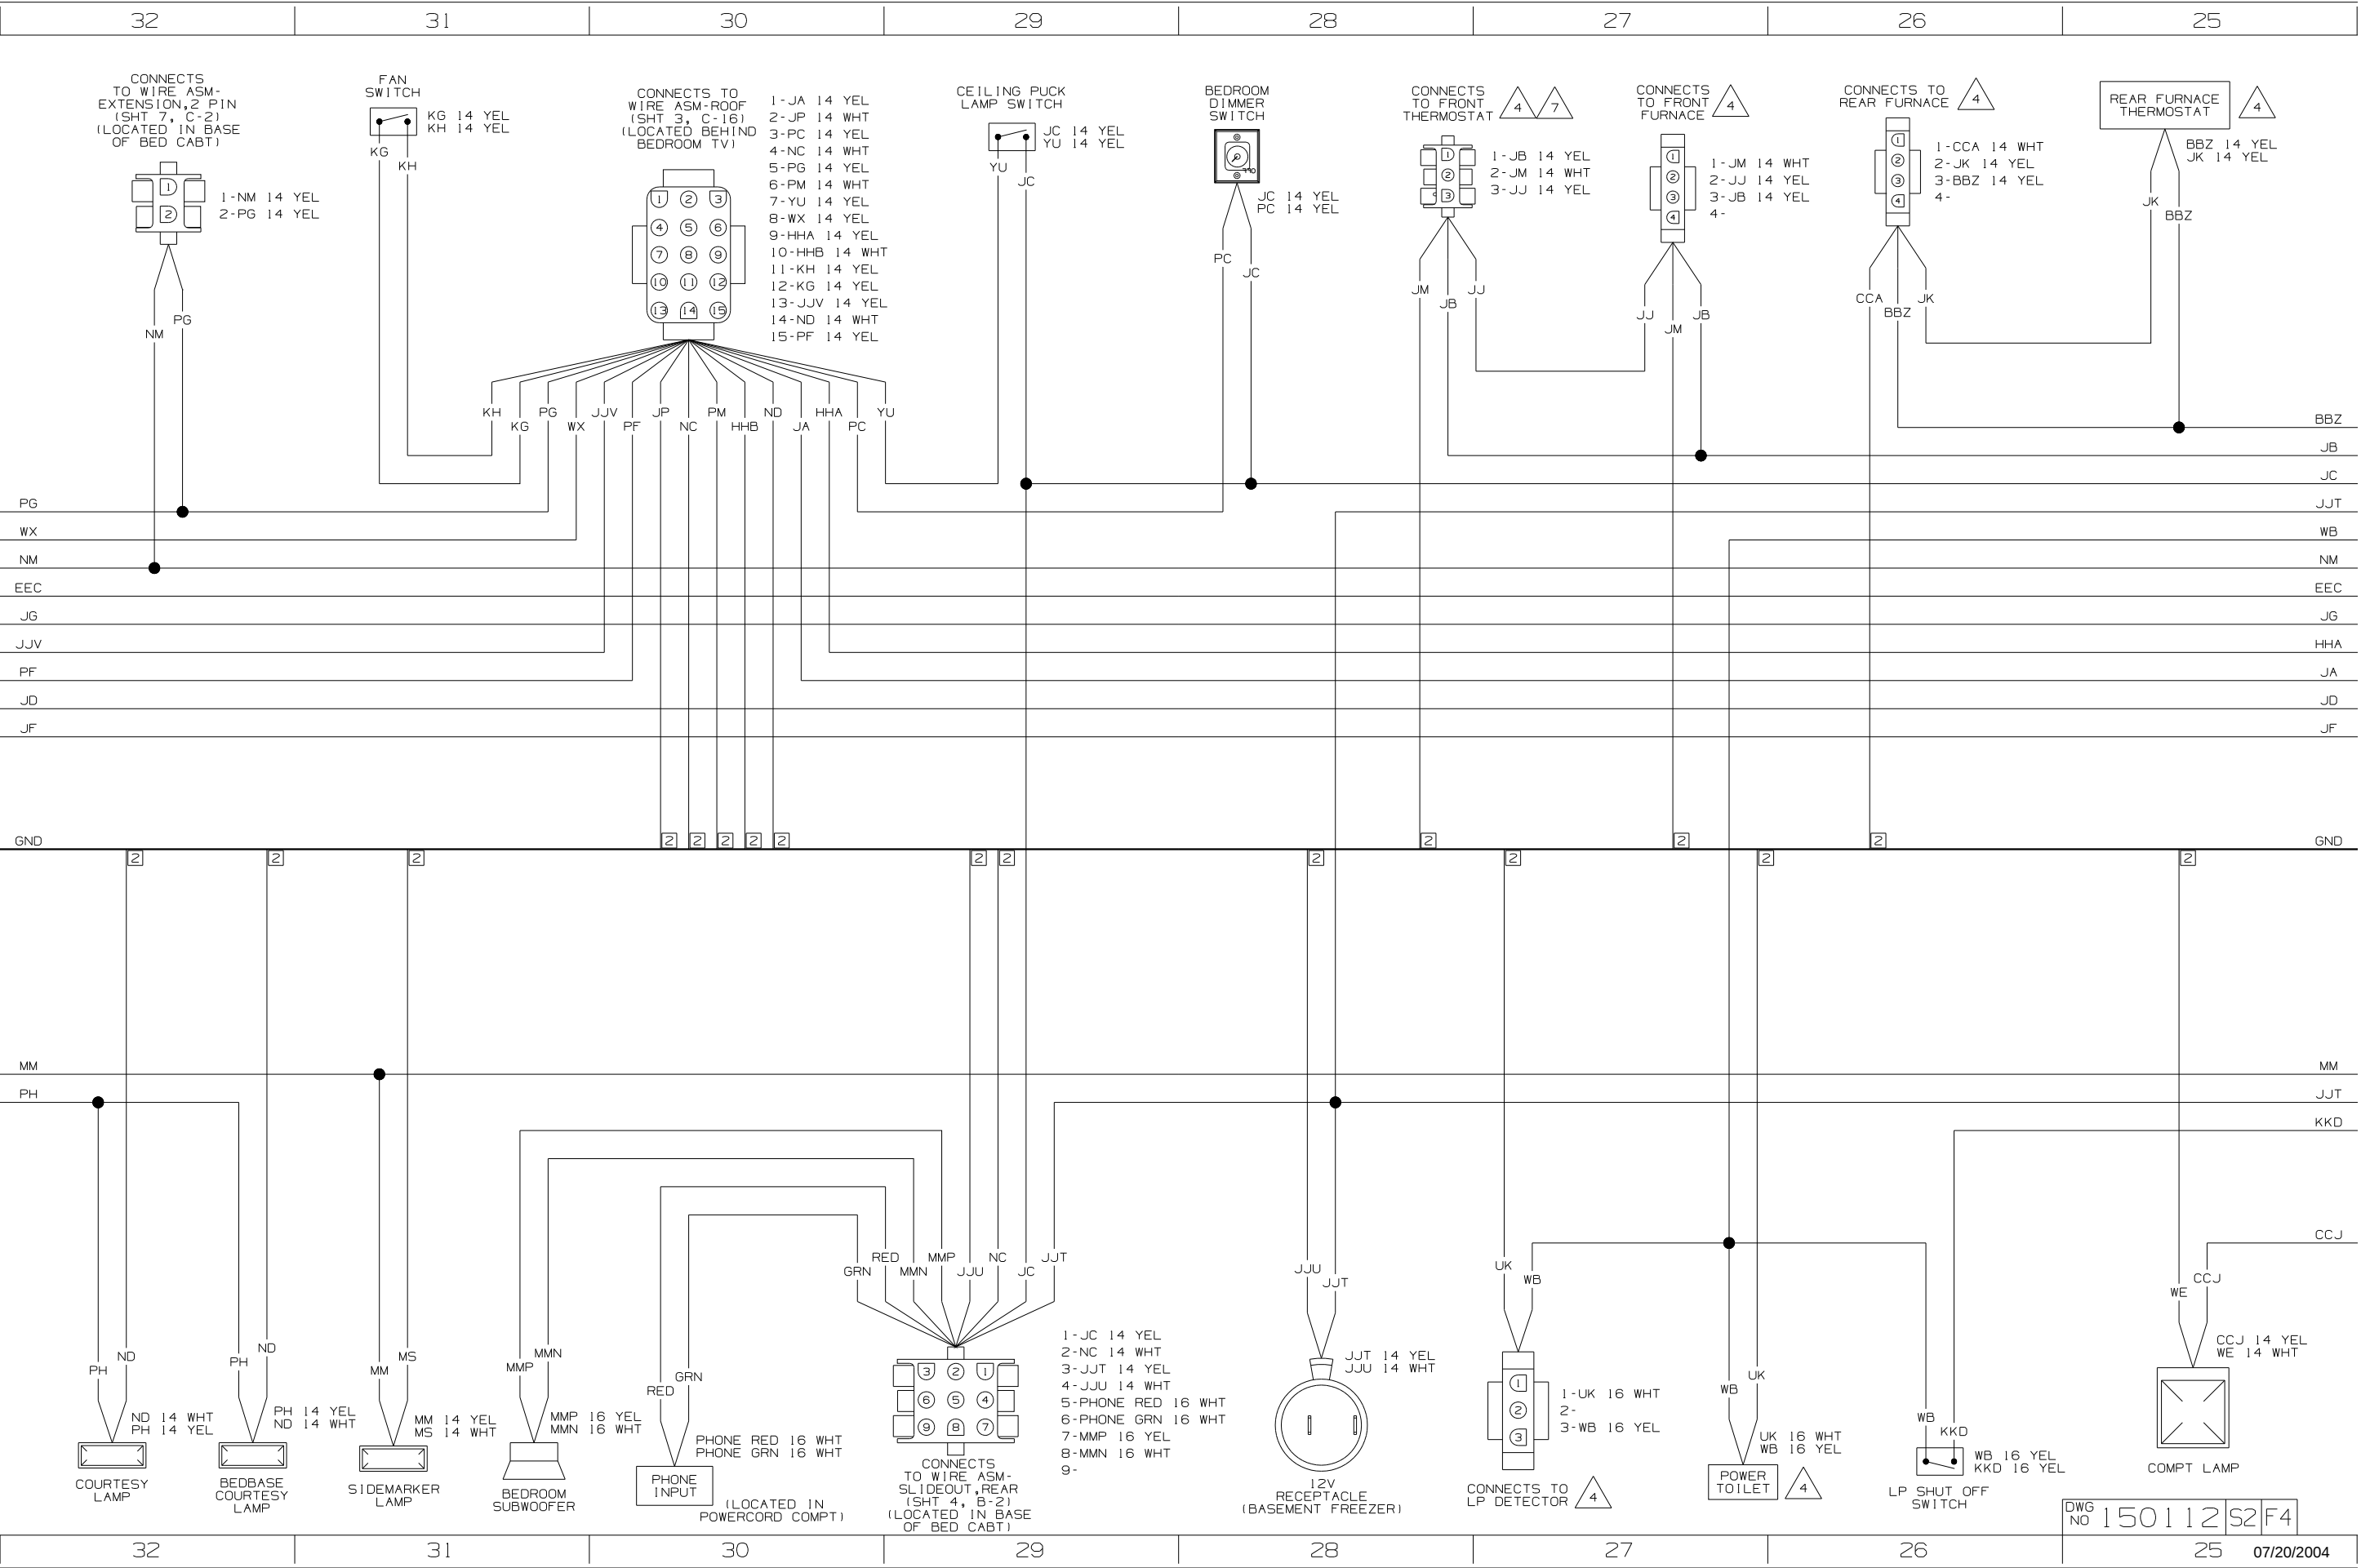


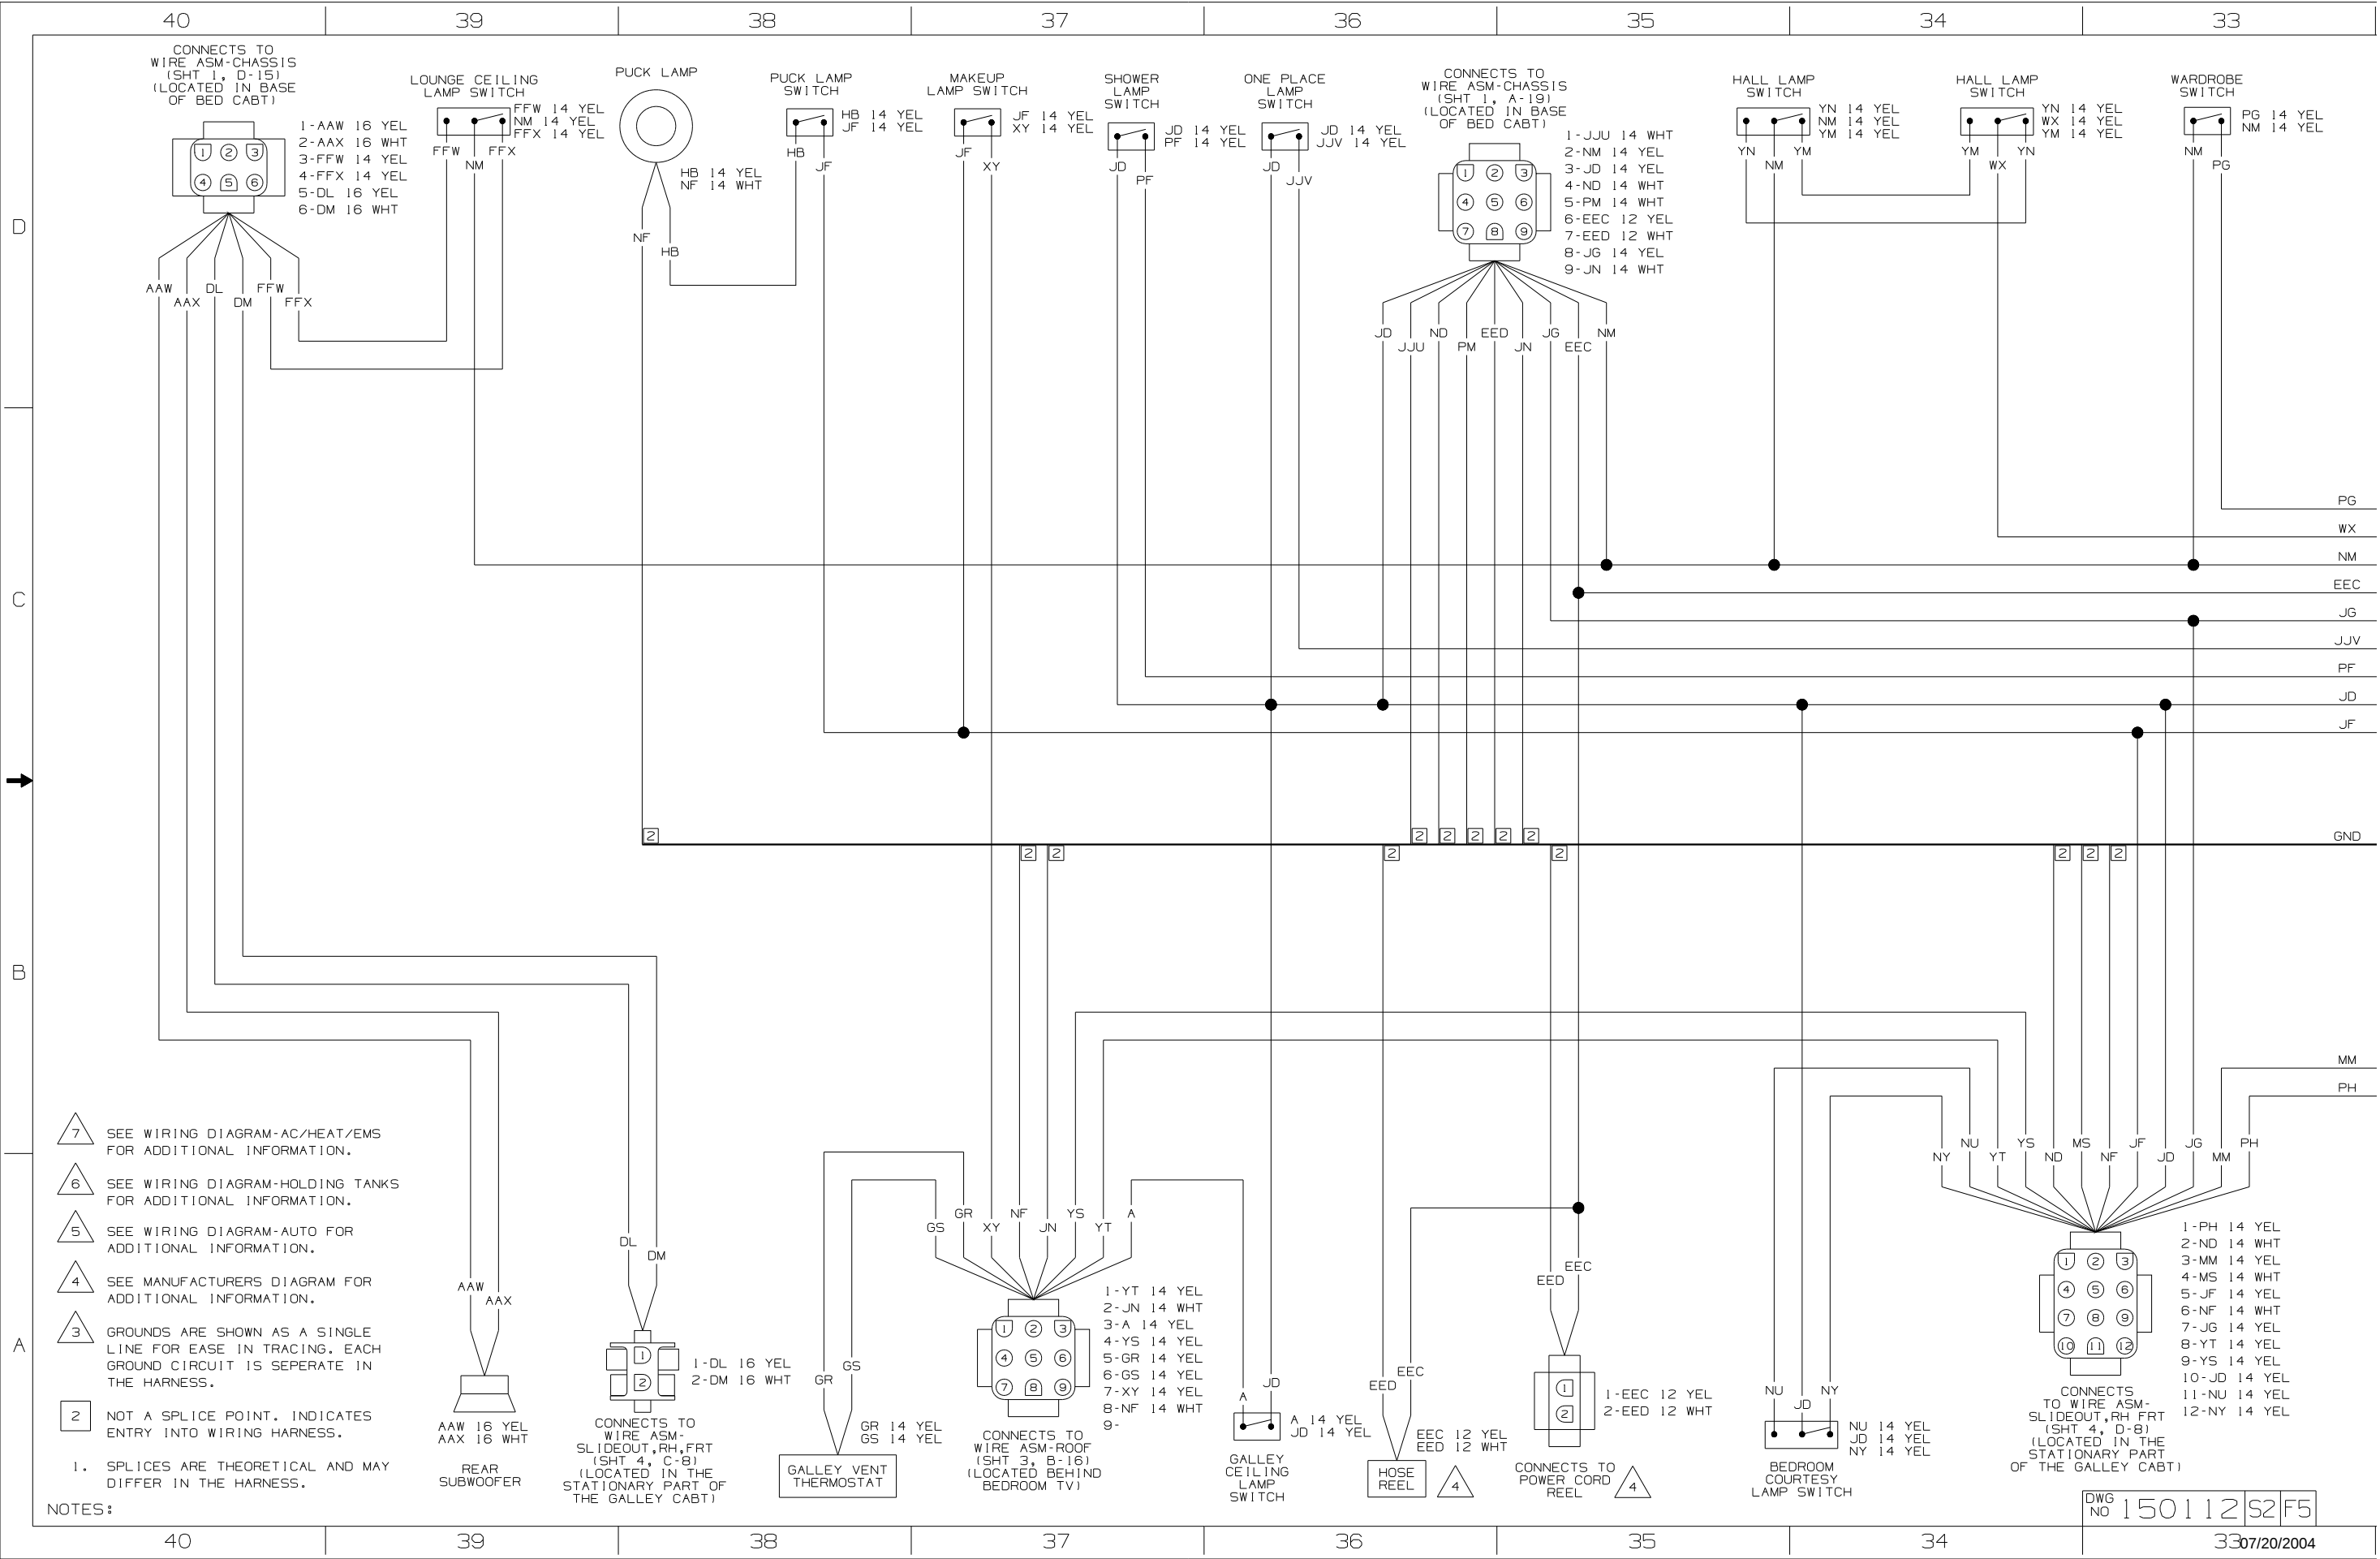

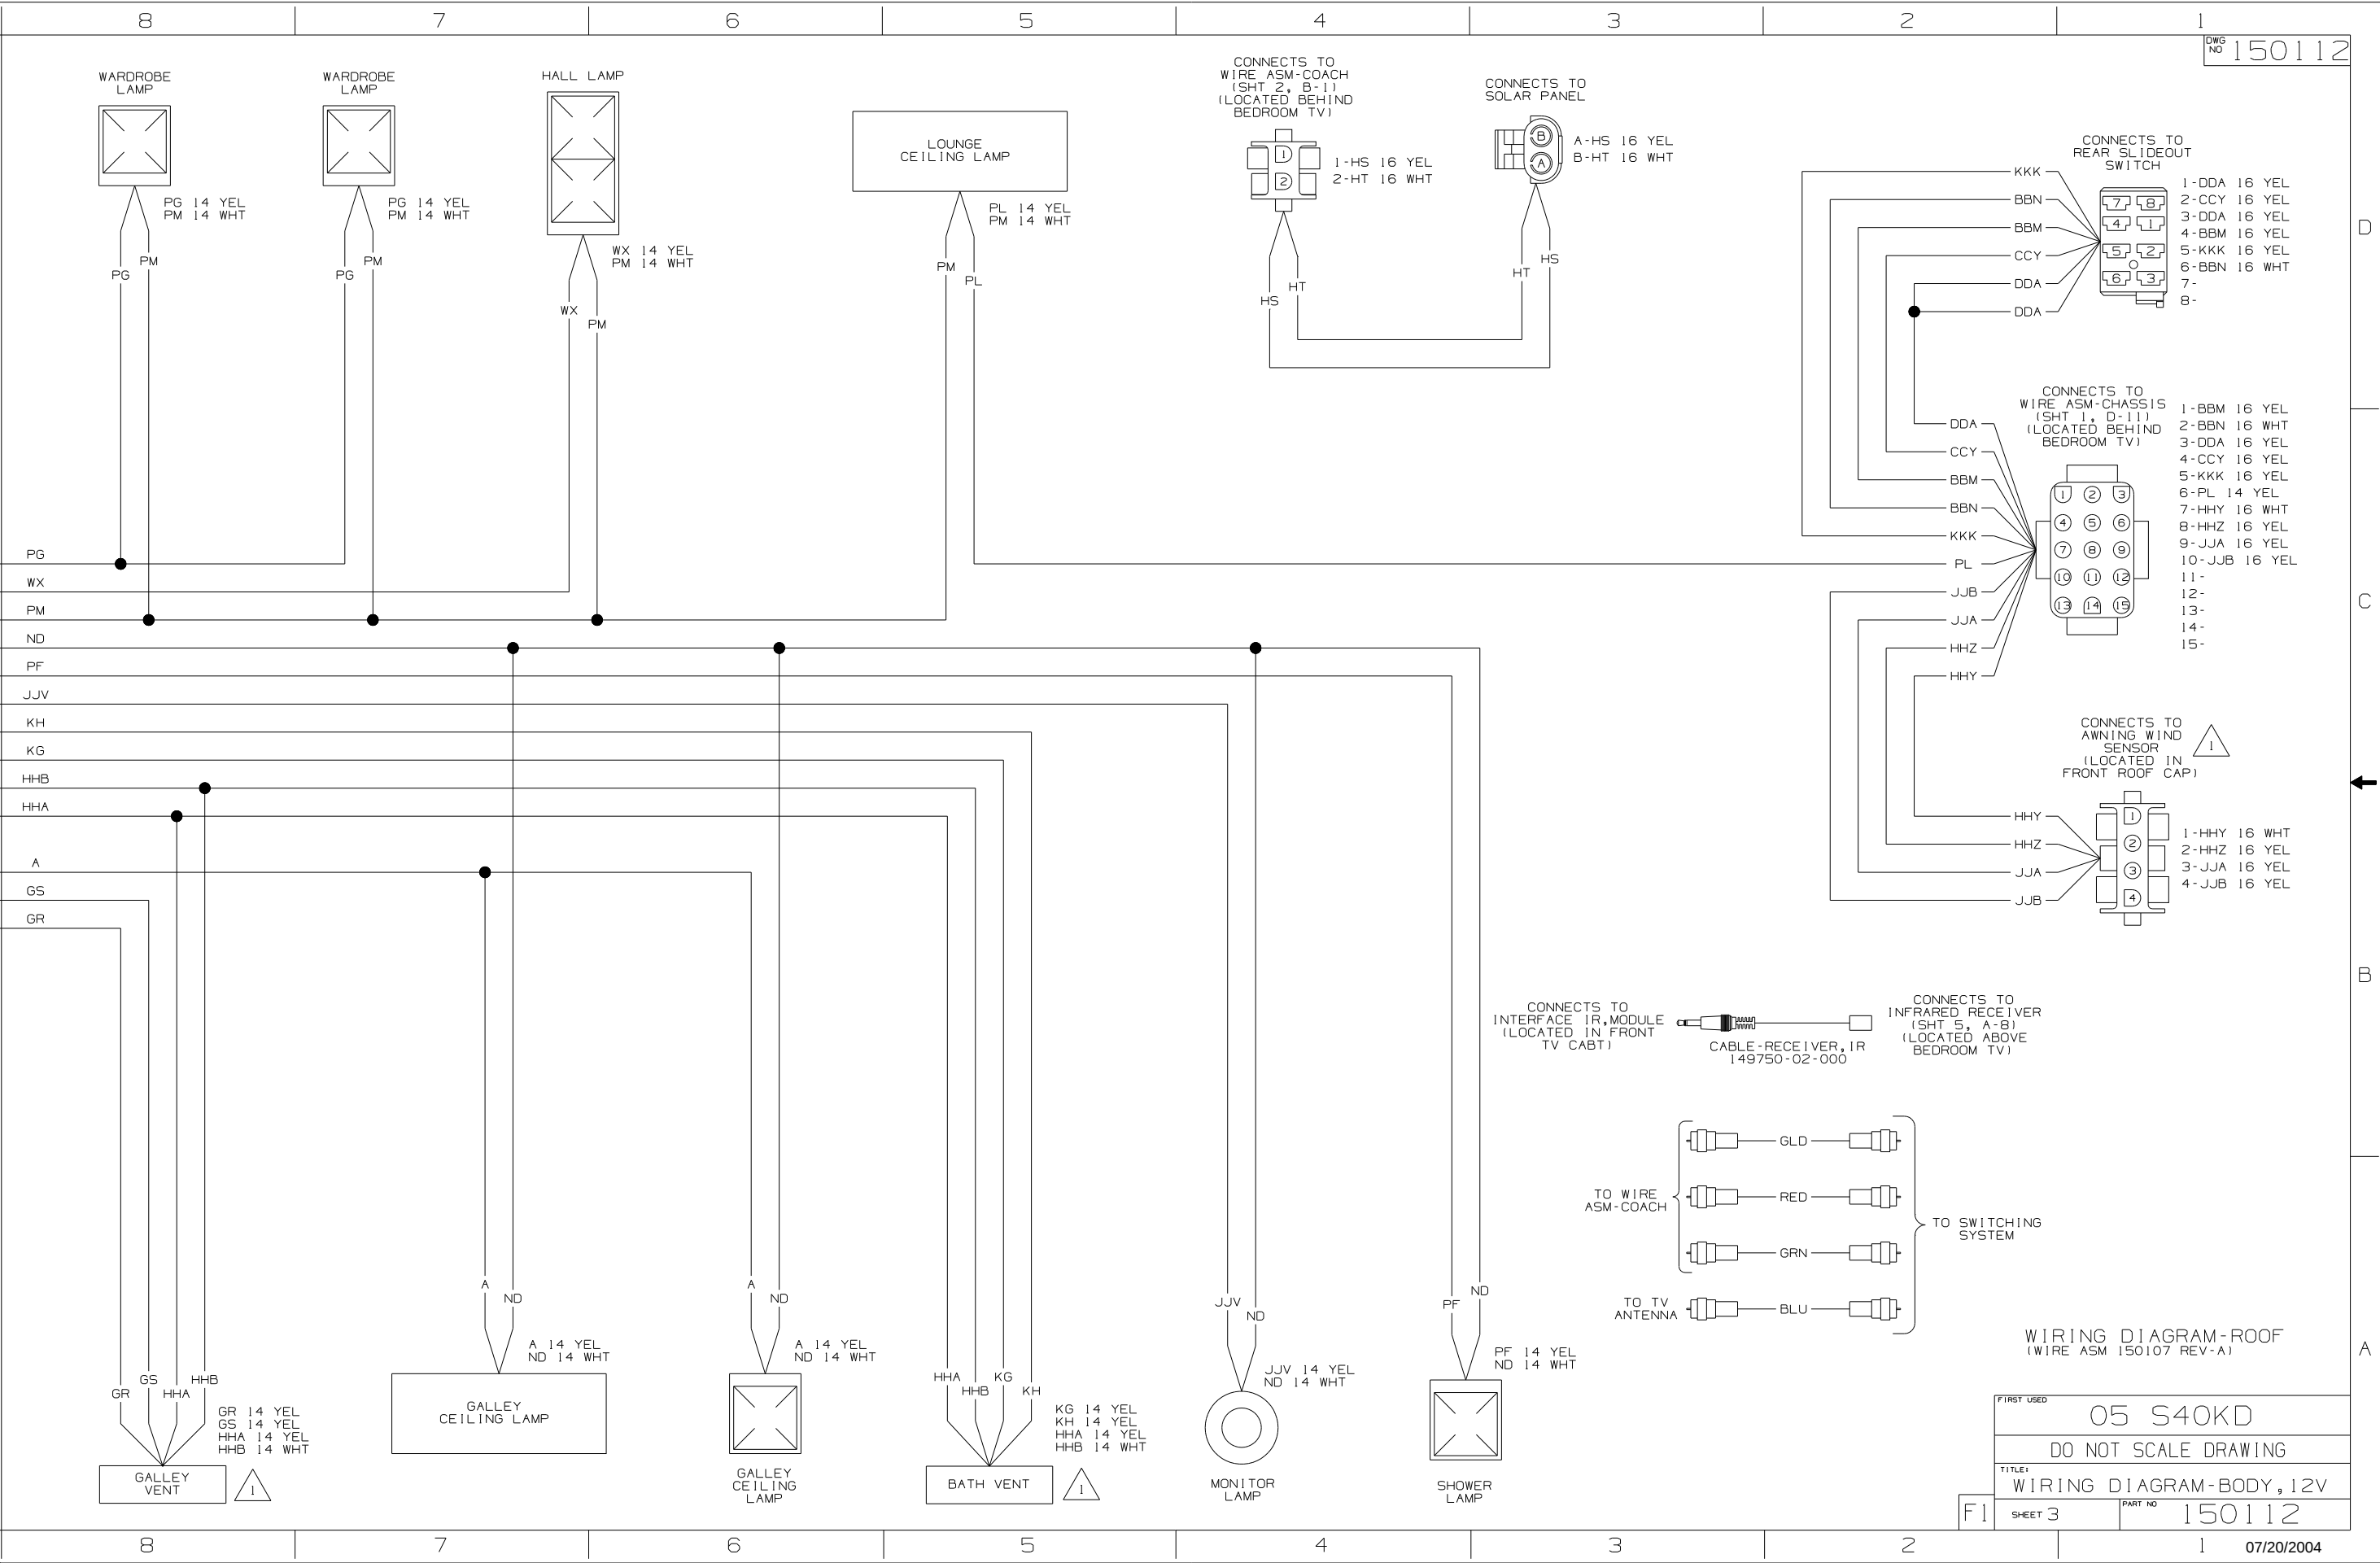

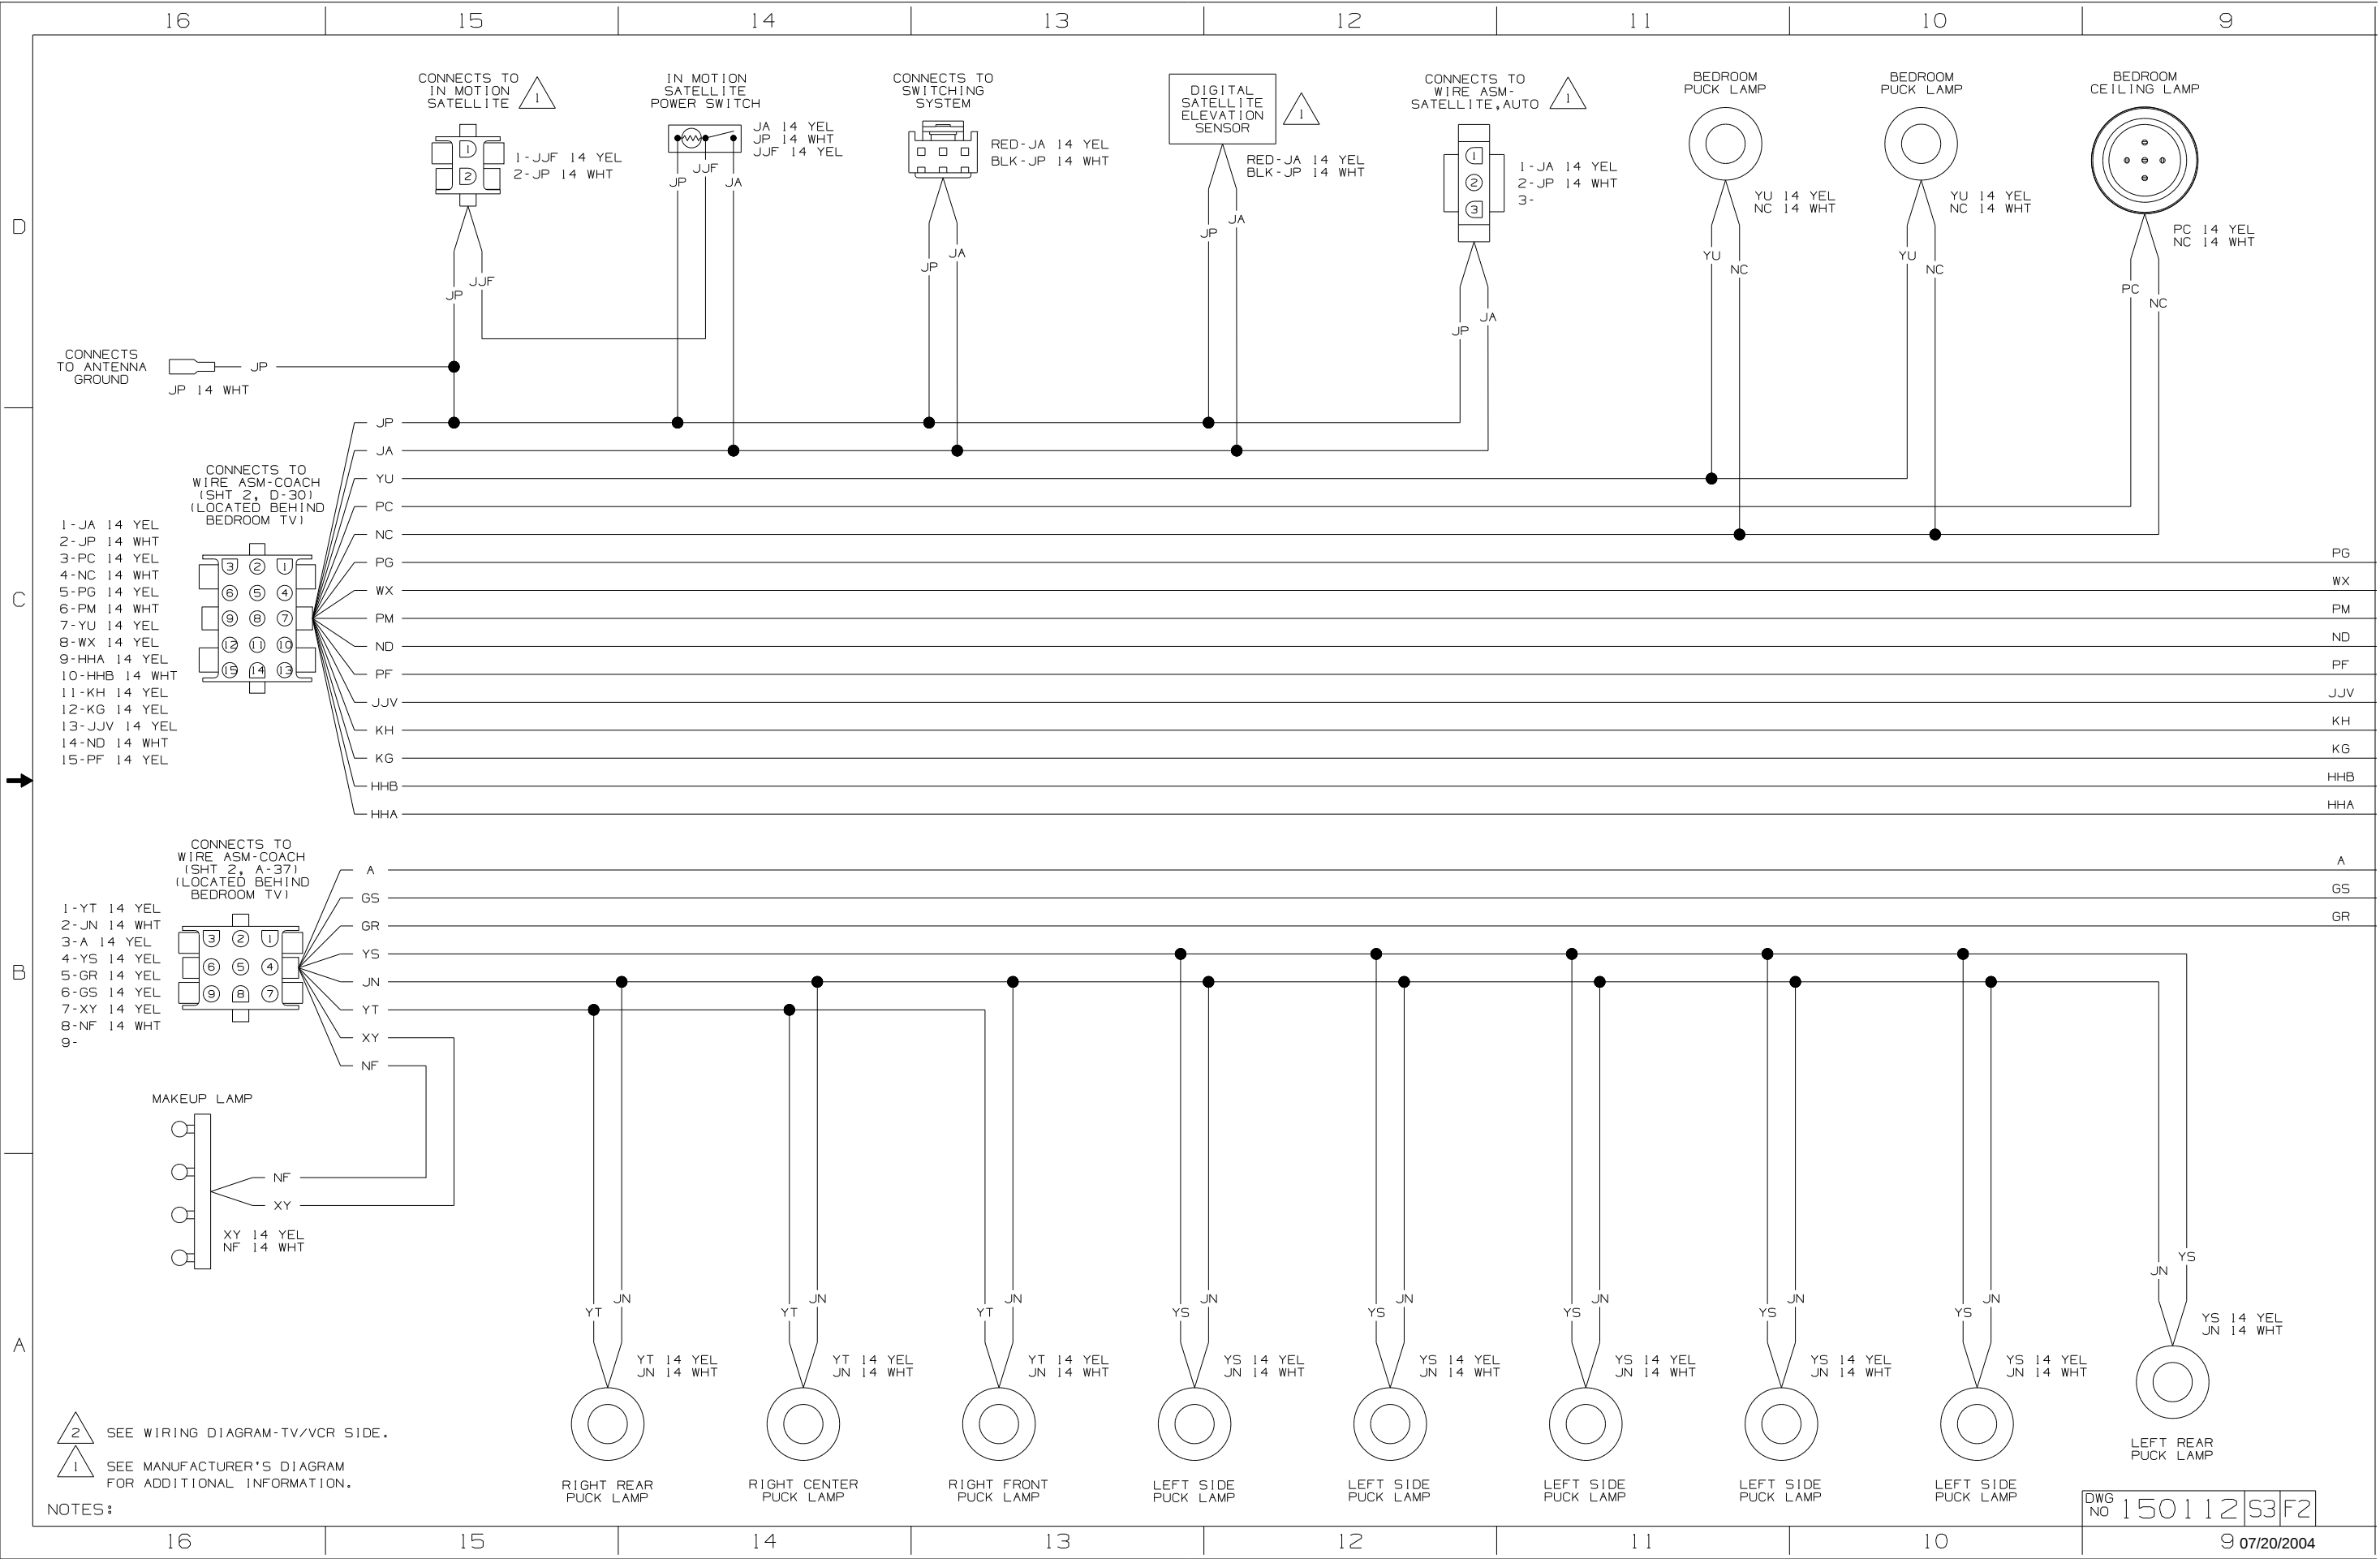





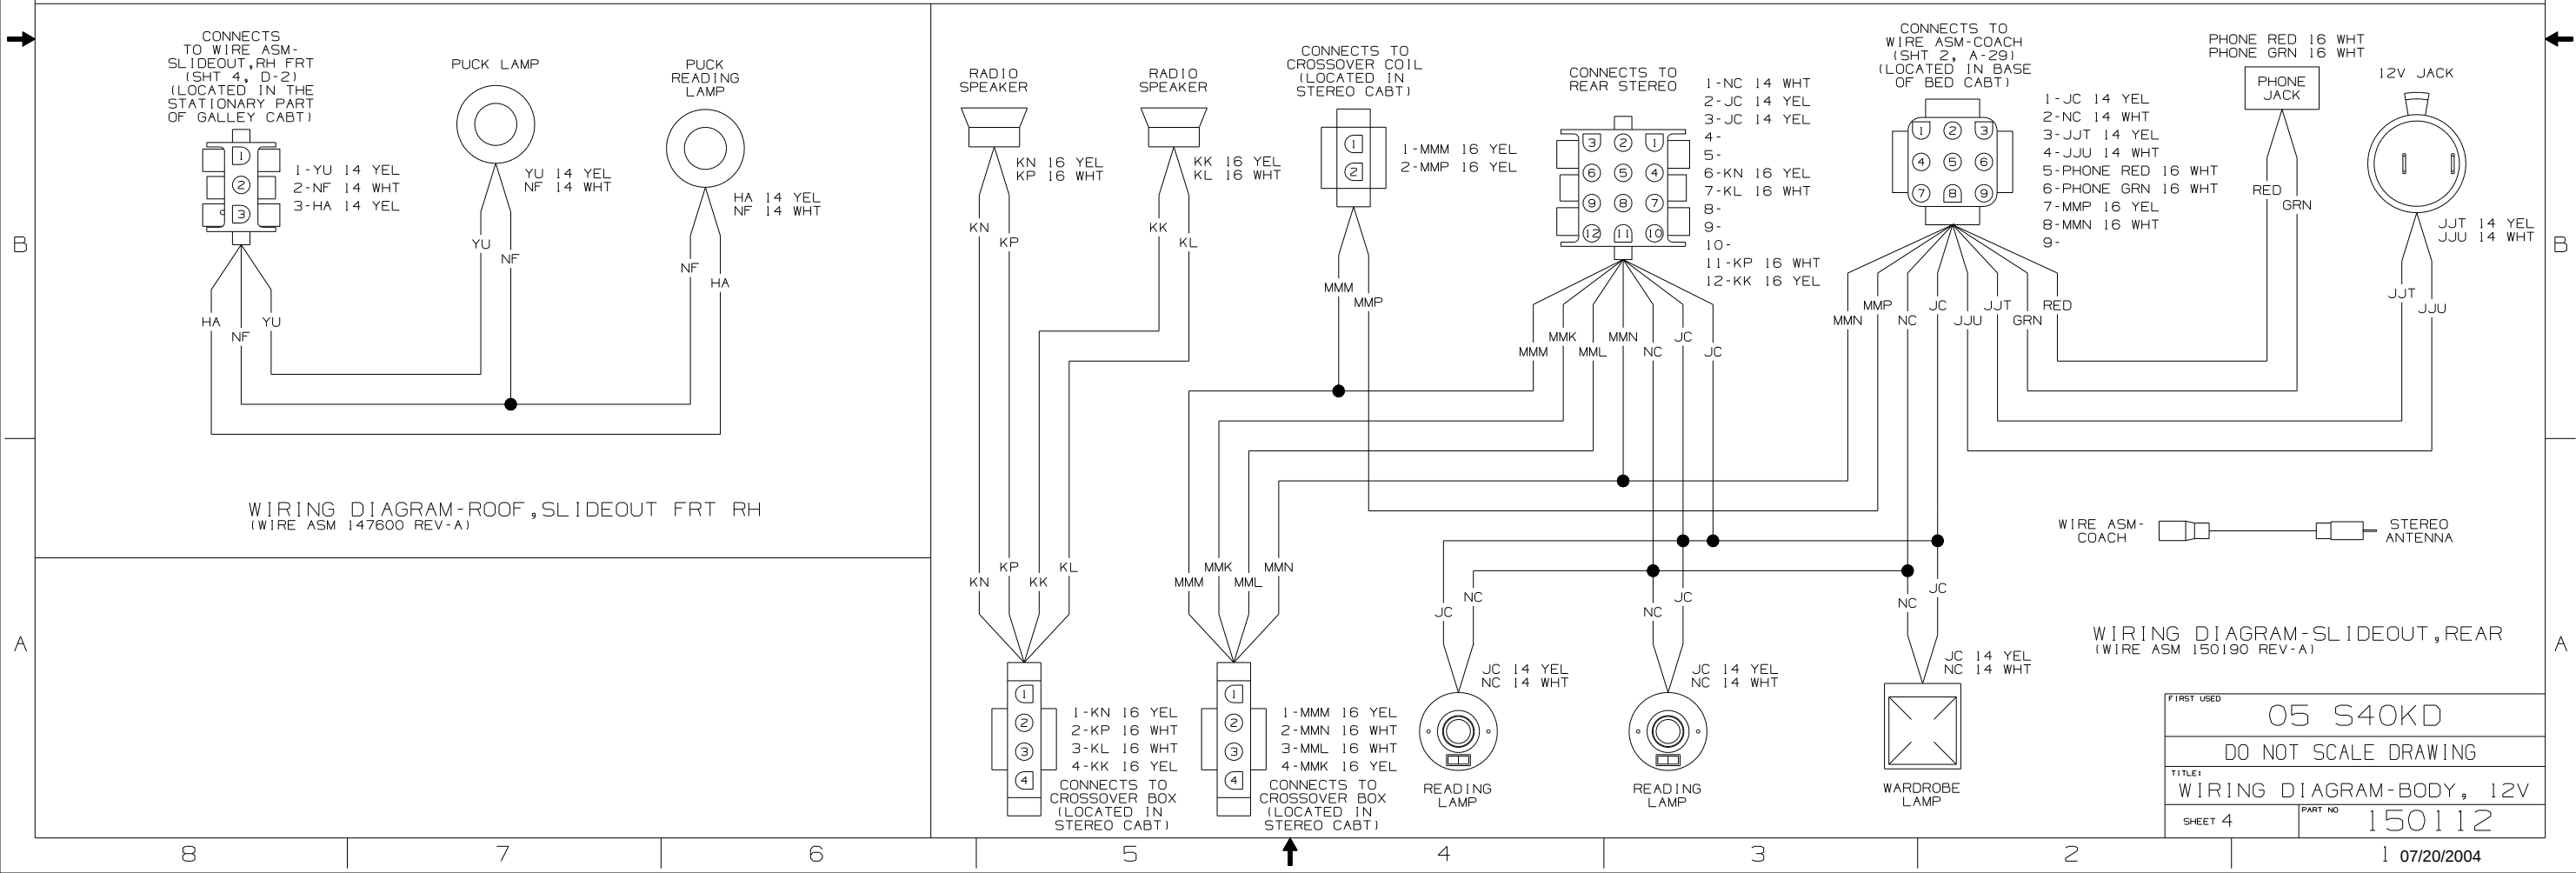
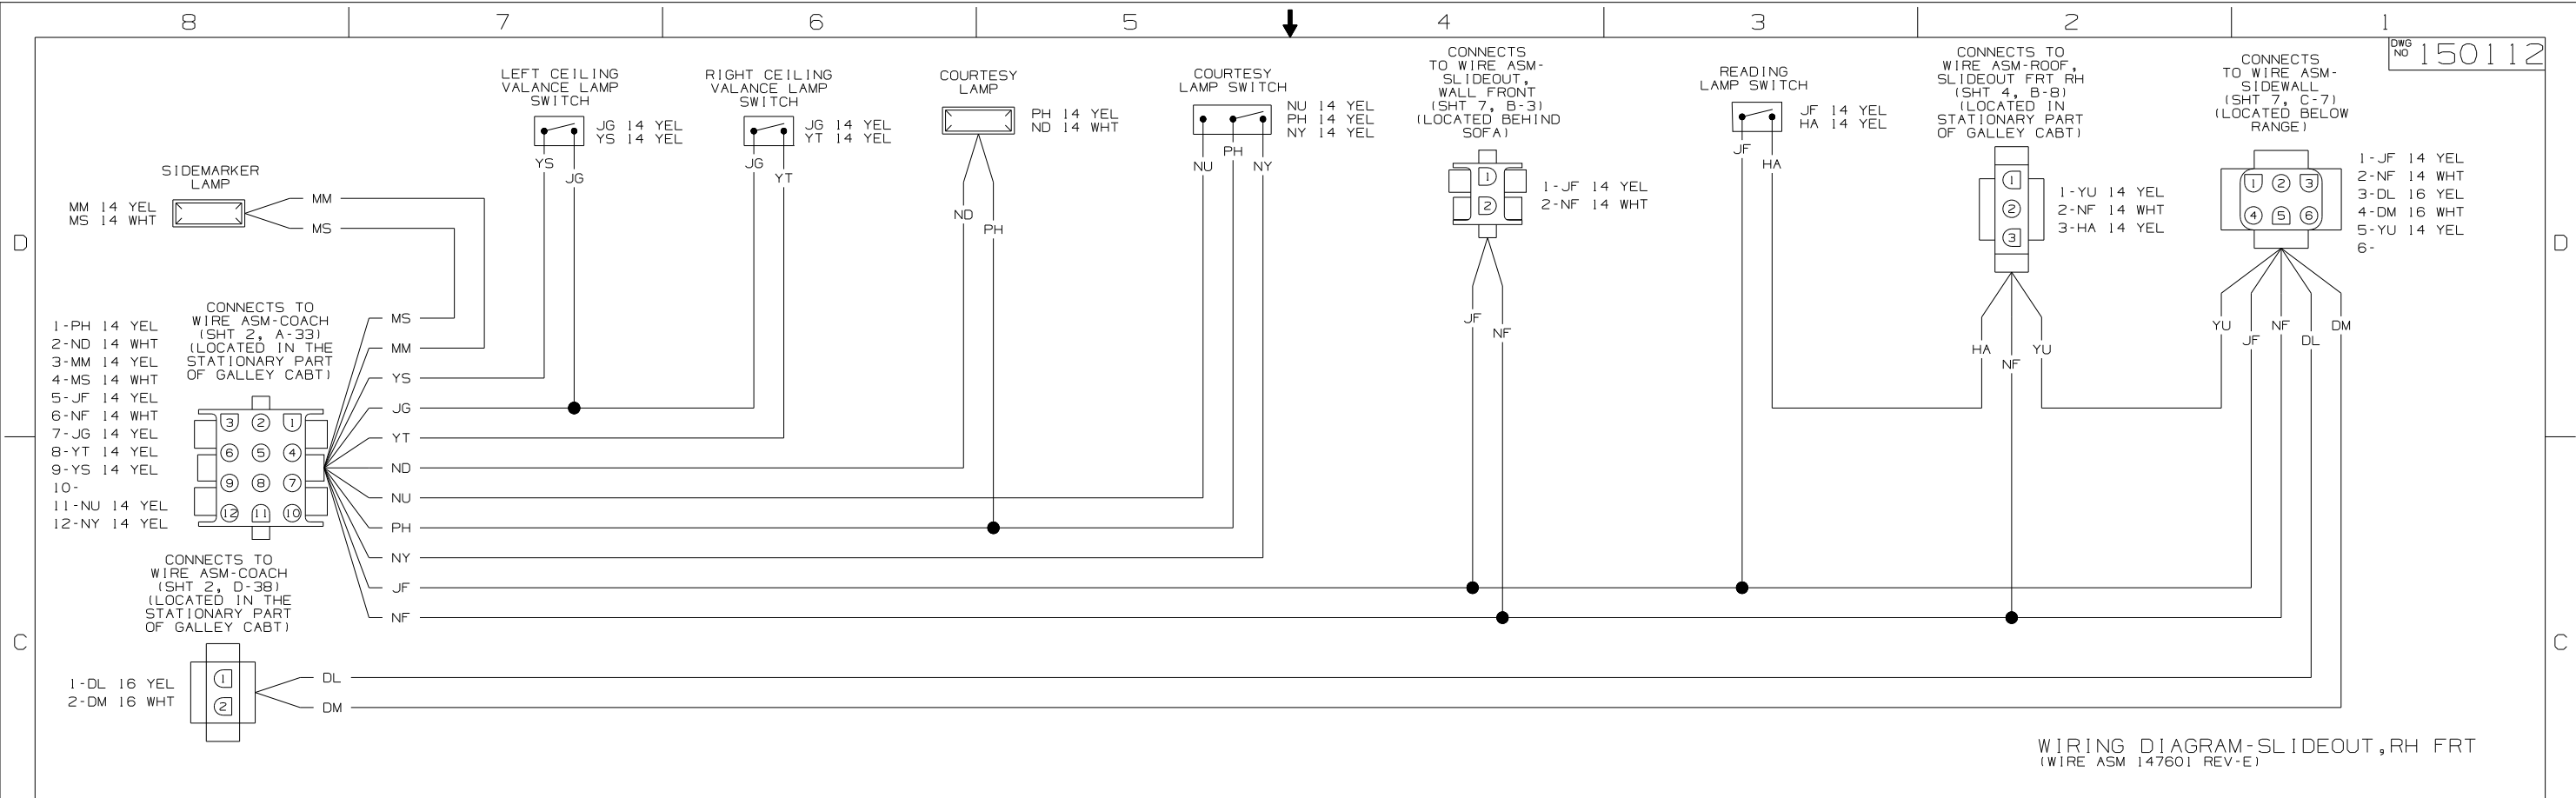


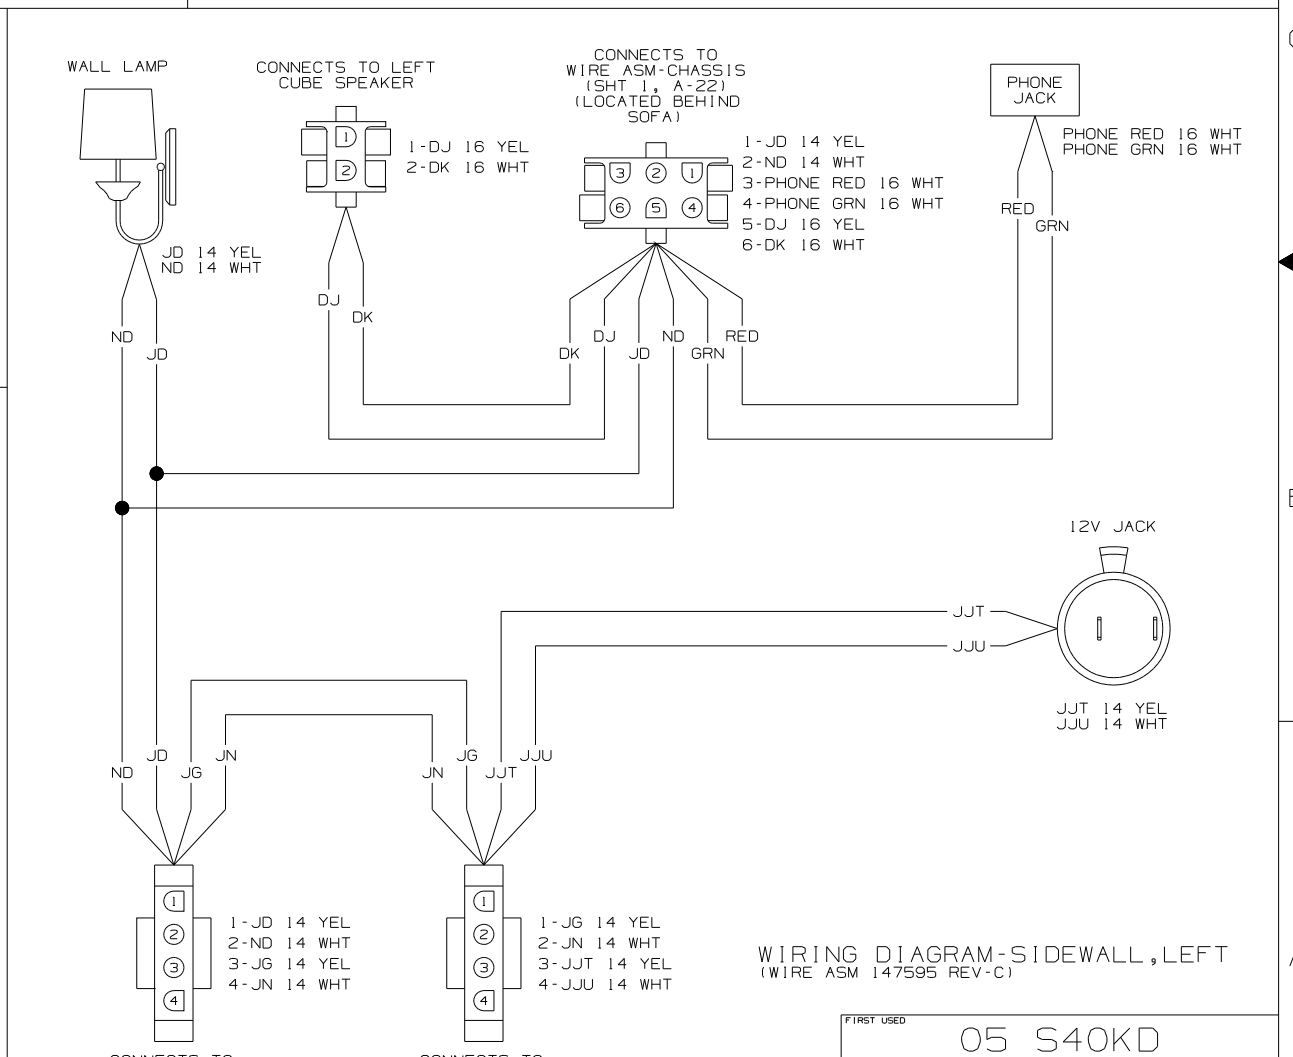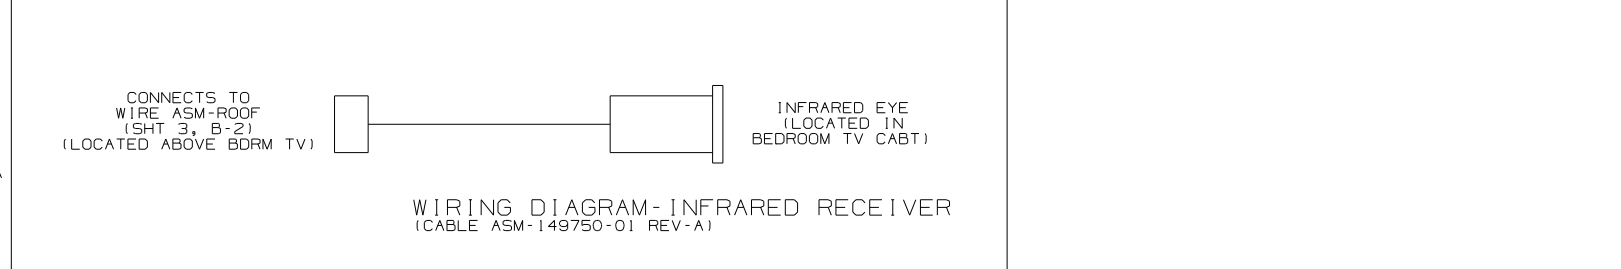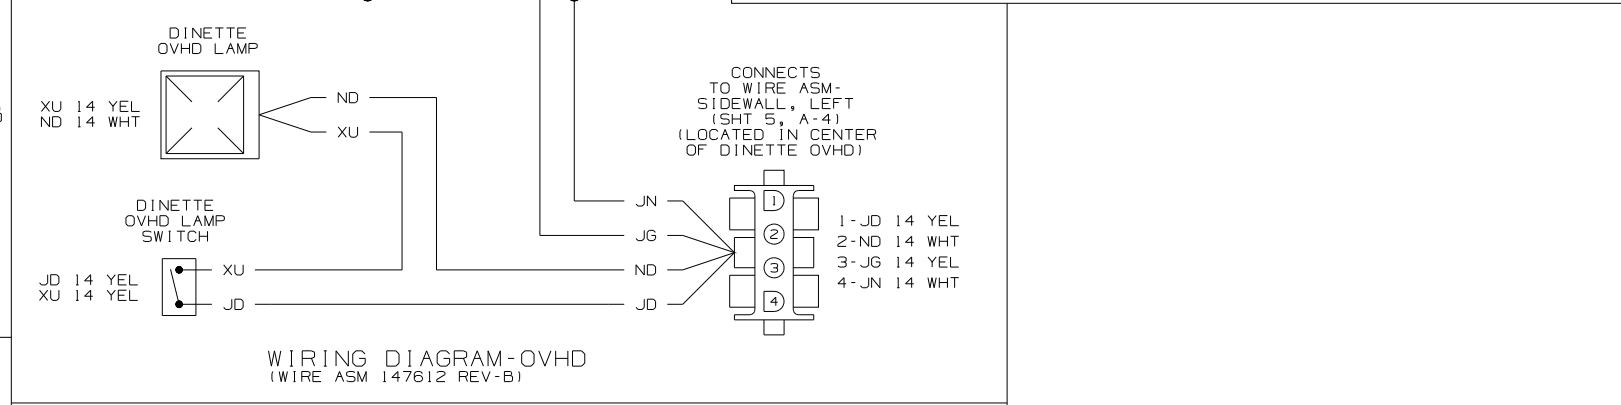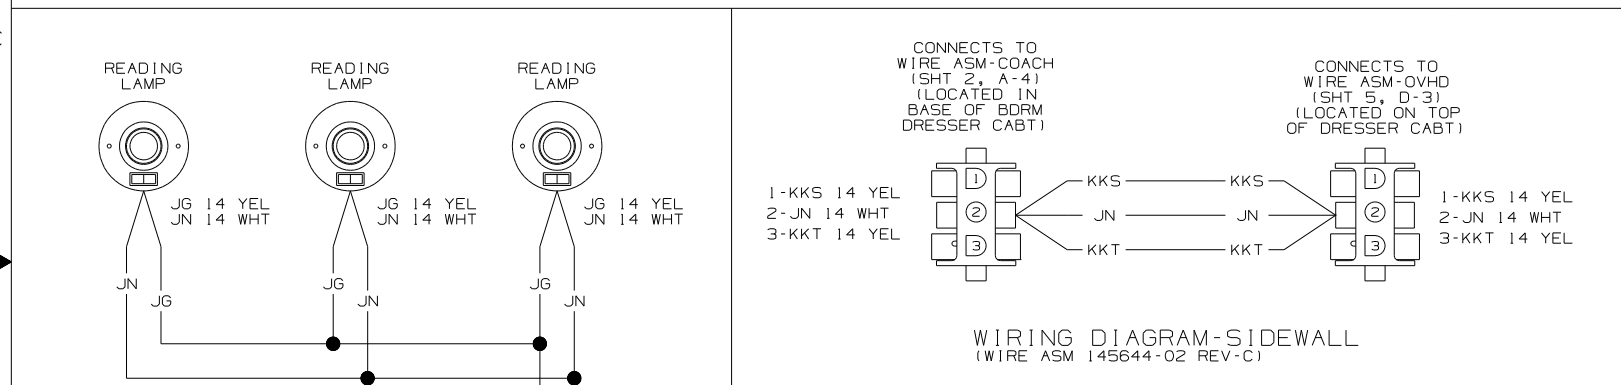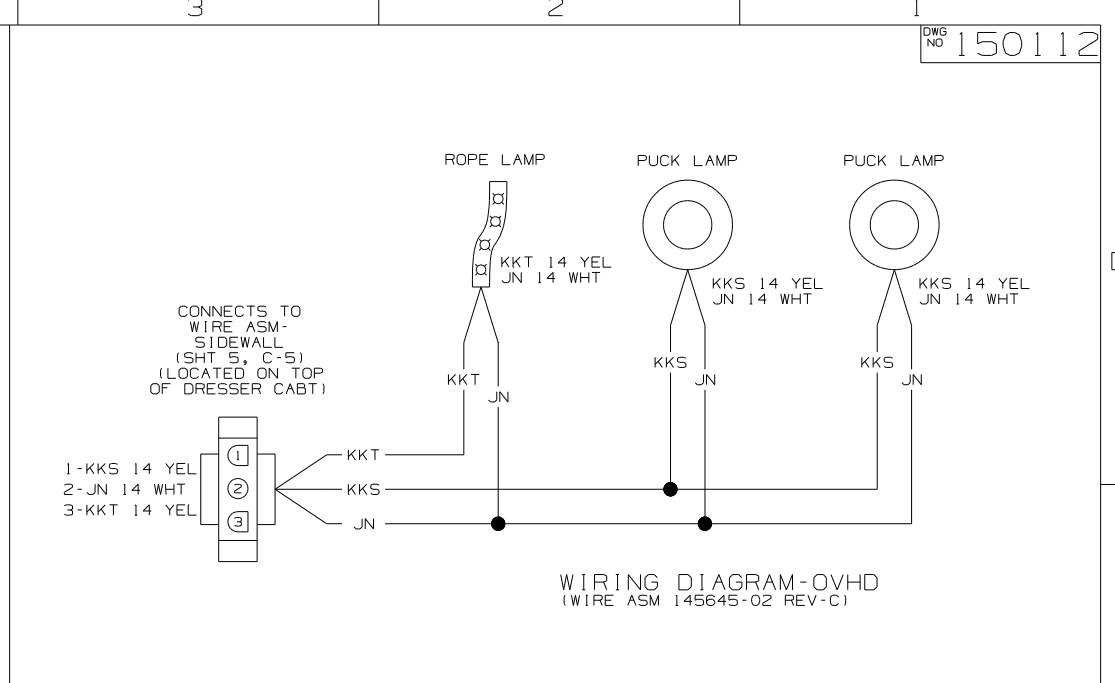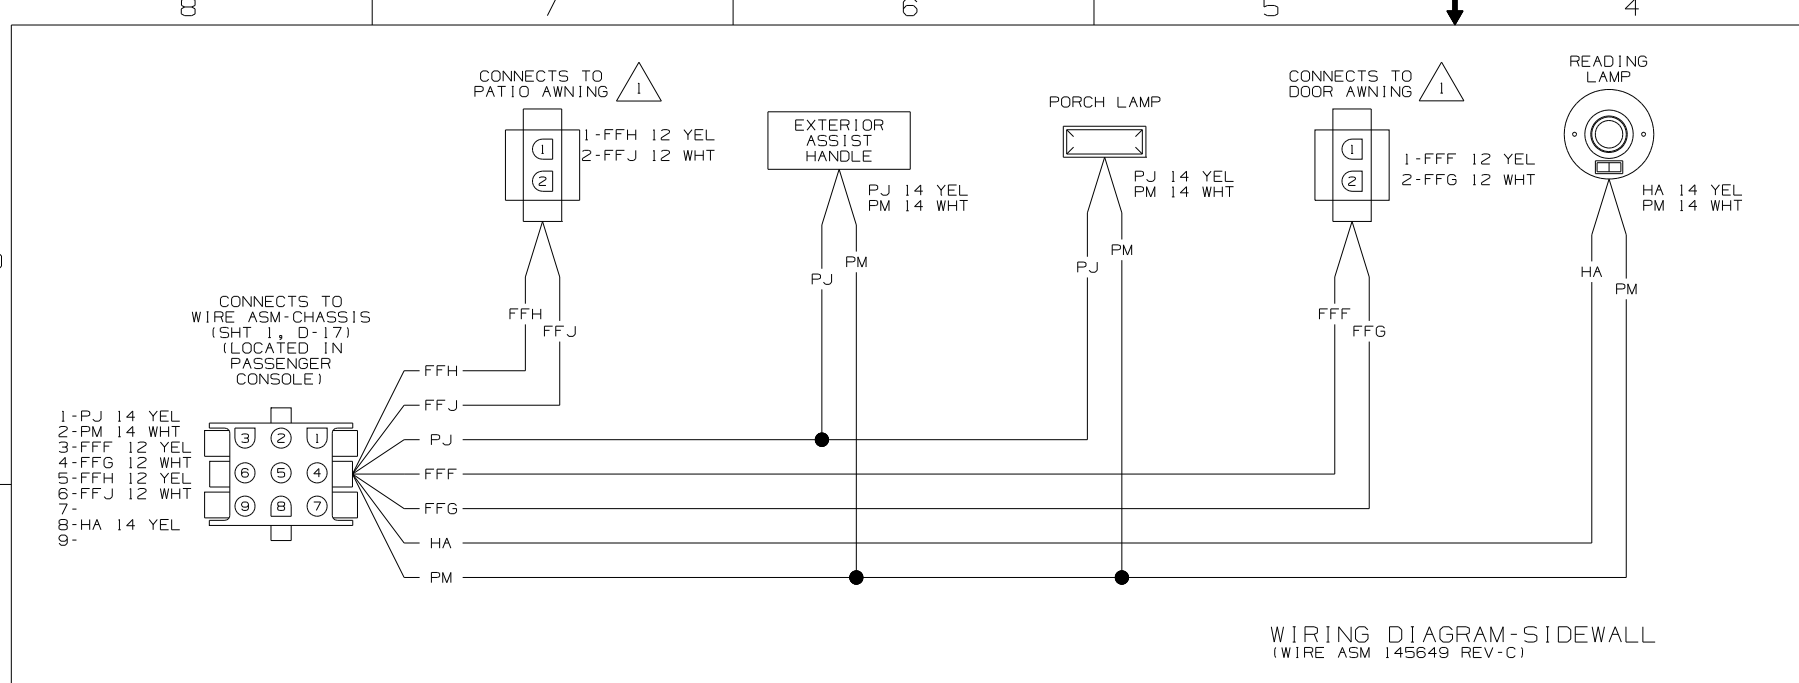

1 SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.

NOTES:

FIRST USED	05 S40KD
TITLE	DO NOT SCALE DRAWING
TITLE	WIRING DIAGRAM-BODY, 12V
SHEET 5	PART NO 150112

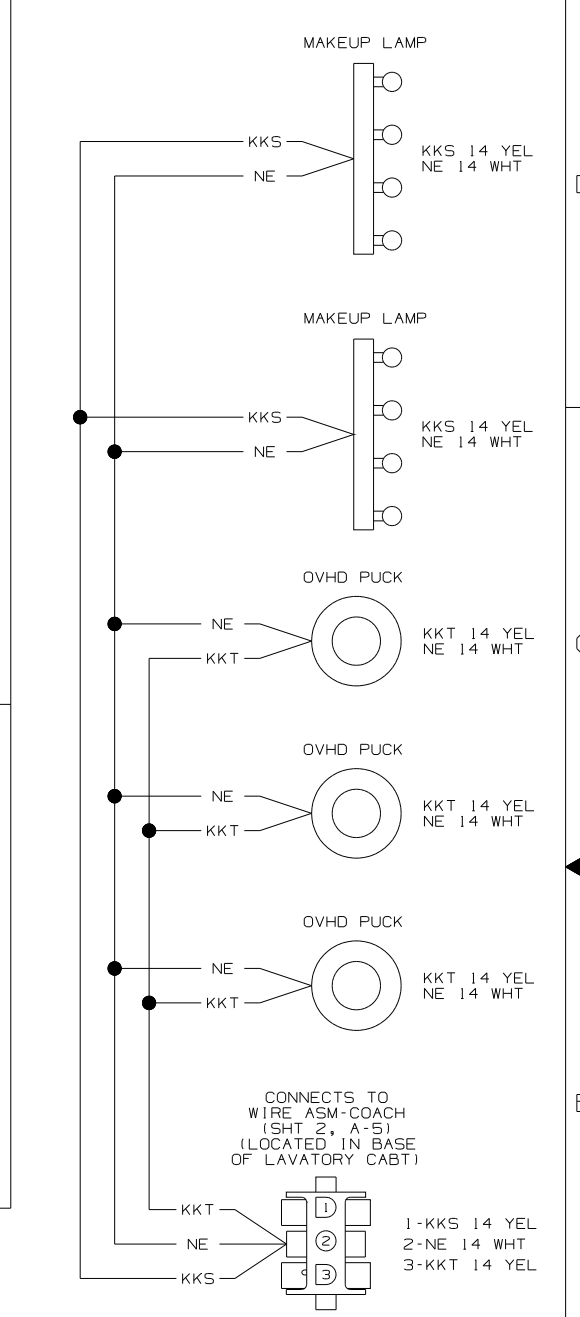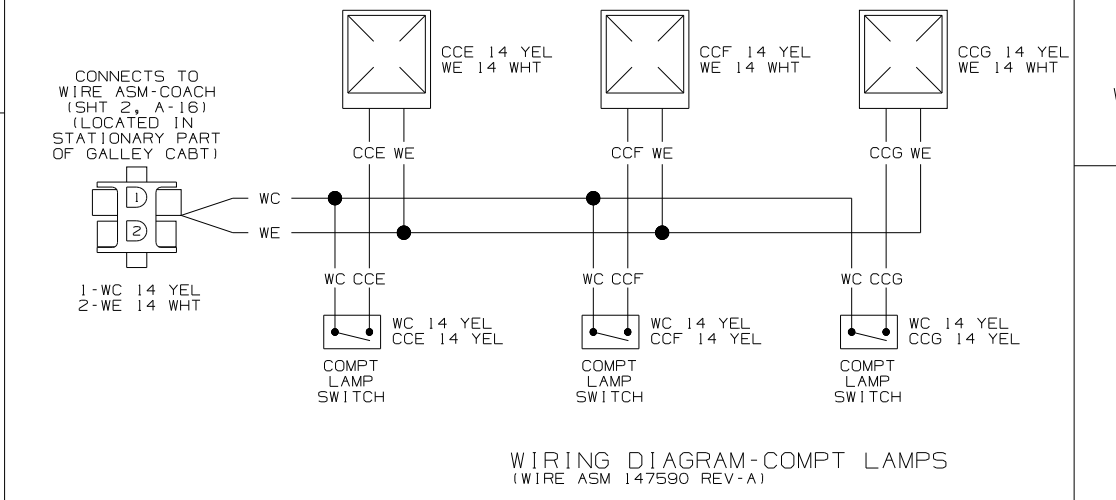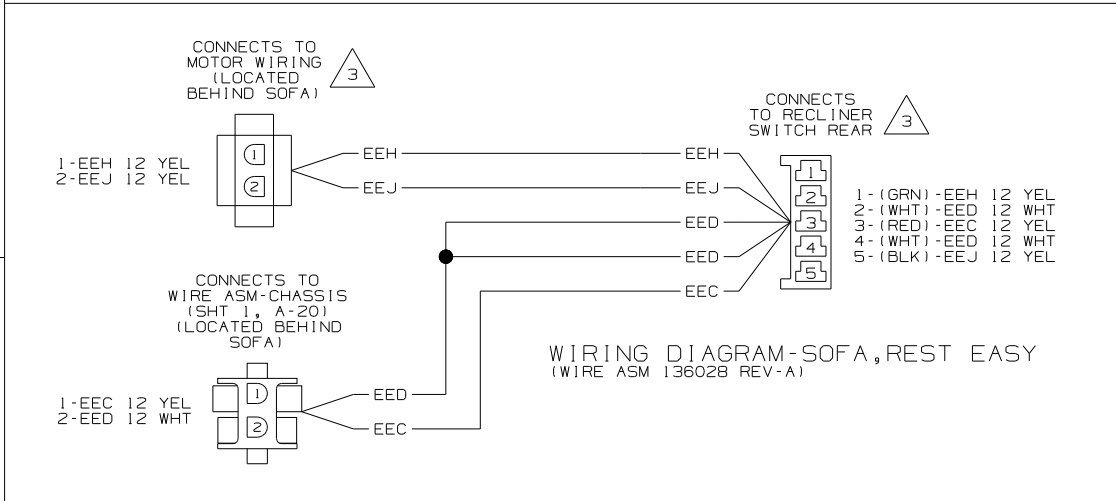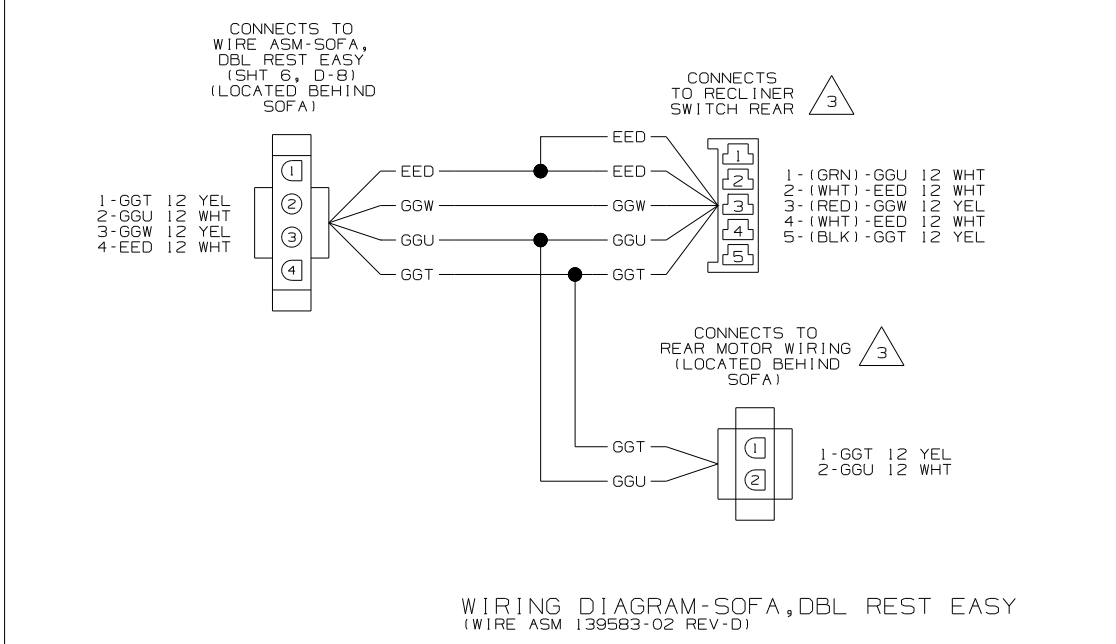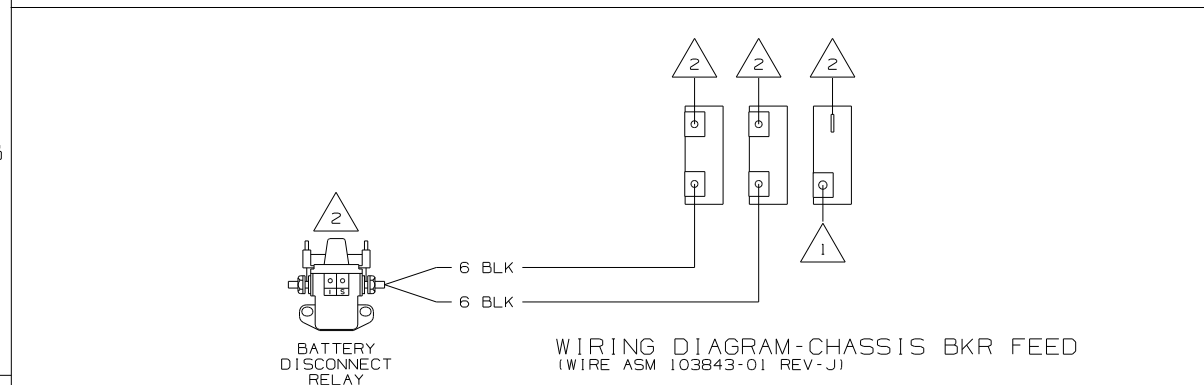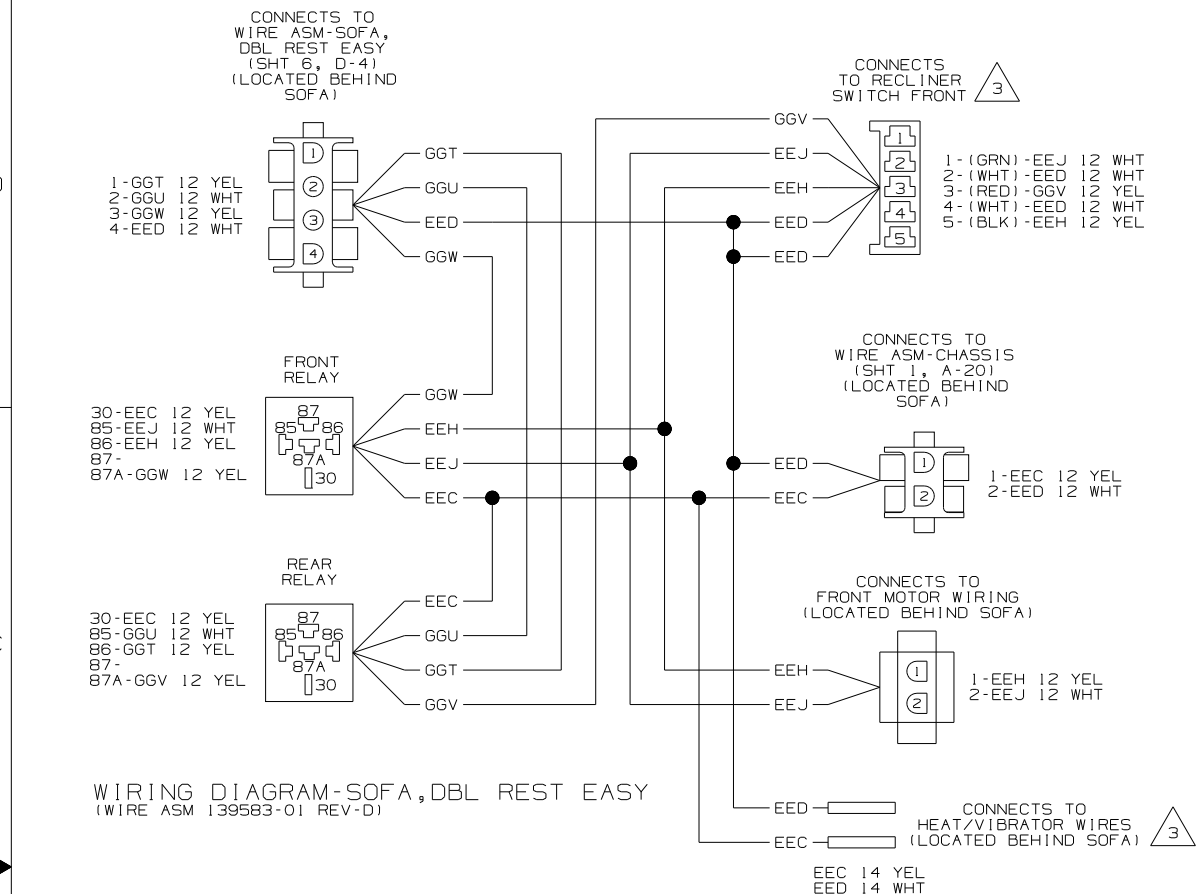

NOTES:

3 SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.

2 SEE SHT 2 FOR ADDITIONAL INFORMATION.

1 SEE SHT 1 FOR ADDITIONAL INFORMATION.

