





Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.


If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

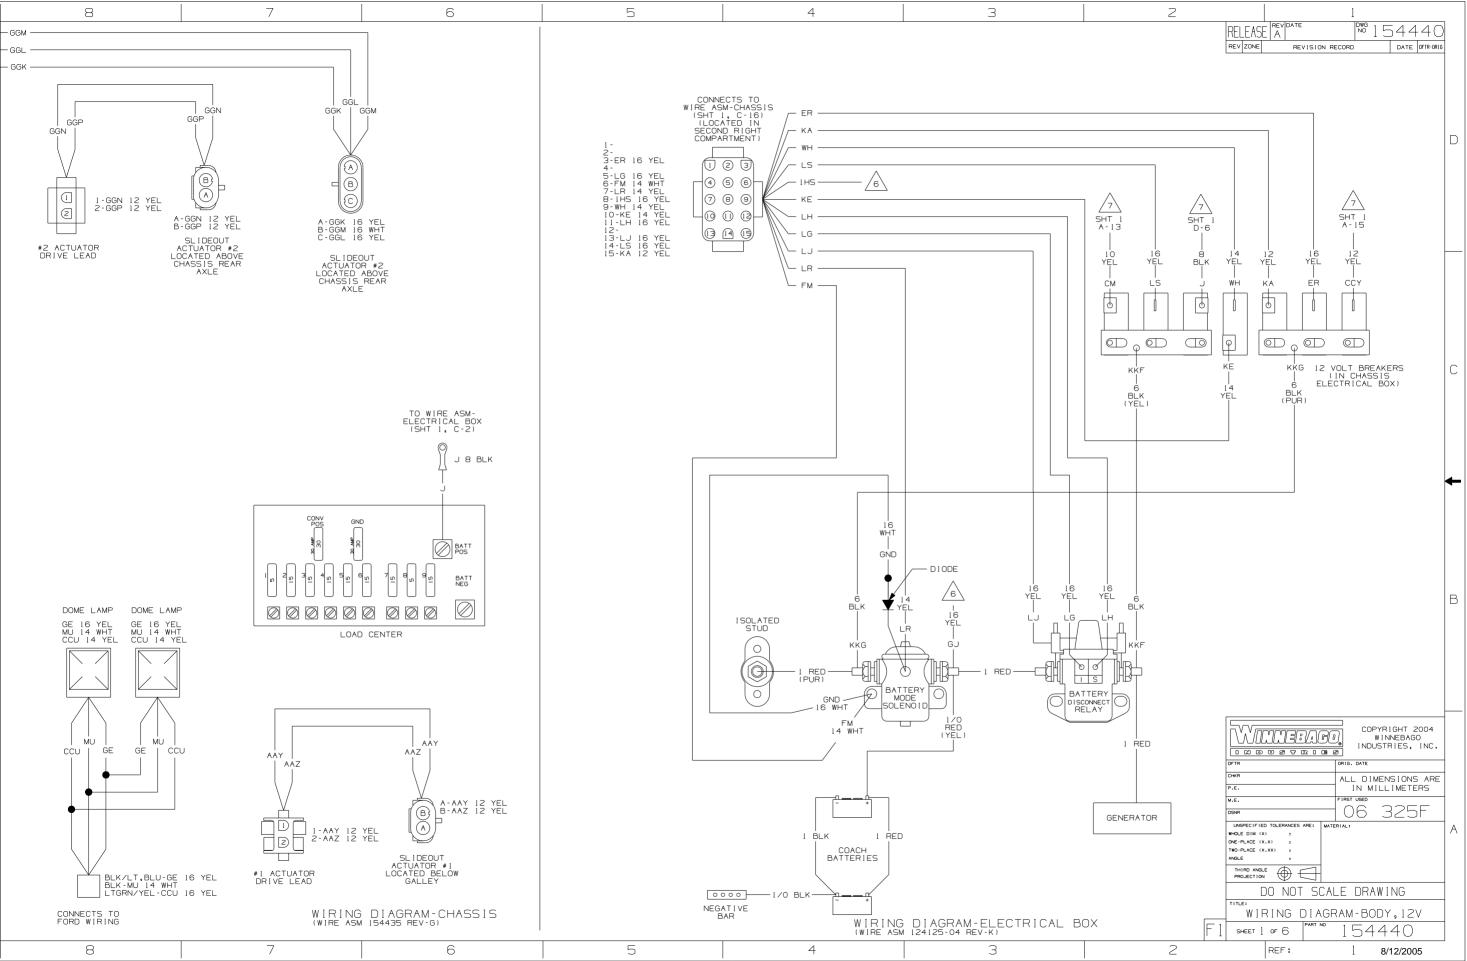


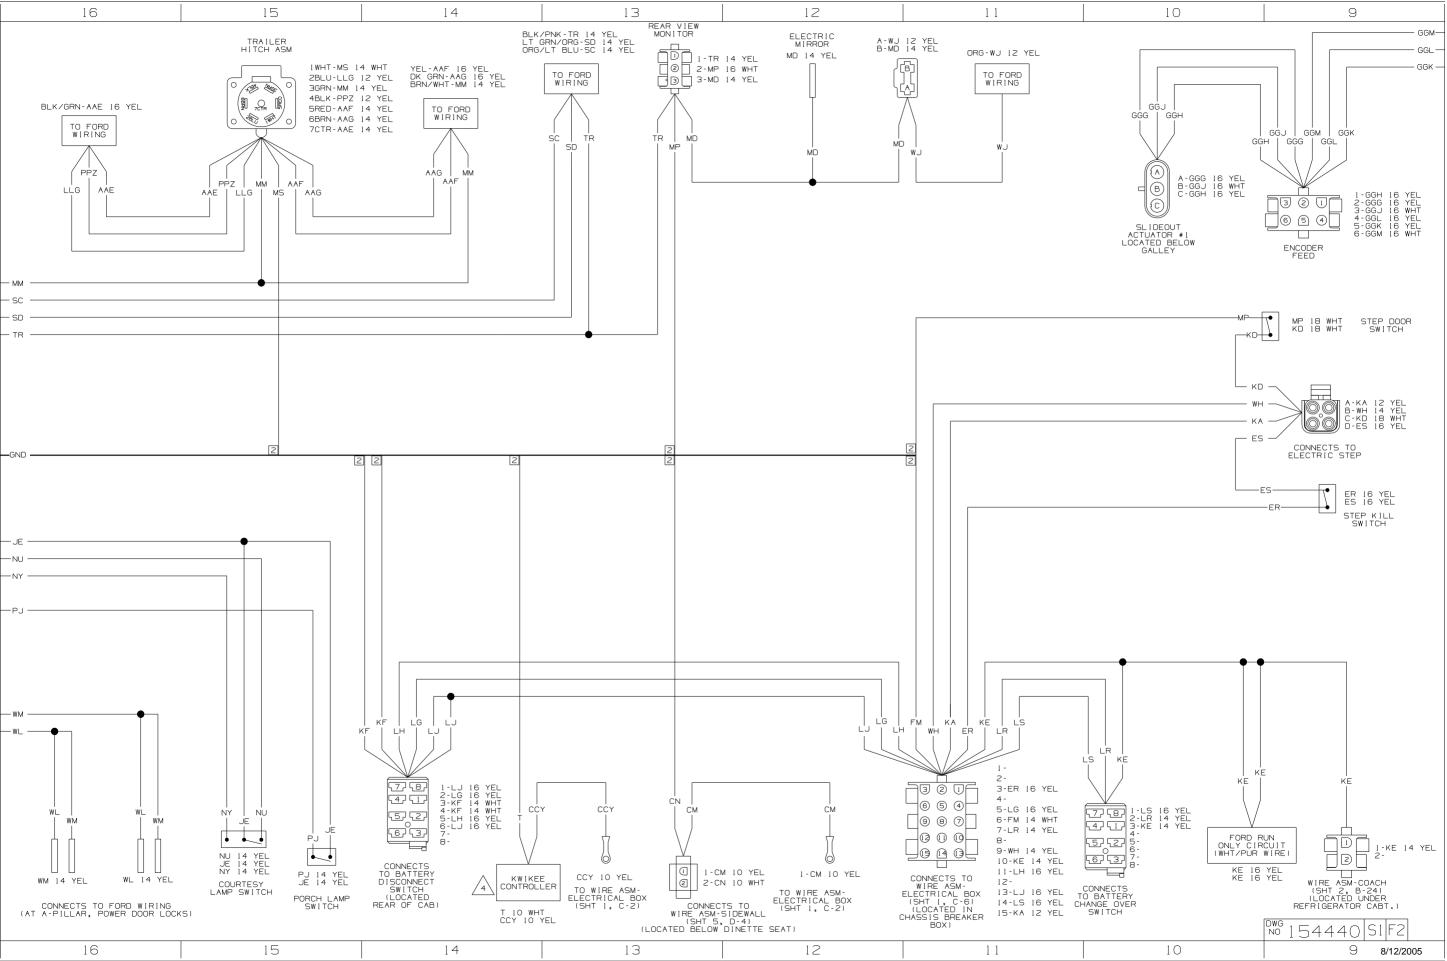


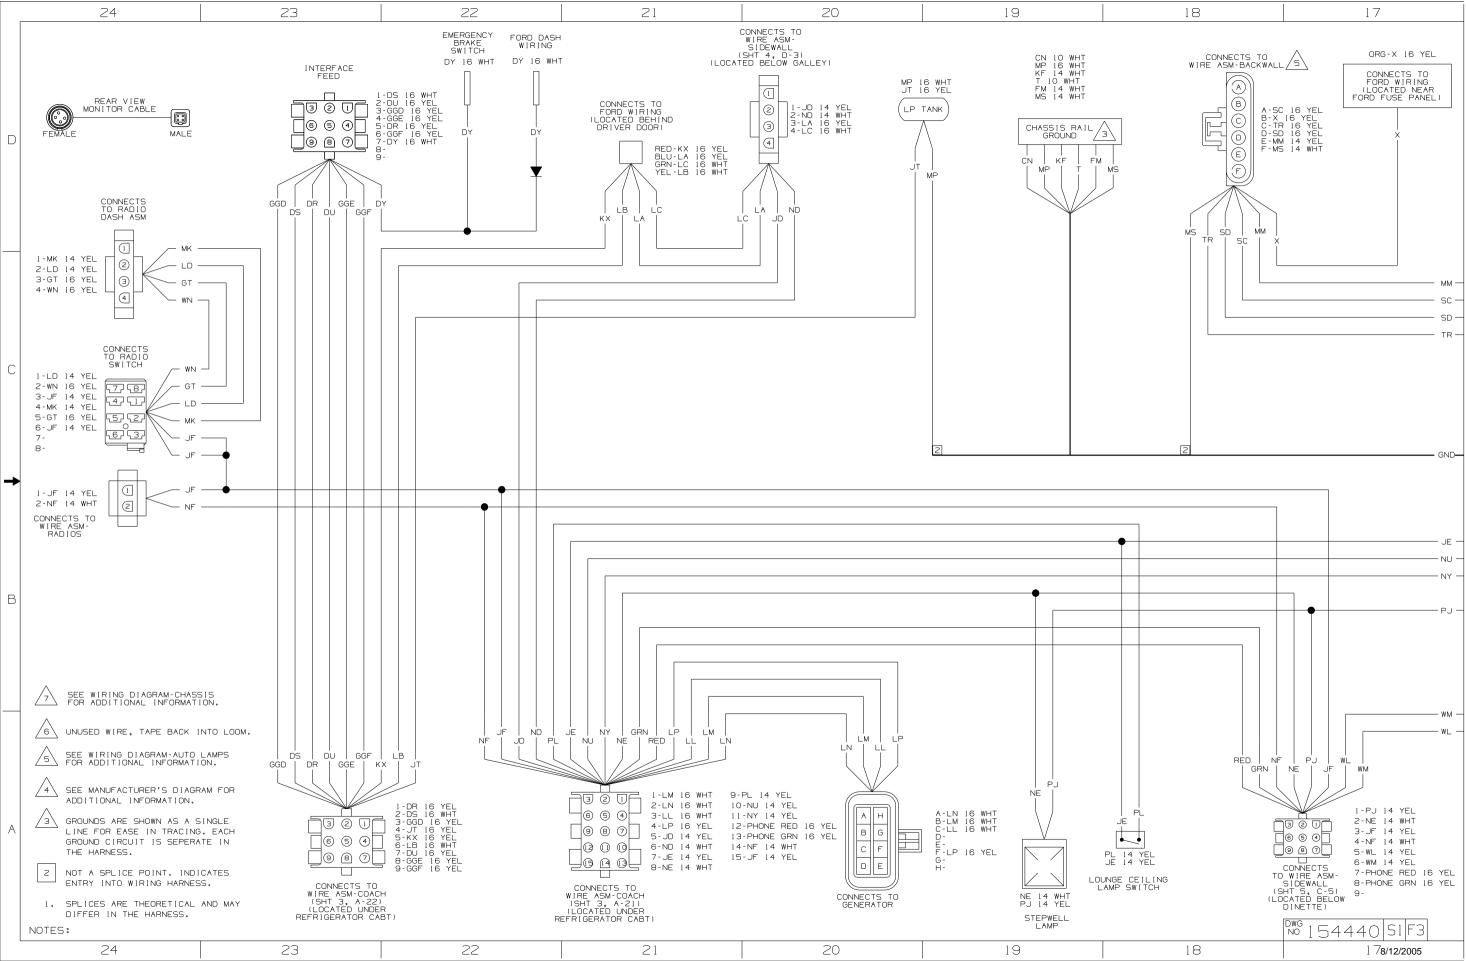


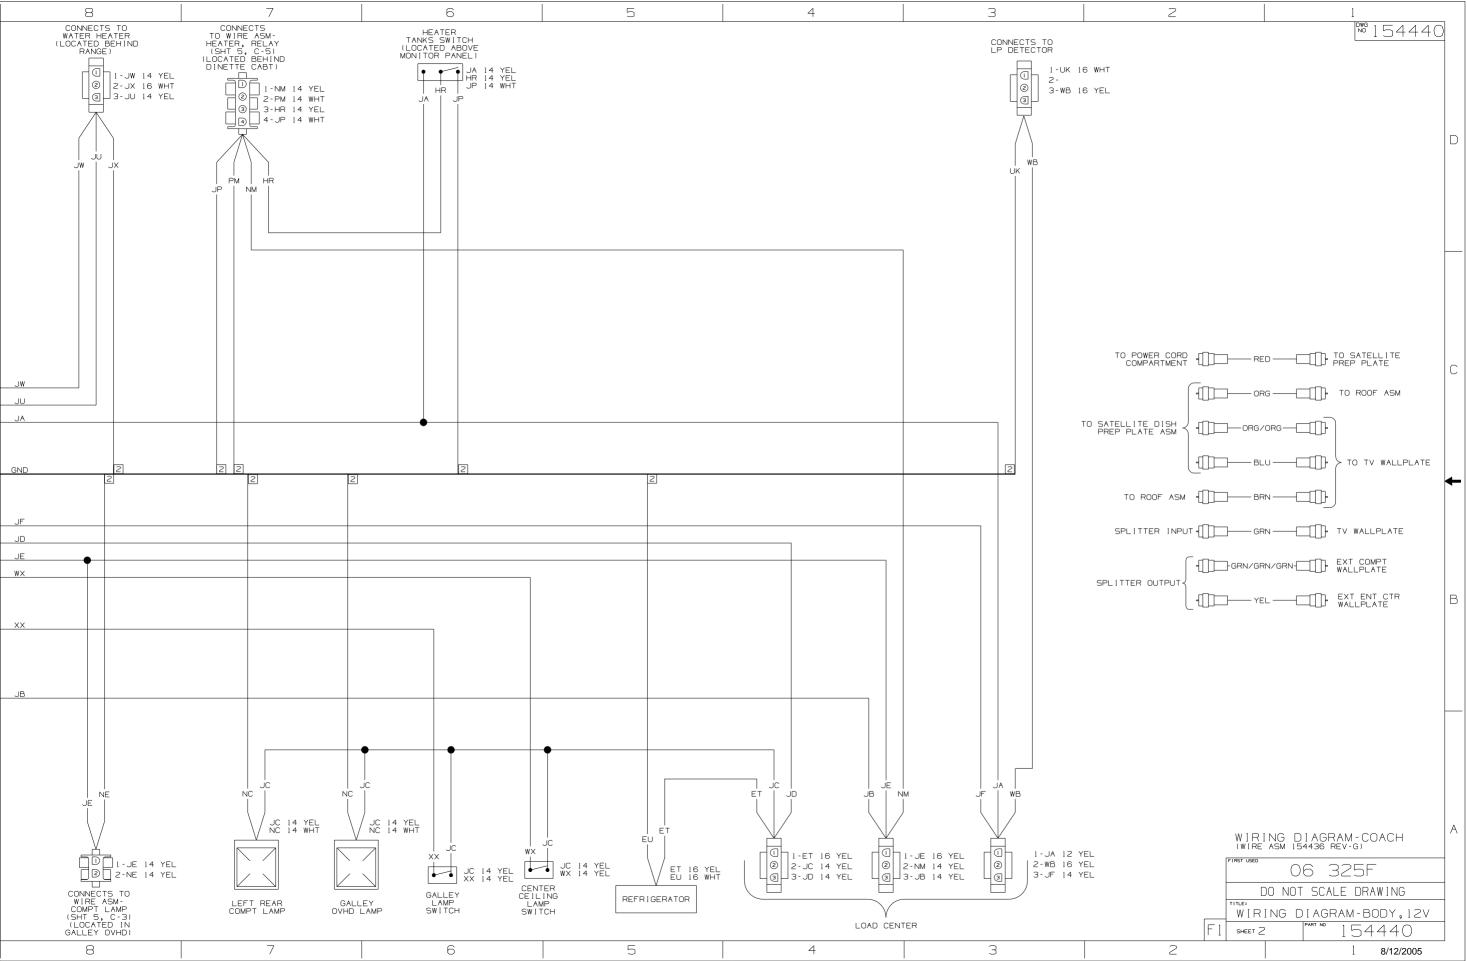


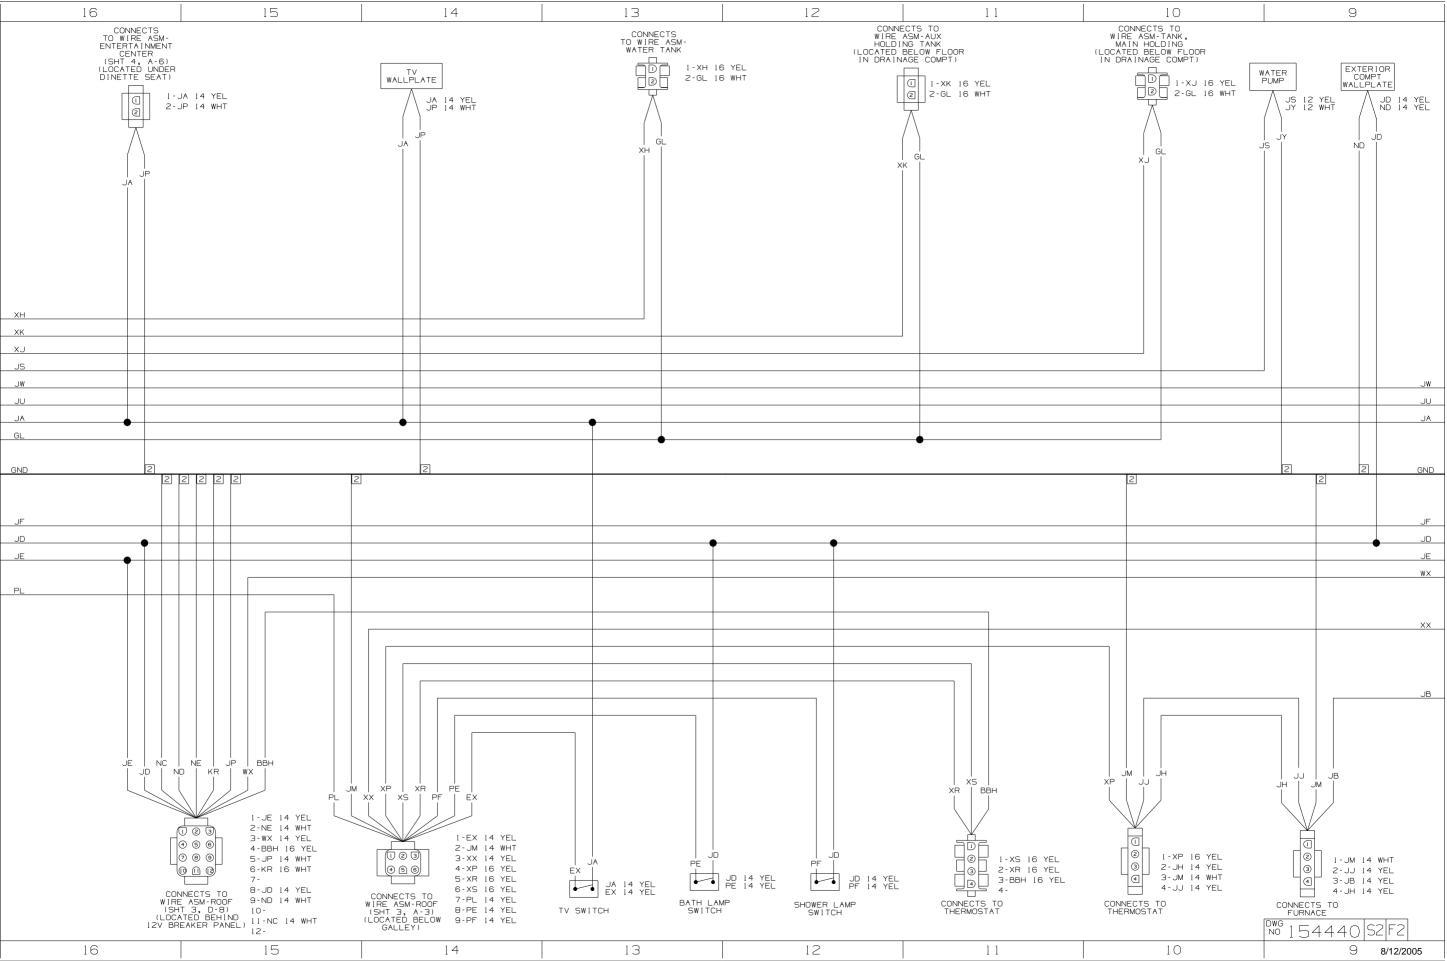

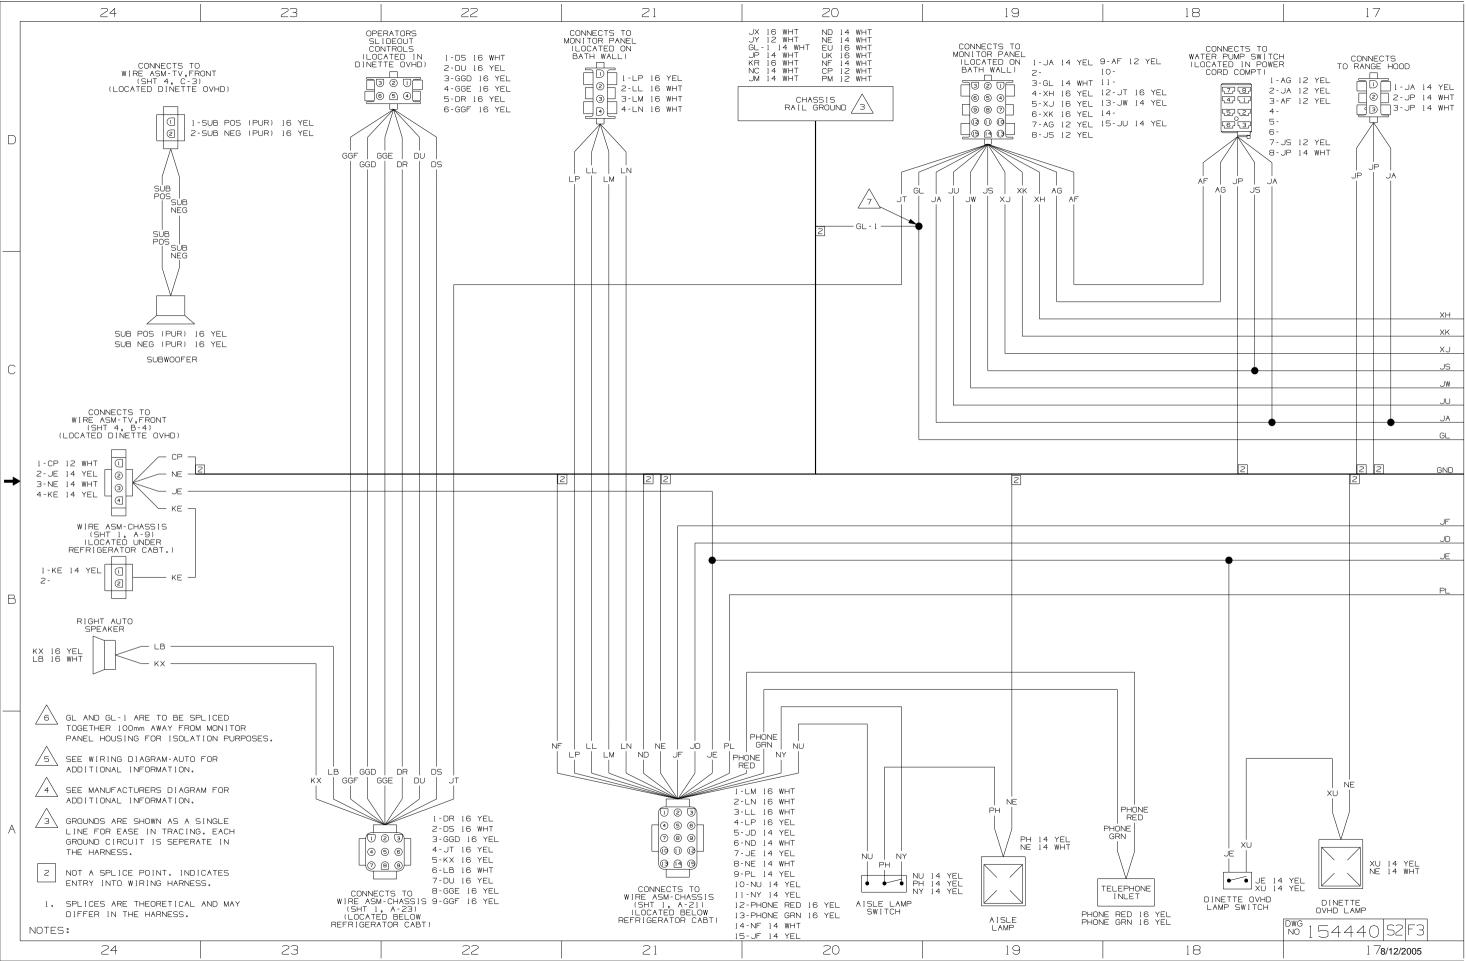

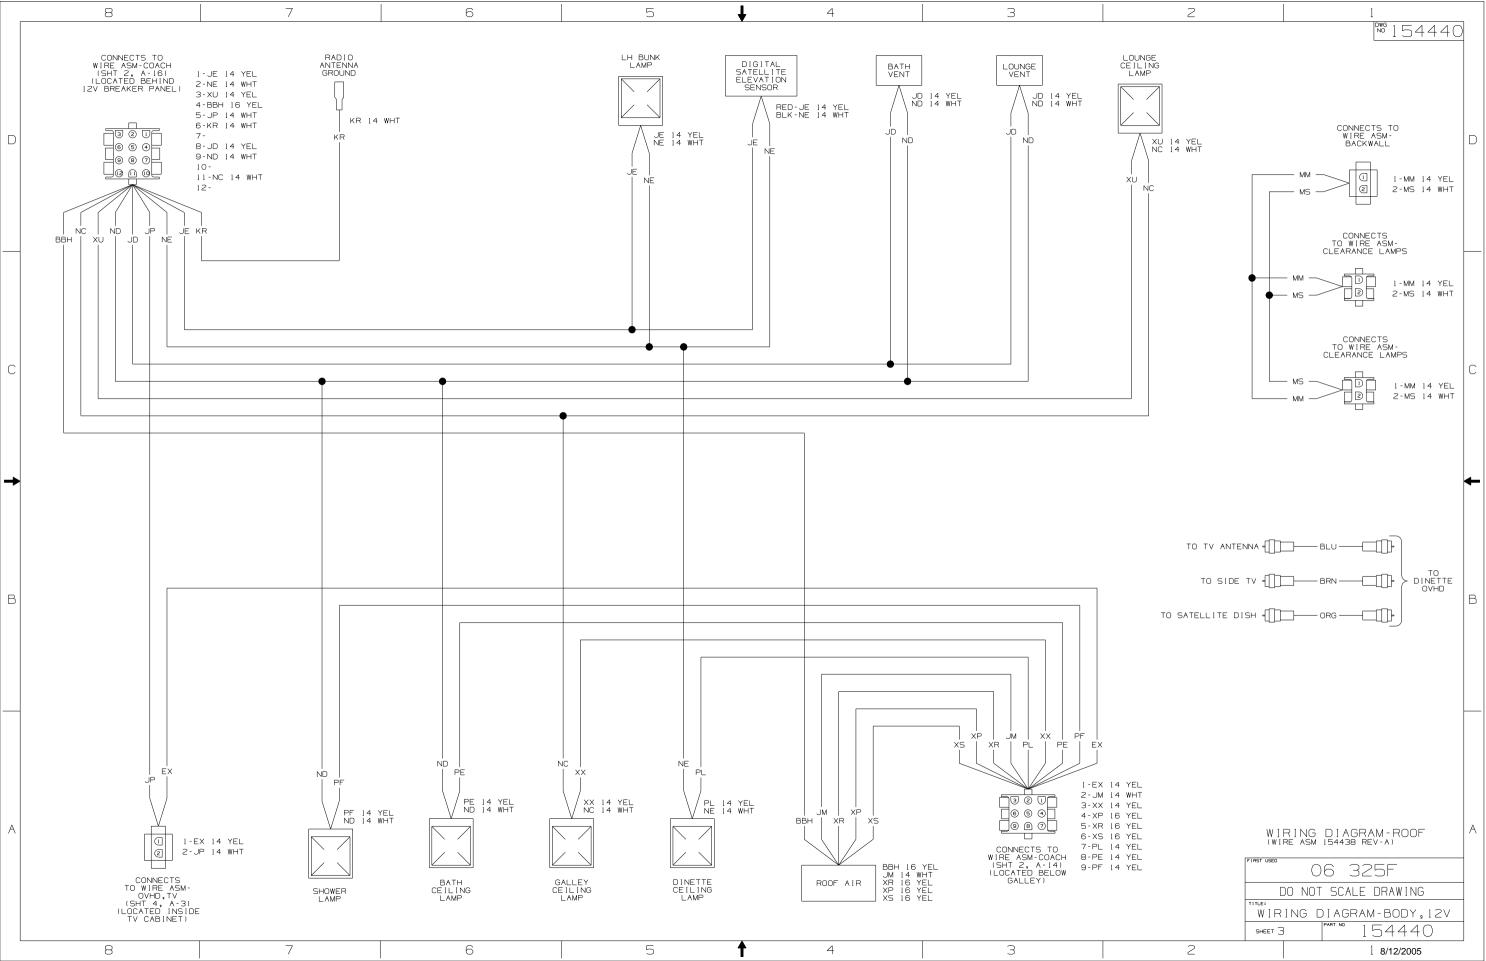

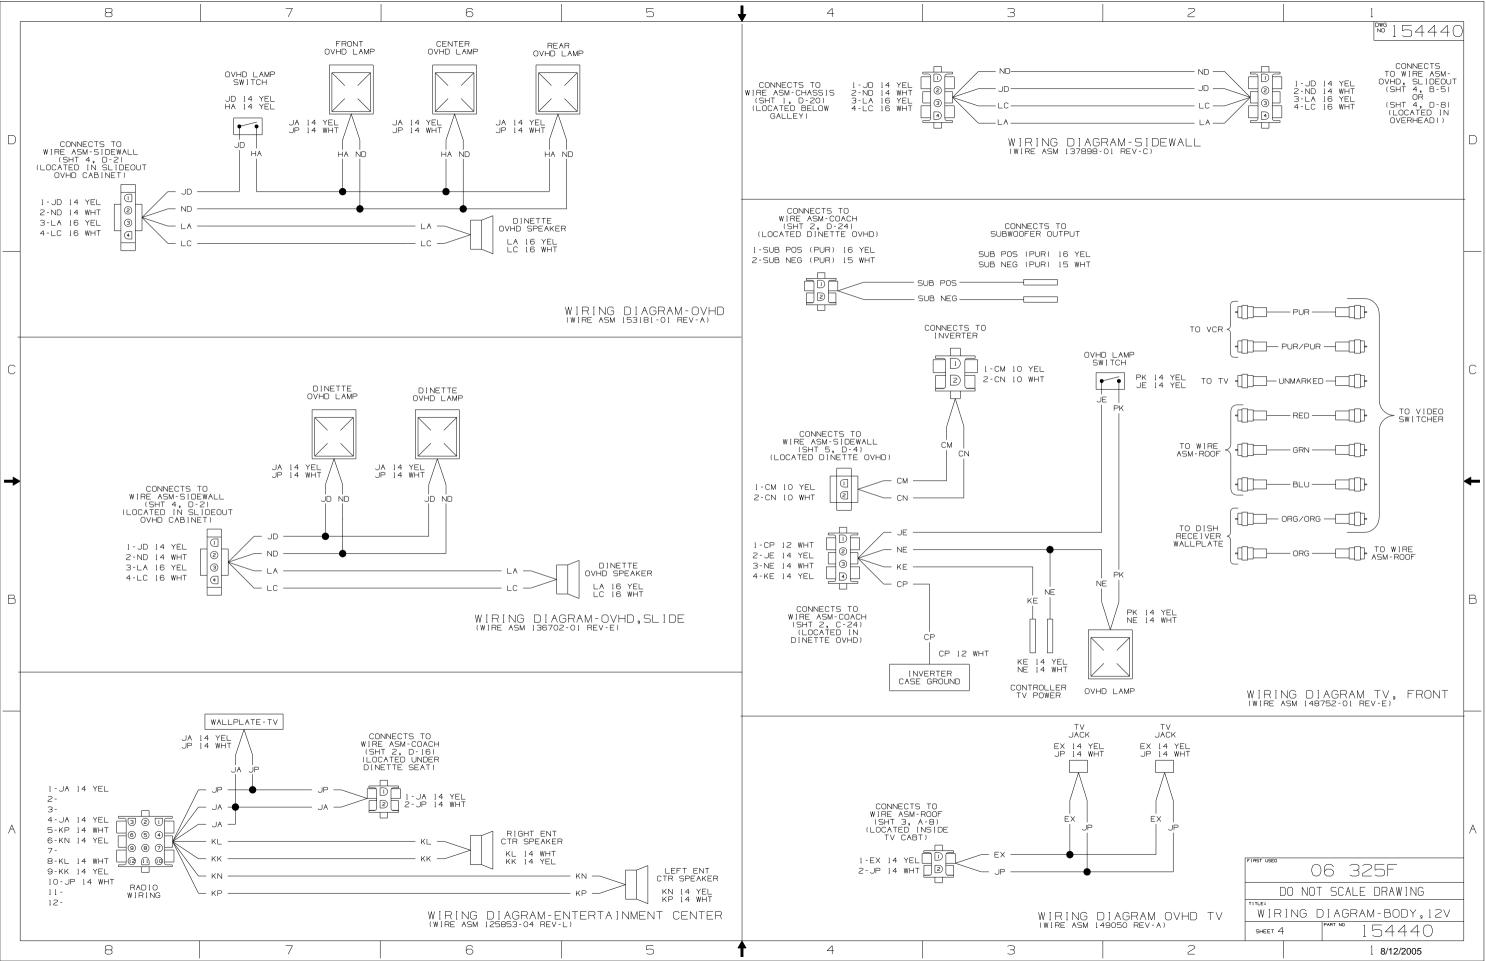

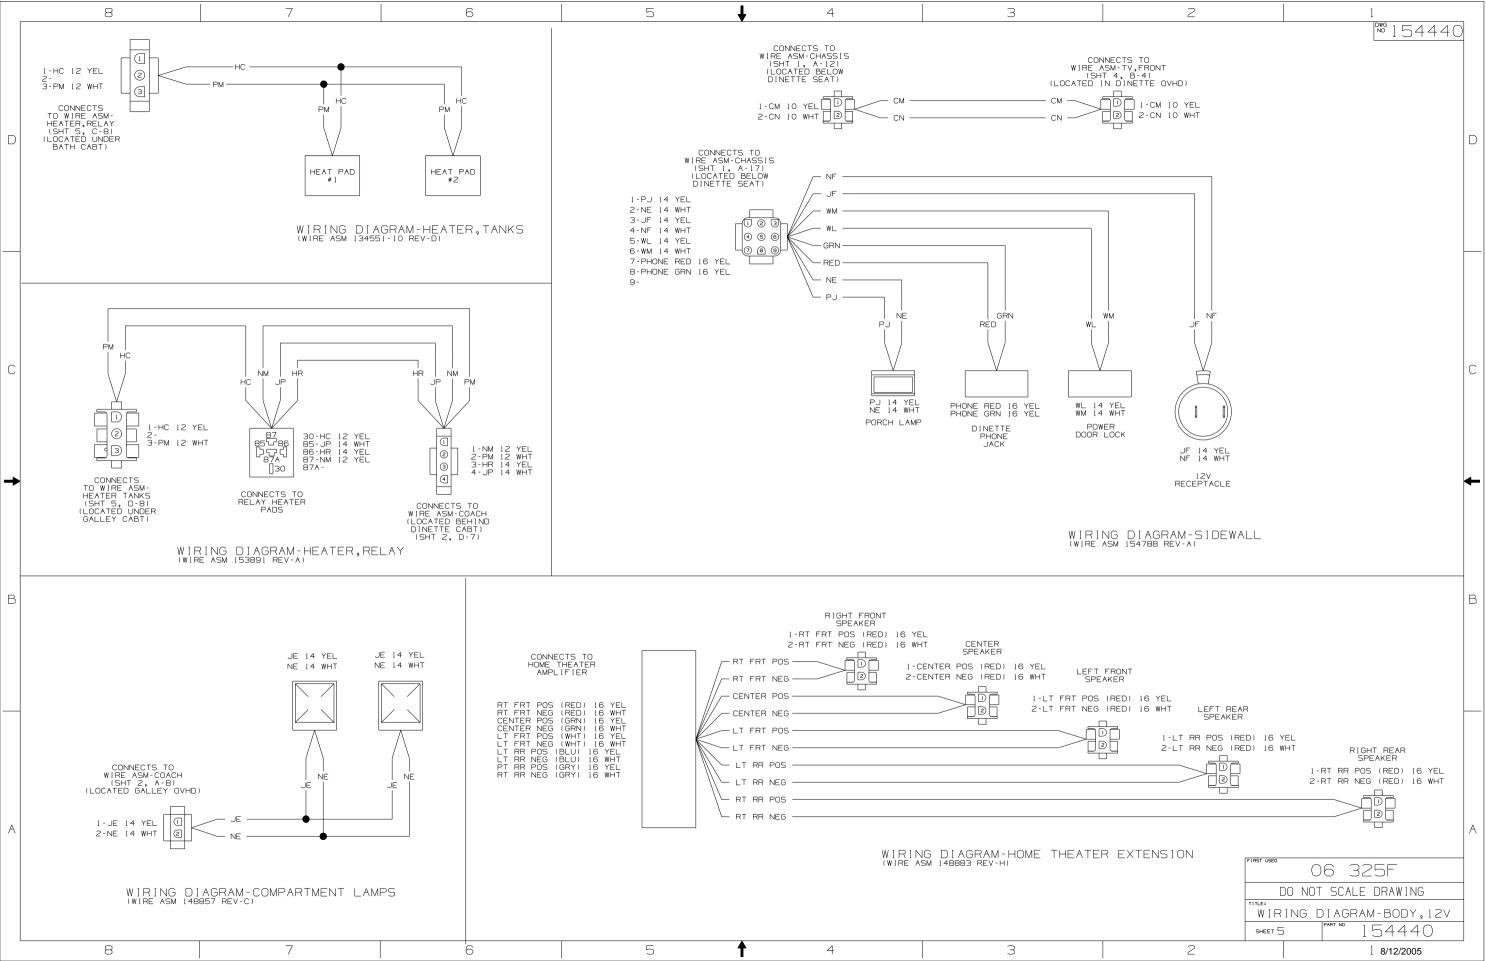

8	7	6	5	4	3	2	1
GGJ GGG GGH	GGJ GGM GGK GGH GGG GGL	GGP GGN	GGN GGP	GGL GGK GGM			<u>™ 154440</u> D
A B C SLIDEOUT ACTUATOR #1 LOCATED BELO GALLEY	GGG 16 YEL GGJ 16 WHT GGH 16 YEL GGH 16 YEL GG S O G S O ENCODER FEED	SH 16 YEL GG 16 YEL GG 16 YEL SK 16 YEL	GGN 12 YEL A-GGN 12 YEL A-GGN 12 YEL B-GGP 12 YEL SLIDEOUT ACTUATOR #2 LOCATED ABOVE CHASSIS REAR AXLE	A-GGK 16 YEL B-GGM 16 WHT C-GGL 16 YEL SLIDEOUT ACTUATOR *2 LOCATED ABOVE CHASSIS REAR AXLE		TO WIRE ASM- ELECTRICAL BOX (SHT 1, C-2) J 8 BLK	C
	DOME LAMP DOME LAMP GE 16 YEL GE 16 YEL MU 14 WHT CCU 14 YEL CCU 14 YEL MU GE GE CCU MU GE GE CCU			2 YEI			В
8	A- B- C-MU 14 YE D- E- F-GE 16 YE G-CCU 16 Y CONNECTS TO CHEVY WIRING J- K- L- M-	#I ACTUA DRIVE LE	I - AAY 12 YEL 2 - AAZ 12 YEL SLIDEOUT ACTUATOR #1 LOCATED BELOW GALLEY	2 YEL	3		06 325F DO NOT SCALE DRAWING RING DIAGRAM-BODY,12V

