




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

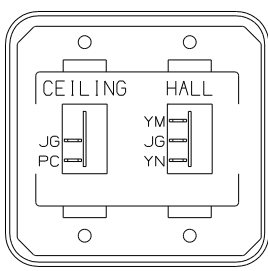


SWITCH-ROCKER 135740-01-CHT
SWITCH-BASE 135740-02-CHT
SWITCH-BESEL 135741-02-CHT
SWITCH-BEDEL 135742-20-CHT
SCREW 611-08-08U (4)

DETAIL DA

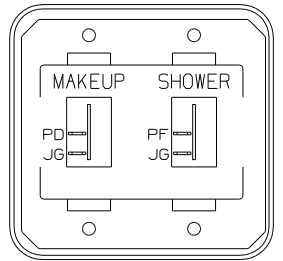


SWITCH-ROCKER 135740-01-CHT (2)
SWITCH-BASE 135741-02-CHT
SWITCH-BEDEL 135742-20-CHT
SCREW 611-08-08U (4)

DETAIL DF

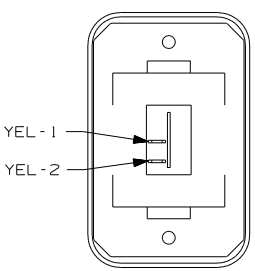


SWITCH-ROCKER 135740-01-CHT
SWITCH-BASE 135741-01-CHT
SWITCH-BEDEL 135742-01-CHT
SCREW 611-08-08U (2)


DETAIL DR

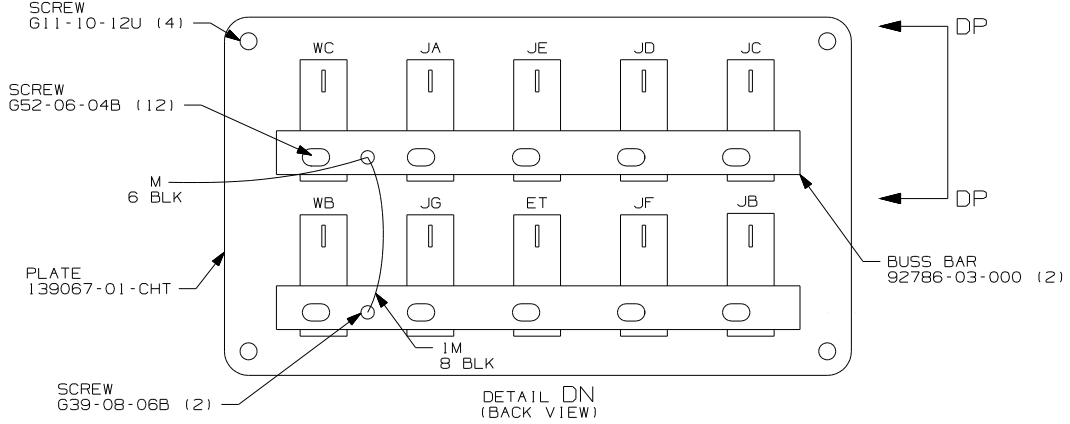

DETAIL DN (BACK VIEW)

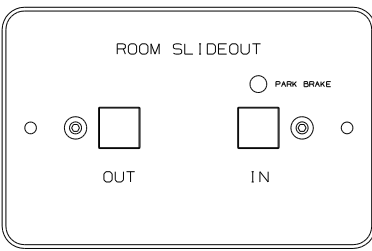


SWITCH ASM-SLIDEOUT 140464-02-000

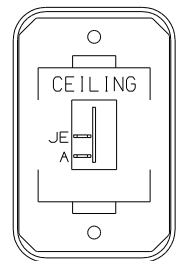

SWITCH-ROCKER 135740-01-CHT
SWITCH-BASE 135741-01-CHT
SWITCH-BEDEL 135742-07-CHT
SCREW 611-08-08U (2)

DETAIL DG

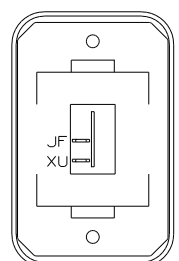


SWITCH-ROCKER 135740-01-CHT
SWITCH-BASE 135741-01-CHT
SWITCH-BEDEL 135742-01-CHT
SCREW 611-08-08U (2)

DETAIL DS


WARNING
UNDERSTAND OPERATOR'S MANUAL BEFORE USING KEEP PEOPLE AND OBSTRUCTIONS CLEAR OF SLIDEOUT ROOM WHEN OPERATING TO AVOID INJURY AND/OR PROPERTY DAMAGE

LABEL-WARNING 116549-02-000

DETAIL DB

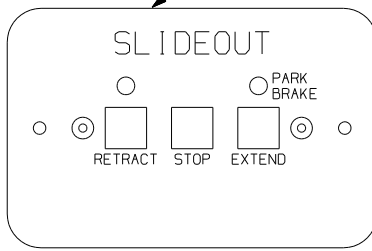


SWITCH ASM-SLIDEOUT 138173-04-000
6 PIN HSG CIRCUITS NNS, HHF, NNN, NNP, HHE, NNR

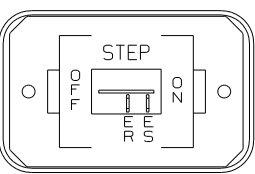


SWITCH-ROCKER 135740-01-CHT
SWITCH-BASE 135741-01-CHT
SWITCH-BEDEL 135742-11-CHT
SCREW 611-08-08U (2)

DETAIL DK

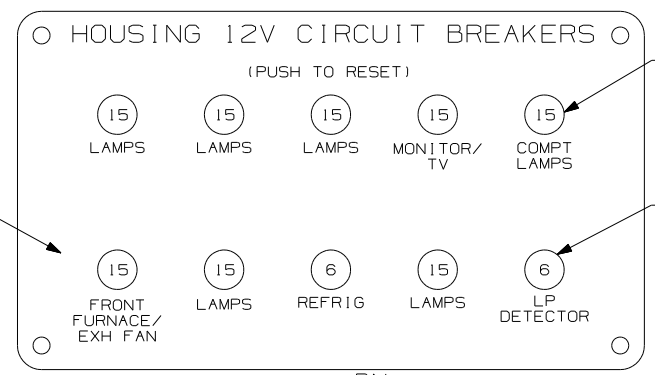


DETAIL DN (FRONT VIEW)

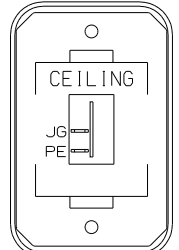


SWITCH-ROCKER 135740-01-CHT
SWITCH-BASE 135741-01-CHT
SWITCH-BEDEL 135742-07-CHT
SCREW 611-08-08U (2)

DETAIL DC

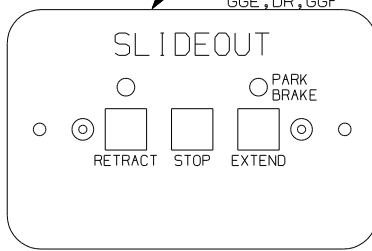


SWITCH ASM-SLIDEOUT 138173-04-000
6 PIN HSG CIRCUITS DS, DU, GGD, GGE, DR, GGF

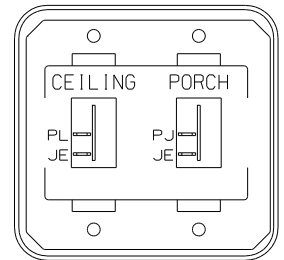

SWITCH-ROCKER 135740-01-CHT (2)
SWITCH-BASE 135741-02-CHT
SWITCH-BEDEL 135742-19-CHT
SCREW 611-08-08U (4)

DETAIL DL

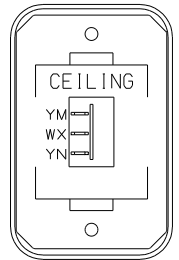


SWITCH-ROCKER 135740-01-CHT
SWITCH-BASE 135741-01-CHT
SWITCH-BEDEL 135742-07-CHT
SCREW 611-08-08U (2)

DETAIL DD


WARNING
UNDERSTAND OPERATOR'S MANUAL BEFORE USING KEEP PEOPLE AND OBSTRUCTIONS CLEAR OF SLIDEOUT ROOM WHEN OPERATING TO AVOID INJURY AND/OR PROPERTY DAMAGE

LABEL-WARNING 116549-01-000


DETAIL DH

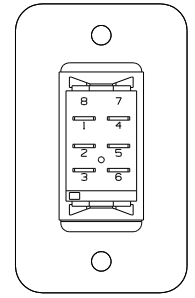


DETAIL DM

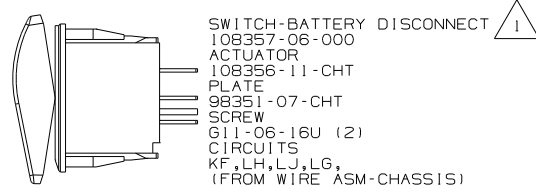

SWITCH-BATTERY DISCONNECT 1
108357-06-000
ACTUATOR 108356-11-CHT
PLATE 98351-07-CHT
SCREW 611-06-16U (2)
CIRCUITS KF, LH, LJ, LG, (FROM WIRE ASM-CHASSIS)

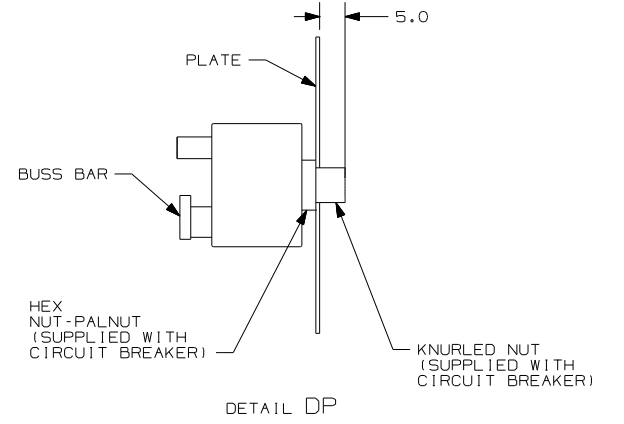


DETAIL DP

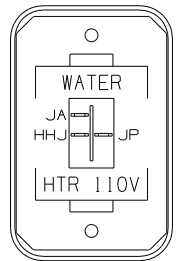

SWITCH-ROCKER 135740-06-CHT
SWITCH-BASE 135741-01-CHT
SWITCH-BEDEL 135742-35-CHT
SCREW 611-08-08U (2)

DETAIL DE

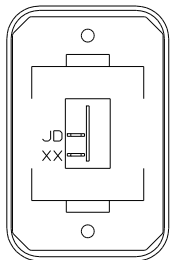

SWITCH-ROCKER 135740-01-CHT
SWITCH-BASE 135741-01-CHT
SWITCH-BEDEL 135742-01-CHT
SCREW 611-08-08U (2)

DETAIL DJ






NOTES:
1 SWITCH IS TO BE MOUNTED WITH HOUSING ALIGNMENT POST TO BOTTOM OF CUTOUT.

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000

FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000

- (53Z) WTR HTR-66AL/110/LP/MTR/AUTO
- (265) CODES/STANDARDS-CSA/CMVSS
- (1B1) CODES/STANDARDS USA

Table with columns for SHEET 4, PART NO 154227, and TITLE WIRING INSTL-BODY, 12V. Includes a 'FIRST USED' section with '06 D34A' and 'DO NOT SCALE DRAWING'.

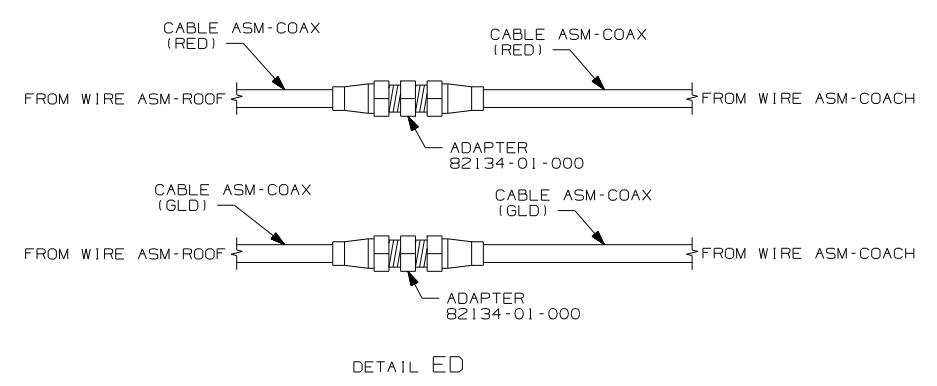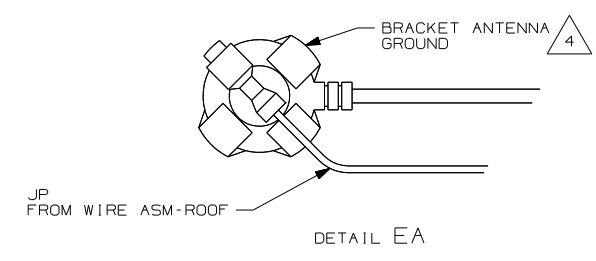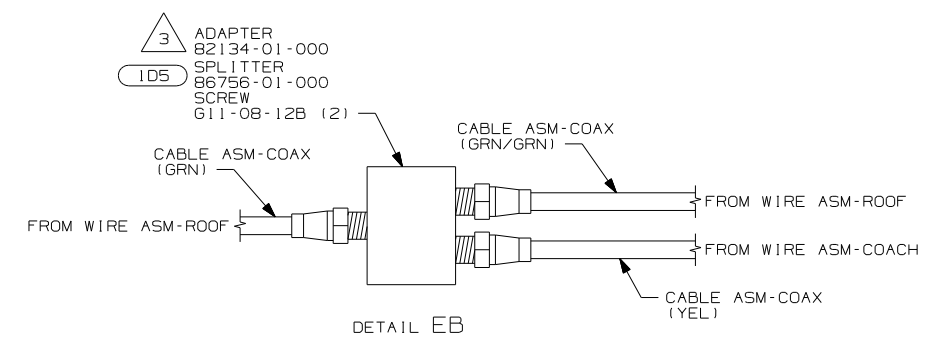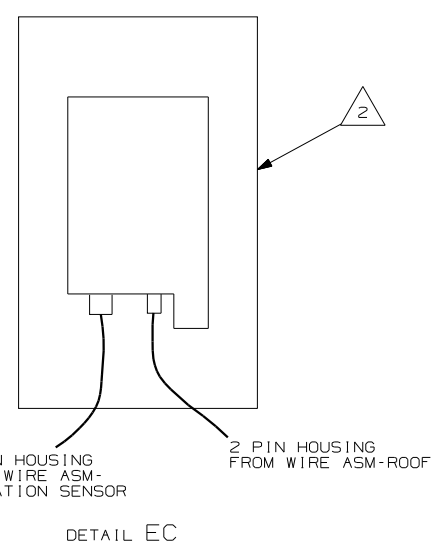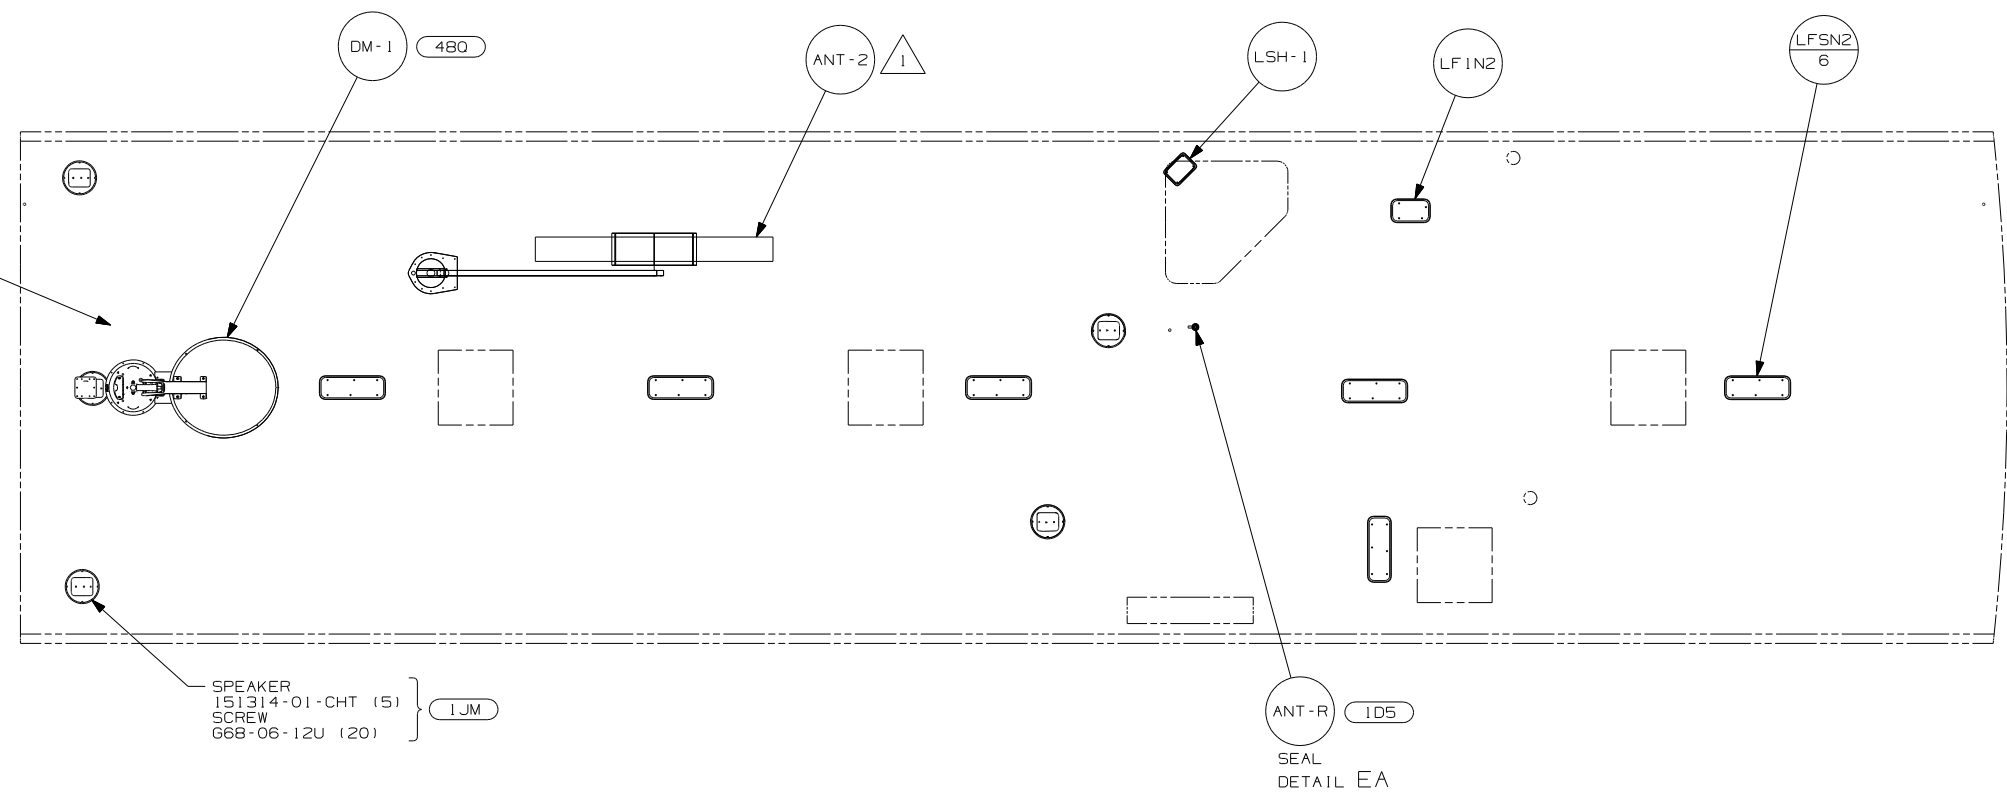

- NOTES:
- 4 WRAP LEGS AROUND ANTENNA BASE.
 - 3 WITHOUT 1D5 USE ADAPTER AND CONNECT GRN COAX TO GRN/GRN COAX.
 - 2 SENSOR SUPPLIED WITH SATELLITE ASSEMBLY.
 - 1 SEE DWG 76319-01-000 FOR INSTALLATION INSTRUCTIONS.

- 480 SATELLITE DISH & ELEV.SENSOR
- 1JM HOME THEATER SOUND SYSTEM
- 1D5 ENTERTAINMENT CENTR/EXT W/CD
- 265 CODES/STANDARDS-CSA/CMVSS
- 1B1 CODES/STANDARDS USA

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000

FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000

FIRST USED	06 D34A
DO NOT SCALE DRAWING	
TITLE	WIRING INSTL-BODY, 12V
SHEET 5	PART NO 154227