

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.

## 

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

8	7	6	5	4	3	2		1	
C		6	CABLE 2 1H4		3	T4J SHROUD-CAMERA 137919-03-CHT SCRW 78538-01-CHT (3)	$\sim$	1 NO 152126 RECORD DATE OFTROM6	C
						(74J) SHROUD-CAMERA 137919-03-CHT			
$\Rightarrow$									
C				0 0			$\sim$	SCREW 74J 639-10-12U (4)	С
→ ···							SECTION A		F
В							74J REARVIEW MO		В
								NITOR SYSTEM W/O	
A	THIS AREA ON UNITS						CHR DFTR CHR P.E. M.E. DSNR UNSPECIFIED TOLERANCES ARE: MHOLE DIM (X) : CNR (X,X) : TWO-PLACE (X,XX) :	ALL DIMENSIONS ARE IN MILLIMETERS FIRST USED 06 F - SER	A
WITHOUT MONITOR (1A5 2 RUN CABLE THRU LEFT-HAI STANDARD ON ALL UNITS 1 PARTS SUPPLIED WITH CAN	HIS AREA ON ONITS (144) ND COVE TO REAR OF UNIT. WITH (1A5) (144) (74) MERA KIT P/N 144677-04-000 (74)						THIRD ANGLE : PROJECTION DO NOT SC/ TITLE: MON I TO LEAST MO	ALE DRAWING	
NOTES: 8	7	6	5	<b>†</b> 4	3	2	SHEET 1 OF 2	152126 1 6/15/2005	

