




**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

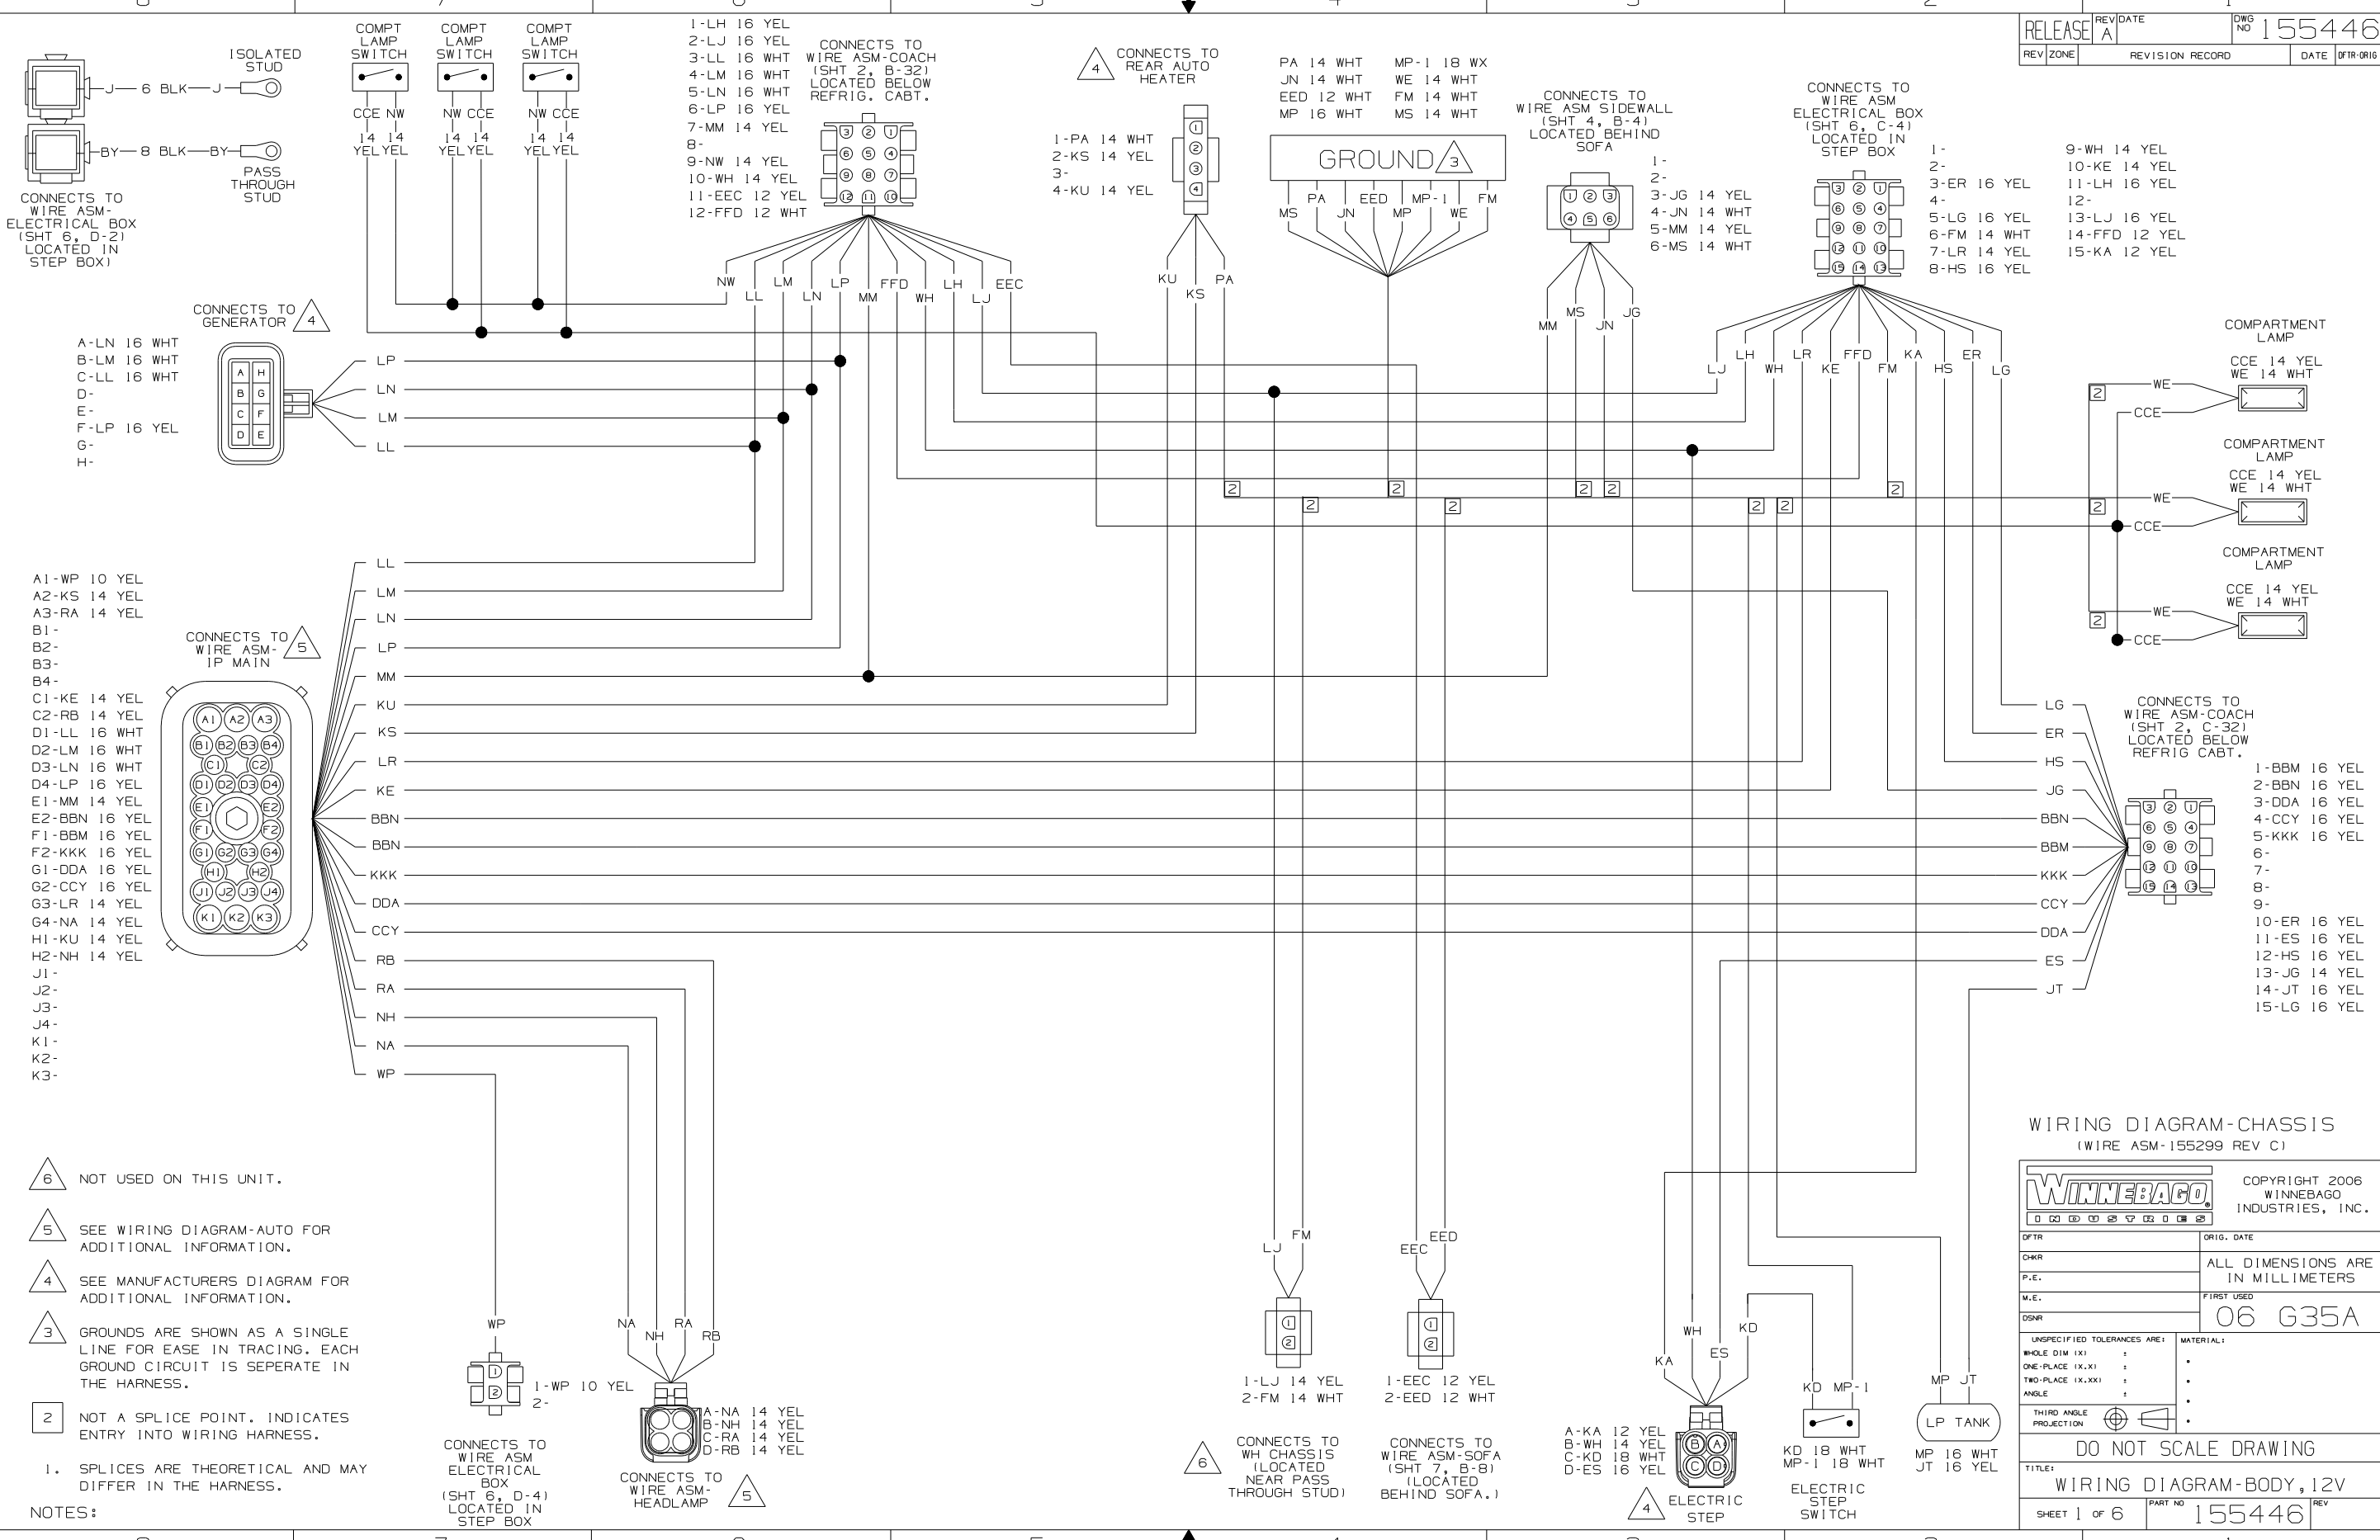

- A-LN 16 WHT
- B-LM 16 WHT
- C-LL 16 WHT
- D-
- E-
- F-LP 16 YEL
- G-
- H-

- A1-WP 10 YEL
- A2-KS 14 YEL
- A3-RA 14 YEL
- B1-
- B2-
- B3-
- B4-
- C1-KE 14 YEL
- C2-RB 14 YEL
- D1-LL 16 WHT
- D2-LM 16 WHT
- D3-LN 16 WHT
- D4-LP 16 YEL
- E1-MM 14 YEL
- E2-BBN 16 YEL
- F1-BBM 16 YEL
- F2-KKK 16 YEL
- G1-DDA 16 YEL
- G2-CCY 16 YEL
- G3-LR 14 YEL
- G4-NA 14 YEL
- H1-KU 14 YEL
- H2-NH 14 YEL
- J1-
- J2-
- J3-
- J4-
- K1-
- K2-
- K3-

WIRING DIAGRAM-CHASSIS  
 (WIRE ASM-155299 REV C)

<b>WINNEBAGO</b>		COPYRIGHT 2006 WINNEBAGO INDUSTRIES, INC.	
DFTR	ORIG. DATE	ALL DIMENSIONS ARE IN MILLIMETERS	
CHKR		06 G35A	
P.E.			
M.E.	FIRST USED		
DSNR			
UNSPECIFIED TOLERANCES ARE:		MATERIAL:	
WHOLE DIM (X)	:	•	
ONE-PLACE (X.X)	:	•	
TWO-PLACE (X.XX)	:	•	
ANGLE	:	•	
THIRD ANGLE PROJECTION		•	
DO NOT SCALE DRAWING			
TITLE: WIRING DIAGRAM-BODY, 12V			
SHEET 1 OF 6	PART NO	155446 REV	
REF:		1 6/16/2006	


- NOTES:
- 6 NOT USED ON THIS UNIT.
  - 5 SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.
  - 4 SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.
  - 3 GROUNDS ARE SHOWN AS A SINGLE LINE FOR EASE IN TRACING. EACH GROUND CIRCUIT IS SEPERATE IN THE HARNESS.
  - 2 NOT A SPLICE POINT. INDICATES ENTRY INTO WIRING HARNESS.

1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.







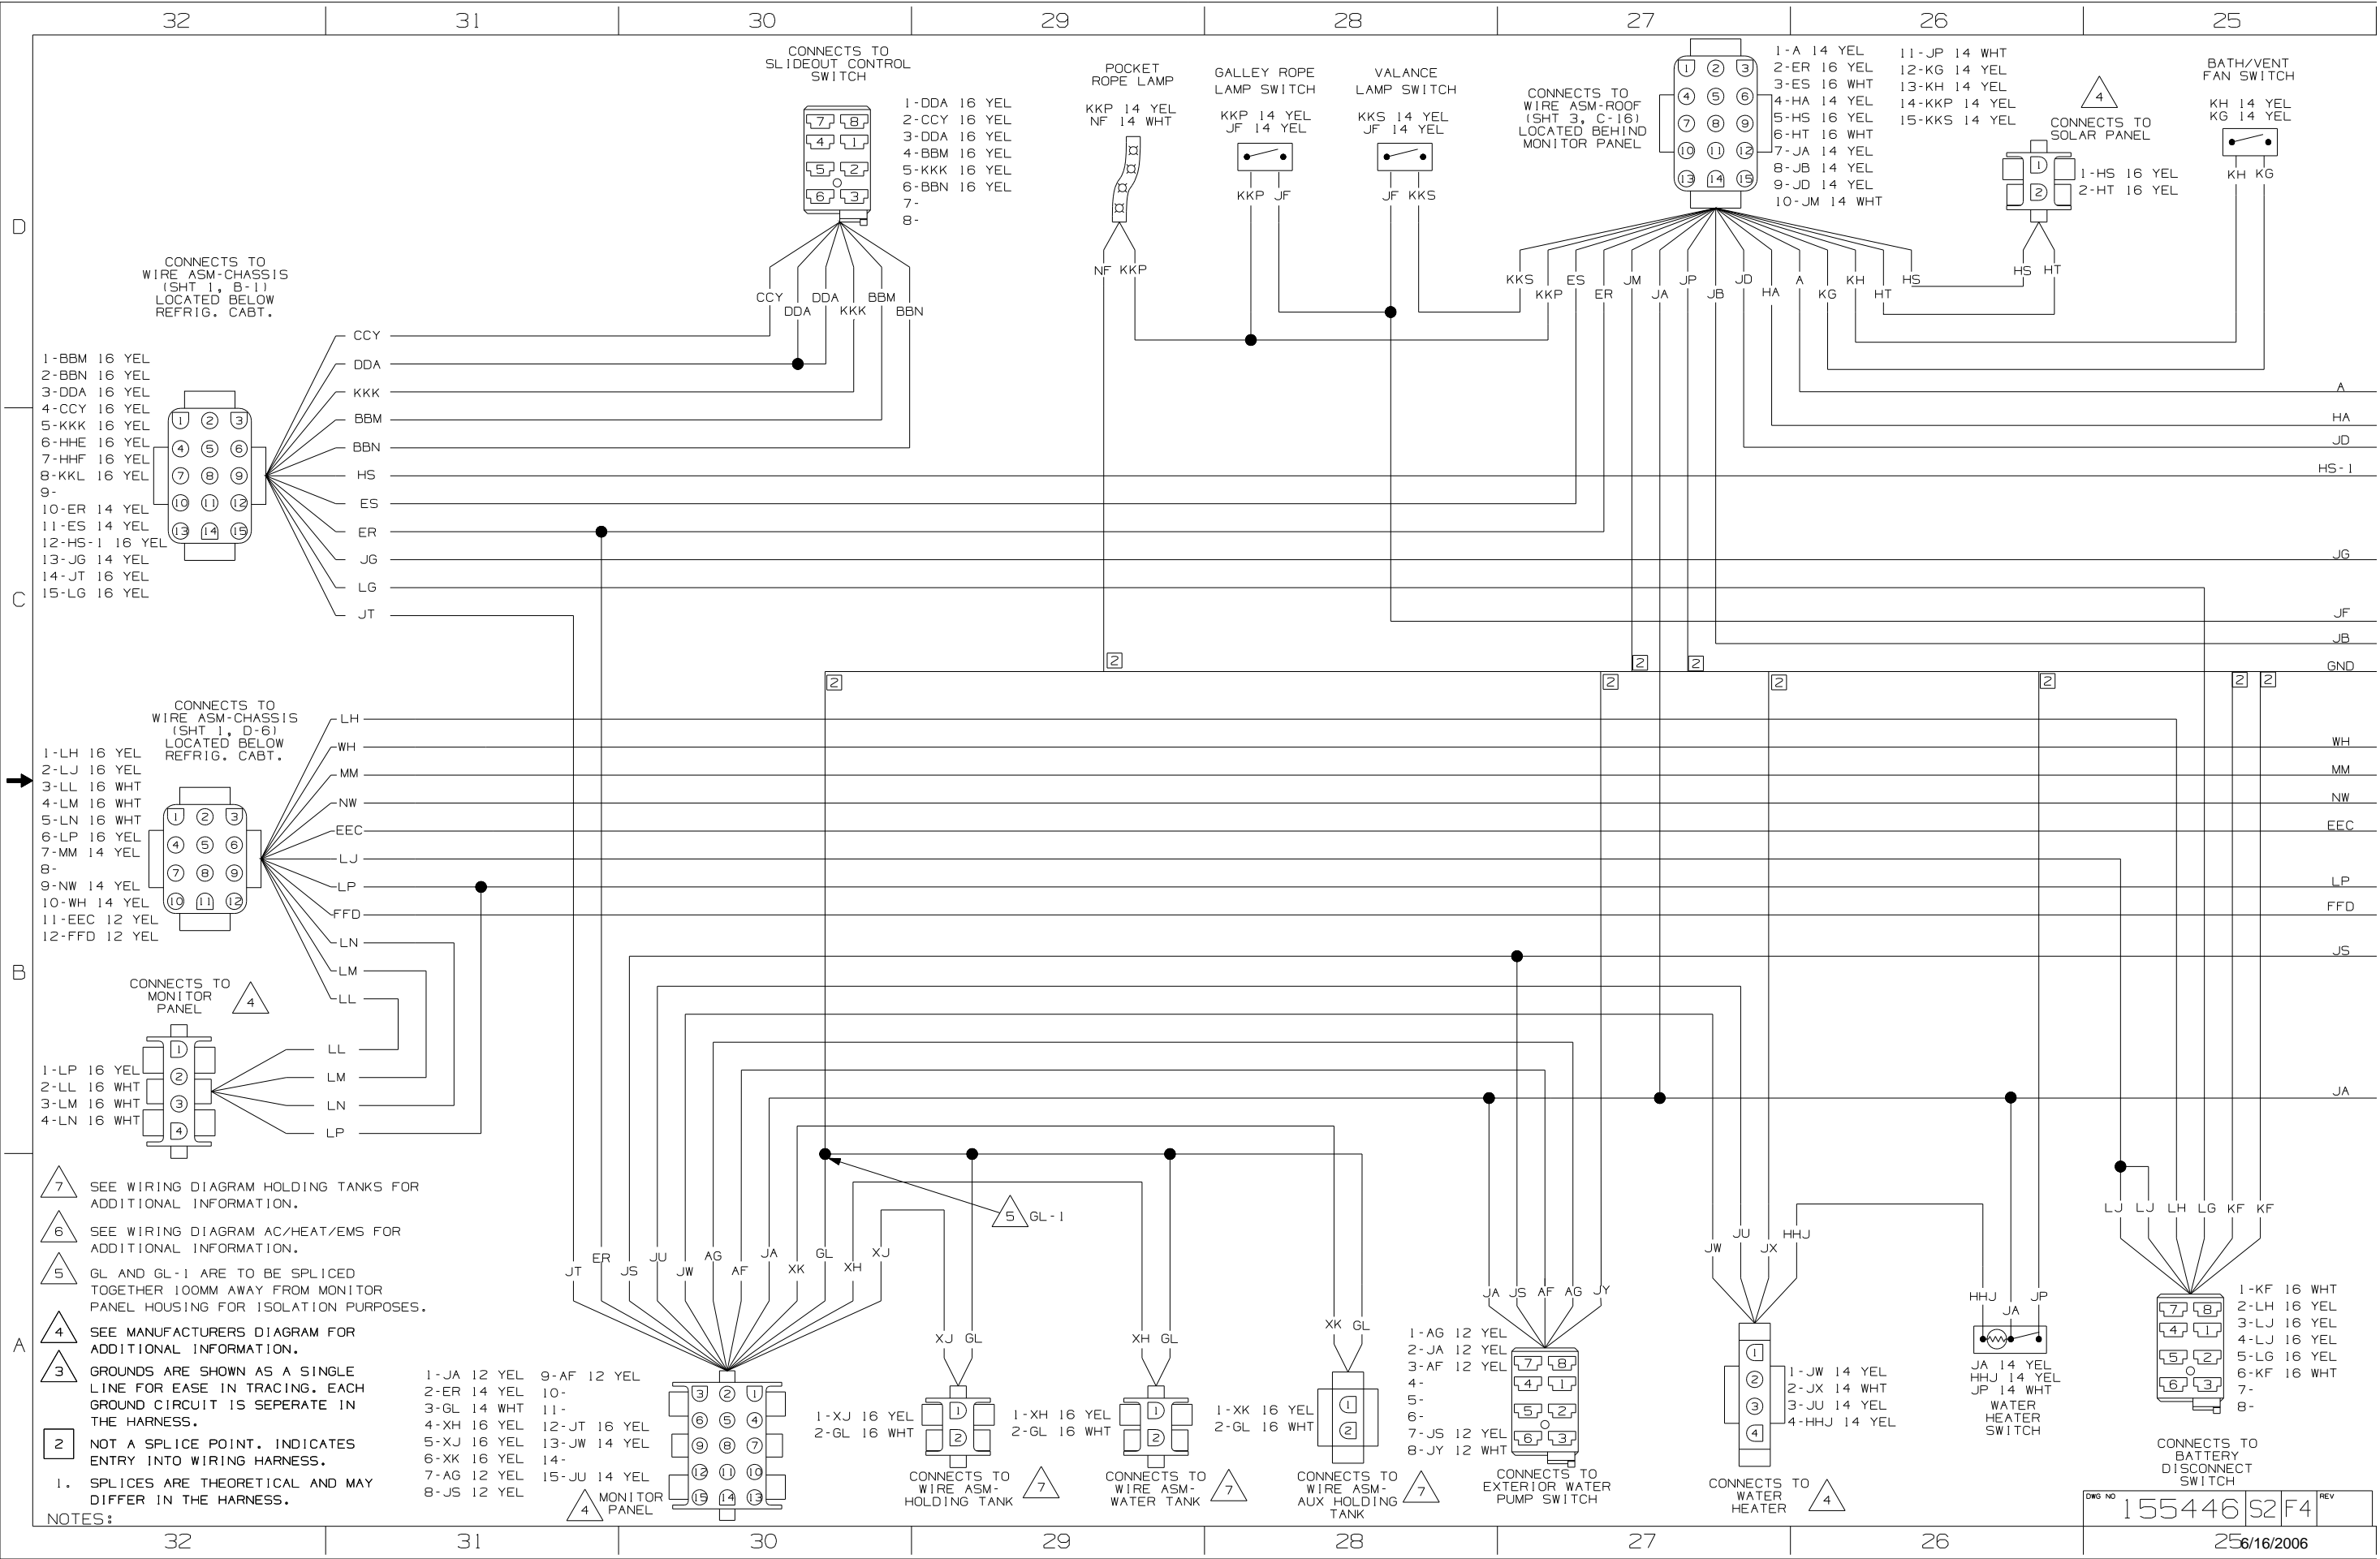

CONNECTS TO SLIDEOUT CONTROL SWITCH

1-DDA 16 YEL  
 2-CCY 16 YEL  
 3-DDA 16 YEL  
 4-BBM 16 YEL  
 5-KKK 16 YEL  
 6-BBN 16 YEL  
 7-  
 8-

POCKET ROPE LAMP  
 KKP 14 YEL  
 NF 14 WHT

GALLEY ROPE LAMP SWITCH  
 KKP 14 YEL  
 JF 14 YEL

VALANCE LAMP SWITCH  
 KKS 14 YEL  
 JF 14 YEL

CONNECTS TO WIRE ASM-ROOF (SHT 3, C-16) LOCATED BEHIND MONITOR PANEL

1-A 14 YEL  
 2-ER 16 YEL  
 3-ES 16 WHT  
 4-HA 14 YEL  
 5-HS 16 YEL  
 6-HT 16 WHT  
 7-JA 14 YEL  
 8-JB 14 YEL  
 9-JD 14 YEL  
 10-JM 14 WHT

CONNECTS TO SOLAR PANEL

1-HS 16 YEL  
 2-HT 16 YEL

BATH/VENT FAN SWITCH  
 KH 14 YEL  
 KG 14 YEL

CONNECTS TO WIRE ASM-CHASSIS (SHT 1, B-1) LOCATED BELOW REFRIG. CABT.

1-BBM 16 YEL  
 2-BBN 16 YEL  
 3-DDA 16 YEL  
 4-CCY 16 YEL  
 5-KKK 16 YEL  
 6-HHE 16 YEL  
 7-HHF 16 YEL  
 8-KKL 16 YEL  
 9-  
 10-ER 14 YEL  
 11-ES 14 YEL  
 12-HS-1 16 YEL  
 13-JG 14 YEL  
 14-JT 16 YEL  
 15-LG 16 YEL

CCY  
 DDA  
 DDA  
 KKK  
 BBM  
 BBN  
 HS  
 ES  
 ER  
 JG  
 LG  
 JT

CONNECTS TO WIRE ASM-CHASSIS (SHT 1, D-6) LOCATED BELOW REFRIG. CABT.

1-LH 16 YEL  
 2-LJ 16 YEL  
 3-LL 16 WHT  
 4-LM 16 WHT  
 5-LN 16 WHT  
 6-LP 16 YEL  
 7-MM 14 YEL  
 8-  
 9-NW 14 YEL  
 10-WH 14 YEL  
 11-EEC 12 YEL  
 12-FFD 12 YEL

LH  
 WH  
 MM  
 NW  
 EEC  
 LJ  
 LP  
 FFD  
 LN  
 LM  
 LL

CONNECTS TO MONITOR PANEL

1-LP 16 YEL  
 2-LL 16 WHT  
 3-LM 16 WHT  
 4-LN 16 WHT

LL  
 LM  
 LN  
 LP

- NOTES:
- 7 SEE WIRING DIAGRAM HOLDING TANKS FOR ADDITIONAL INFORMATION.
  - 6 SEE WIRING DIAGRAM AC/HEAT/EMS FOR ADDITIONAL INFORMATION.
  - 5 GL AND GL-1 ARE TO BE SPLICED TOGETHER 100MM AWAY FROM MONITOR PANEL HOUSING FOR ISOLATION PURPOSES.
  - 4 SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.
  - 3 GROUNDS ARE SHOWN AS A SINGLE LINE FOR EASE IN TRACING. EACH GROUND CIRCUIT IS SEPERATE IN THE HARNESS.
  - 2 NOT A SPLICE POINT. INDICATES ENTRY INTO WIRING HARNESS.
1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

1-JA 12 YEL  
 2-ER 14 YEL  
 3-GL 14 WHT  
 4-XH 16 YEL  
 5-XJ 16 YEL  
 6-XK 16 YEL  
 7-AG 12 YEL  
 8-JS 12 YEL

9-AF 12 YEL  
 10-  
 11-  
 12-JT 16 YEL  
 13-JW 14 YEL  
 14-  
 15-JU 14 YEL

CONNECTS TO MONITOR PANEL

CONNECTS TO WIRE ASM-HOLDING TANK

CONNECTS TO WIRE ASM-WATER TANK

CONNECTS TO WIRE ASM-AUX HOLDING TANK

CONNECTS TO EXTERIOR WATER PUMP SWITCH

CONNECTS TO WATER HEATER




CONNECTS TO WATER HEATER

CONNECTS TO WATER HEATER

CONNECTS TO BATTERY DISCONNECT SWITCH

1-KF 16 WHT  
 2-LH 16 YEL  
 3-LJ 16 YEL  
 4-LJ 16 YEL  
 5-LG 16 YEL  
 6-KF 16 WHT  
 7-  
 8-

- 1-EEP 18 YEL
- 2-EES 18 YEL
- 3-EEK 18 YEL
- 4-EEM 18 YEL
- 5-SUB POS-1 16 YEL
- 6-EEU 18 YEL
- 7-
- 8-EER 18 WHT
- 9-EET 18 WHT
- 10-EEL 18 WHT
- 11-EEN 18 WHT
- 12-SUB NEG-1 16 WHT
- 13-EEW 18 WHT
- 14-

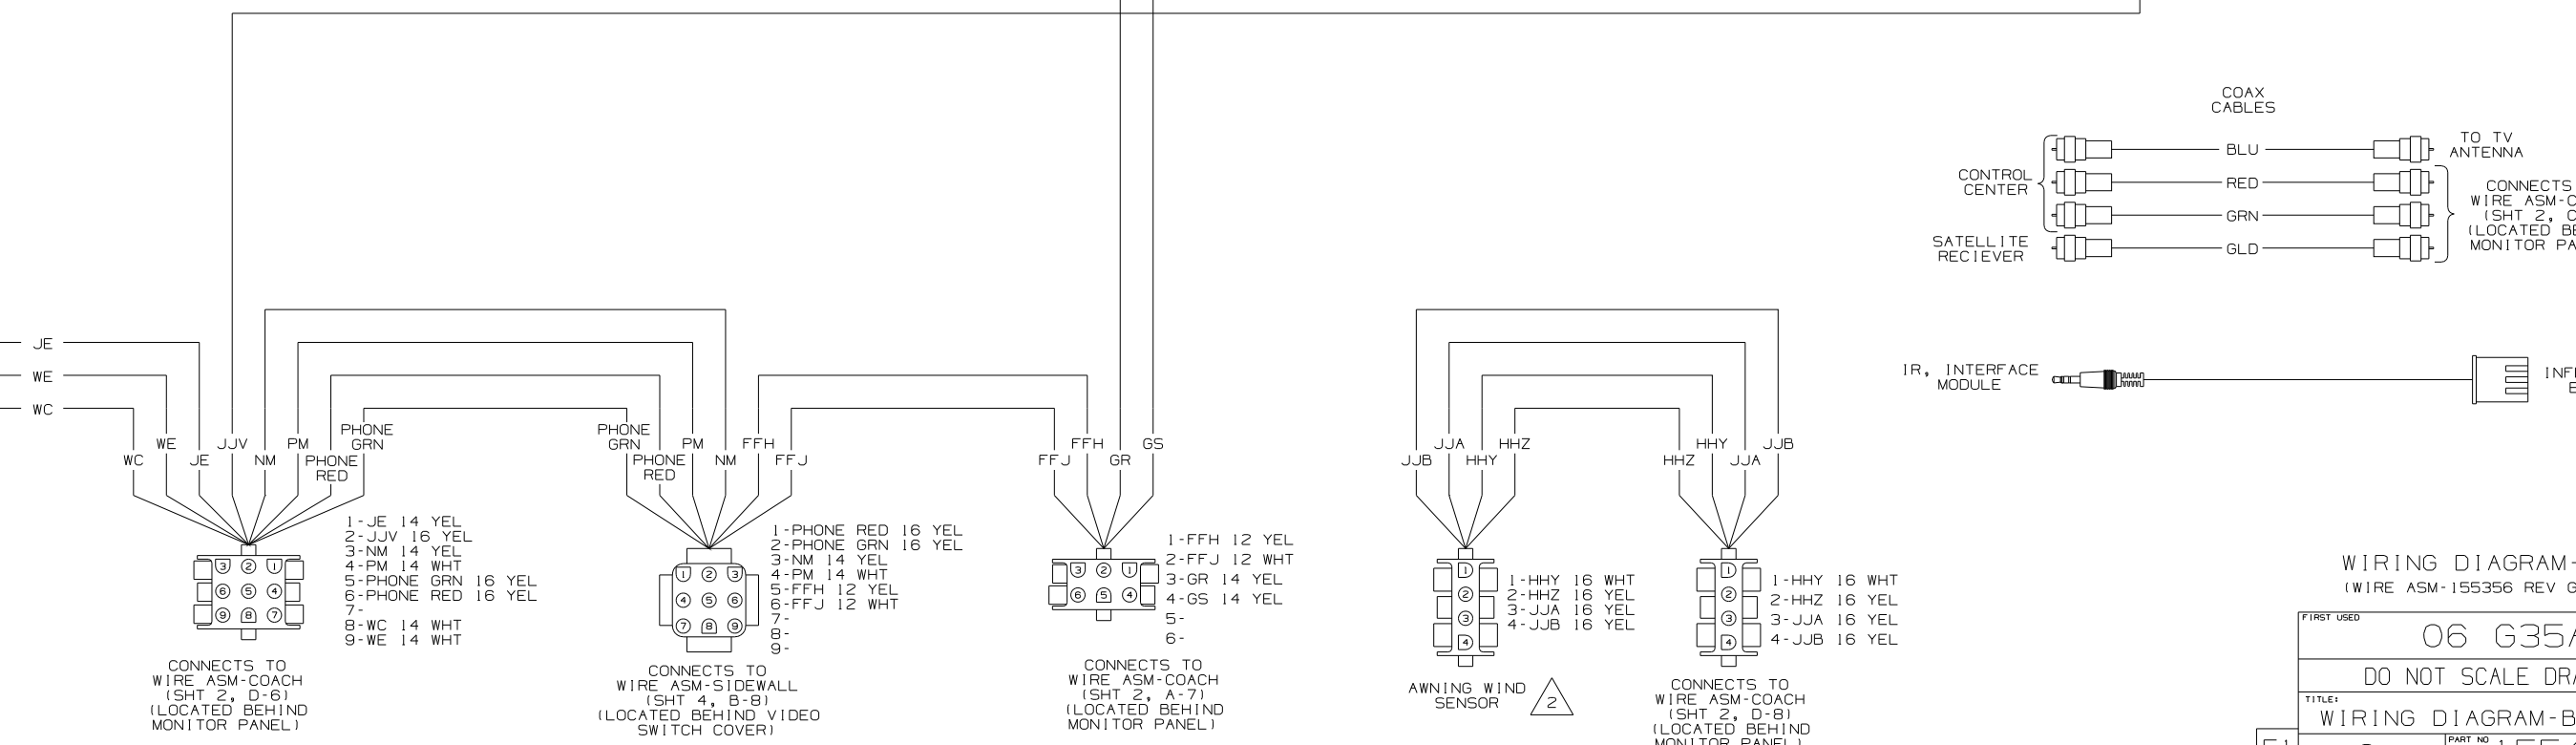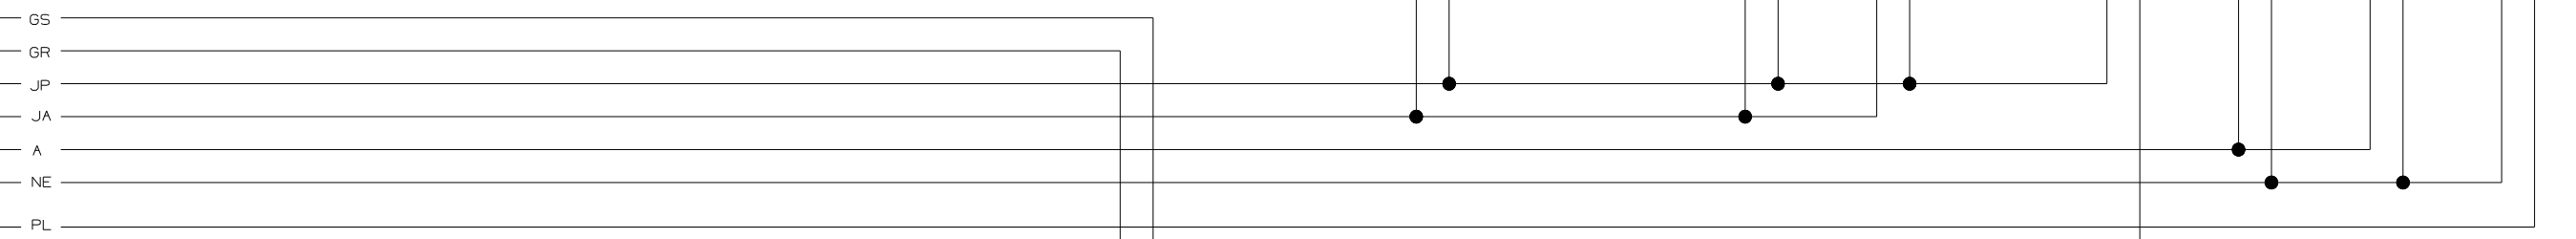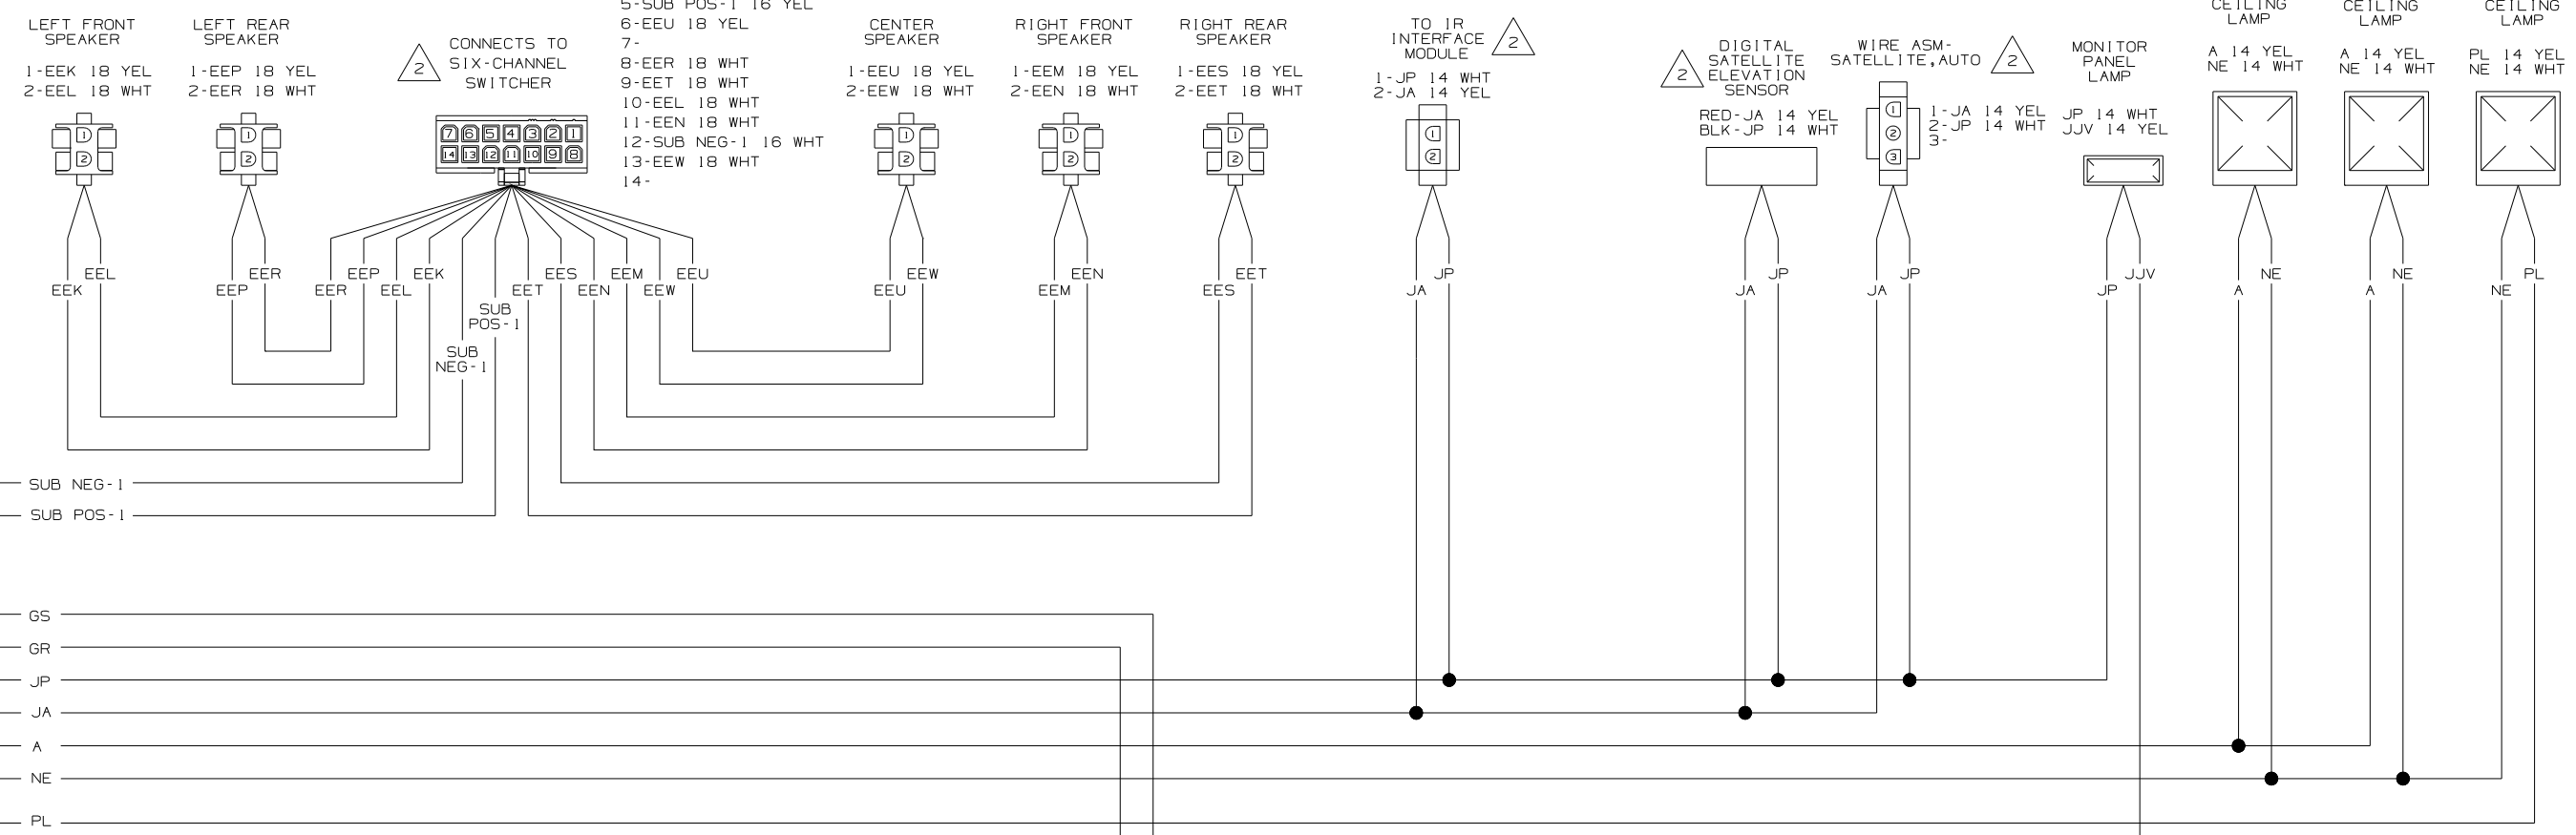


WIRING DIAGRAM-ROOF (WIRE ASM-155356 REV G)


FIRST USED	06 G35A
TITLE	DO NOT SCALE DRAWING
WIRING DIAGRAM-BODY, 12V	
SHEET 3	PART NO 155446 REV





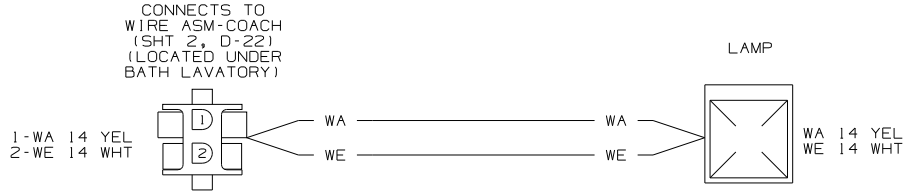


WIRING DIAGRAM-SIDEWALL (WIRE ASM 77093-15 REV-AG)

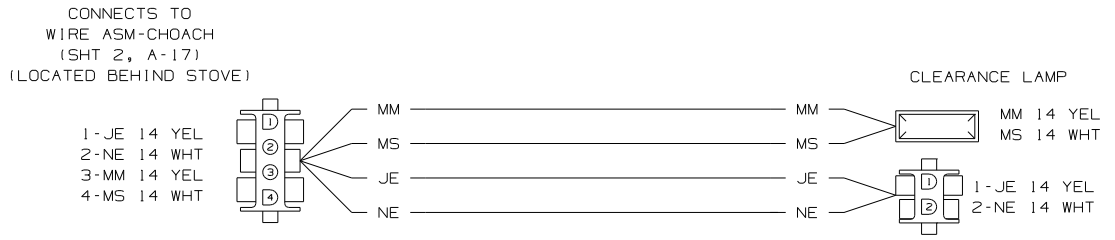


WIRING DIAGRAM-SIDEWALL (WIRE ASM 150863 REV C)


CONNECTS TO WIRE ASM-OVHD (SHT 5, B-4) (LOCATED IN GALLEY OVHD)

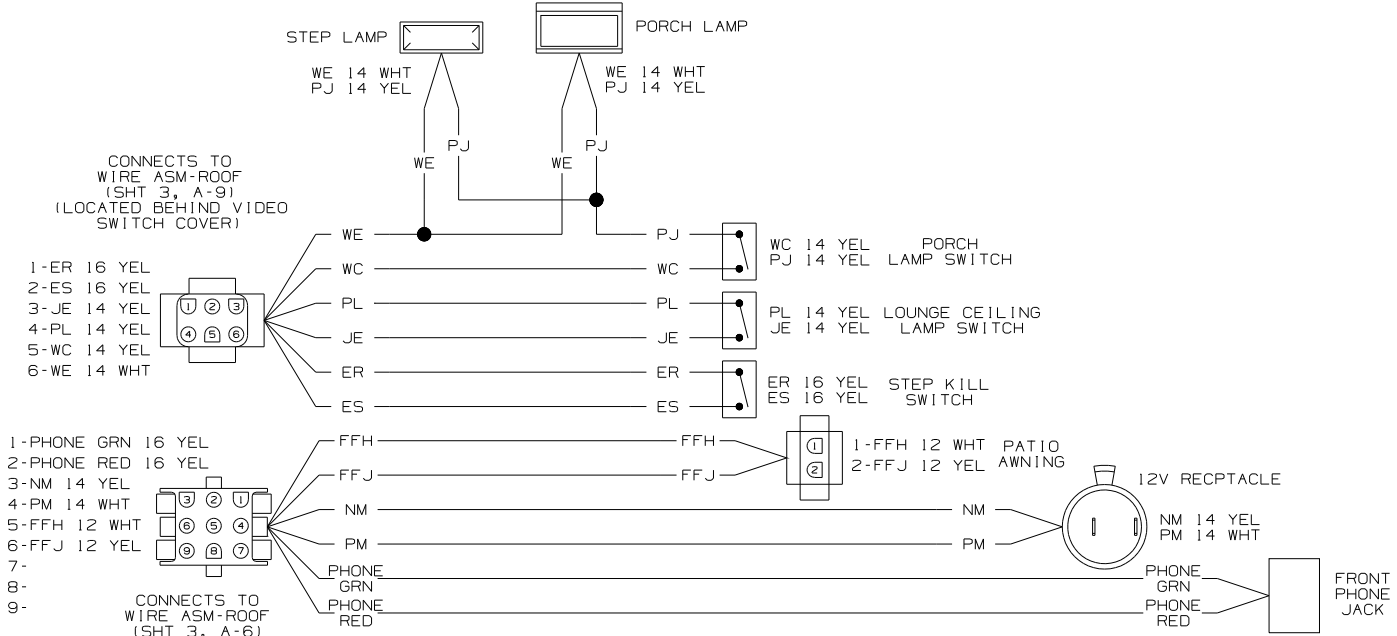

WIRING DIAGRAM-SIDEWALL (WIRE ASM 155063 REV D)

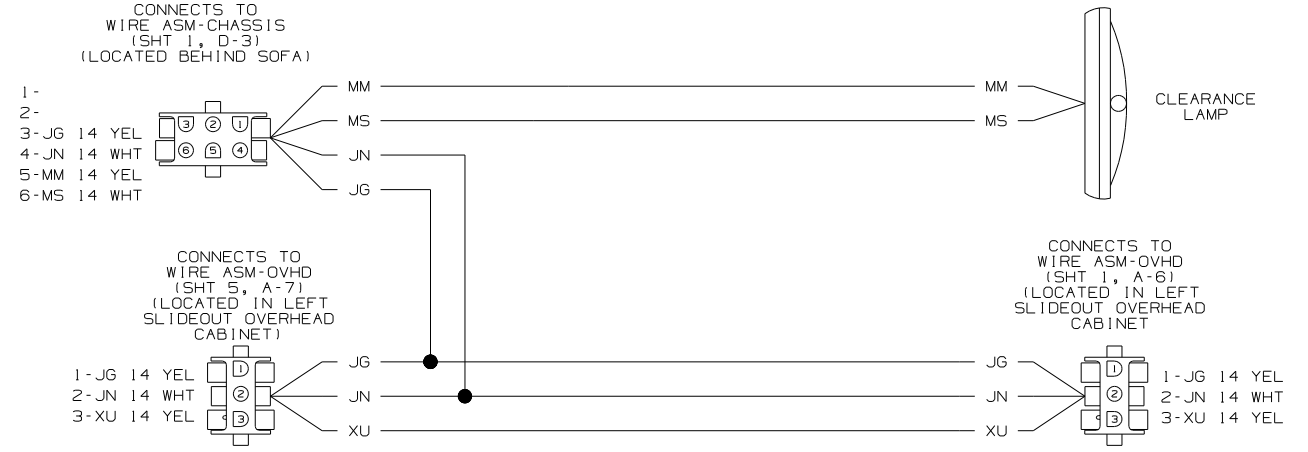


WIRING DIAGRAM-SIDEWALL (WIRE ASM 153090 REV C)

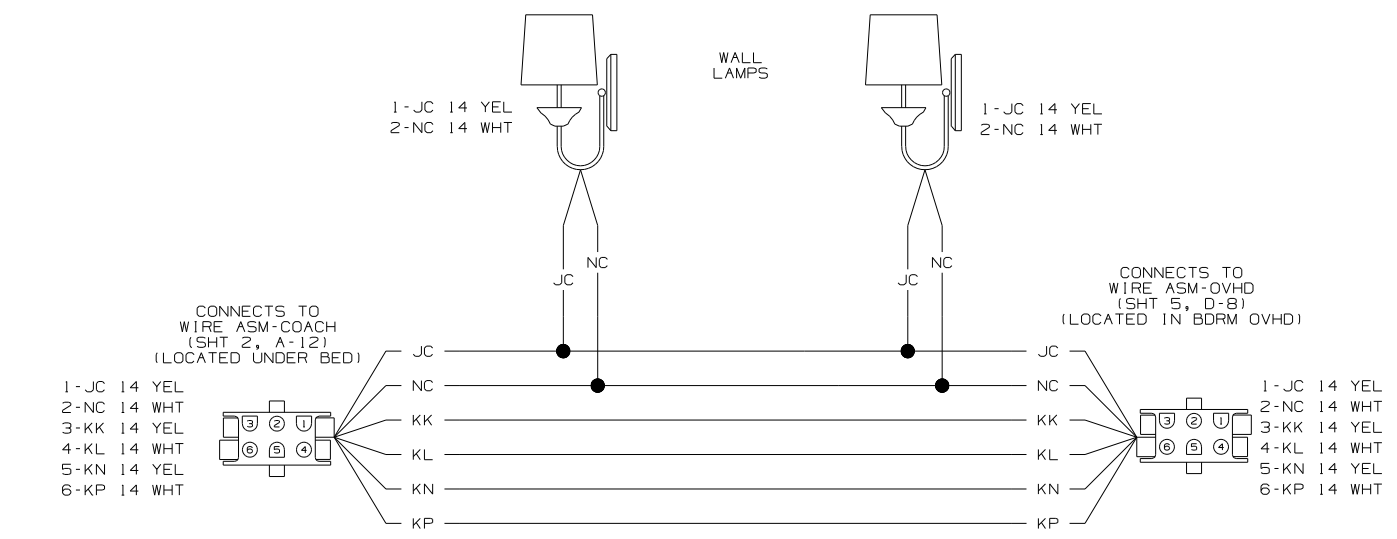


WIRING DIAGRAM-SIDEWALL (WIRE ASM 149132 REV E)


FIRST USED	06 G35A		
TITLE	DO NOT SCALE DRAWING		
	WIRING DIAGRAM-BODY, 12V		
SHEET 4	PART NO	155446	REV

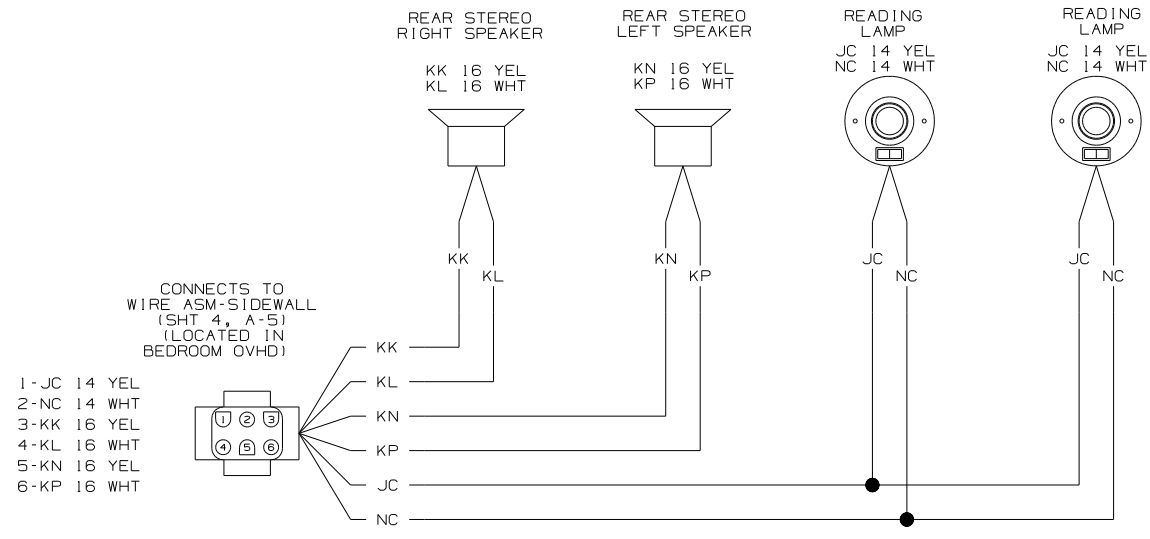


WIRING DIAGRAM-OVHD (WIRE ASM-140727 REV-E)

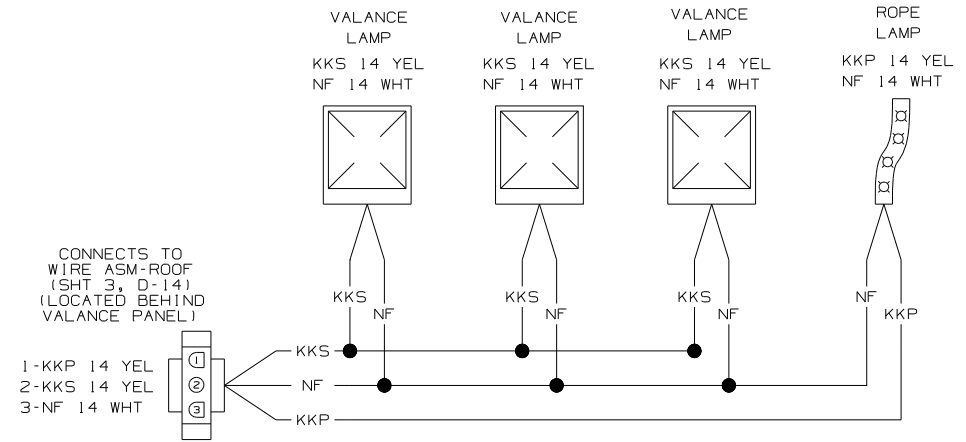


WIRING DIAGRAM-VALANCE (WIRE ASM-150814 REV-A)

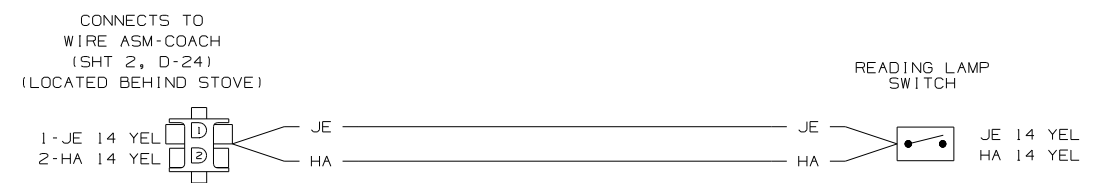


WIRING DIAGRAM-READING LAMP SWITCH (WIRE ASM-150865 REV-B)

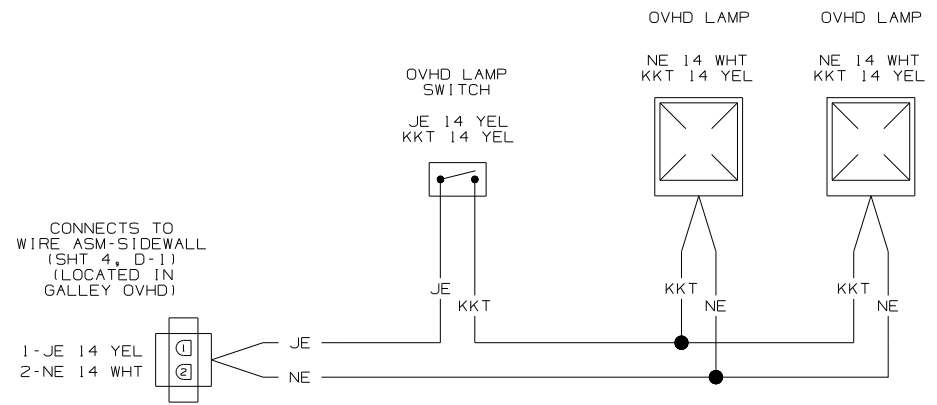

WIRING DIAGRAM-OVHD,SLIDEOUT (WIRE ASM-150864 REV-A)

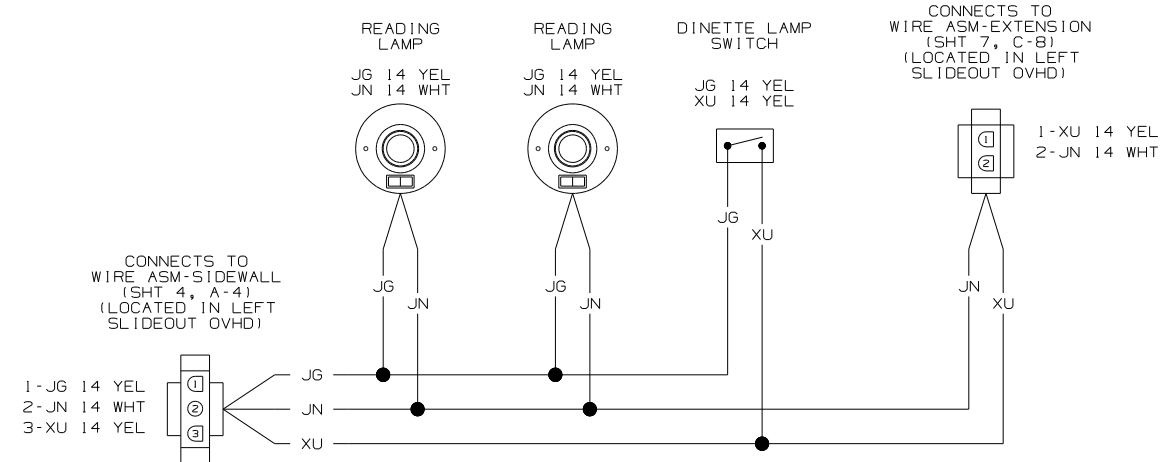


WIRING DIAGRAM-OVHD (WIRE ASM-153451 REV-A)

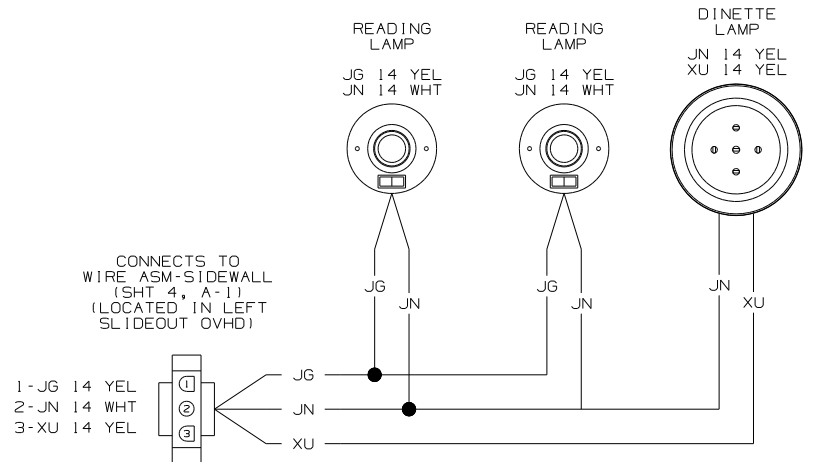


WIRING DIAGRAM-OVHD (WIRE ASM-153099 REV-A)


FIRST USED	06 G35A	
TITLE	DO NOT SCALE DRAWING	
	WIRING DIAGRAM-BODY, 12V	
SHEET 5	PART NO	155446
	REV	

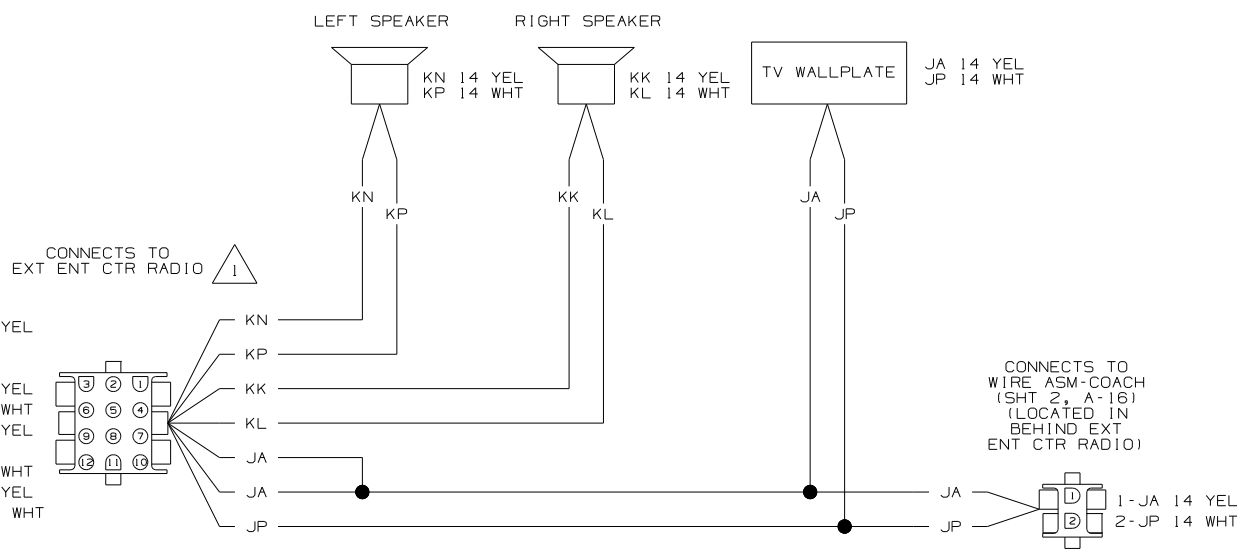

WIRING DIAGRAM-ENTERTAINMENT CTR  
(WIRE ASM 125853-04 REV-L)

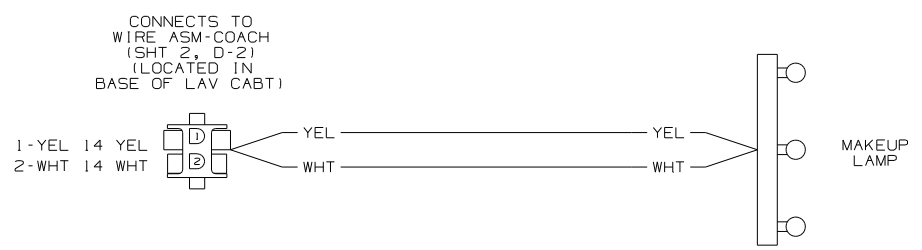


WIRING DIAGRAM-SIDEWALL  
(WIRE ASM 149130-01 REV-C)

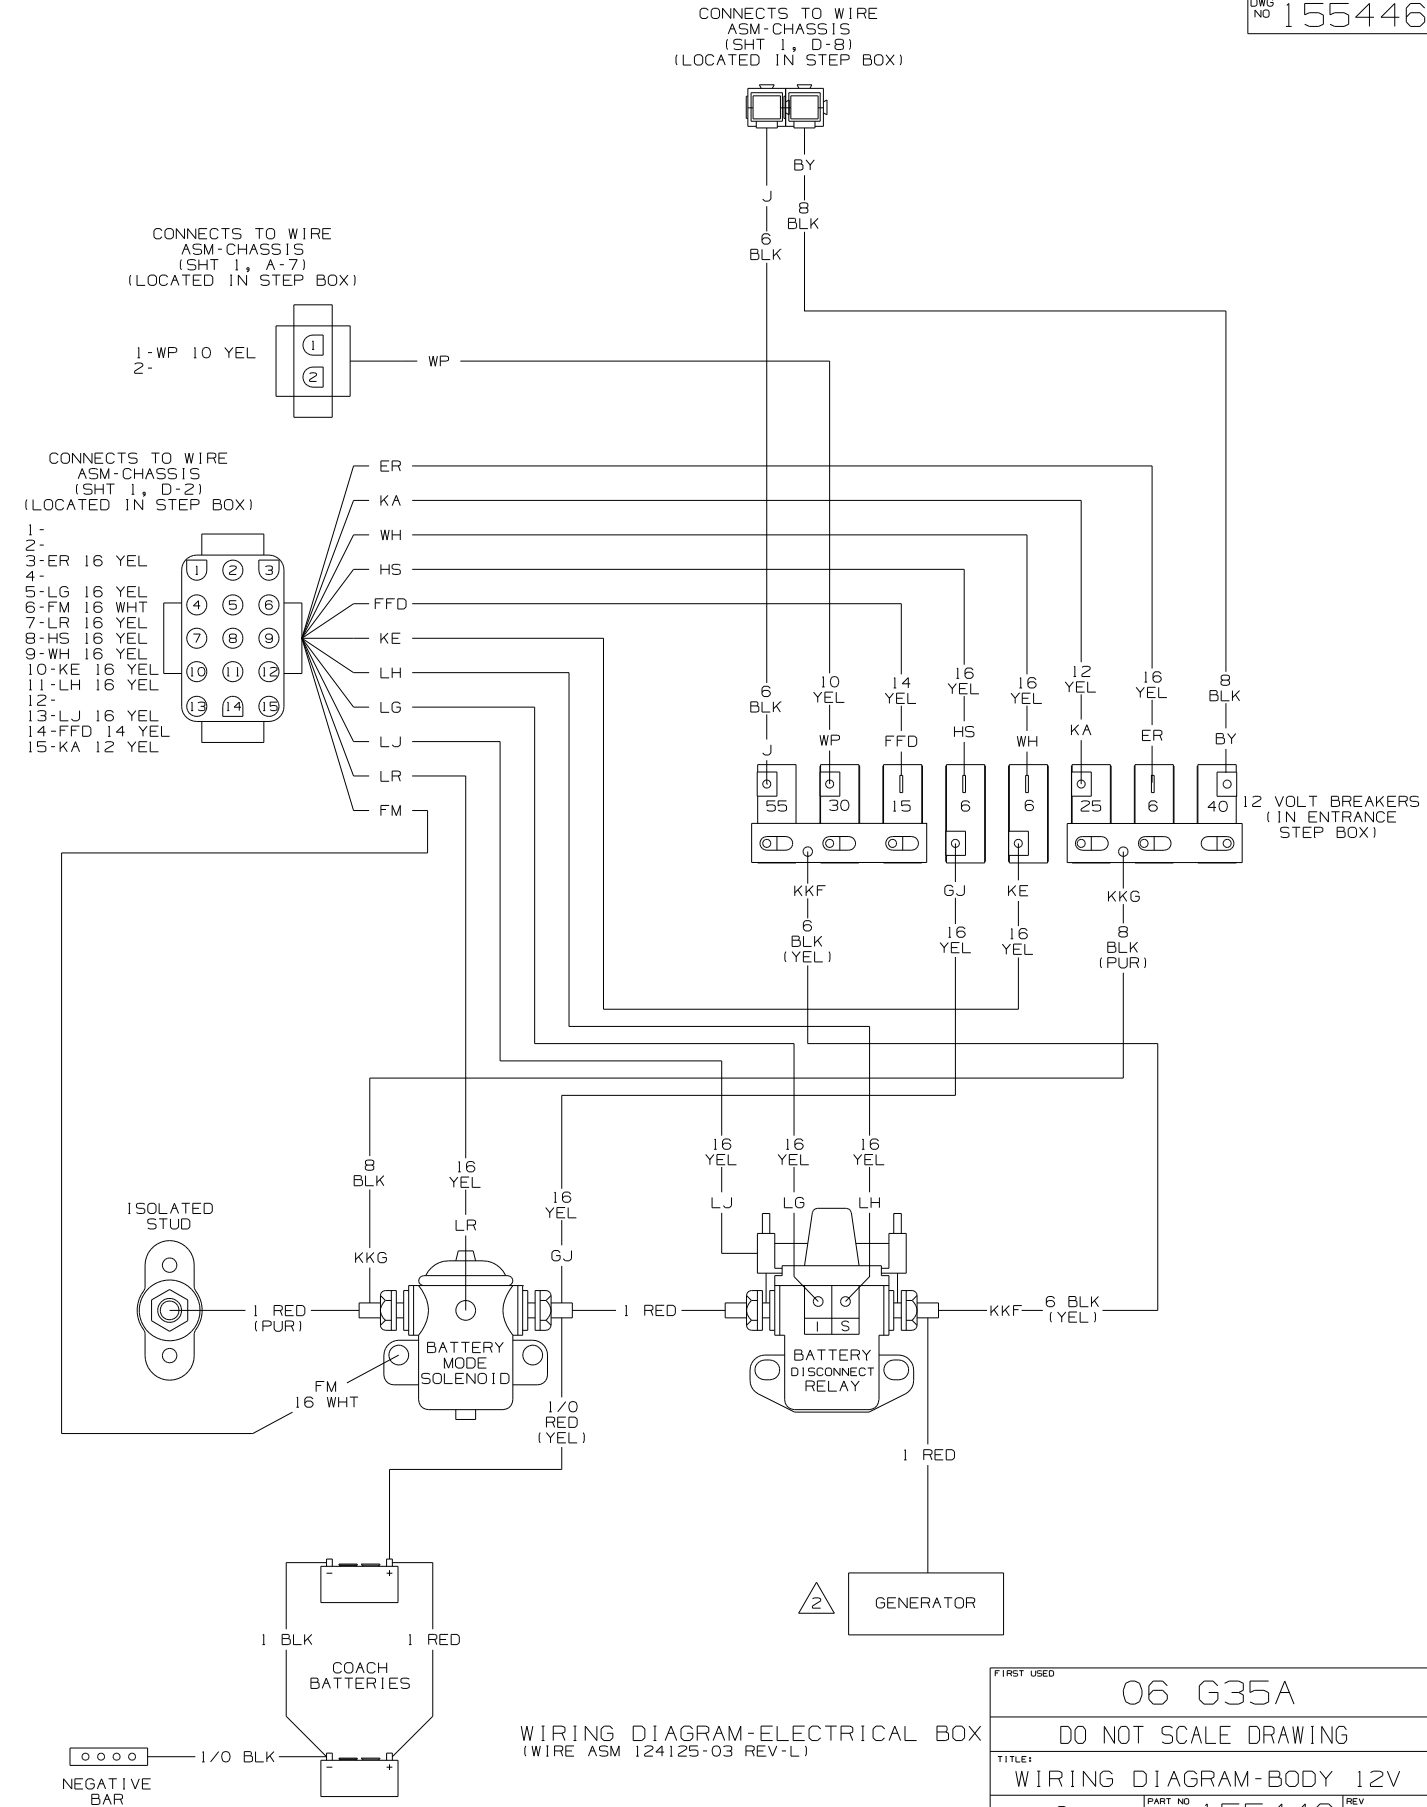


WIRING DIAGRAM-ELECTRICAL BOX  
(WIRE ASM 124125-03 REV-L)

NOTES:  
 NOT USED  
 SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.


FIRST USED	06 G35A		
TITLE	DO NOT SCALE DRAWING		
	WIRING DIAGRAM-BODY 12V		
SHEET 6	PART NO	155446	REV

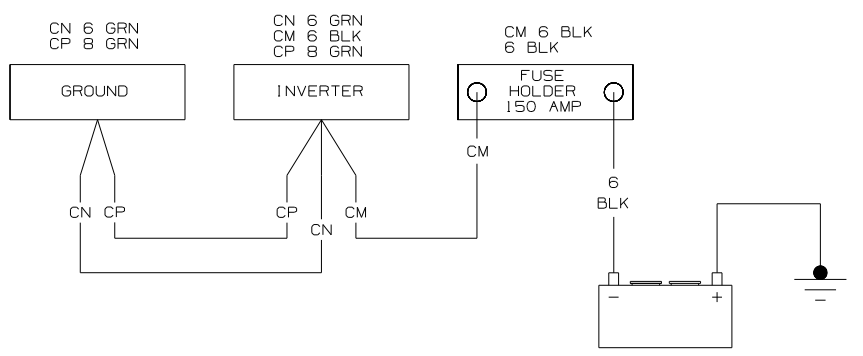

WIRING DIAGRAM-INVERTER  
(WIRE ASM 154845 REV C)

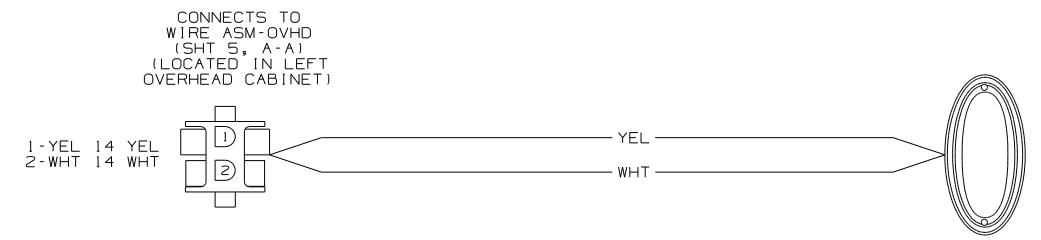

WIRING DIAGRAM-EXTENSION  
(WIRE ASM 149130 REV-C)

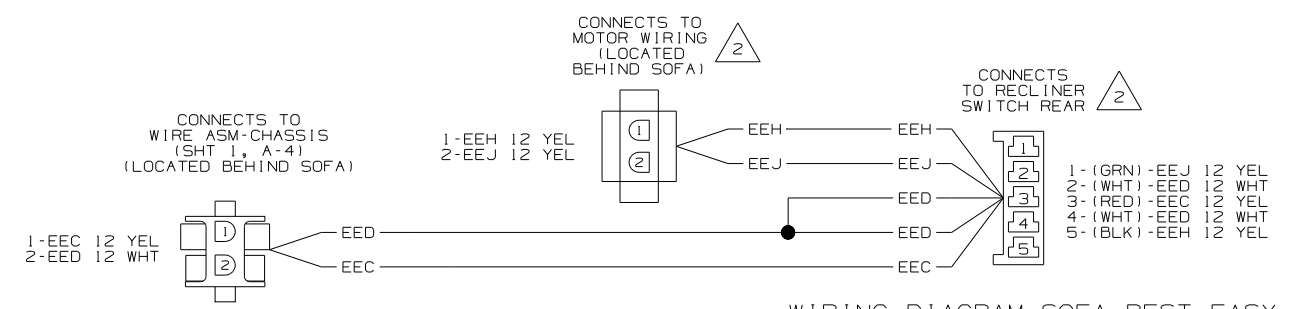

WIRING DIAGRAM-SOFA, REST EASY  
(WIRE ASM 136028 REV-B)

△ SEE MANUFACTURES DIAGRAM FOR ADDITIONAL INFORMATION.

- 1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

NOTES:

FIRST USED	06 G35A	
TITLE:	DO NOT SCALE DRAWING	
	WIRING DIAGRAM-BODY, 12V	
SHEET 6	PART NO	155446 REV