




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION


If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

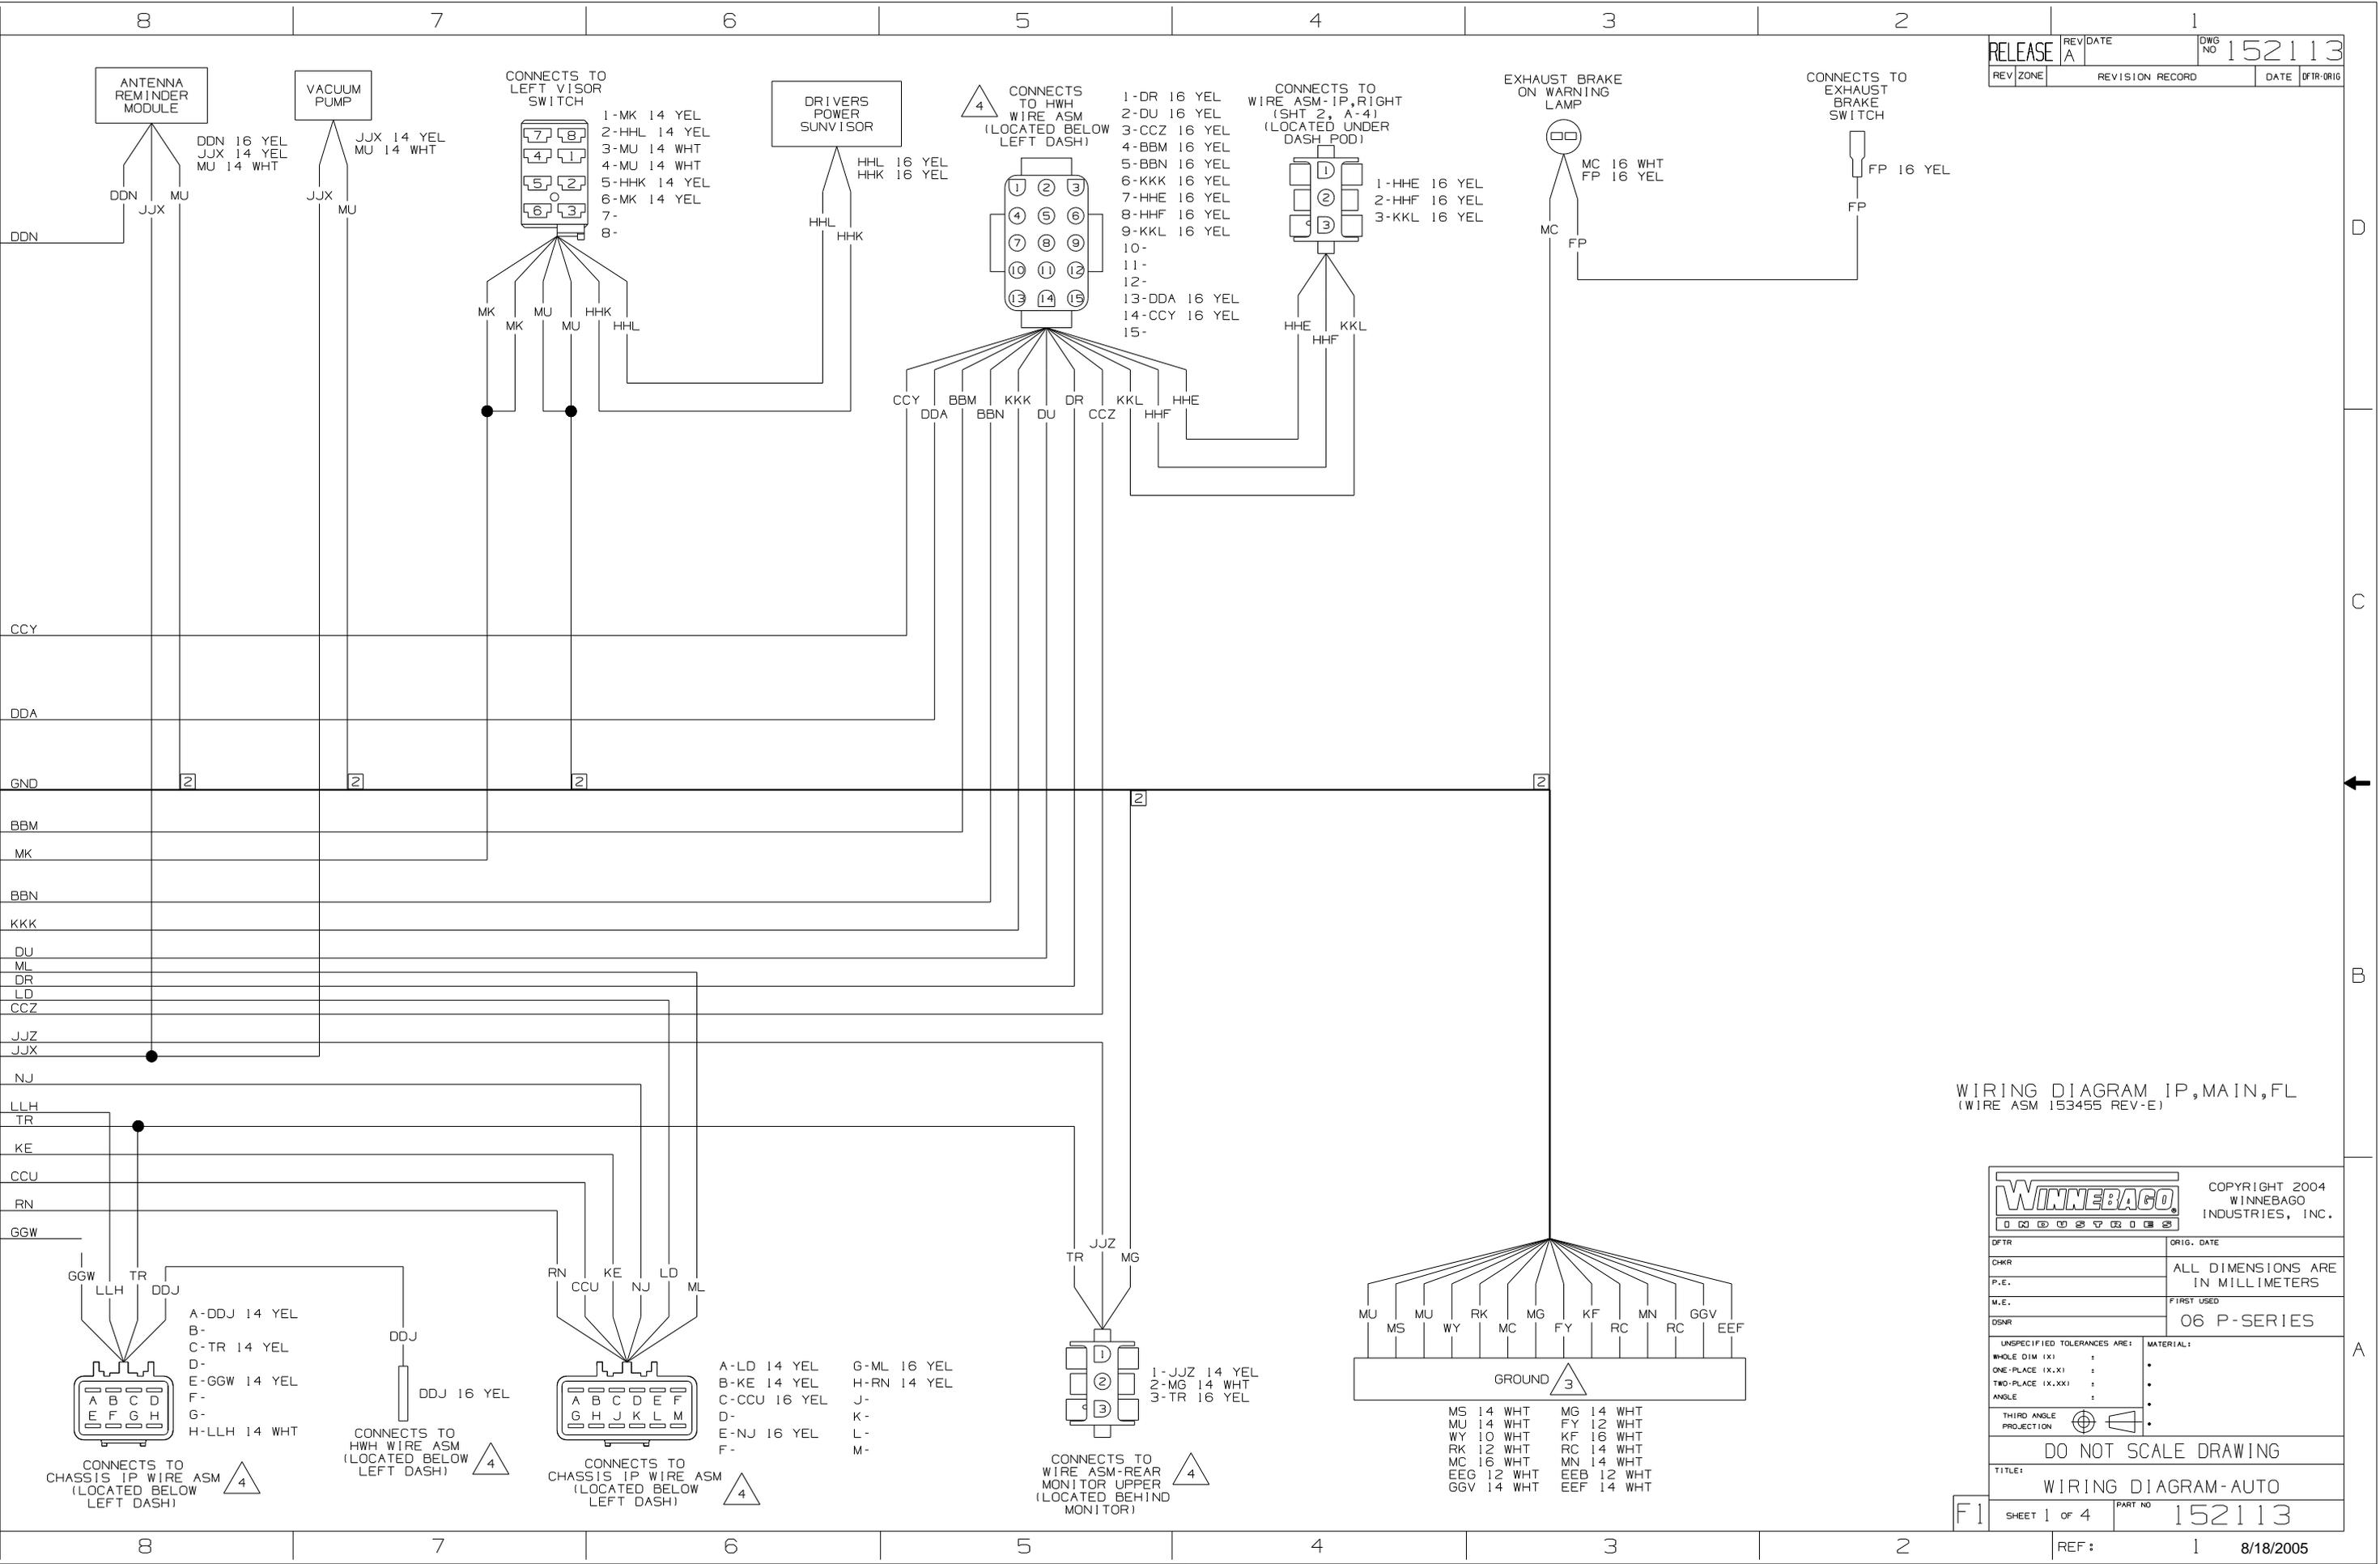



WIRING DIAGRAM IP, MAIN, FL
 (WIRE ASM 153455 REV-E)

WINNEBAGO COPYRIGHT 2004 WINNEBAGO INDUSTRIES, INC.

DFTR	ORIG. DATE
CHR	ALL DIMENSIONS ARE IN MILLIMETERS
P.E.	
M.E.	FIRST USED
DSNR	06 P-SERIES
UNSPECIFIED TOLERANCES ARE:	
WHOLE DIM (X)	:
ONE-PLACE (X.X)	:
TWO-PLACE (X.XX)	:
ANGLE	:
THIRD ANGLE PROJECTION	
DO NOT SCALE DRAWING	
TITLE: WIRING DIAGRAM-AUTO	
SHEET 1 of 4	PART NO 152113
REF:	1 8/18/2005

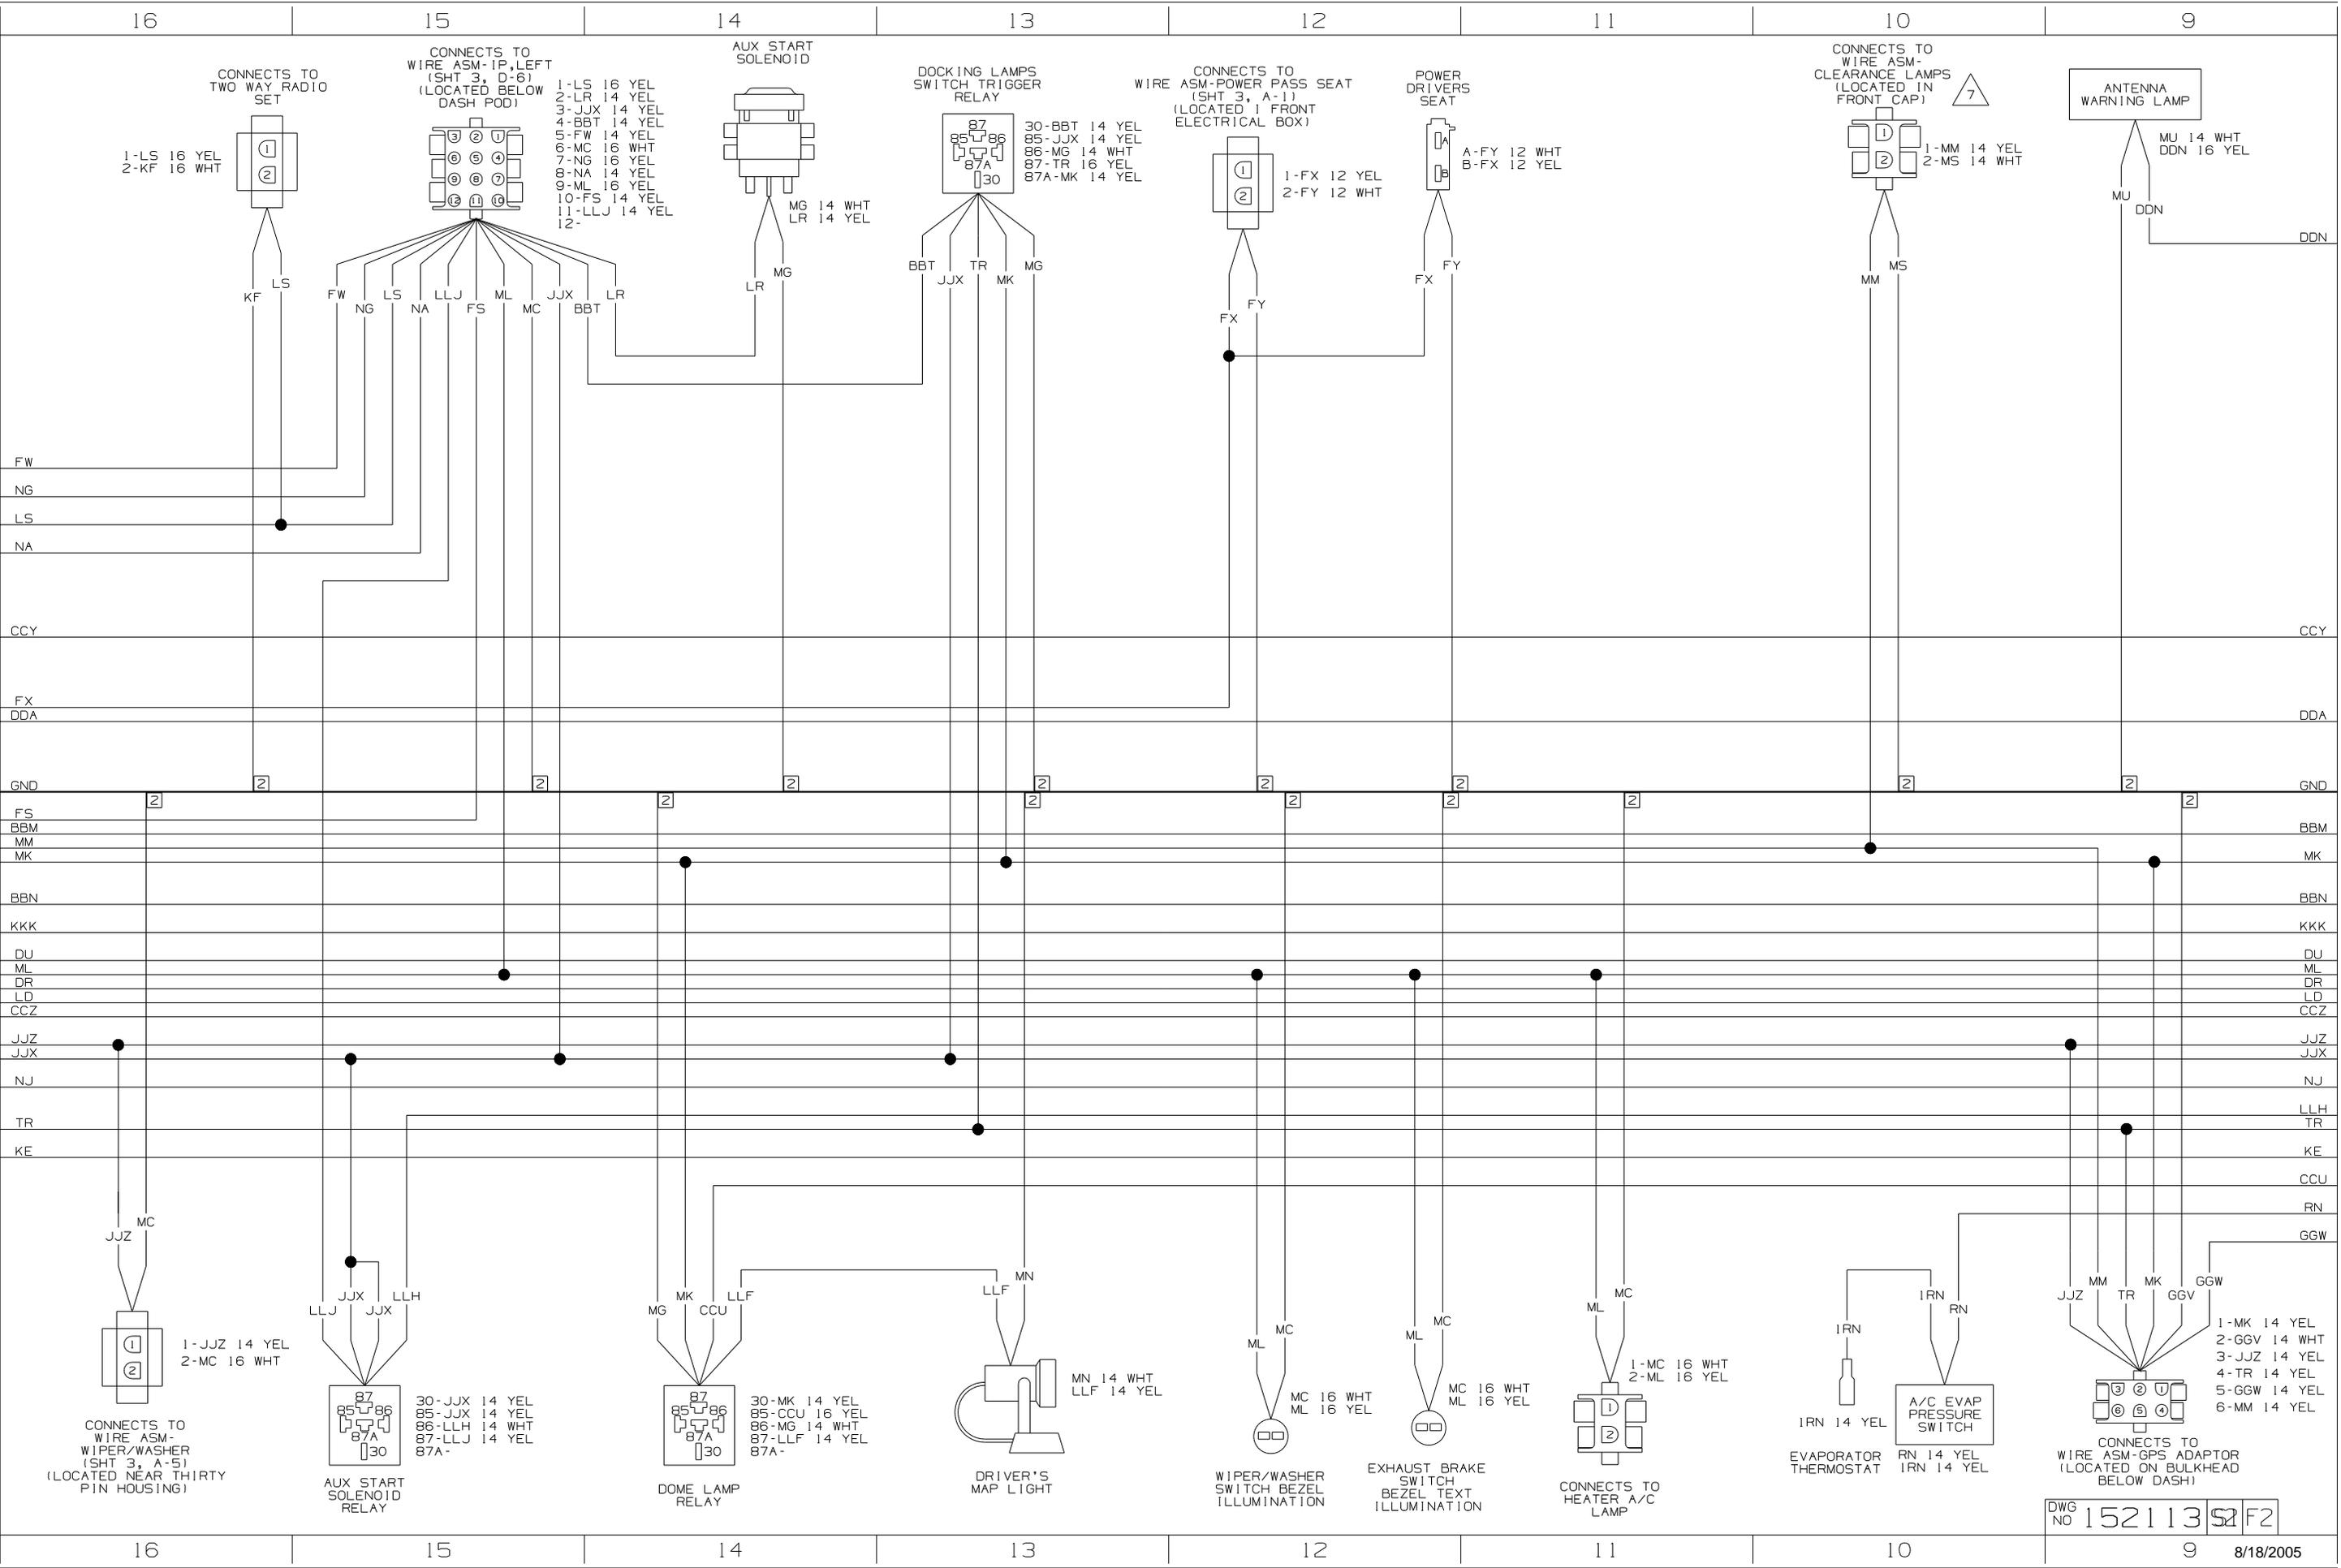

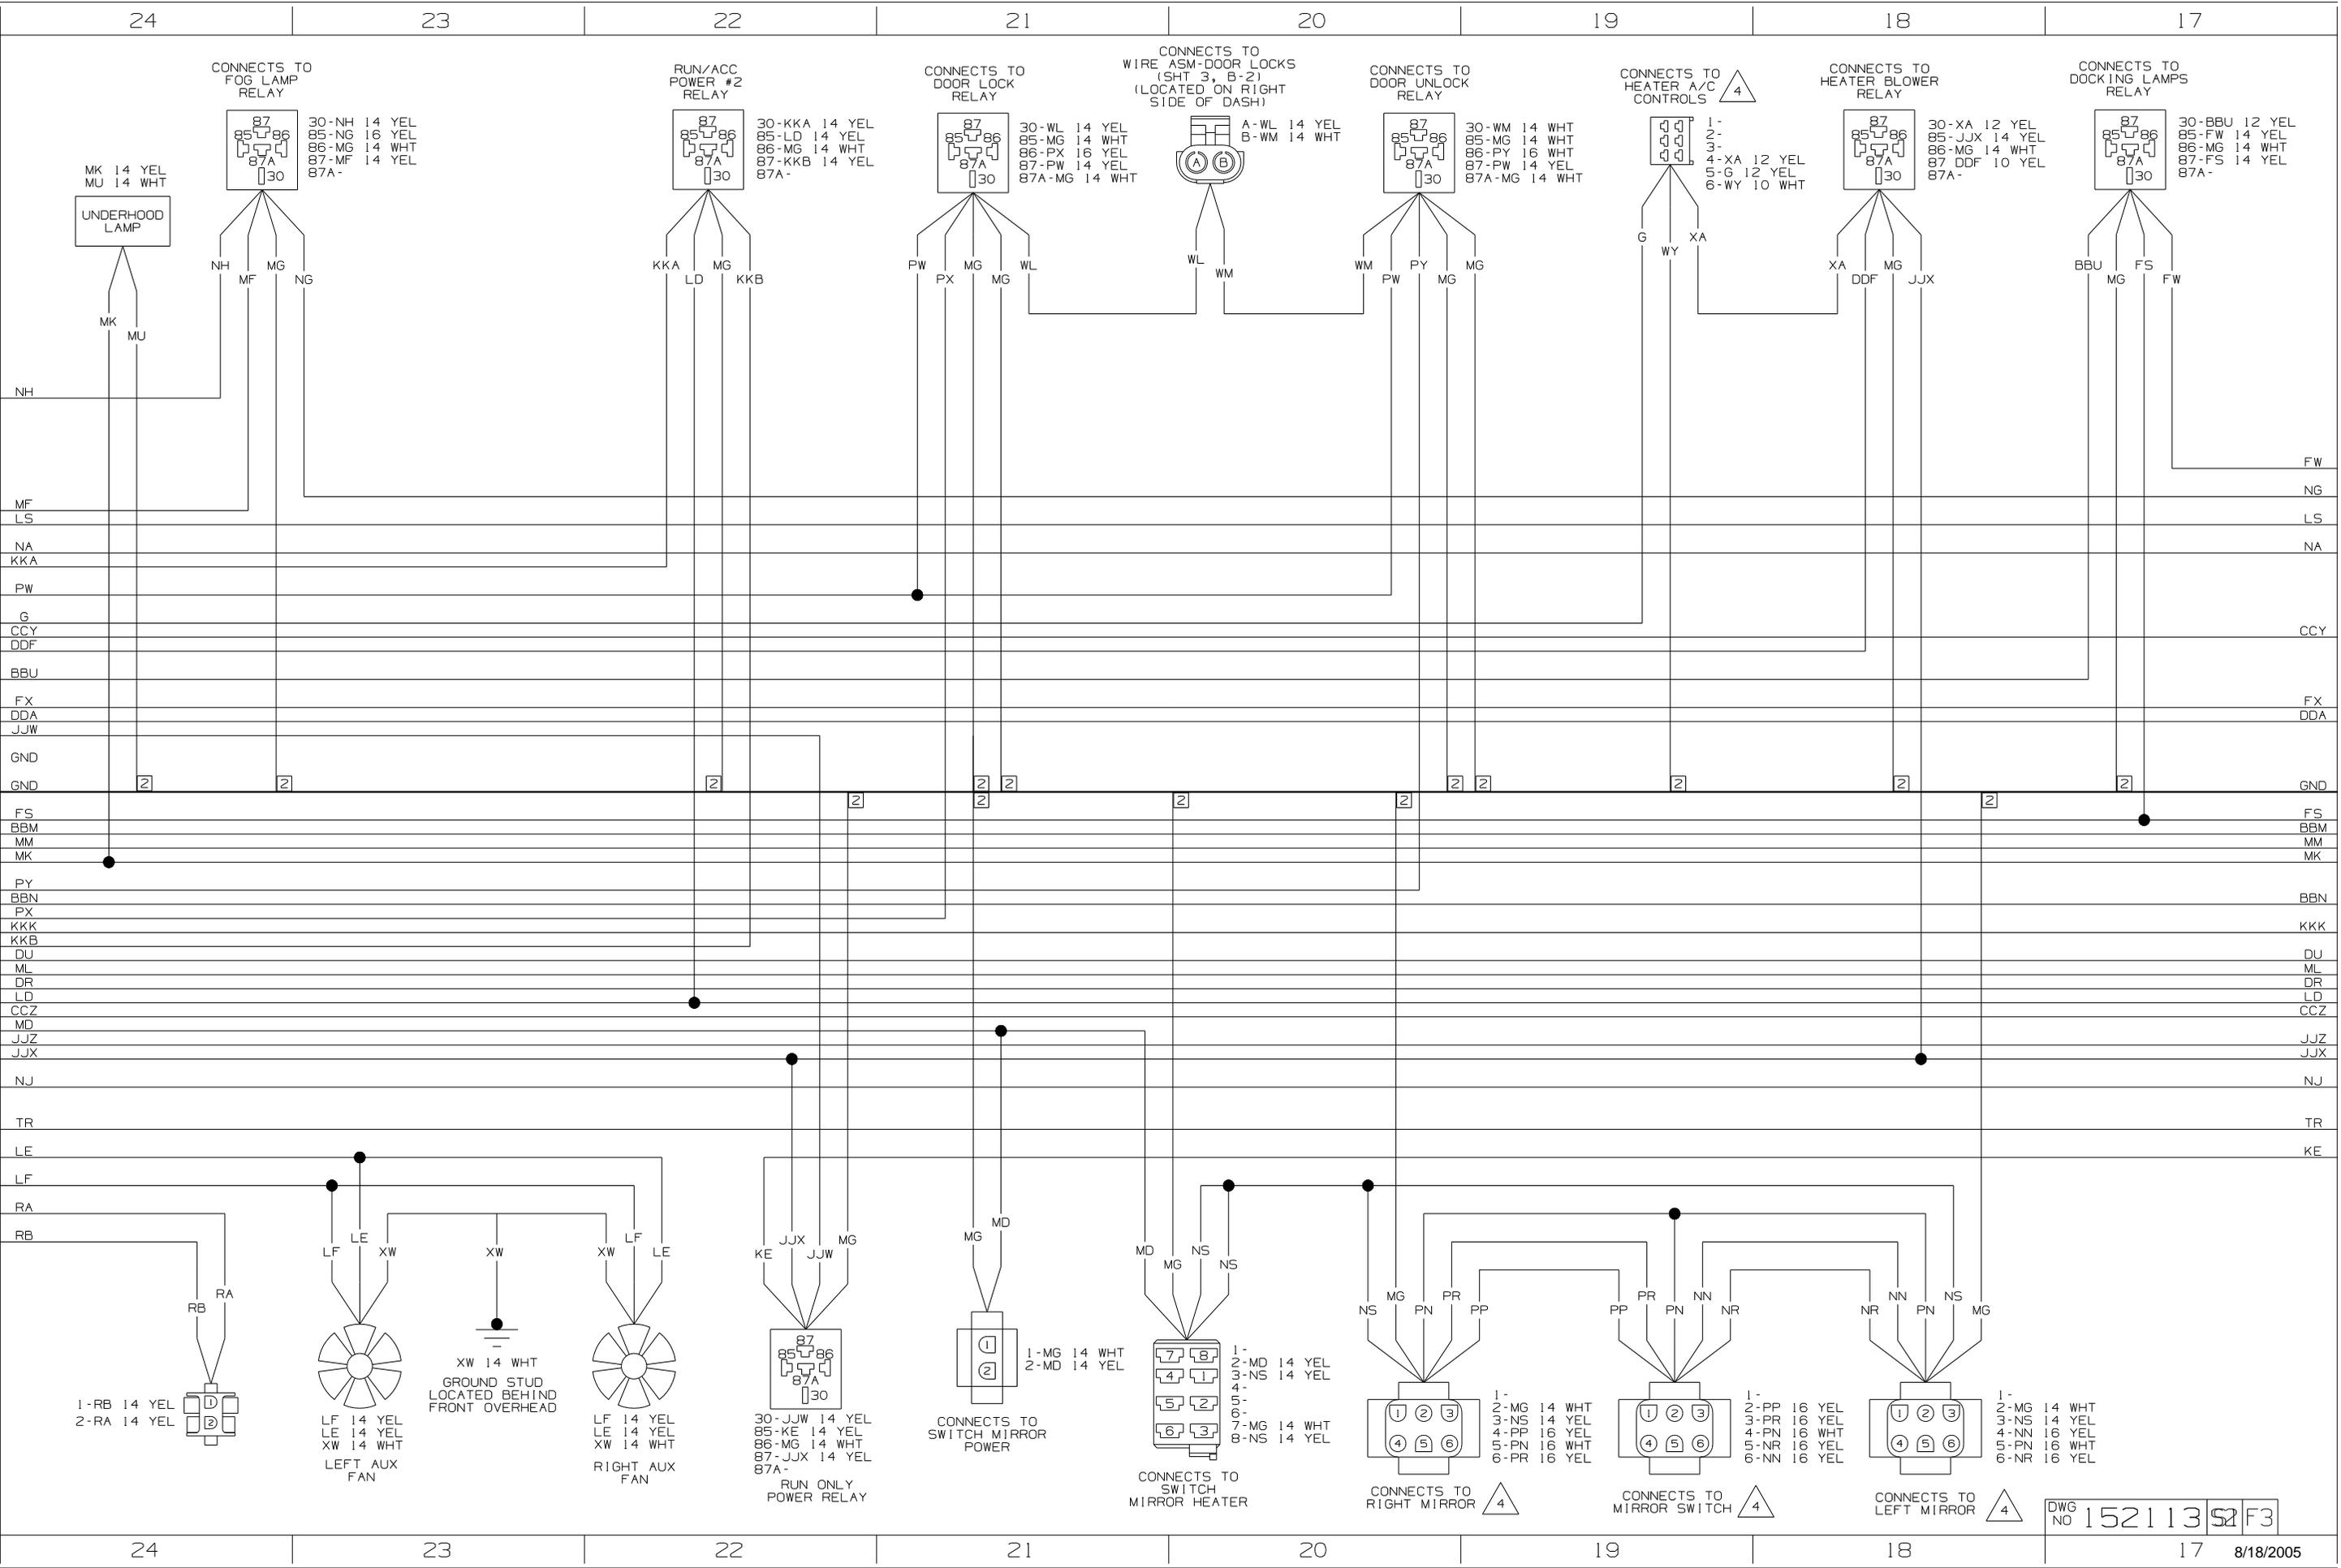

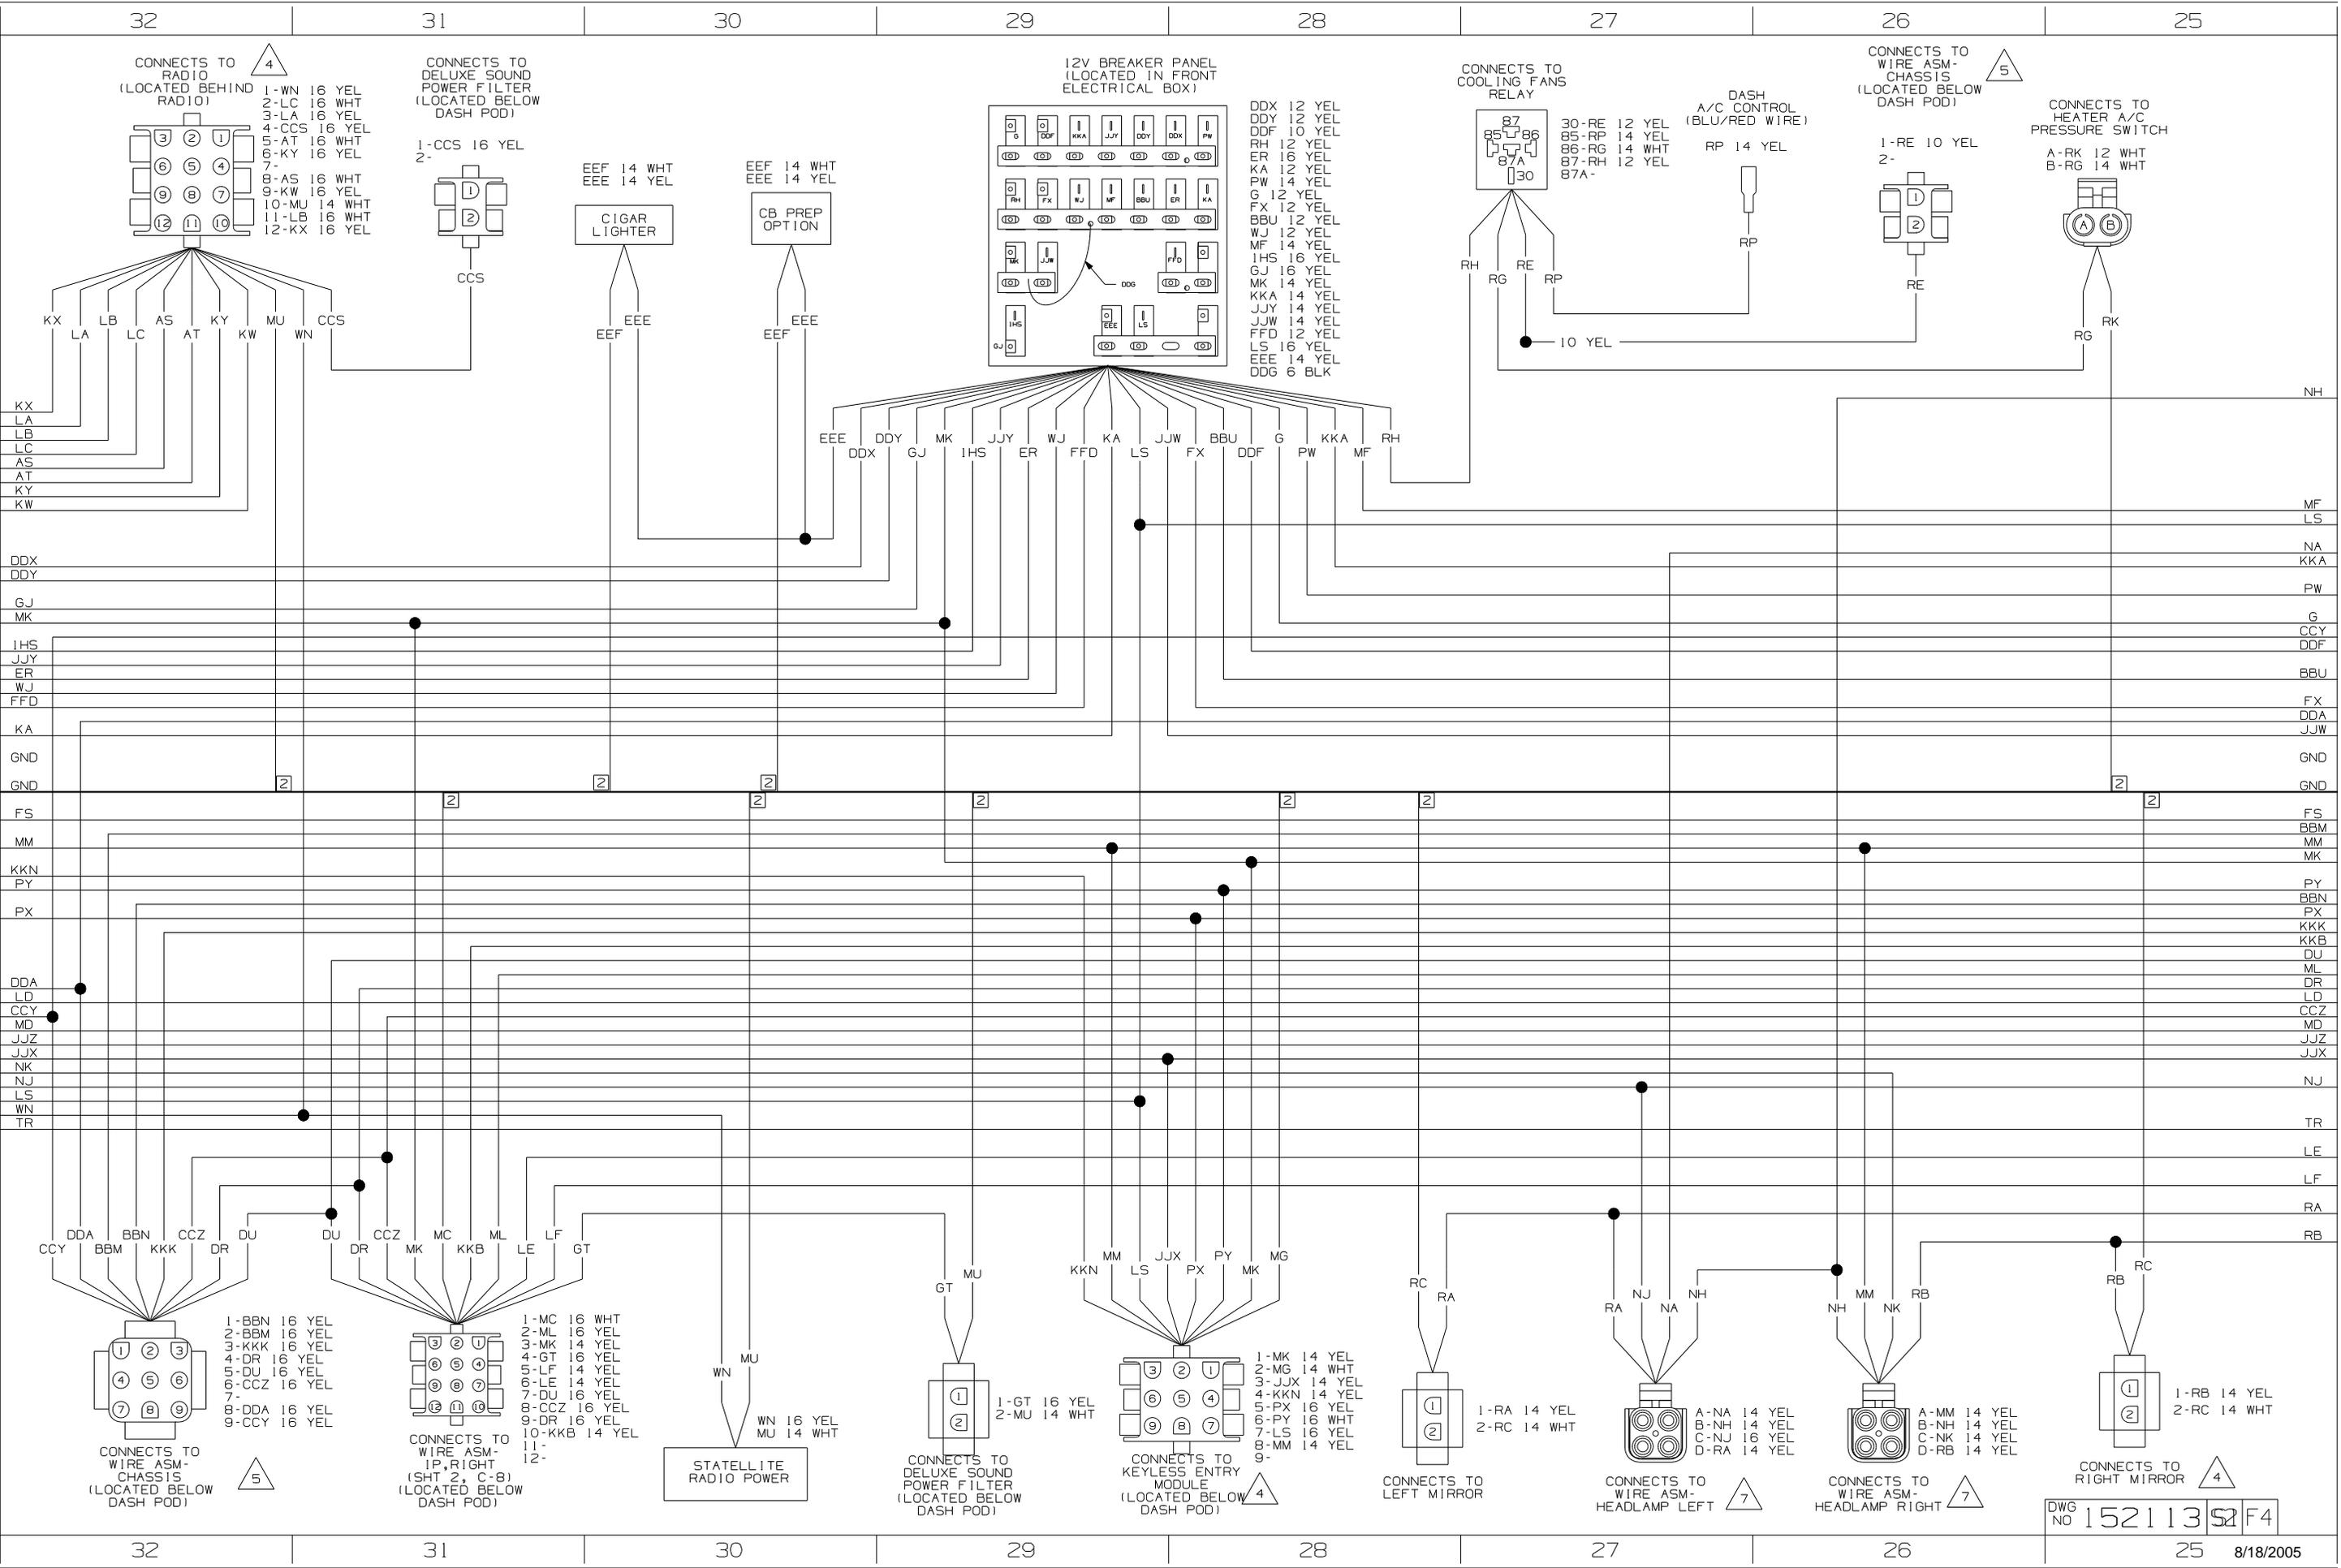

RIGHT COMPT DOOR UNLOCK RELAY
 30-DDU 12 YEL
 85-EEG 12 WHT
 86-EEA 12 WHT
 87-DDX 12 YEL
 87A-EEG 12 WHT

RIGHT COMPT DOOR LOCK RELAY
 30-DDT 12 YEL
 85-EEG 14 WHT
 86-DDZ 12 YEL
 87-DDX 12 YEL
 87A-EEG 12 WHT

LEFT COMPT DOOR UNLOCK RELAY
 30-DDW 12 YEL
 85-EEB 12 WHT
 86-EEA 12 WHT
 87-DDY 12 YEL
 87A-EEB 12 WHT

LEFT COMPT DOOR LOCK RELAY
 30-DDV 12 YEL
 85-EEB 12 WHT
 86-DDZ 14 YEL
 87-DDY 12 YEL
 87A-EEB 12 WHT

CONNECTS TO RIGHT VISOR SWITCH
 1-MK 16 YEL
 2-PPJ 14 YEL
 3-MU 14 WHT
 4-MU 16 WHT
 5-PPK 14 WHT
 6-MK 16 YEL
 7-
 8-


CONNECTS TO DOOR LOCKS SWITCH
 1-PY 16 WHT
 2-MK 14 YEL
 3-PX 16 YEL
 4-
 5-
 6-
 7-
 8-

SPEAKER SWITCH
 1-KW 16 YEL
 2-KY 16 YEL
 3-KX 16 YEL
 4-LA 16 YEL
 5-DP 14 YEL
 6-AS 16 WHT
 7-AT 16 WHT
 8-LB 16 WHT
 9-LC 16 WHT
 10-MU 14 WHT

KEYLESS ENTRY MODULE
 (LOCATED BELOW LEFT DASH)

1-DDZ 12 YEL
 2-EEA 12 WHT

CONNECTS TO WIRE ASM-CHASSIS
 (LOCATED ON FLOOR BELOW LEFT SIDE OF DASH)

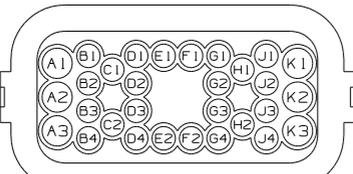

A1-EEA 12 WHT
 A2-EEA 12 WHT
 A3-FS 14 YEL
 B1-DDT 12 YEL
 B2-DDU 12 YEL
 B3-DDV 12 YEL
 B4-DDW 12 YEL
 C1-DDZ 12 YEL
 C2-HHM 16 YEL
 D1-LL 16 WHT
 D2-LM 18 WHT
 D3-LN 18 WHT
 D4-HU 16 YEL
 E1-MM 14 YEL
 E2-IHS 16 YEL

F1-MK 14 YEL
 F2-LP 16 YEL
 G1-PPJ 16 YEL
 G2-PPK 16 YEL
 G3-
 G4-
 H1-HHN 16 YEL
 H2-PX 16 YEL
 J1-KKN 14 YEL
 J2-JJZ 14 YEL
 J3-ER 16 YEL
 J4-PY 16 WHT
 K1-FFD 12 YEL
 K2-KA 12 YEL
 K3-

FRONT DELUXE SOUND SUBWOOFER
 AAT 16 YEL
 AAU 16 WHT

- 7. SEE WIRING DIAGRAM-AUTO LAMPS FOR ADDITIONAL INFORMATION.
- 6. SEE WIRING INSTALLATION-FRONT END FOR HOUSING AND COMPONENT LOCATION.
- 5. SEE WIRING DIAGRAM-BODY, 12V FOR ADDITIONAL INFORMATION.
- 4. SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.
- 3. GROUNDS ARE SHOWN AS A SINGLE LINE FOR EASE IN TRACING. EACH GROUND CIRCUIT IS SEPERATE IN THE HARNESS.
- 2. NOT A SPLICE POINT. INDICATES ENTRY INTO WIRING HARNESS.
- 1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

1-AAT 16 YEL
 2-AAU 16 WHT

CONNECTS TO WIRE ASM-ROOF

30-JJY 14 YEL
 85-LD 14 YEL
 88-MG 14 WHT
 87-JJZ 14 YEL
 87A-

RUN/ACC POWER #1 RELAY

30-WJ 12 YEL
 85-JJZ 14 YEL
 86-MG 14 WHT
 87-MD 14 YEL
 87A-

CONNECTS TO POWER MIRRORS RELAY

1-JJX 14 YEL
 2-
 3-JJZ 14 YEL

CONNECTS TO HWH WIRE ASM-WARNING BUZZER/LAMP

1-MK 14 YEL
 2-JJZ 14 YEL
 3-MM 14 YEL
 4-MC 16 WHT

CONNECTS TO COMPASS DIGITAL

1-NK 14 YEL
 2-NJ 16 YEL
 3-LJ 16 YEL
 4-WN 16 YEL
 5-LS 16 YEL
 6-LL 16 WHT
 7-LM 16 WHT
 8-LN 16 WHT
 9-HU 16 YEL
 10-KF 16 WHT
 11-LH 16 YEL
 12-LG 16 YEL
 13-CCY 16 YEL
 14-JJZ 14 YEL
 15-DDA 16 YEL


CONNECTS TO WIRE ASM-IP RIGHT (SHT 2, B-8)

LG 16 YEL
 LH 16 YEL
 LJ 16 YEL
 GJ 16 YEL

BATTERY DISCONNECT RELAY
 (LOCATED IN FRONT ELECTRICAL BOX)

1-JJX 14 YEL
 2-MU 14 WHT
 3-TR 16 YEL
 4-LP 16 YEL
 5-MK 14 YEL
 6-

CONNECTS TO WIRE ASM-COMPUTER, TRIP






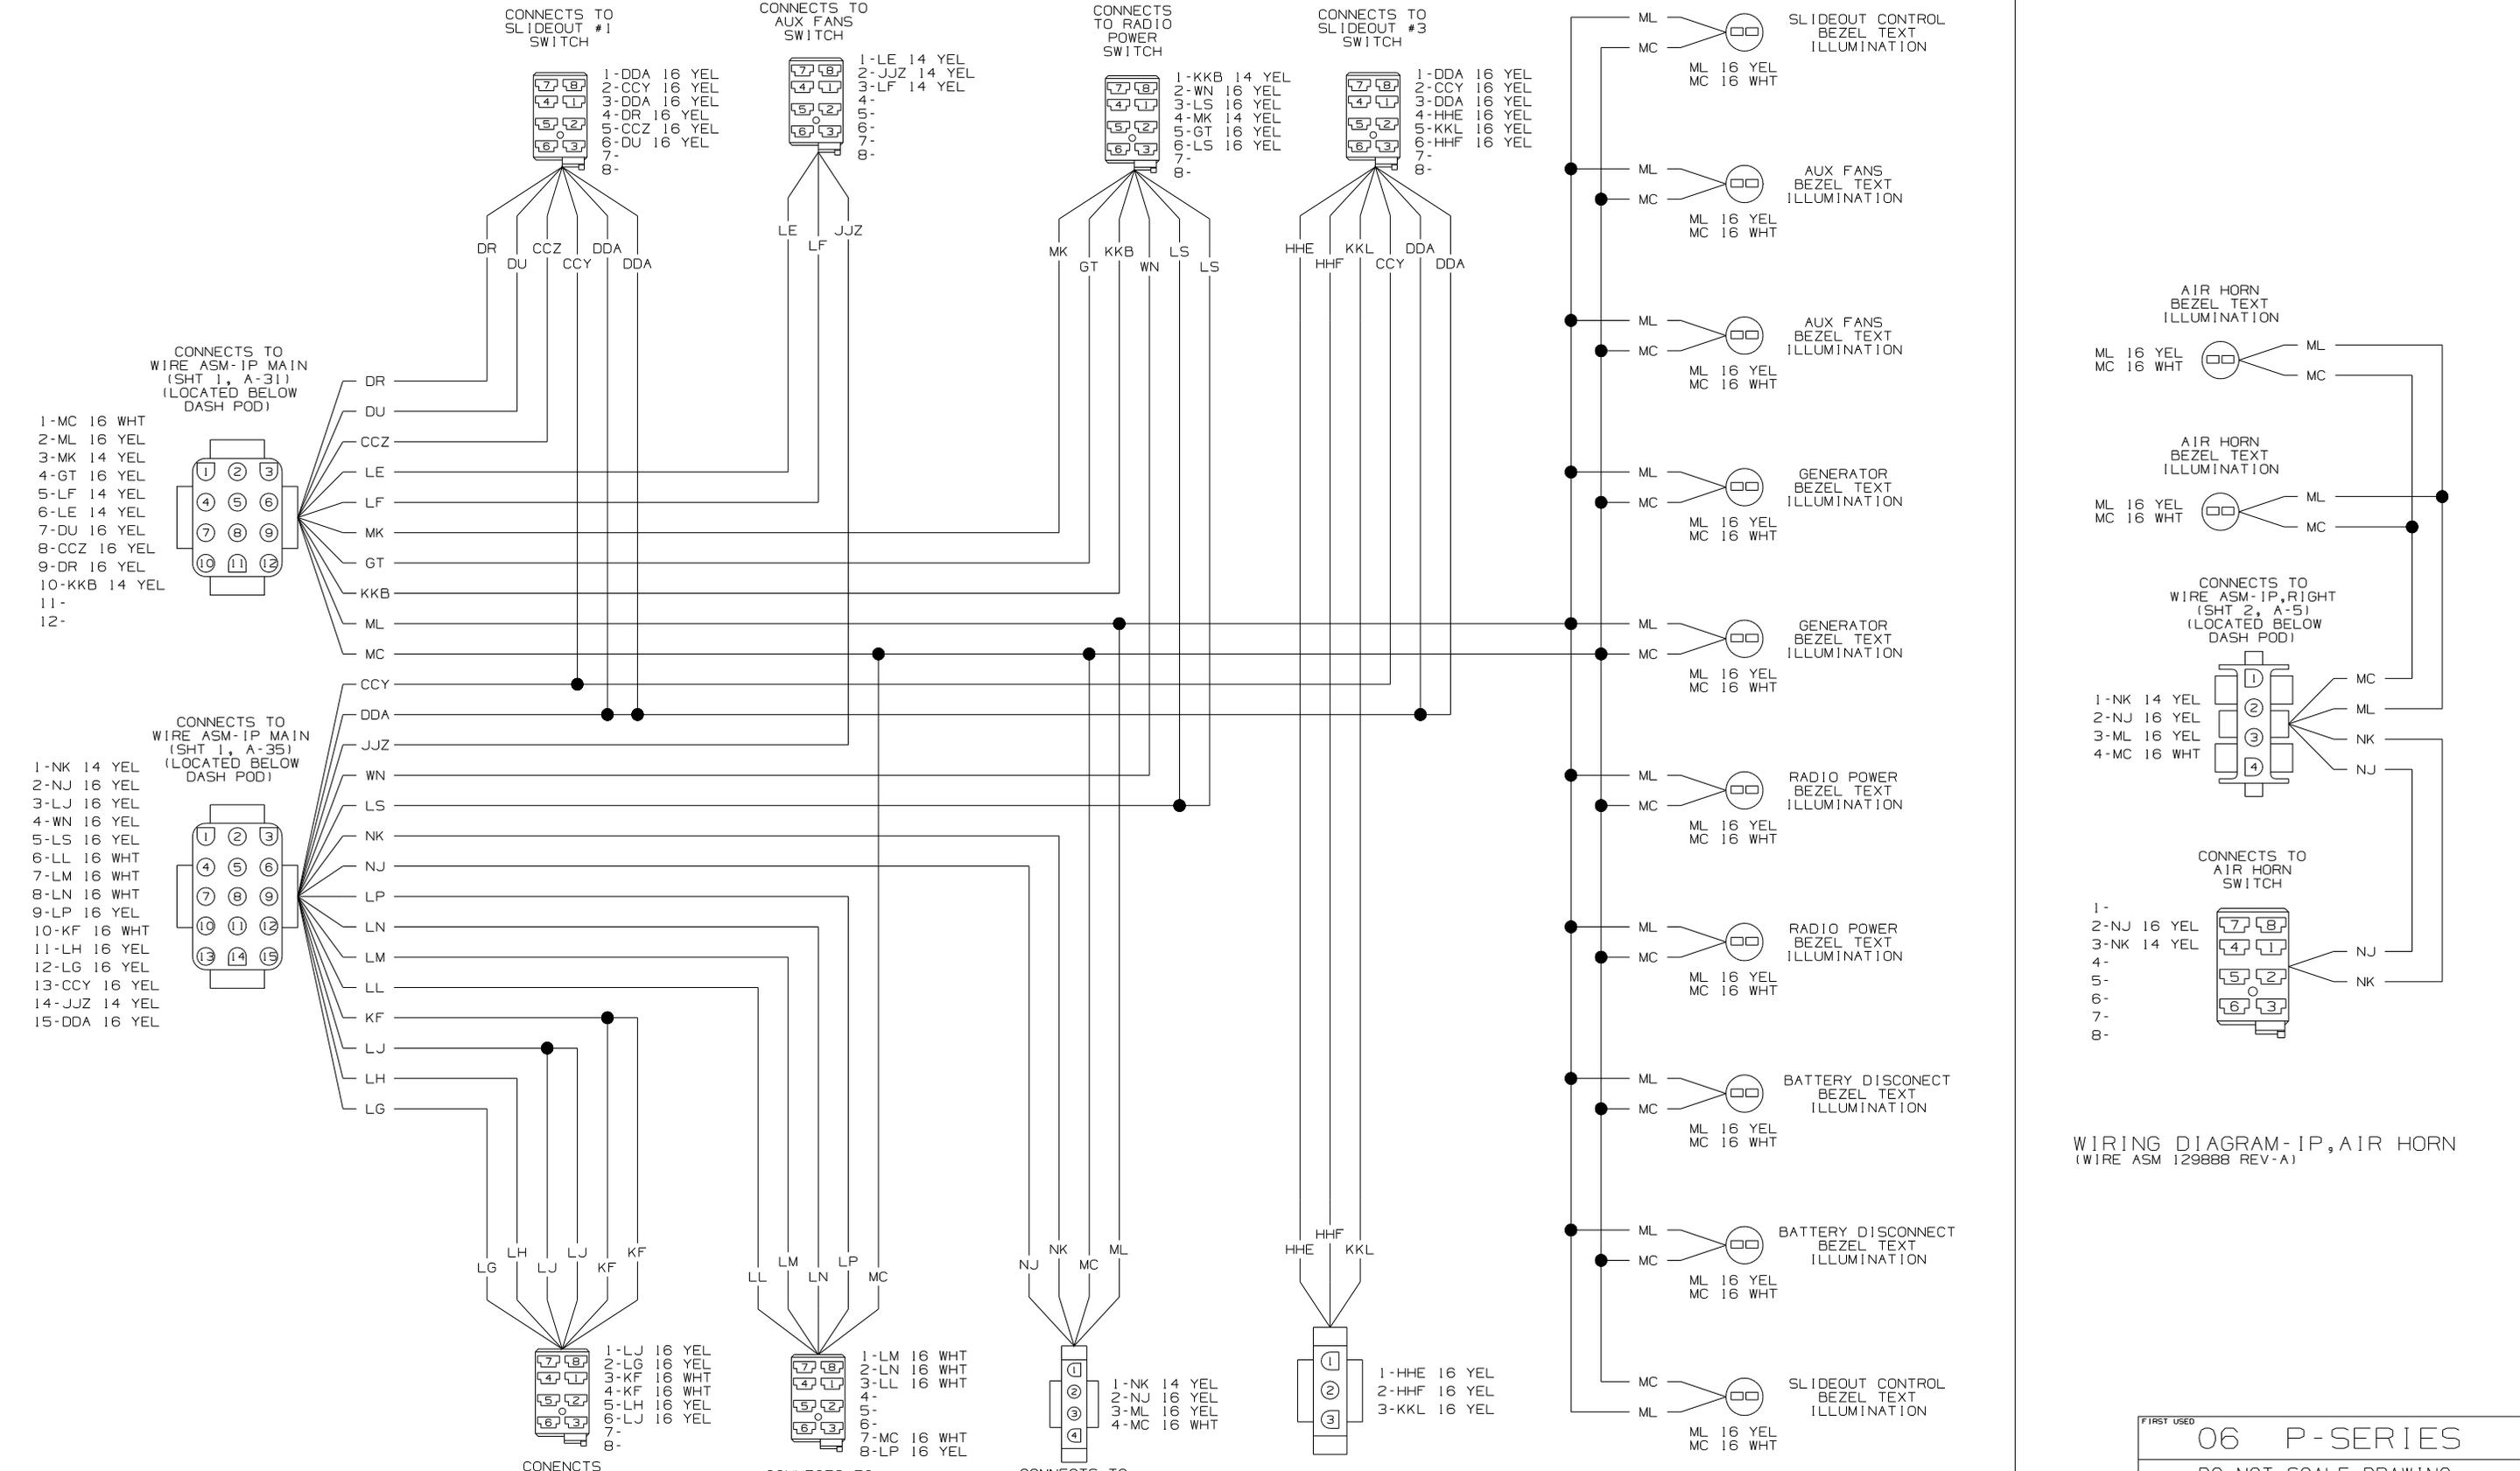



NOTES:
1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

WIRING DIAGRAM-IP, AIR HORN (WIRE ASM 129888 REV-A)

WIRING DIAGRAM-IP, RIGHT (WIRE ASM 145405 REV-D)

FIRST USED		06 P-SERIES	
DO NOT SCALE DRAWING			
TITLE: WIRING DIAGRAM-AUTO			
SHEET 2	PART NO		152113

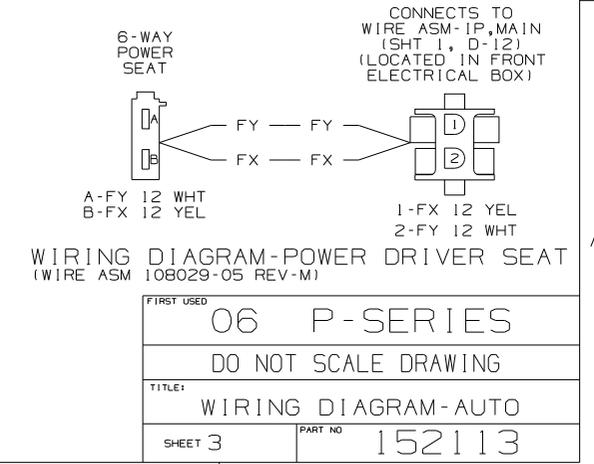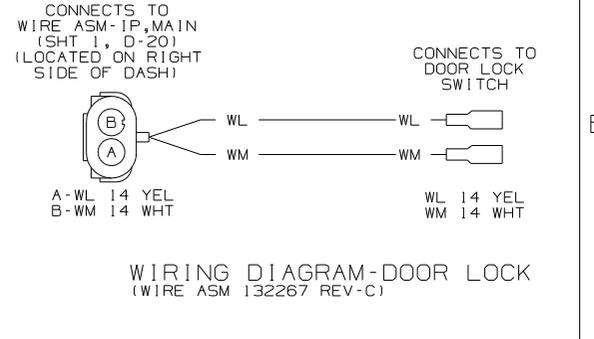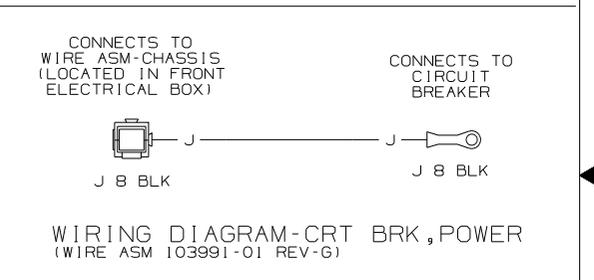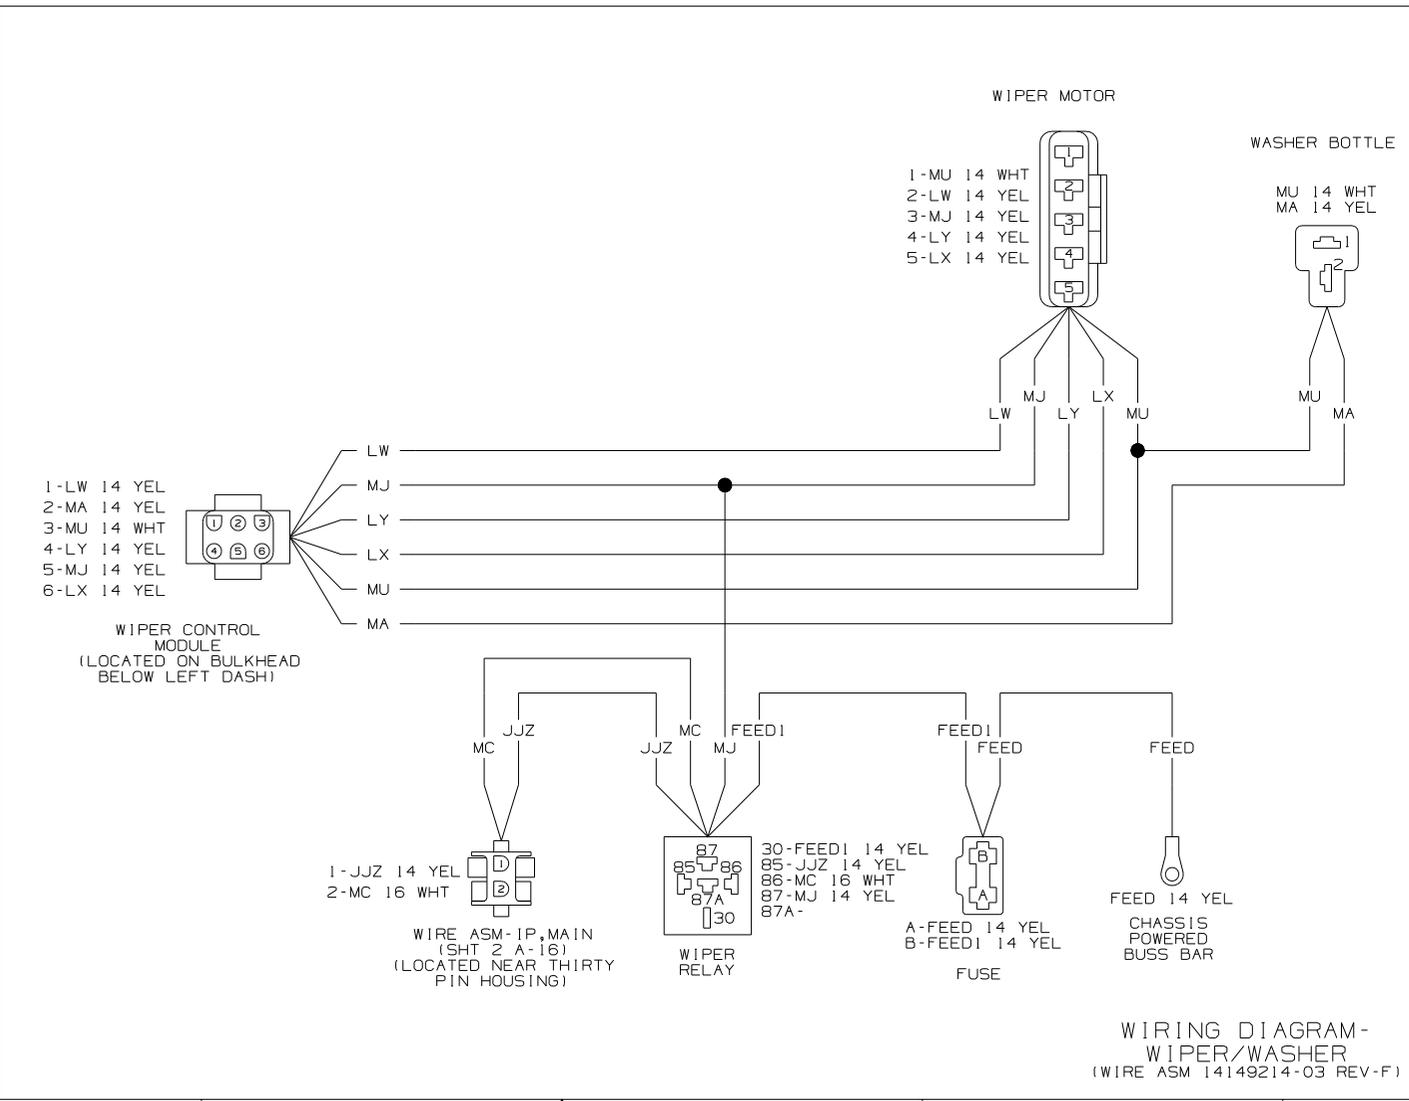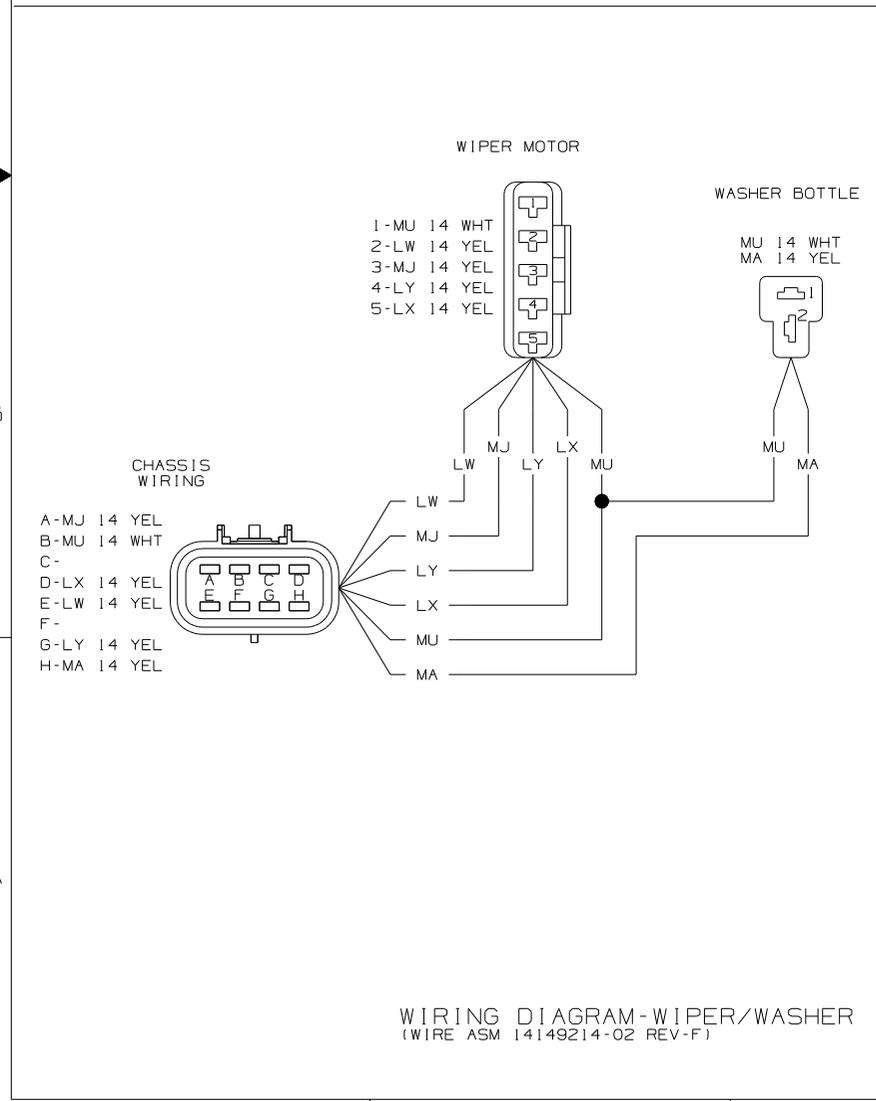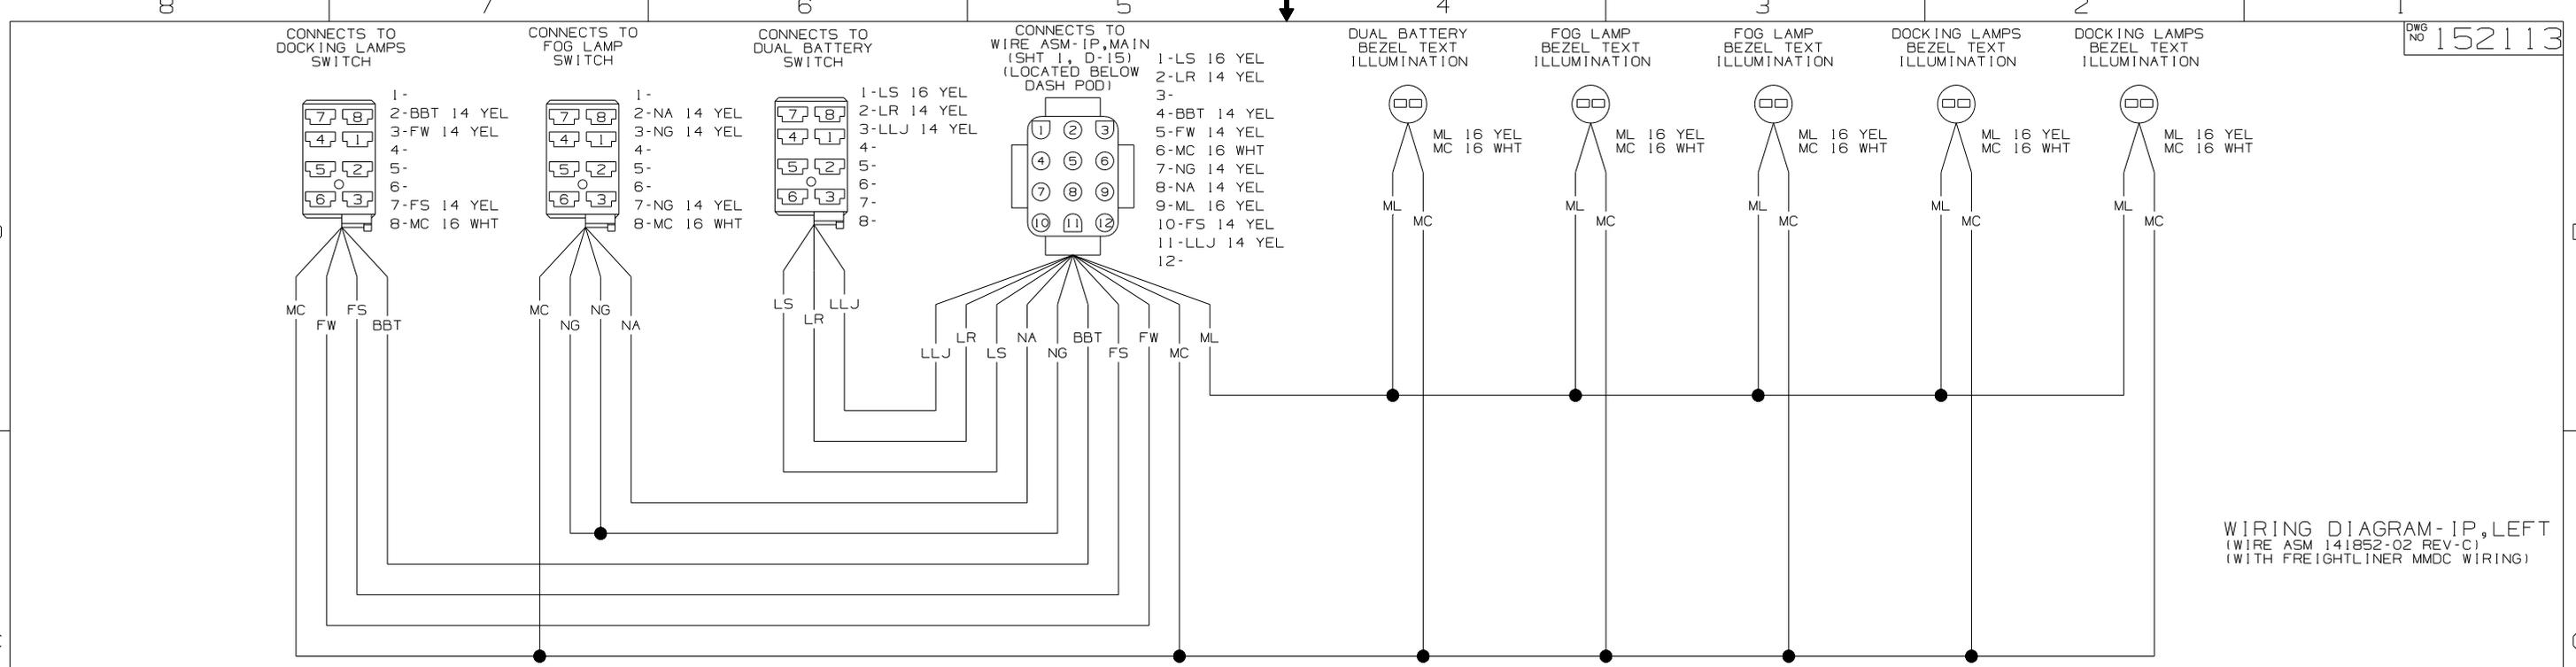

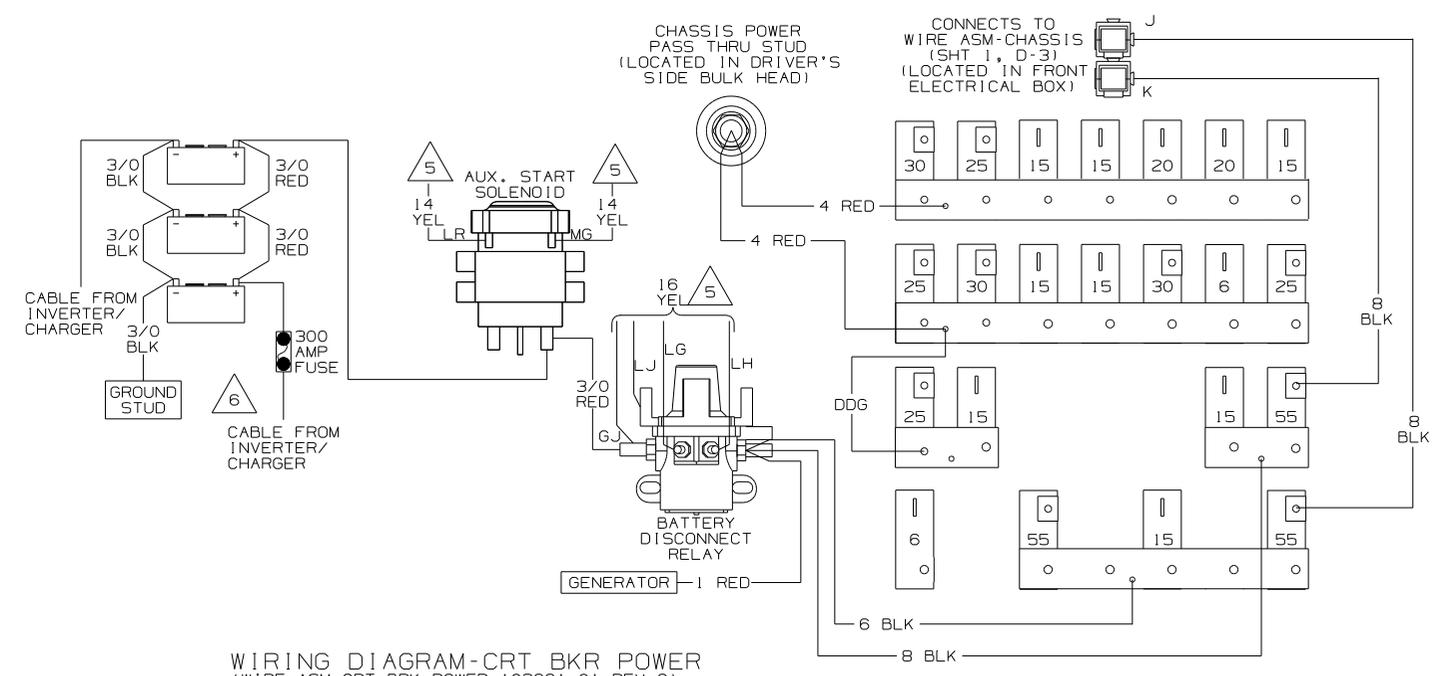

WIRING DIAGRAM-CRT BKR POWER
 (WIRE ASM CRT BRK,POWER 103991-01 REV G)
 (WIRE ASM COACH BKR FEED 103752-06-000 REV E)

NOTES:
 1 SEE WIRING DIAGRAM-BODY,12V FOR ADDITIONAL INFORMATION

FIRST USED	06 P-SERIES
TITLE	DO NOT SCALE DRAWING
SHEET 4	PART NO 152113
1 8/18/2005	