





**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

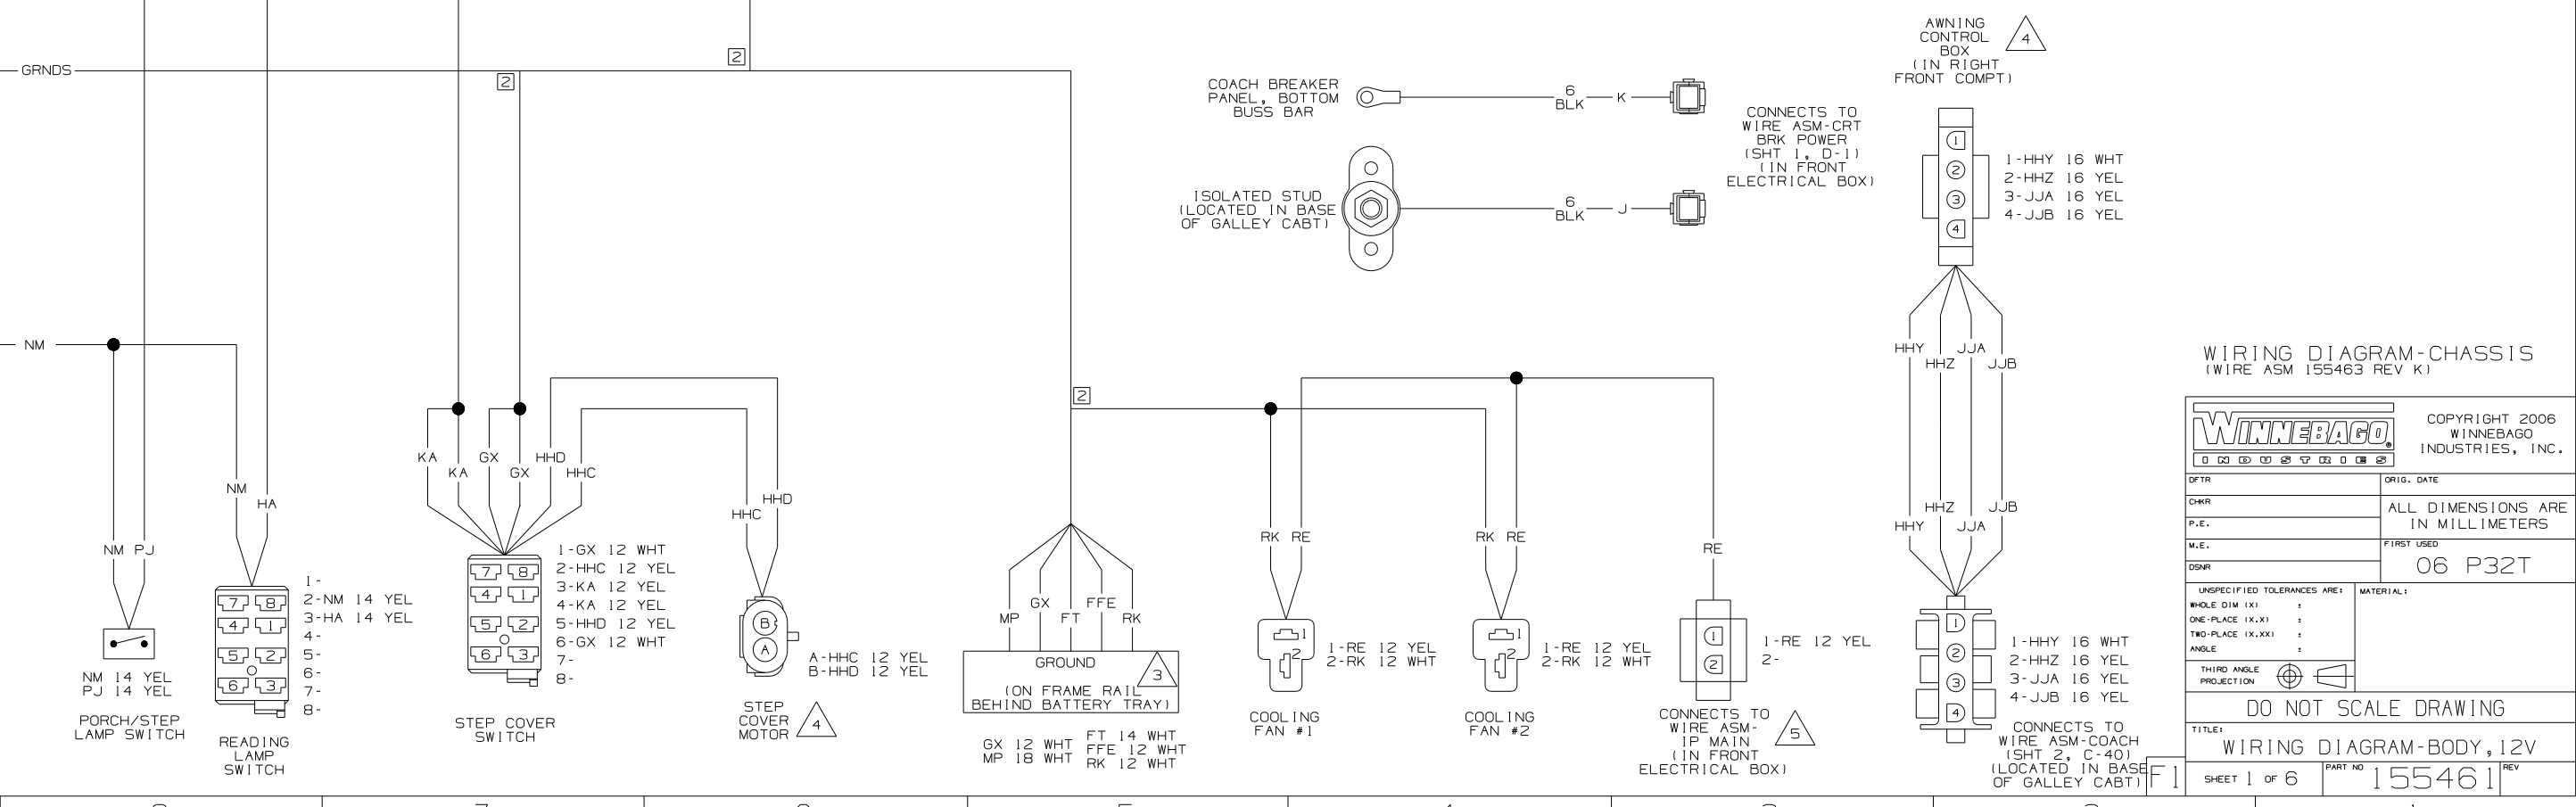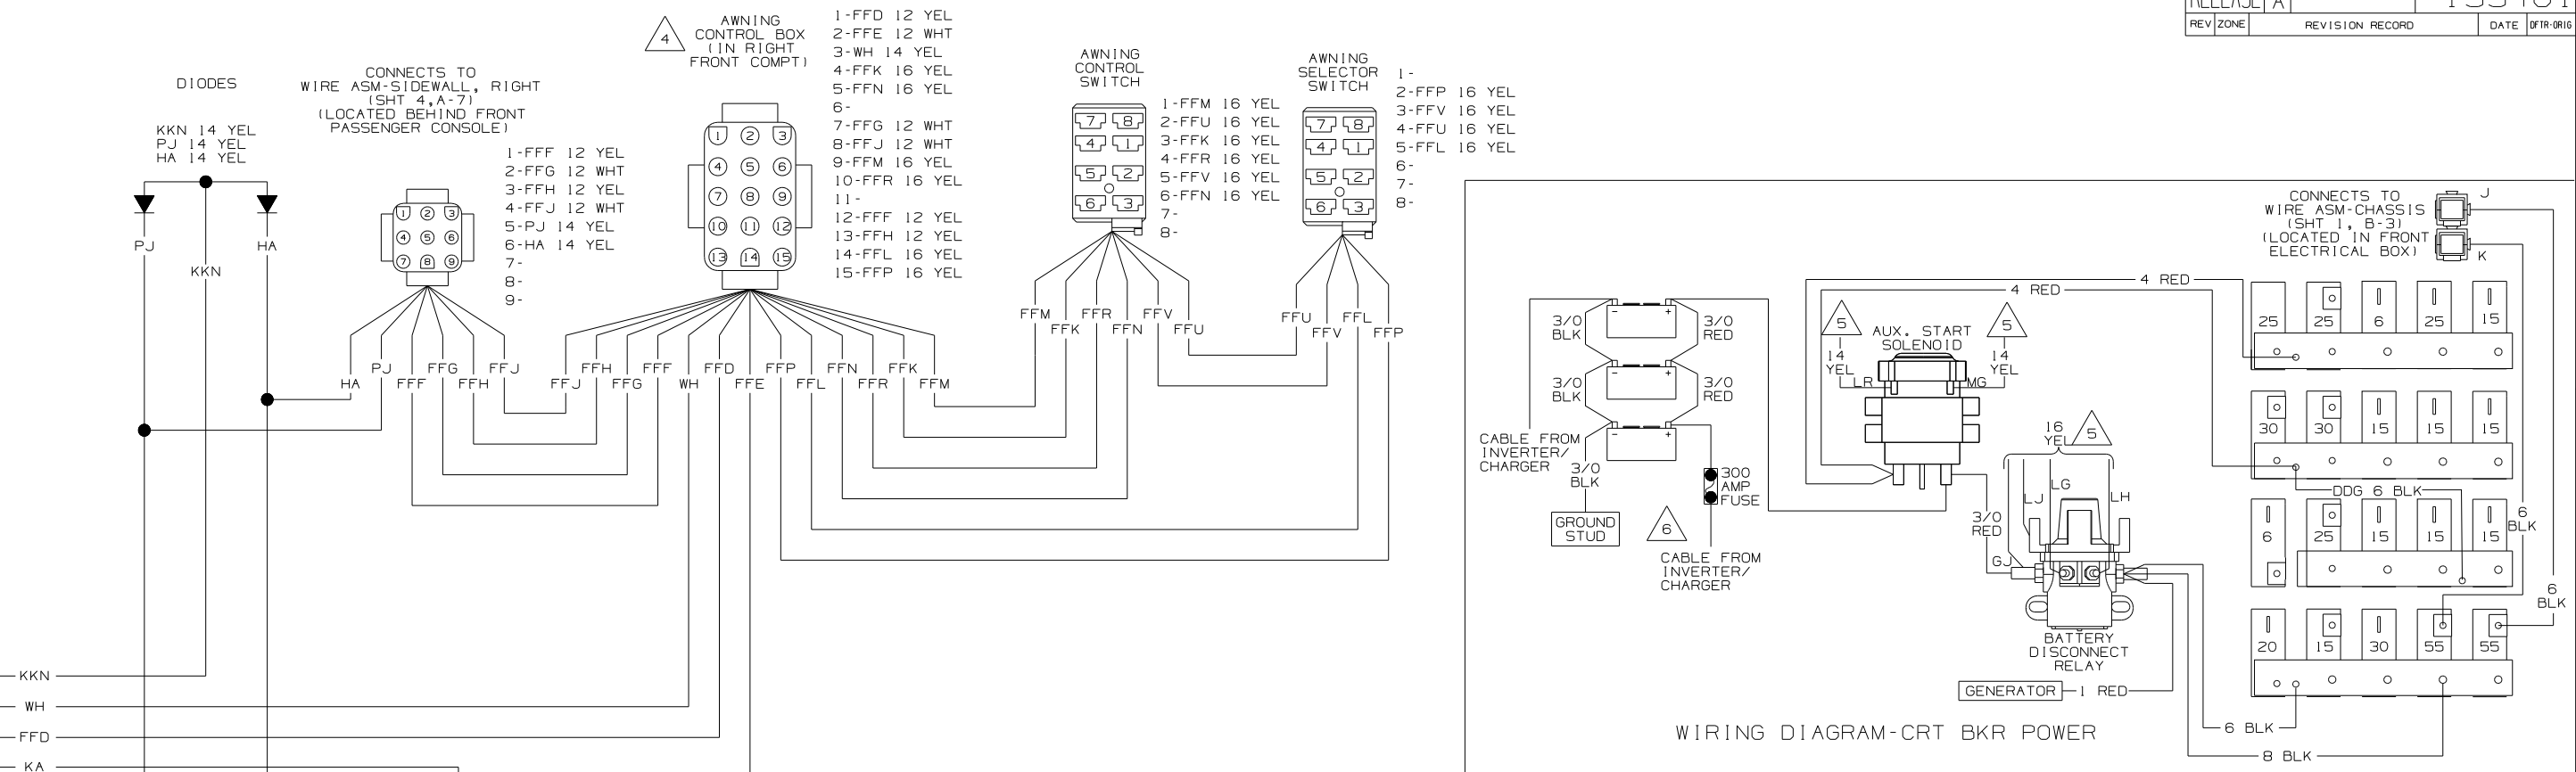

**WINNEBAGO** COPYRIGHT 2006 WINNEBAGO INDUSTRIES, INC.

DFTR	ORIG. DATE
CHR	ALL DIMENSIONS ARE IN MILLIMETERS
P.E.	M.E.
M.E.	FIRST USED
DSNR	06 P32T

UNSPECIFIED TOLERANCES ARE:

WHOLE DIM (X)	:	MATERIAL:
ONE-PLACE (X.X)	:	
TWO-PLACE (X.XX)	:	
ANGLE	:	






THIRD ANGLE PROJECTION

**DO NOT SCALE DRAWING**



TITLE: WIRING DIAGRAM-BODY, 12V

SHEET 1 of 6 PART NO 155461 REV

- A1- D2-LM 16 WHT G4-
- A2-EEA 12 WHT D3-LN 16 WHT H1-HHN 14 YEL
- A3-FS 14 YEL D4-HU 16 YEL H2-PX 16 YEL
- B1-DDT 12 YEL E1-MM 14 YEL J1-KKN 14 YEL
- B2-DDU 12 WHT E2-IHS 16 YEL J2-WH 14 YEL
- B3-DDV 12 YEL F1-MK 14 YEL J3-ER 16 YEL
- B4-DDW 12 WHT F2-LP 16 YEL J4-PY 16 YEL
- C1-DDZ 12 YEL G1-PPJ 14 YEL K1-FFD 12 YEL
- C2-HHM 14 YEL G2-PPK 14 YEL K2-KA 12 YEL
- D1-LL 16 WHT G3- K3-

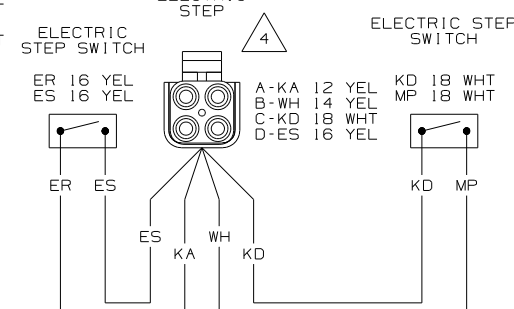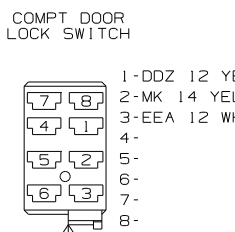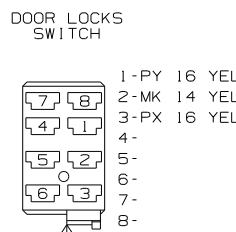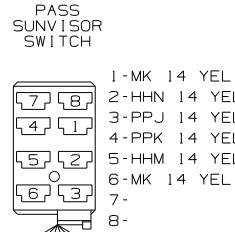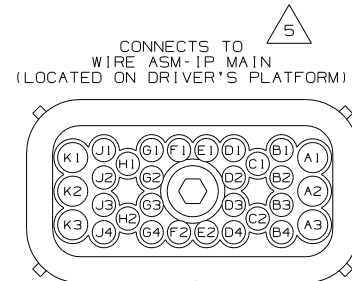

- A-LN 16 WHT
- B-HU 16 YEL
- C-LL 16 WHT
- D-LM 16 WHT
- E-LP 16 YEL
- F-
- G-
- H-
- I-
- J-
- K-

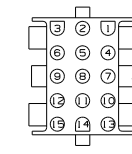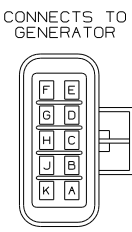



- 1-BBM 16 YEL
- 2-BBN 16 YEL
- 3-DDA 16 YEL
- 4-CCY 16 YEL
- 5-CCZ 16 YEL
- 6-
- 7-
- 8-
- 9-LL 16 WHT
- 10-LM 16 WHT
- 11-LN 16 WHT
- 12-LP 16 YEL
- 13-IHS 16 YEL
- 14-MM 14 YEL
- 15-ER 16 YEL

CONNECTS TO WIRE ASM-COACH (SHT 2, A-31) (LOCATED IN BASE OF GALLEY CABT)


- 6 WITHOUT INVERTER-CHARGER THERE ARE ONLY TWO BATTERIES AND NO 300 AMP FUSE.
- 5 SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.
- 4 SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.
- 3 GROUNDS ARE SHOWN AS A SINGLE LINE FOR EASE IN TRACING. EACH GROUND CIRCUIT IS SEPARATE IN THE HARNESS.
- 2 NOT A SPLICE POINT. INDICATES ENTRY INTO WIRING HARNESS.

NOTES:  
1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

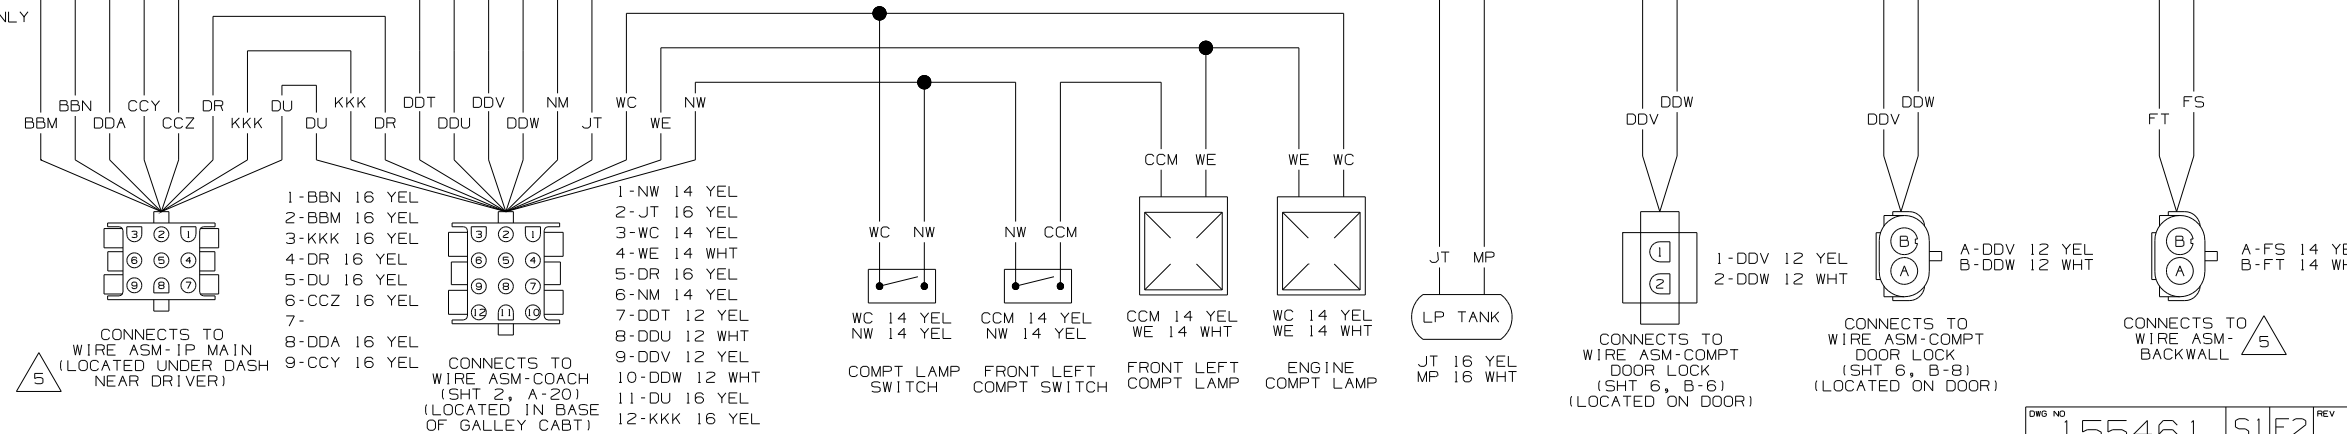

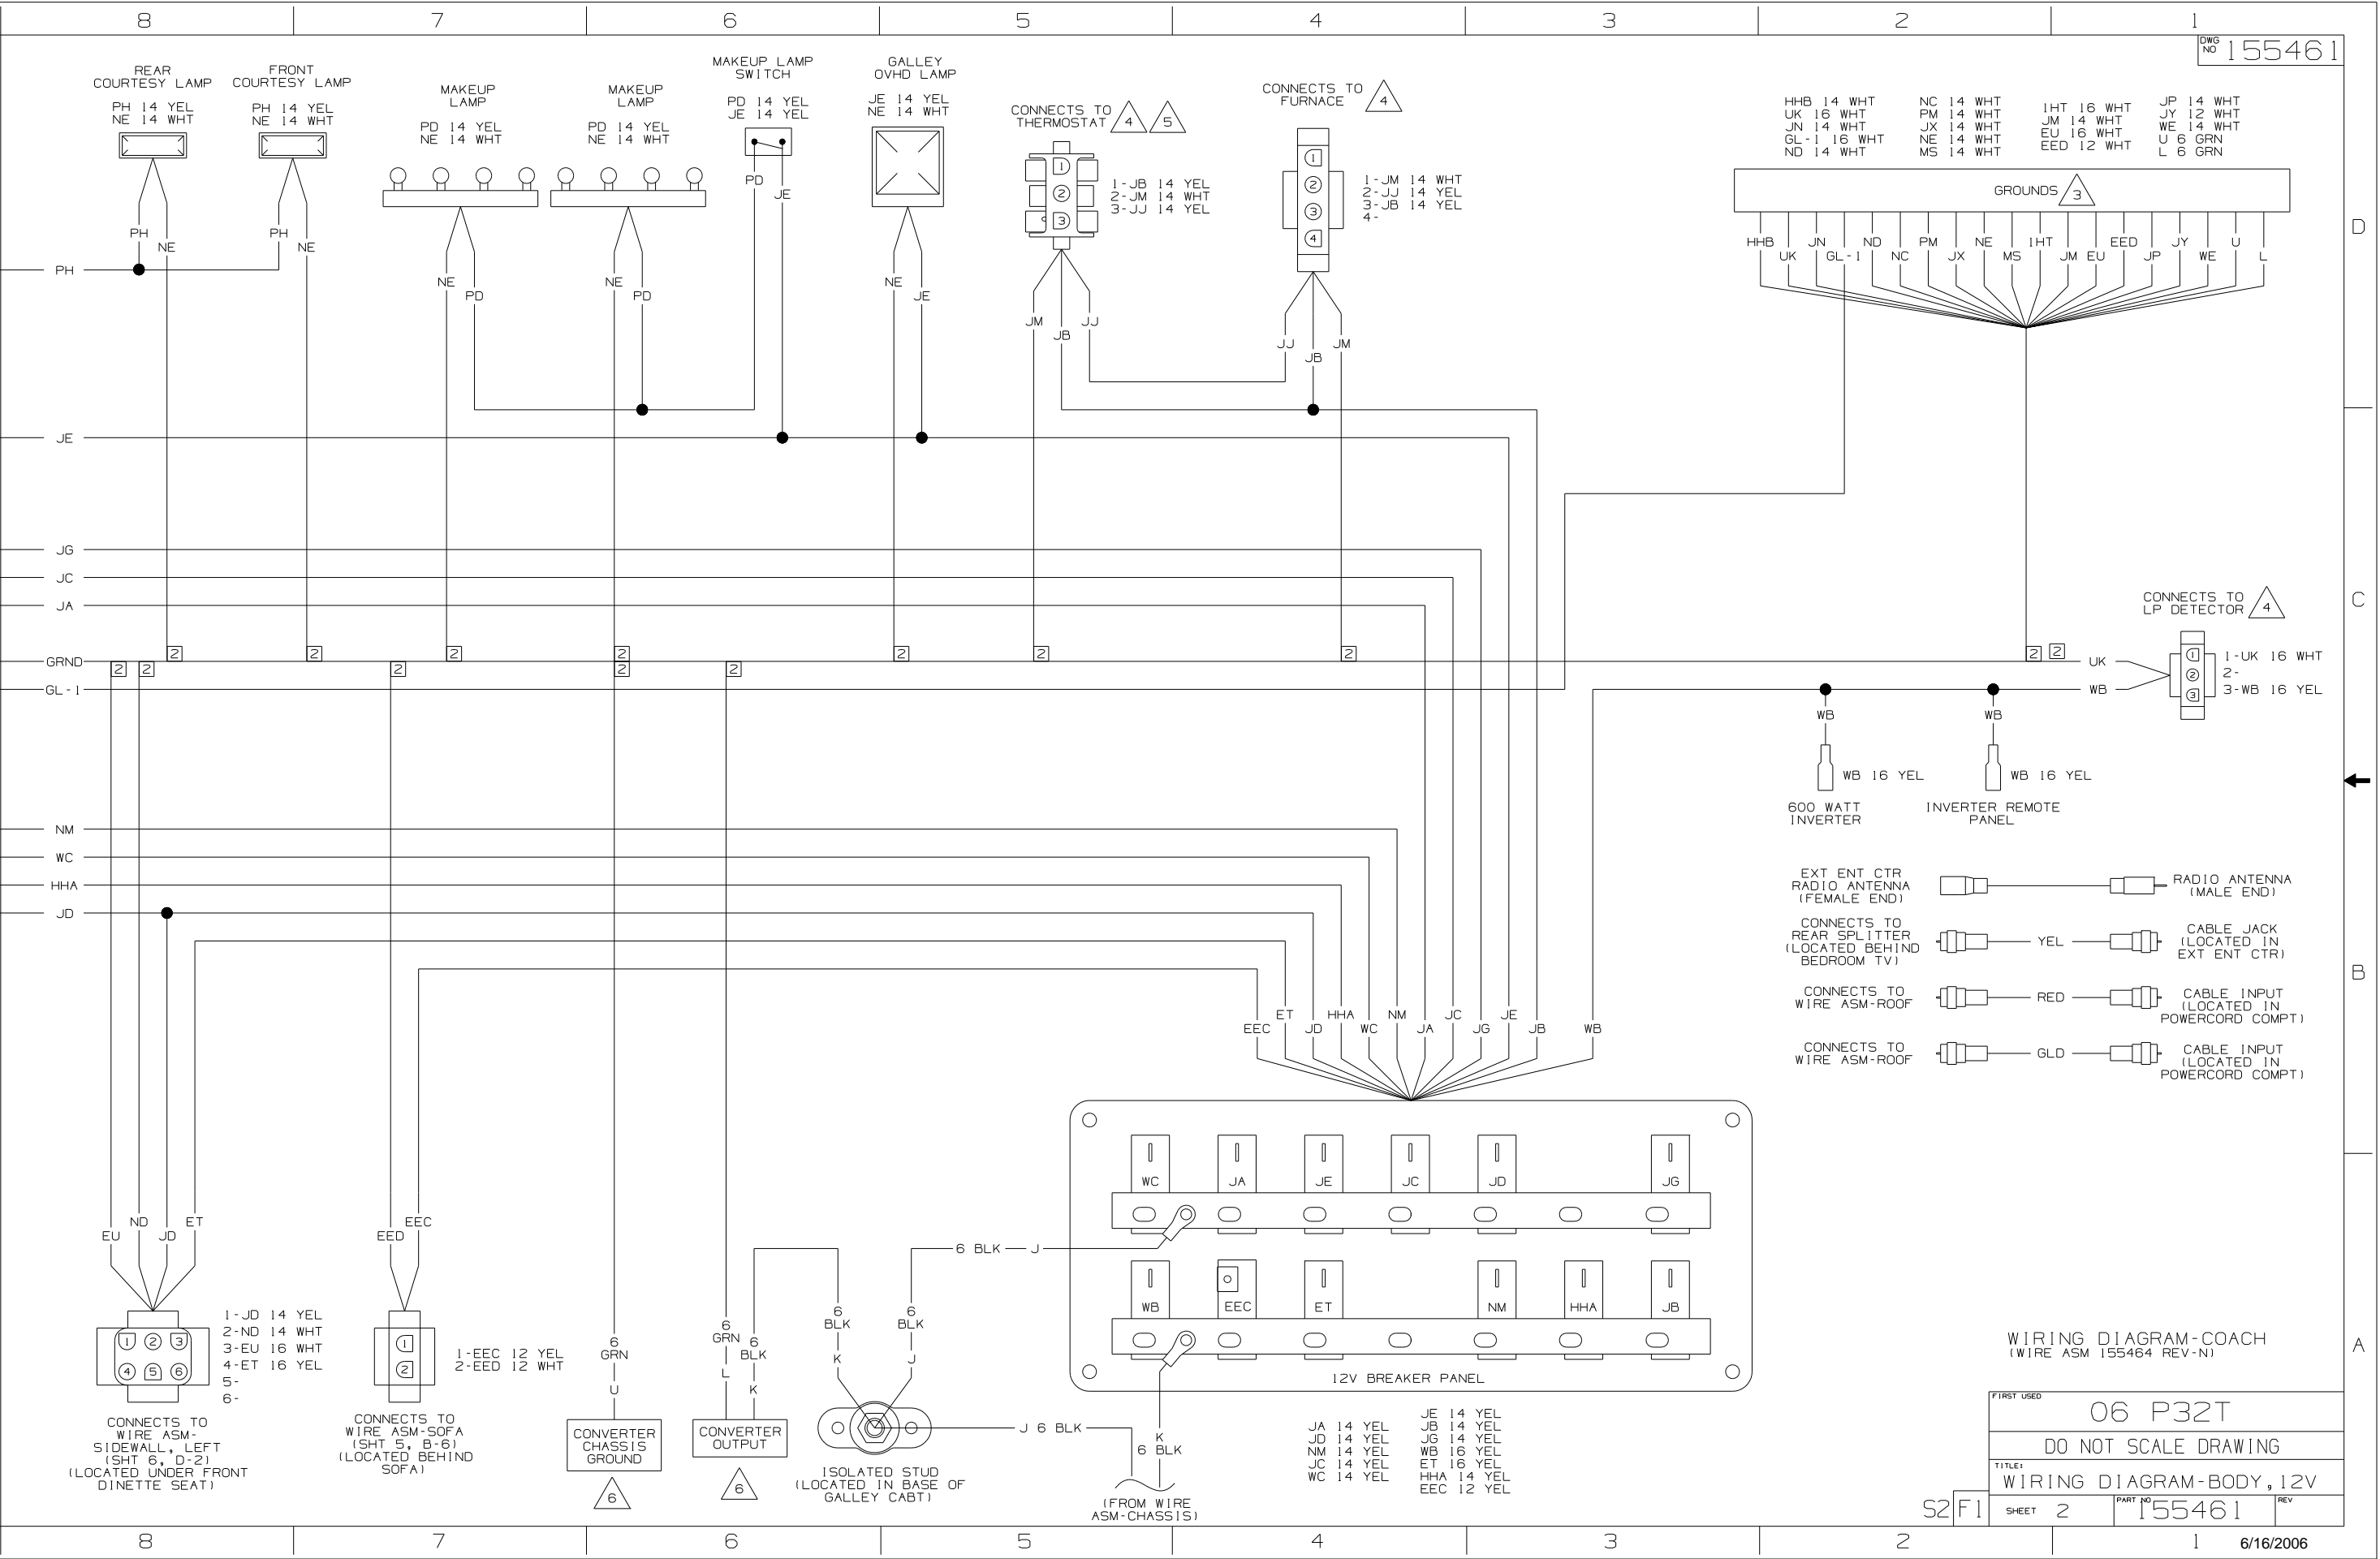

HHB 14 WHT	NC 14 WHT	IHT 16 WHT	JP 14 WHT
UK 16 WHT	PM 14 WHT	JM 14 WHT	JY 12 WHT
JN 14 WHT	JX 14 WHT	EU 16 WHT	WE 14 WHT
GL-1 16 WHT	NE 14 WHT	EED 12 WHT	U 6 GRN
ND 14 WHT	MS 14 WHT		L 6 GRN

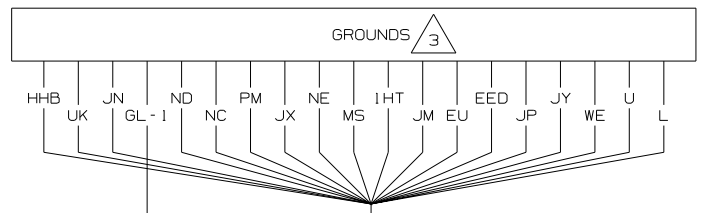



WIRING DIAGRAM-COACH (WIRE ASM 155464 REV-N)

FIRST USED	06 P32T	
DO NOT SCALE DRAWING		
TITLE:	WIRING DIAGRAM-BODY, 12V	
S2F1	SHEET 2	PART NO 155461
		REV


JA 14 YEL	JE 14 YEL
JD 14 YEL	JB 14 YEL
NM 14 YEL	JG 14 YEL
JC 14 YEL	WB 16 YEL
WC 14 YEL	ET 16 YEL
	HHA 14 YEL
	EEC 12 YEL

CONNECTS TO  
WIRE ASM-  
SIDEWALL, RIGHT FRONT  
(SHT 4, C-7)  
(LOCATED IN BASE OF  
GALLEY CABT)

 - 1-PM 14 WHT
- 2-PL 14 YEL
- 3-FFW 14 YEL
- 4-FFX 14 YEL
- 5-JG 14 YEL
- 6-JN 14 WHT
- 7-
- 8-PHONE RED 16 YEL
- 9-PHONE GRN 16 YEL

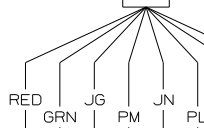


LOUNGE CEILING  
LAMP SWITCH

 


- FFW 14 YEL
- NM 14 YEL
- FFX 14 YEL

CONNECTS TO  
WIRE ASM-RESISTOR,FAN  
(SHT 5, D-B)  
(LOCATED BEHIND BDRM  
CEILING FAN SWITCH)

 FAN  
SWITCH



- FFY 14 YEL
- JG 14 YEL
- GGX 14 YEL

 


- 1-FFY 14 YEL
- 2-GGX 14 YEL

HALL  
LAMP SWITCH



- WX 14 YEL
- JC 14 YEL

FRONT COURTESY  
LAMP SWITCH      REAR COURTESY  
LAMP SWITCH

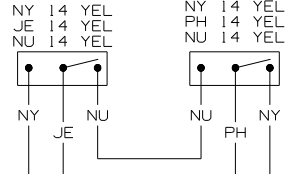


- NY 14 YEL
- JE 14 YEL
- NU 14 YEL
- NY 14 YEL
- PH 14 YEL
- NU 14 YEL

RED  
GRN  
JG  
JC  
JA

PH  
JE  
JG  
JC  
JA


GRND  
GL - I  
NM  
WC

GRND  
GL - I  
NM  
WC  
HHA  
JD

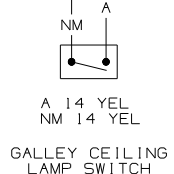


- A 14 YEL
- NM 14 YEL

 GALLEY CEILING  
LAMP SWITCH




- JJV 14 YEL
- JC 14 YEL

MONITOR LAMP  
SWITCH

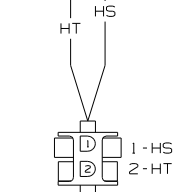


- 1-HS 16 YEL
- 2-HT 16 WHT

CONNECTS TO  
MONITOR SOLAR  
CHARGER  
INDICATOR LAMP

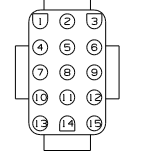

CONNECTS TO  
WIRE ASM-ROOF  
(SHT 3, B-16)  
(LOCATED IN BASE OF  
BEDROOM TV)

 - 1-NC 14 WHT
- 2-PC 14 YEL
- 3-ND 14 WHT
- 4-PF 14 YEL
- 5-HHA 14 YEL
- 6-HHB 14 WHT
- 7-A 14 YEL
- 8-PE 14 YEL
- 9-HS 16 YEL
- 10-HT 16 WHT
- 11-PL 14 YEL
- 12-PM 14 WHT
- 13-JJV 14 YEL
- 14-WX 14 YEL
- 15-FFY 14 YEL




- PE 14 YEL
- HHA 14 YEL

BATH CEILING  
LAMP SWITCH



- PF 14 YEL
- JD 14 YEL

 SHOWER LAMP  
SWITCH




- PC 14 YEL
- JD 14 YEL

BEDROOM CEILING  
LAMP SWITCH




- ND 14 WHT
- JD 14 YEL

 CONNECTS TO  
WIRE ASM-  
SLIDEOUT,REAR  
(SHT 6, D-B)  
(LOCATED IN BASE OF  
BEDROOM WARDROBE)




- HHA 14 WHT
- HHA 14 YEL

 
FRONT  
READING  
LAMP








- HHA 14 WHT
- HHA 14 YEL

REAR  
READING  
LAMP

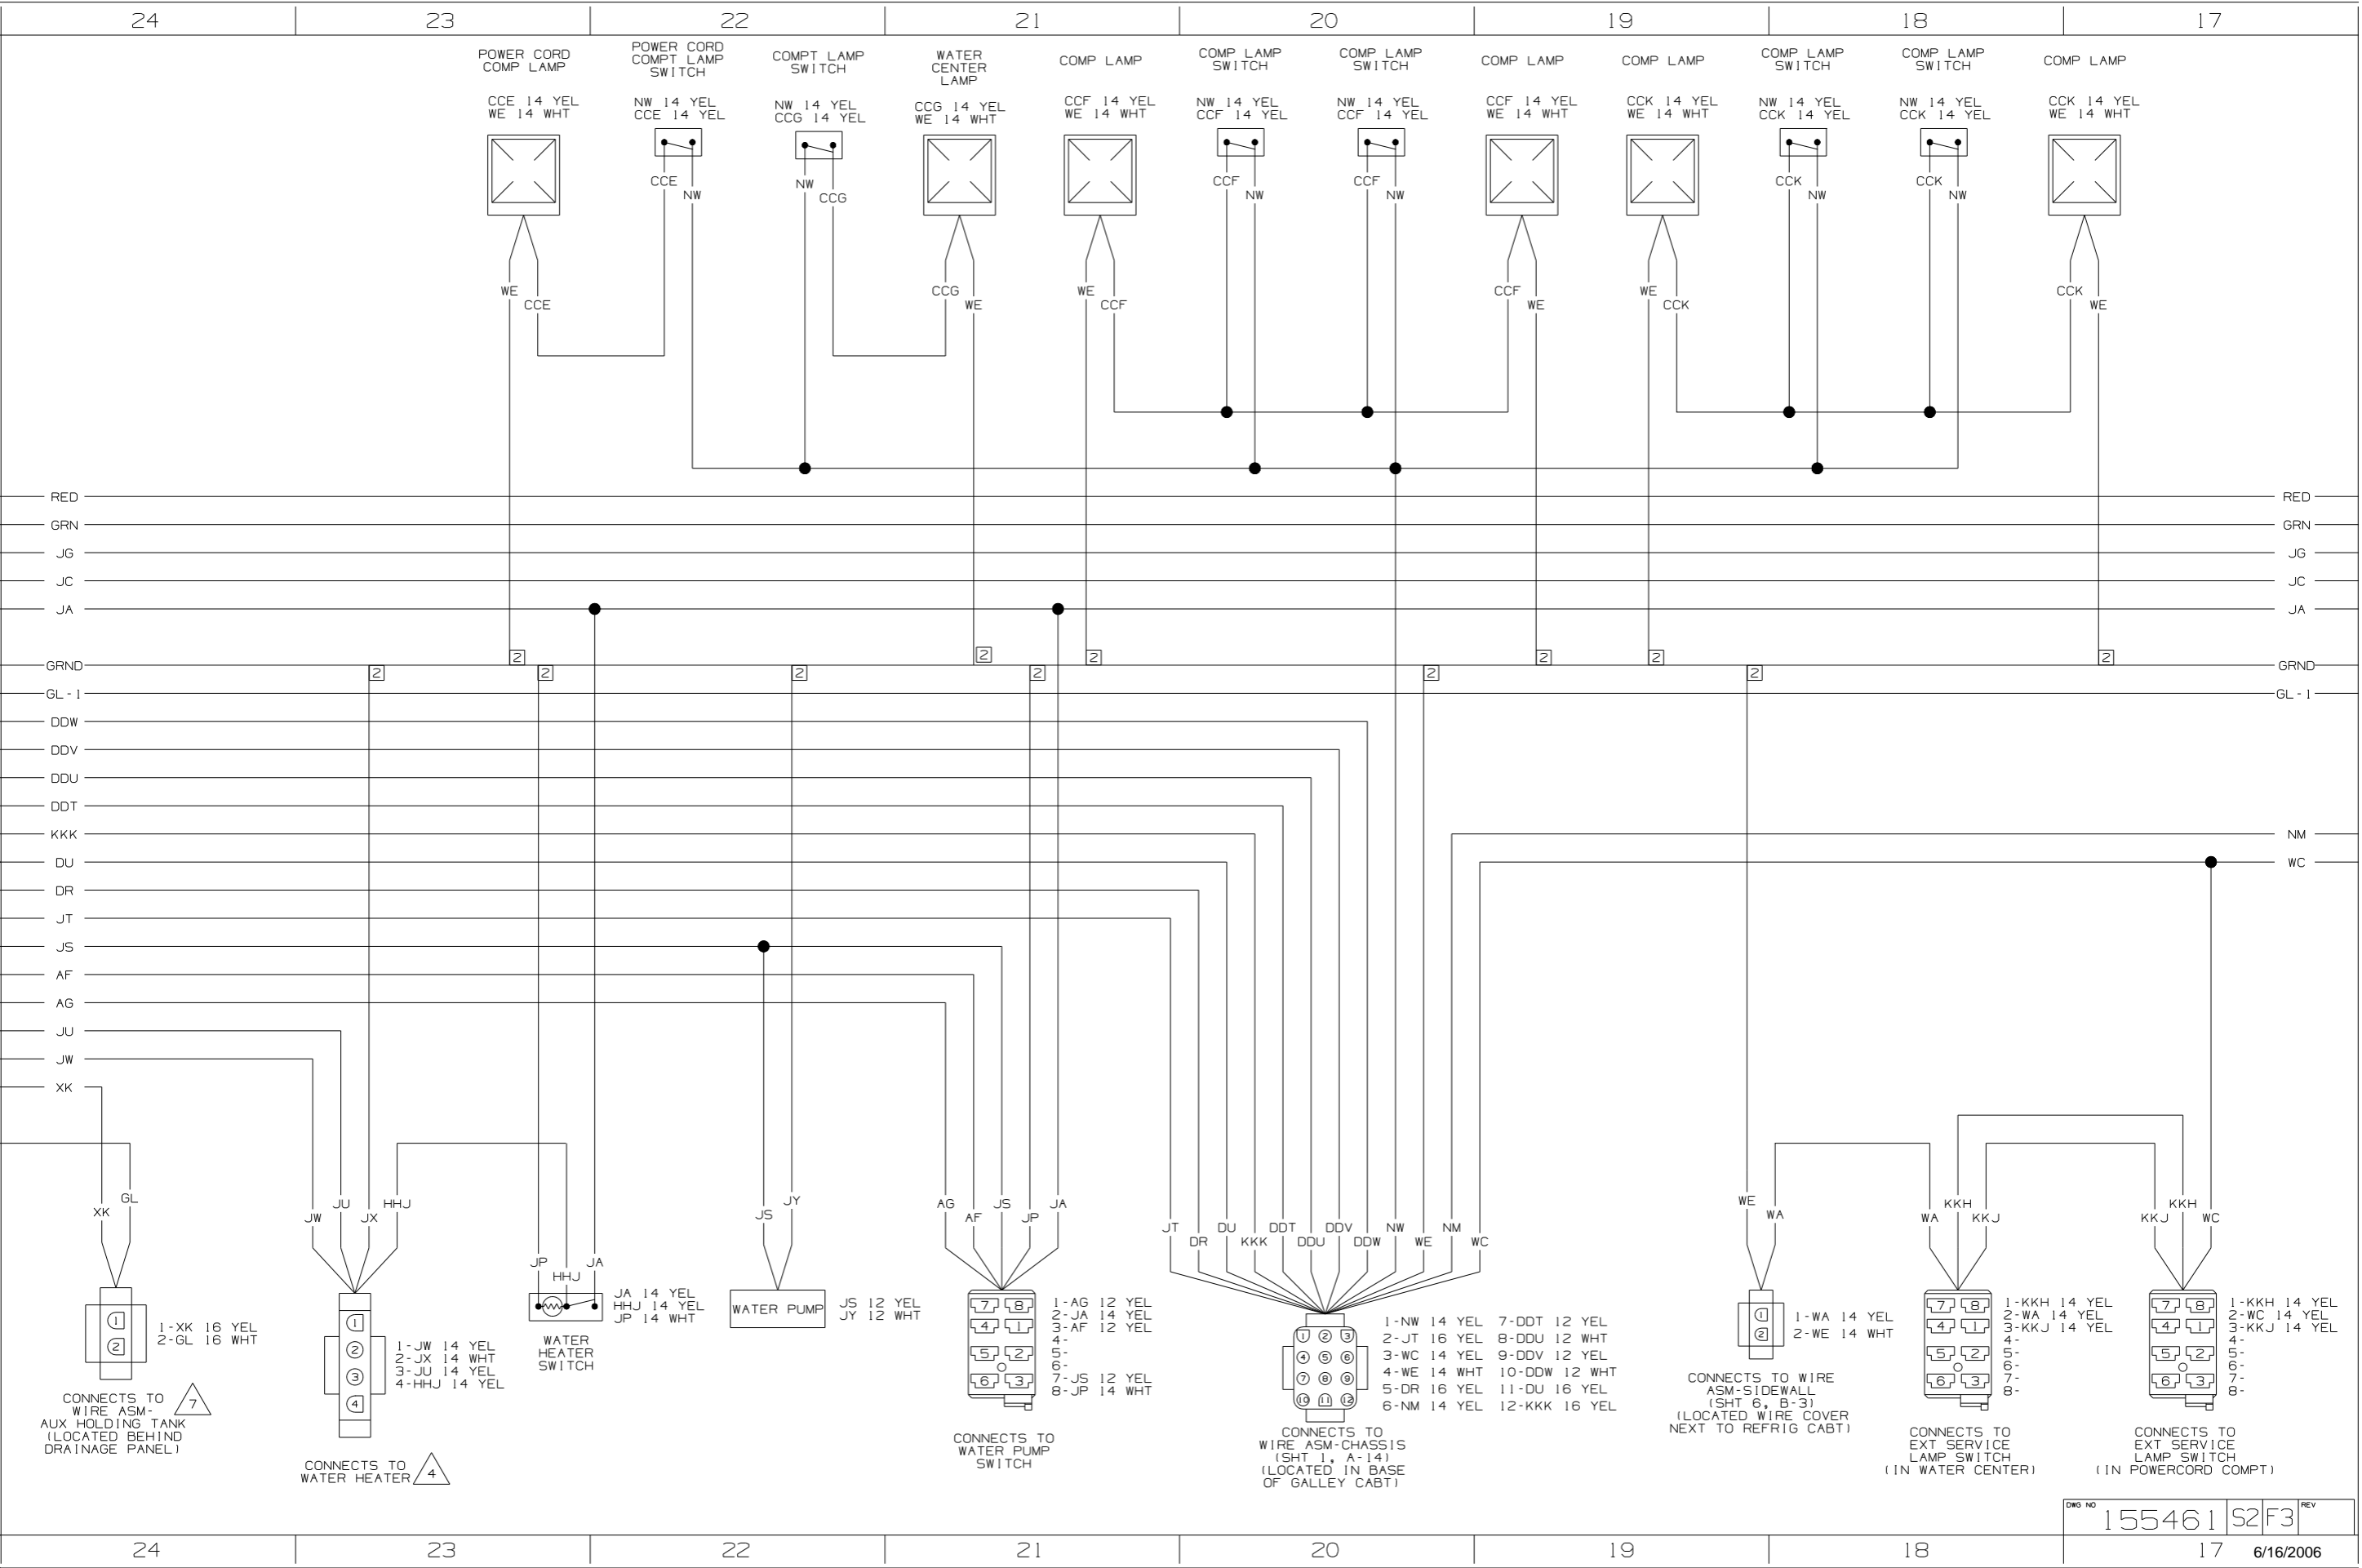




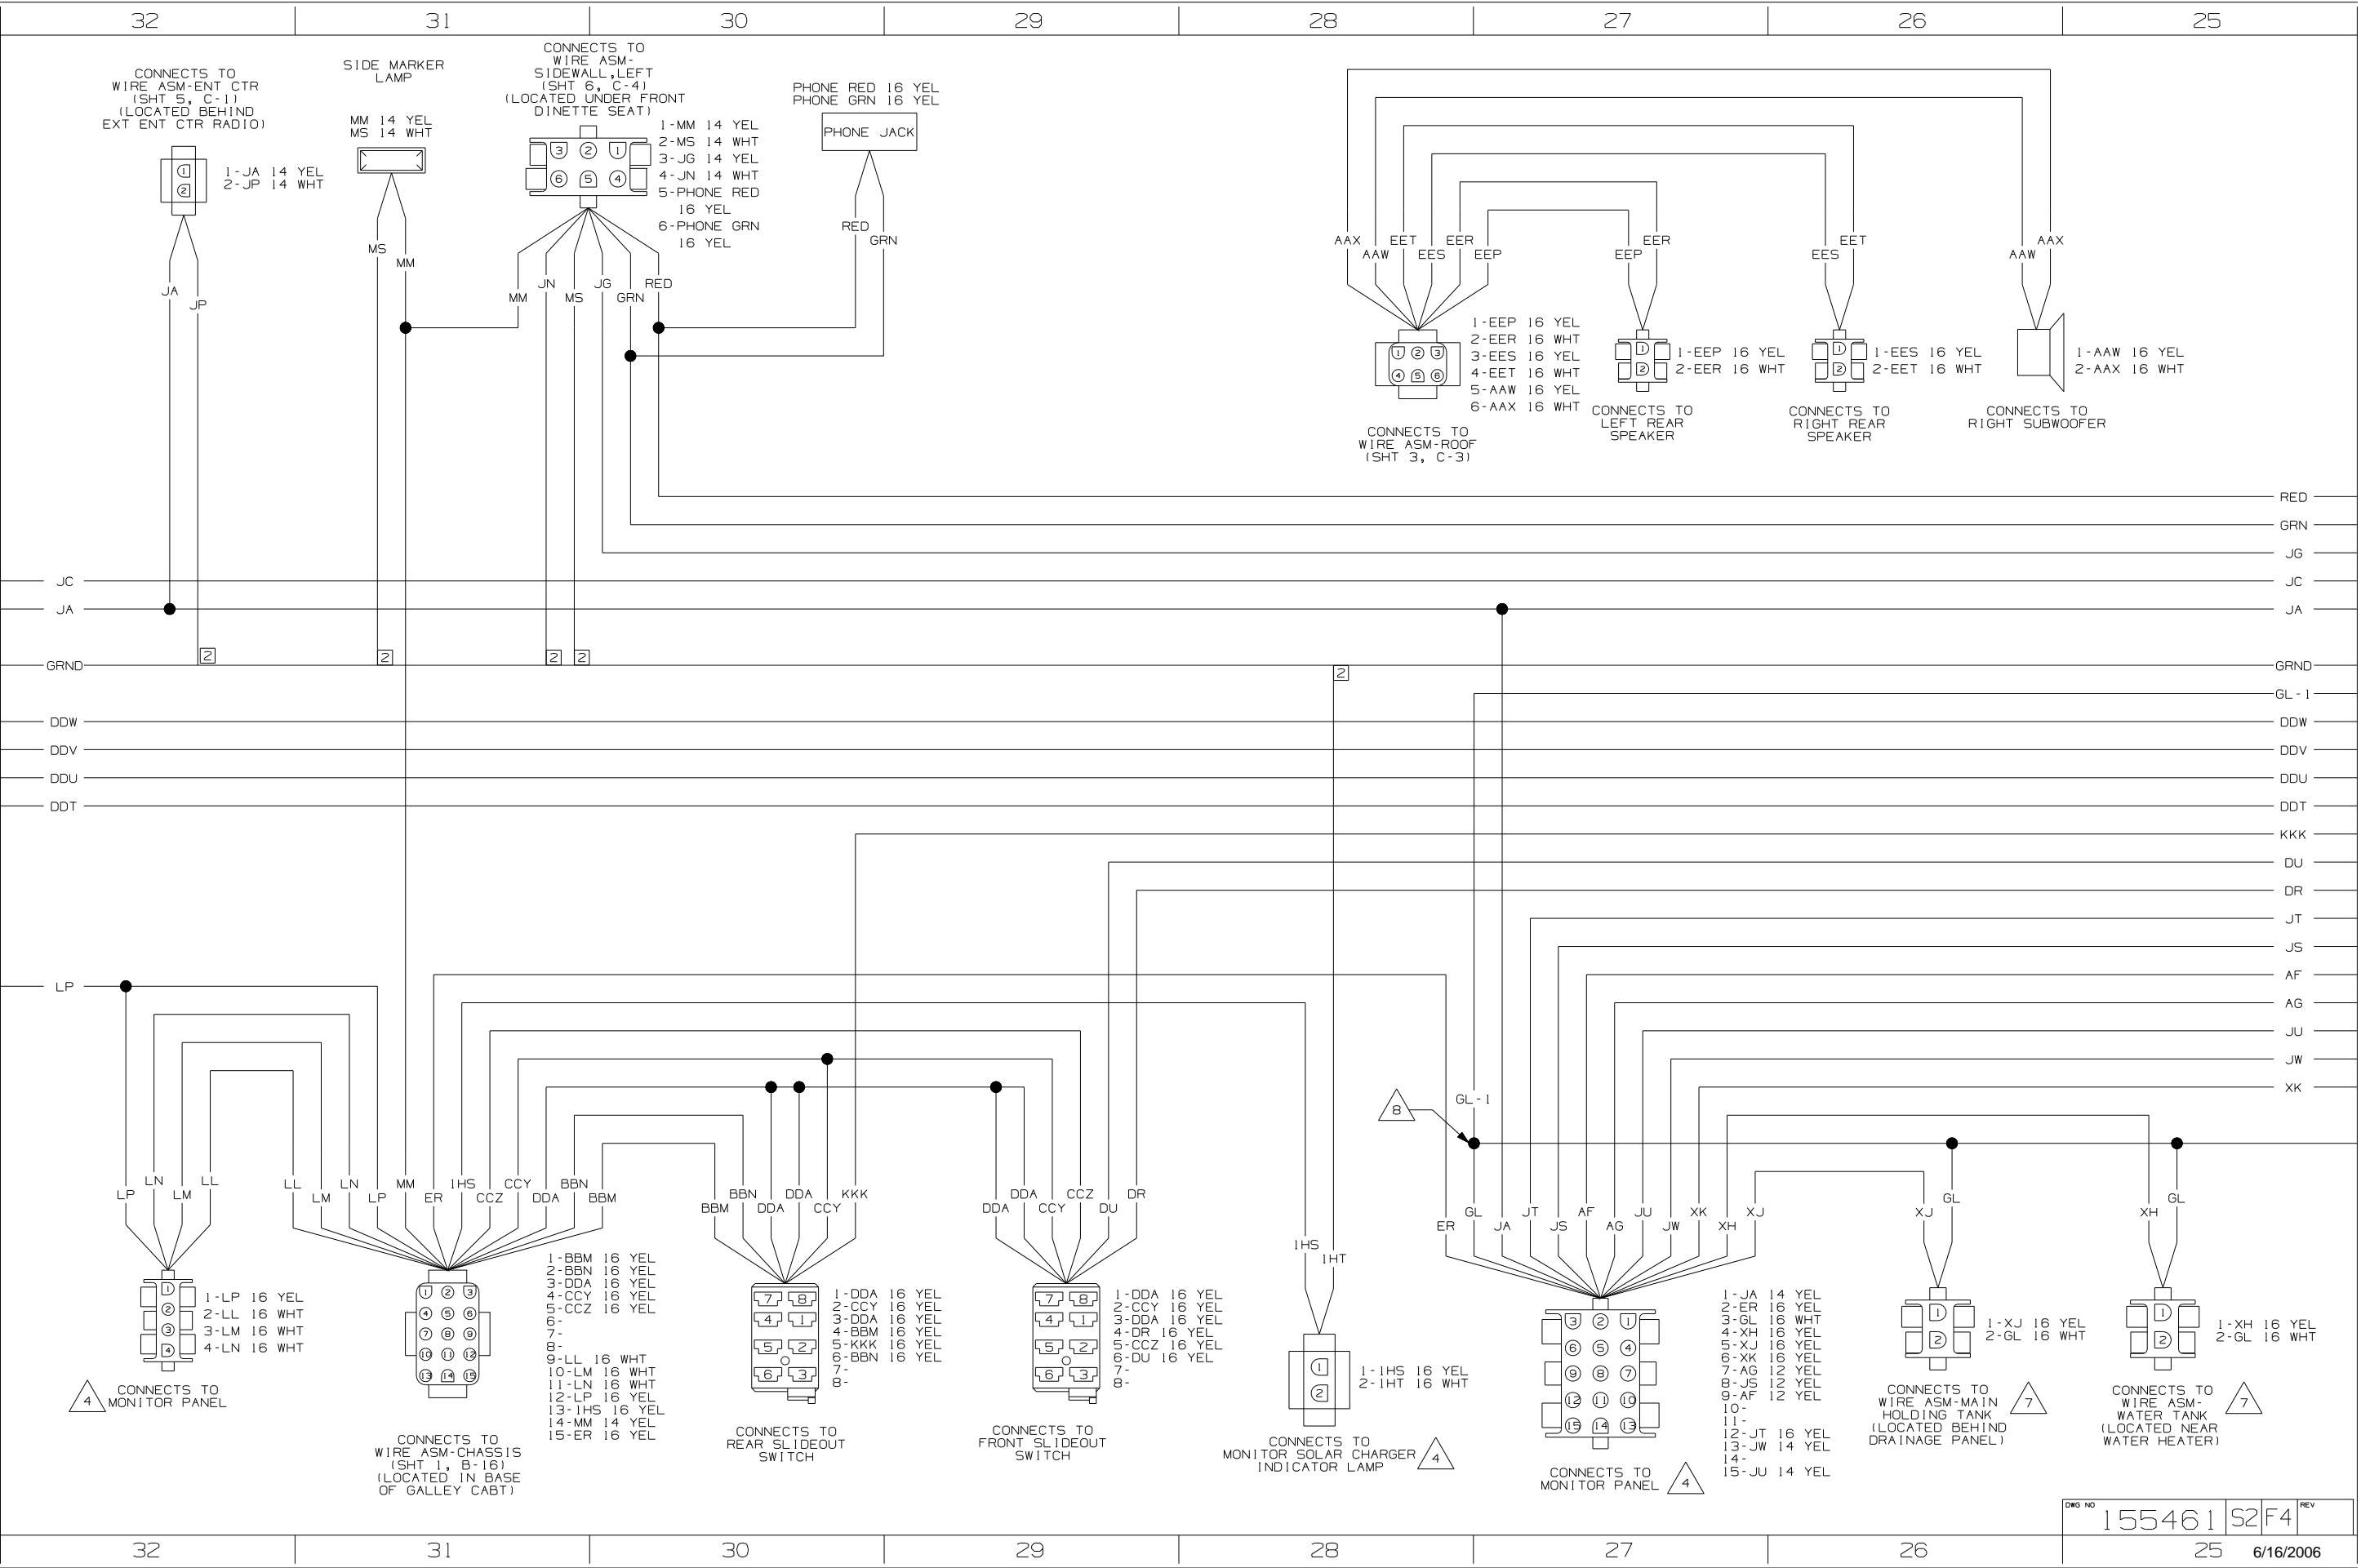


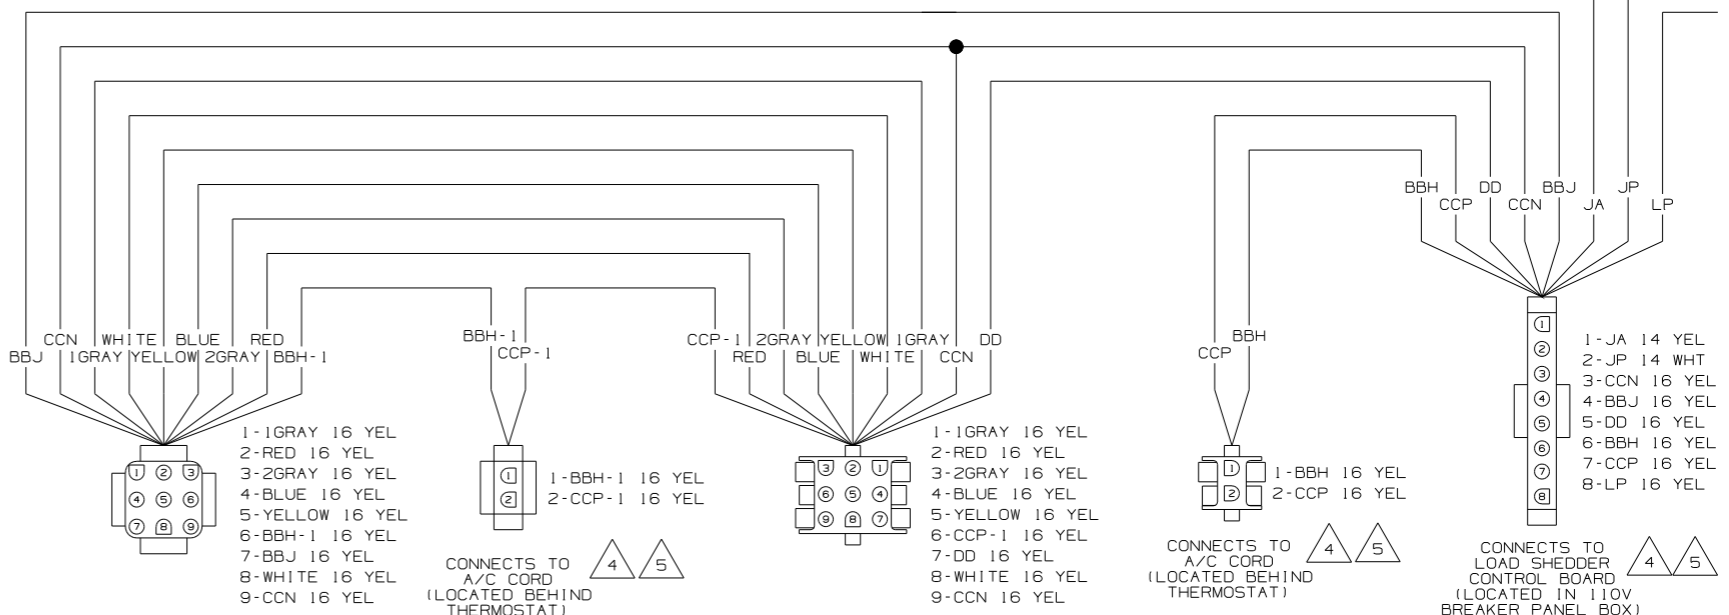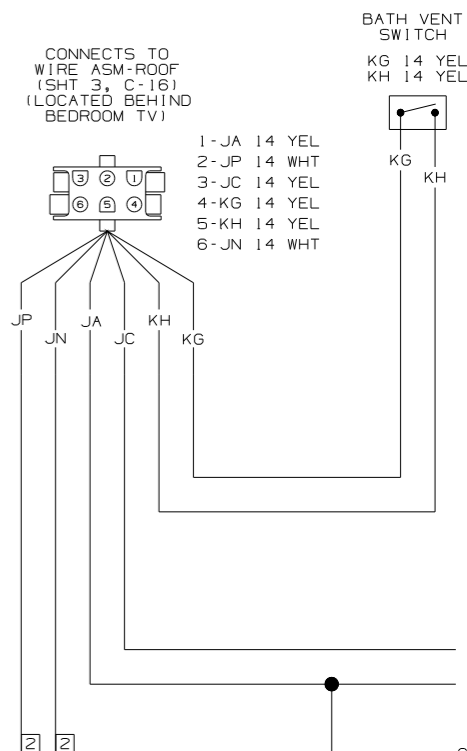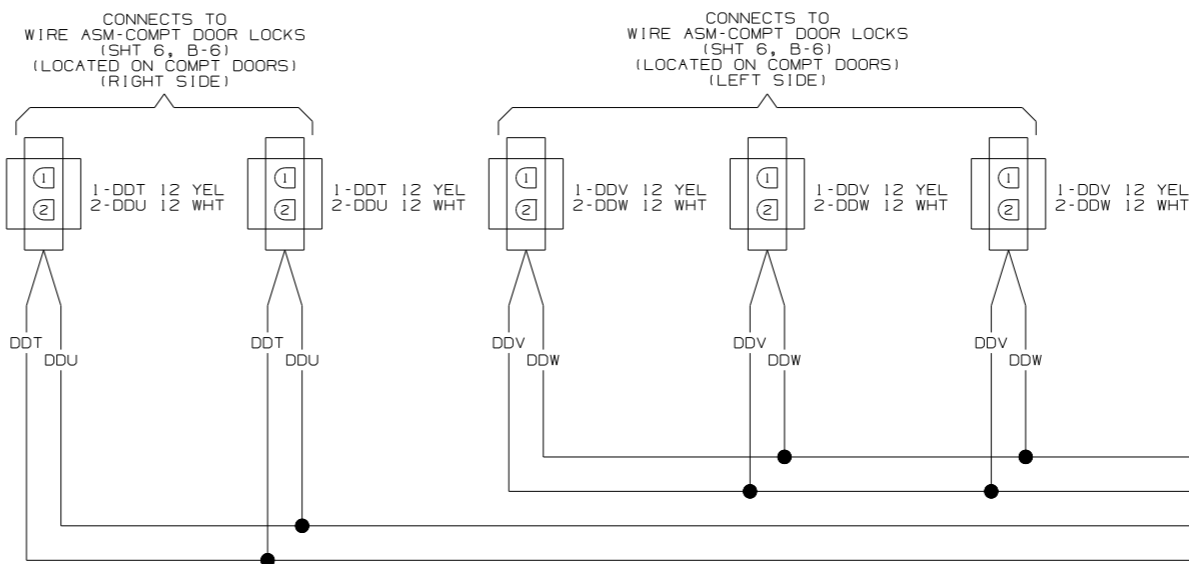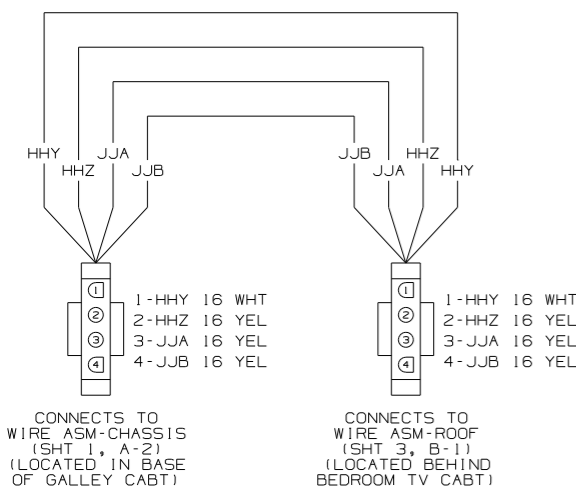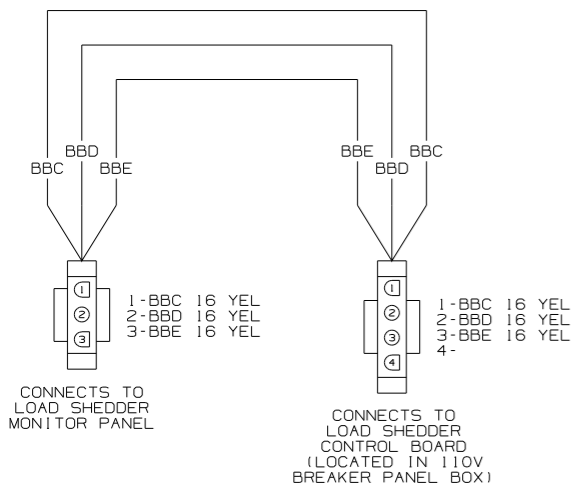

- 8 GL AND GL-1 ARE TO BE SPLICED TOGETHER 100MM AWAY FROM MONITOR PANEL HOUSING FOR ISOLATION PURPOSES.
  - 7 SEE WIRING DIAGAM-HOLDING TANKS FOR ADDITIONAL INFORMATION.
  - 6 NOT USED WITH INVERTER/CHARGER
  - 5 SEE WIRING DIAGAM-AC/HEATER/EMS FOR ADDITIONAL INFORMATION.
  - 4 SEE MANUFACTURER'S DIAGRAM FOR ADDITIONAL INFORMATION.
  - 3 GROUNDS ARE SHOWN AS A SINGLE LINE FOR EASE IN TRACING. EACH GROUND CIRCUIT IS SEPARATE IN THE HARNESS.
  - 2 NOT A SPLICE POINT. INDICATES ENTRY INTO WIRING HARNESS.
1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

NOTES:



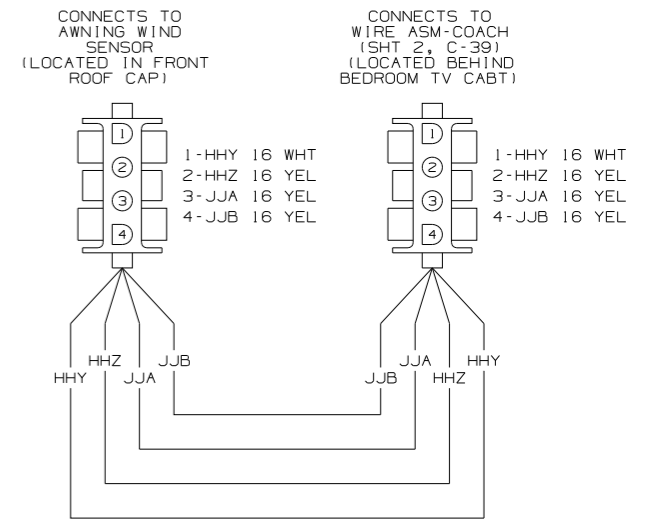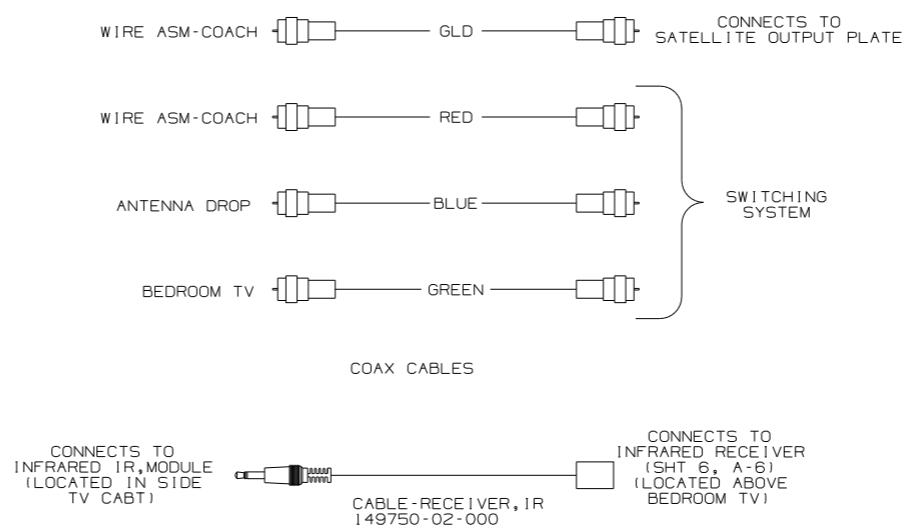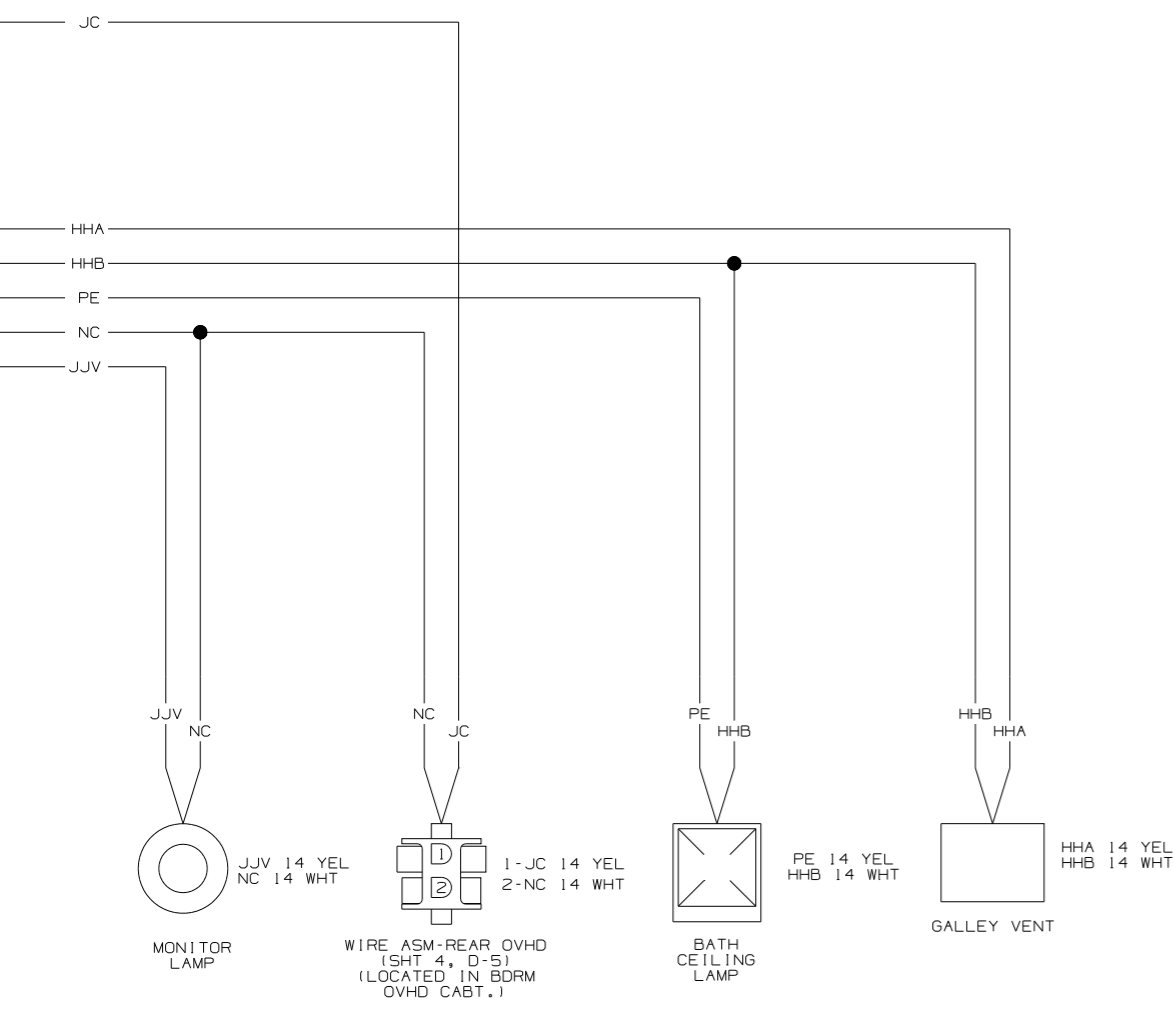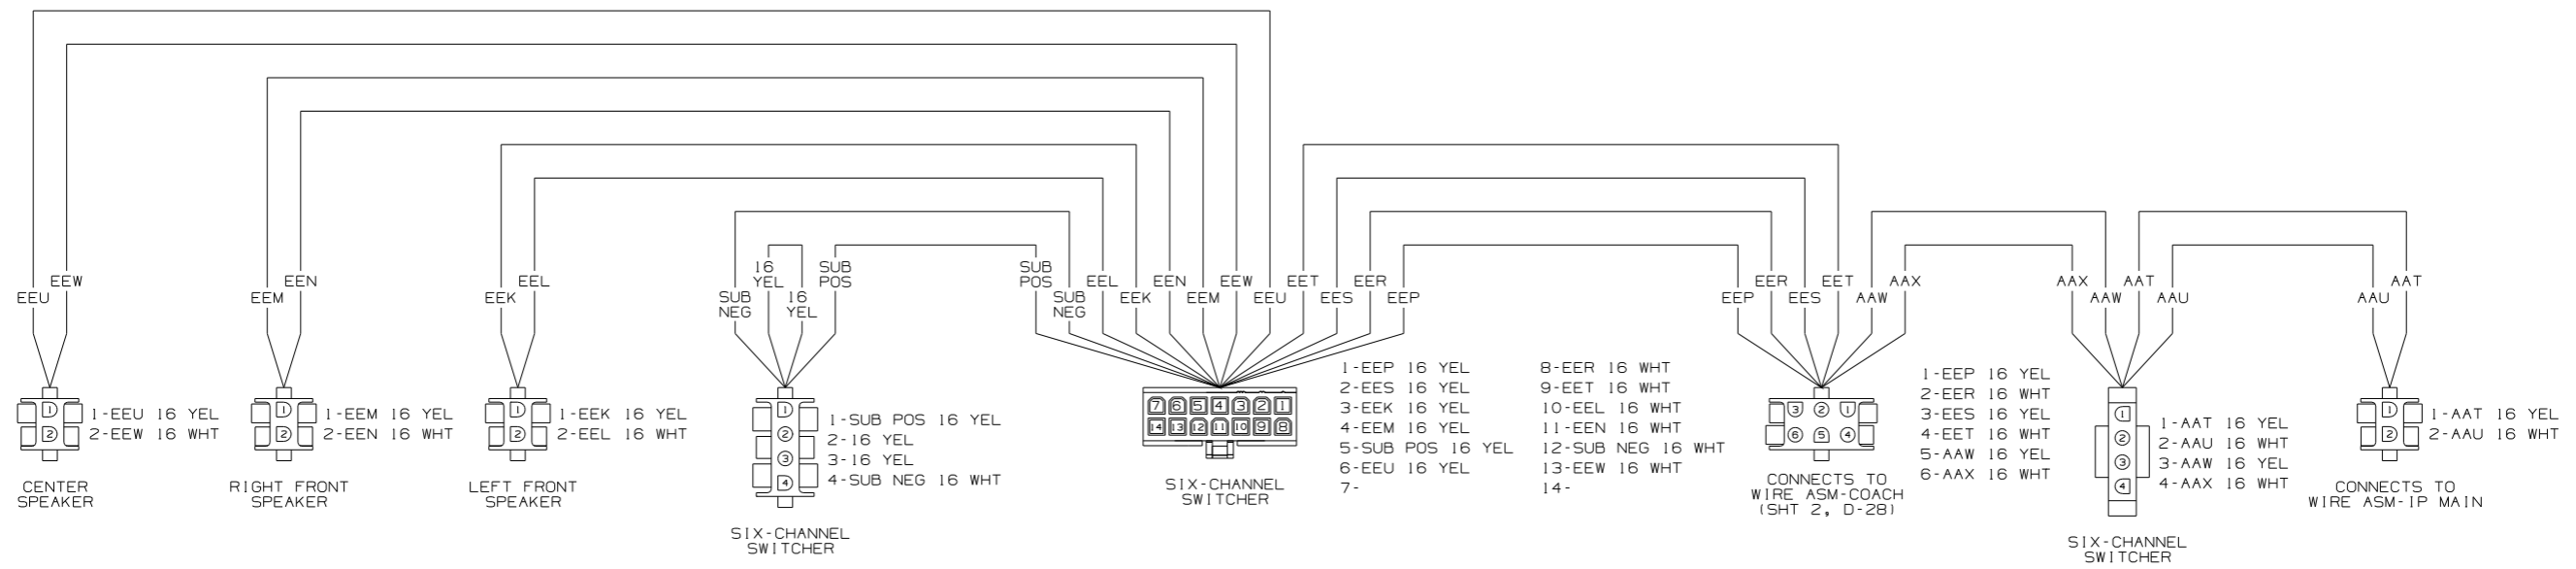


WIRING DIAGRAM-ROOF (WIRE ASM 155465 REV-F)

FIRST USED	06 P32T		
TITLE	DO NOT SCALE DRAWING		
TITLE	WIRING DIAGRAM-BODY, 12V		
SHEET 3	PART NO	155461	REV



D  
C  
B  
A

CONNECTS TO WIRE ASM-SATELLITE, AUTO (LOCATED IN CENTER OF FRONT OVHD)

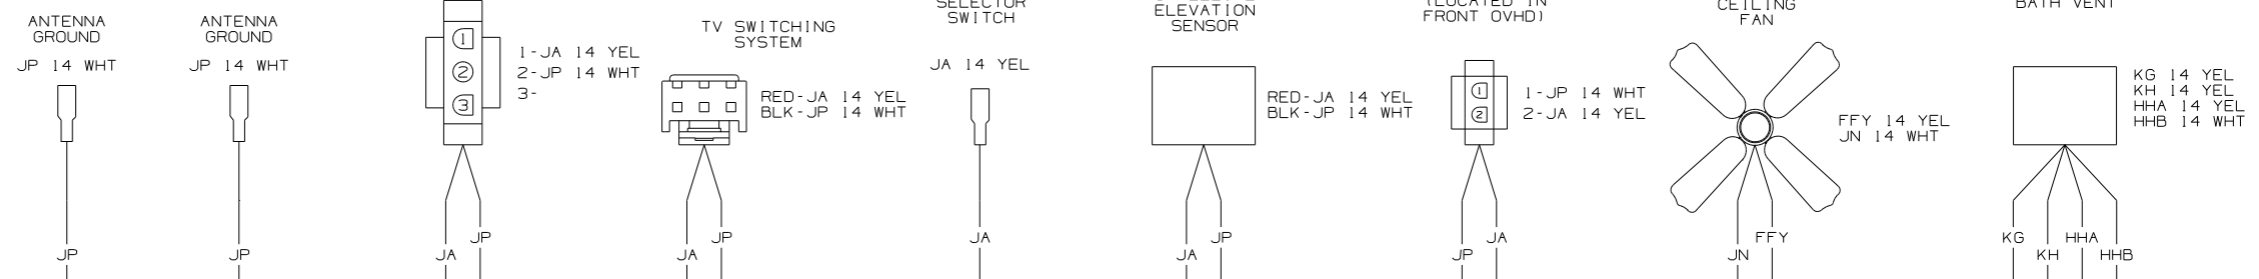



CONNECTS TO WIRE ASM-COACH (SHT 2, D-34) (LOCATED BEHIND BDRM TV)

- 1-JA 14 YEL
- 2-JP 14 WHT
- 3-JC 14 YEL
- 4-KG 14 YEL
- 5-KH 14 YEL
- 6-JN 14 WHT

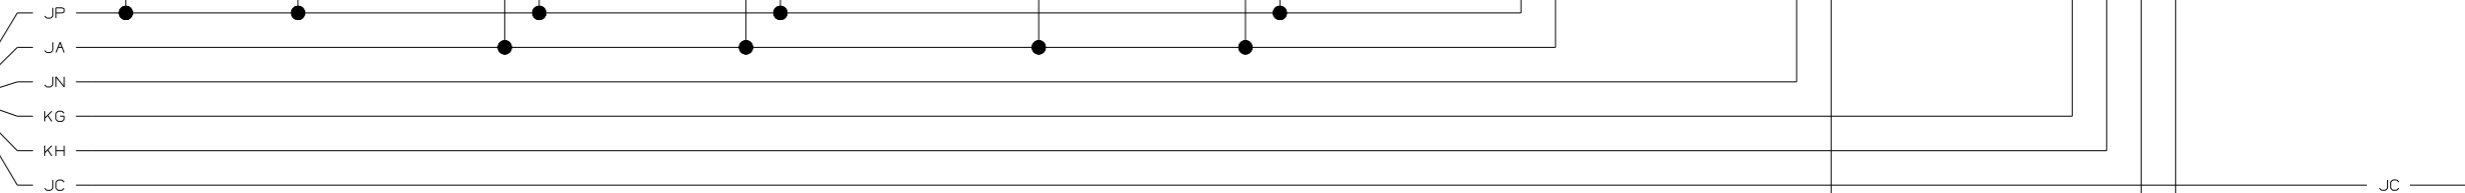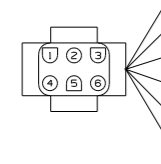




CONNECTS TO WIRE ASM-COACH (SHT 2, A-13) (LOCATED BEHIND BDRM TV)

- 1-NC 14 WHT
- 2-PC 14 YEL
- 3-ND 14 WHT
- 4-PF 14 YEL
- 5-HHA 14 YEL
- 6-HHB 14 WHT
- 7-A 14 YEL
- 8-PE 14 YEL
- 9-HS 16 YEL
- 10-HT 16 WHT
- 11-PL 14 YEL
- 12-PM 14 WHT
- 13-JJV 14 YEL
- 14-WX 14 YEL
- 15-FFY 14 YEL

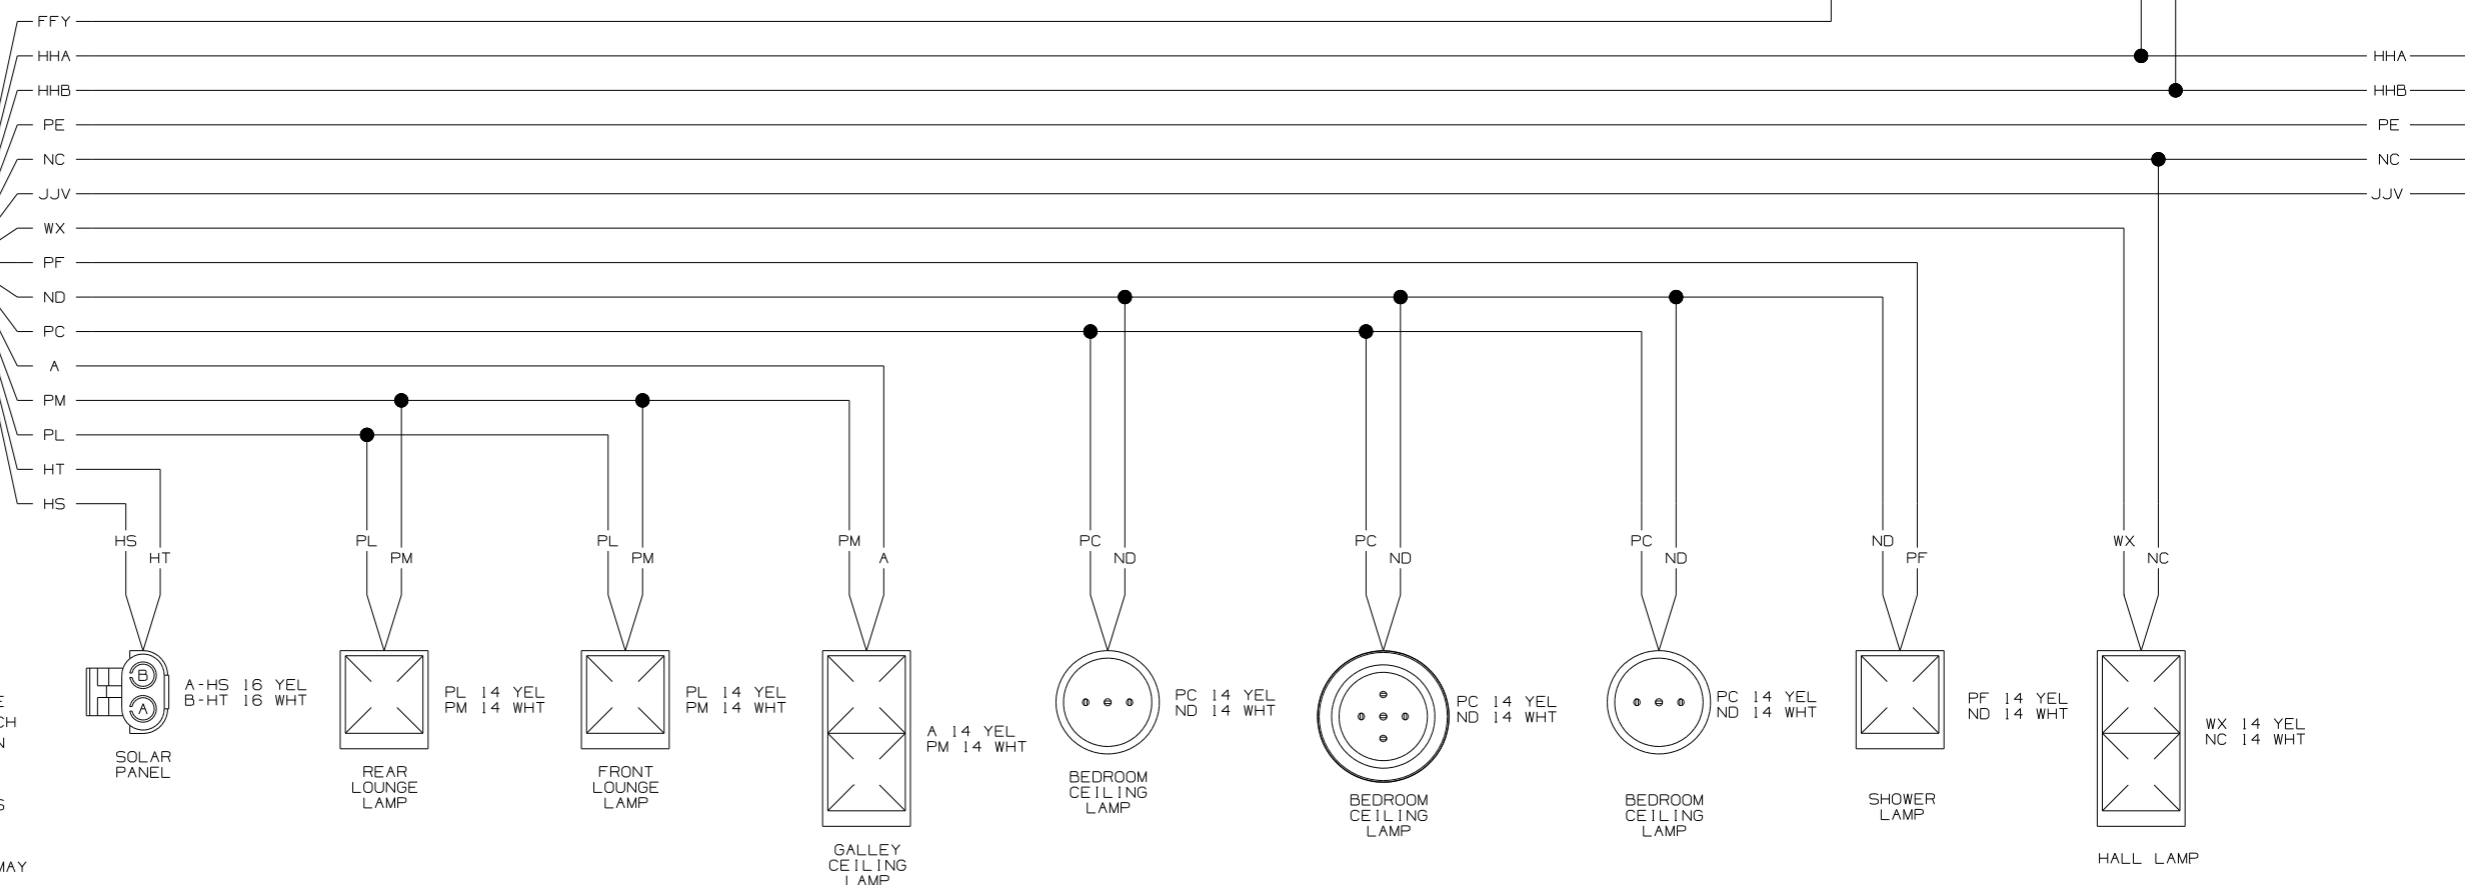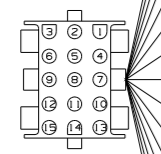

3. GROUNDS ARE SHOWN AS A SINGLE LINE FOR EASE IN TRACING. EACH GROUND CIRCUIT IS SEPERATE IN THE HARNESS.
2. NOT A SPLICE POINT. INDICATES ENTRY INTO WIRING HARNESS.
1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.




NOTES:

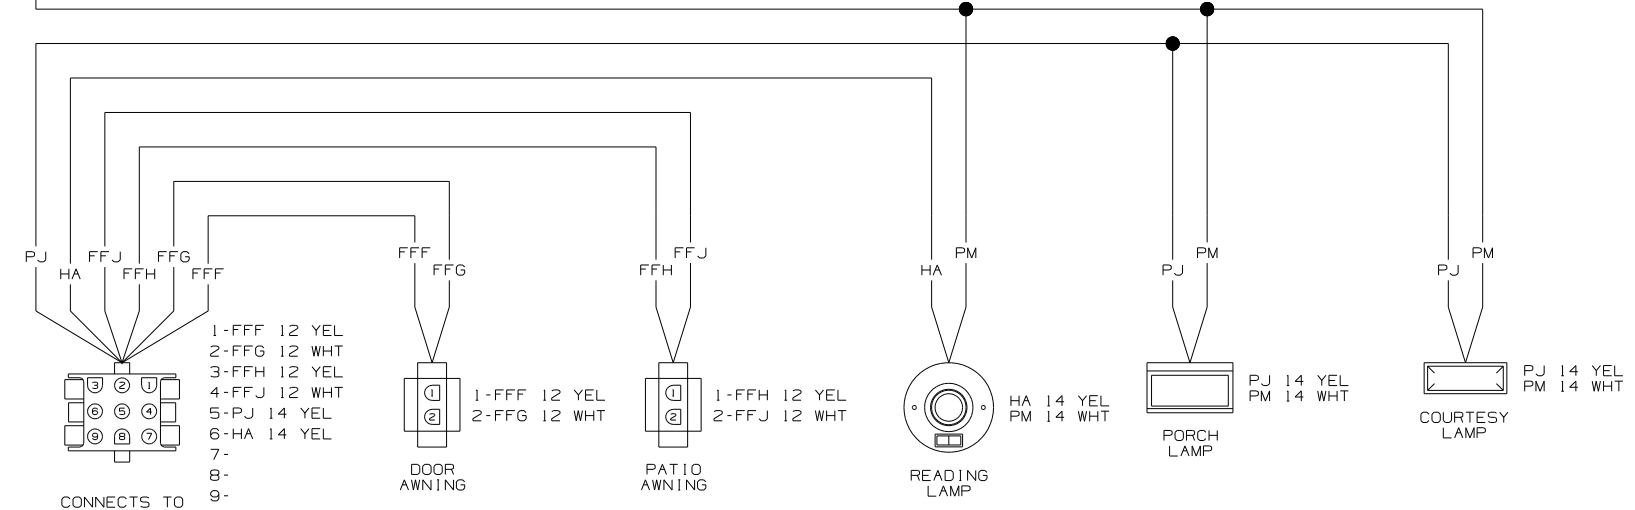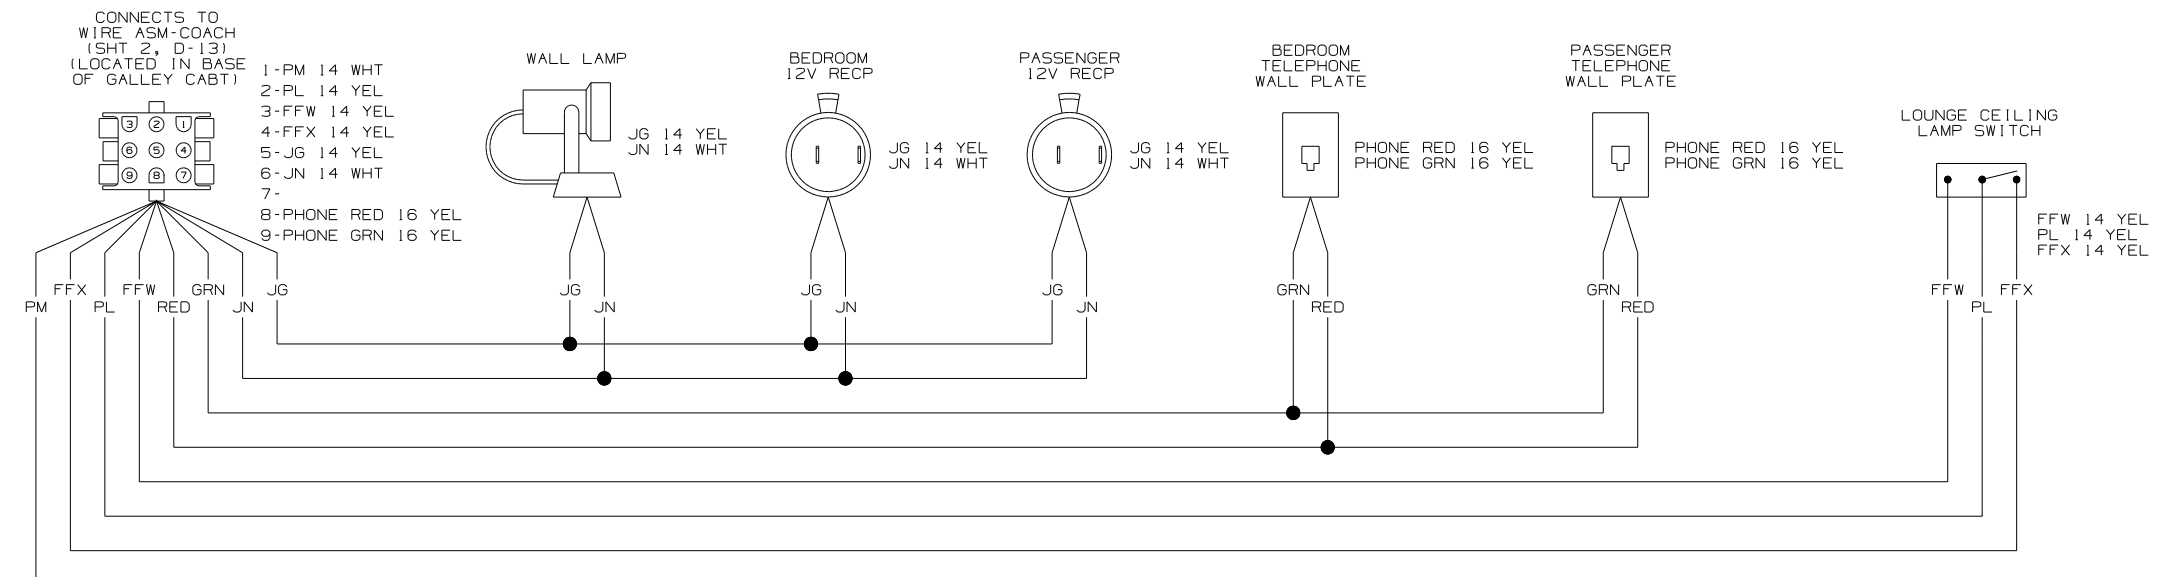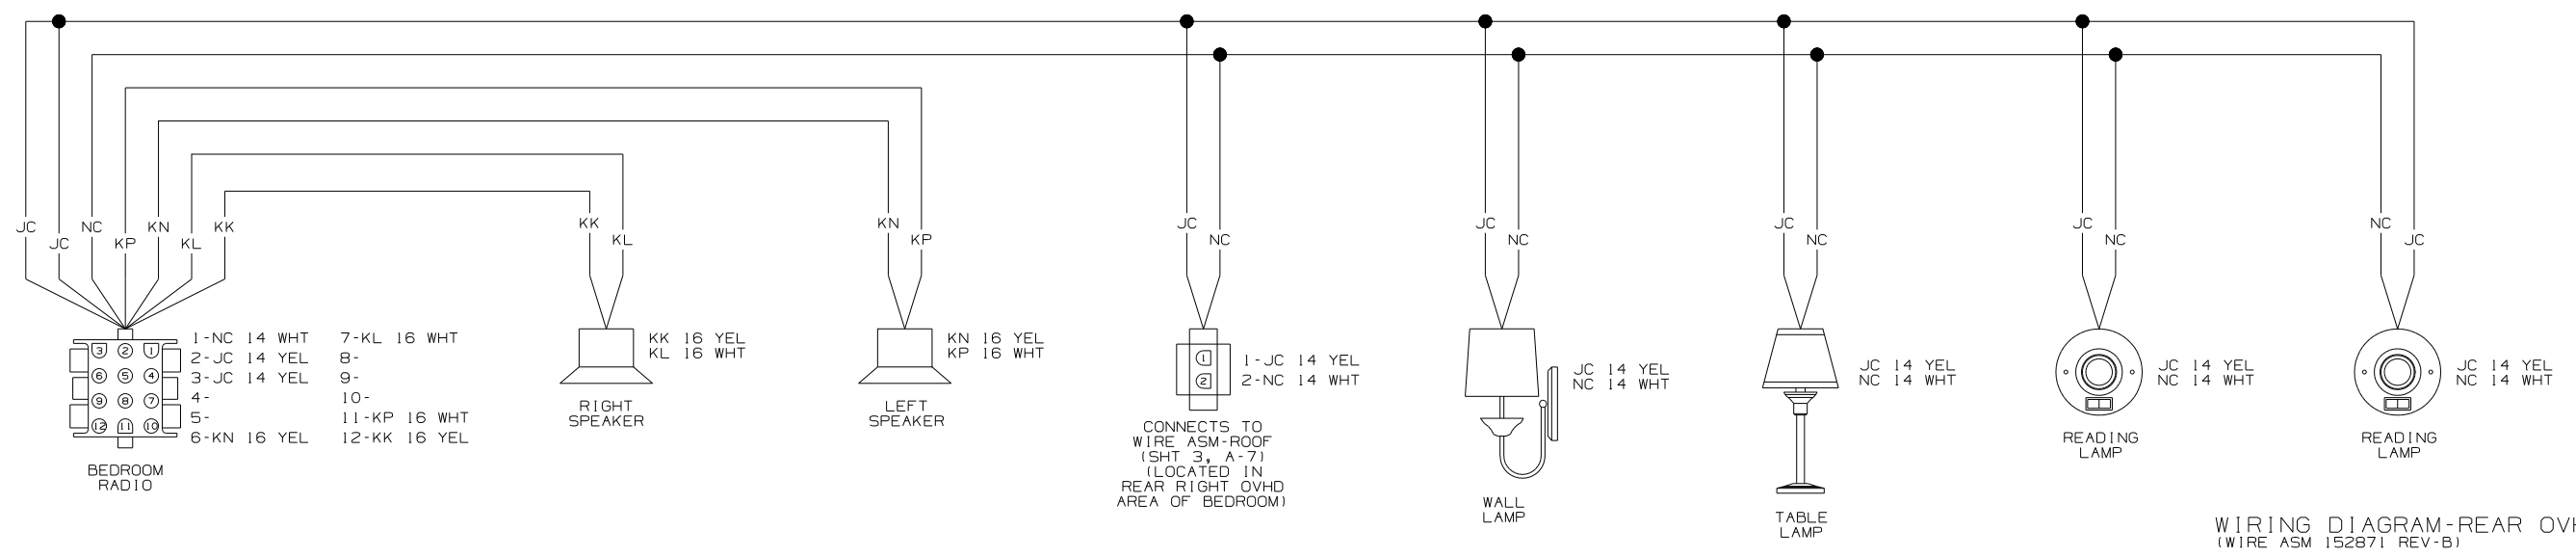





NOTES:  
 1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

**WIRING DIAGRAM-SIDEWALL, RIGHT**  
(WIRE ASM 155714 REV-D)



FIRST USED	06 P32T
TITLE	DO NOT SCALE DRAWING
TITLE	WIRING DIAGRAM-BODY, 12V
SHEET 4	PART NO 155461 REV

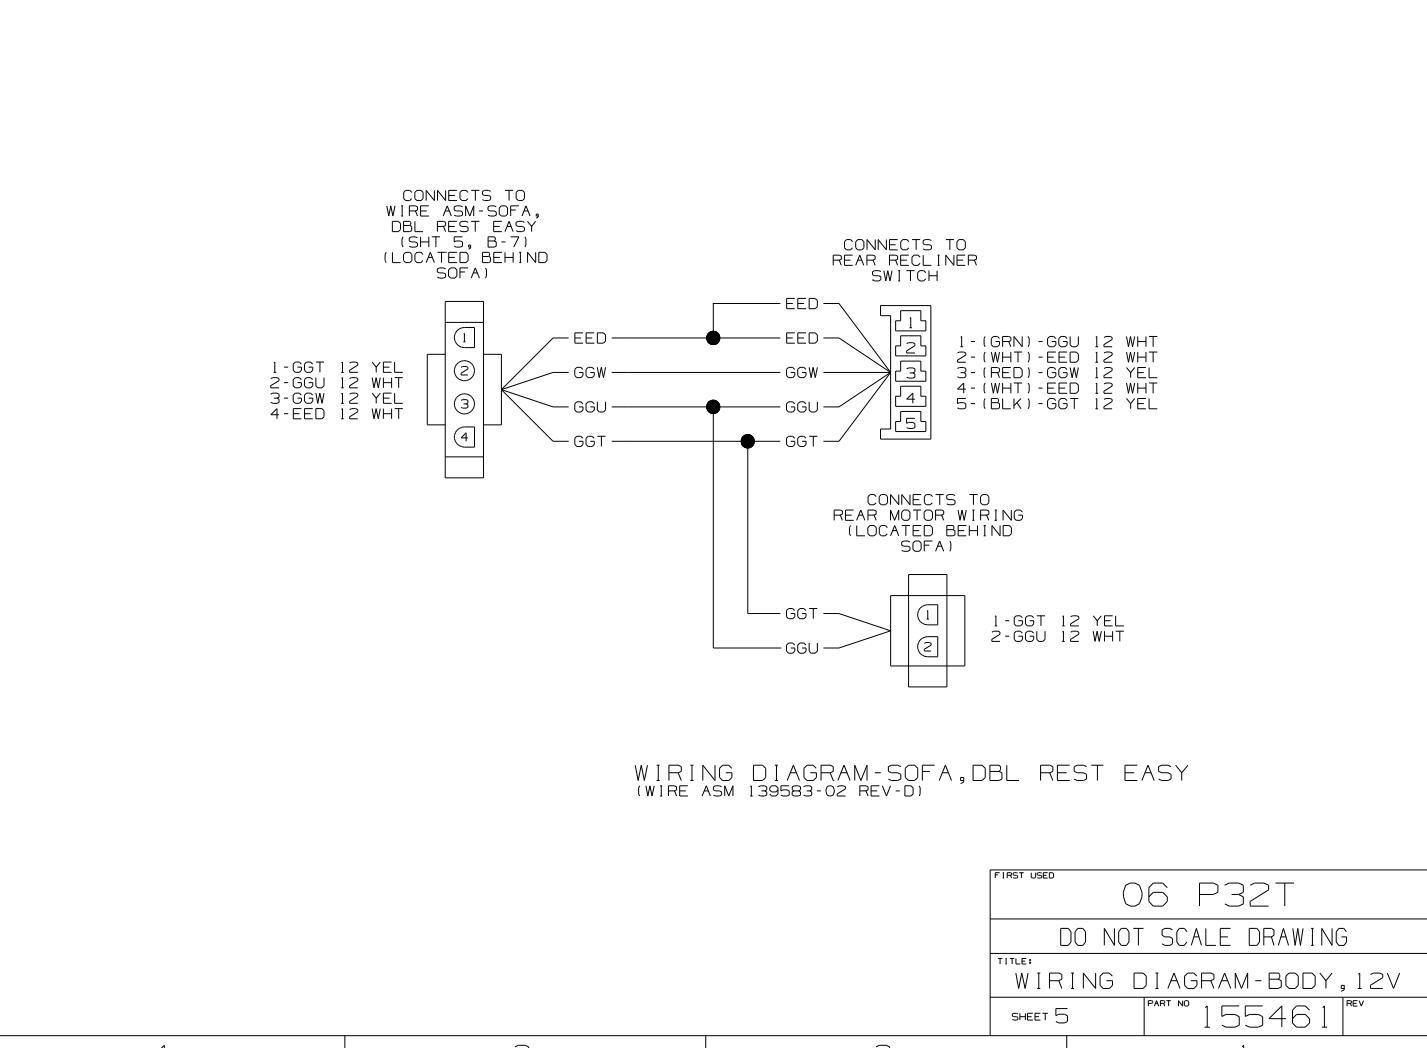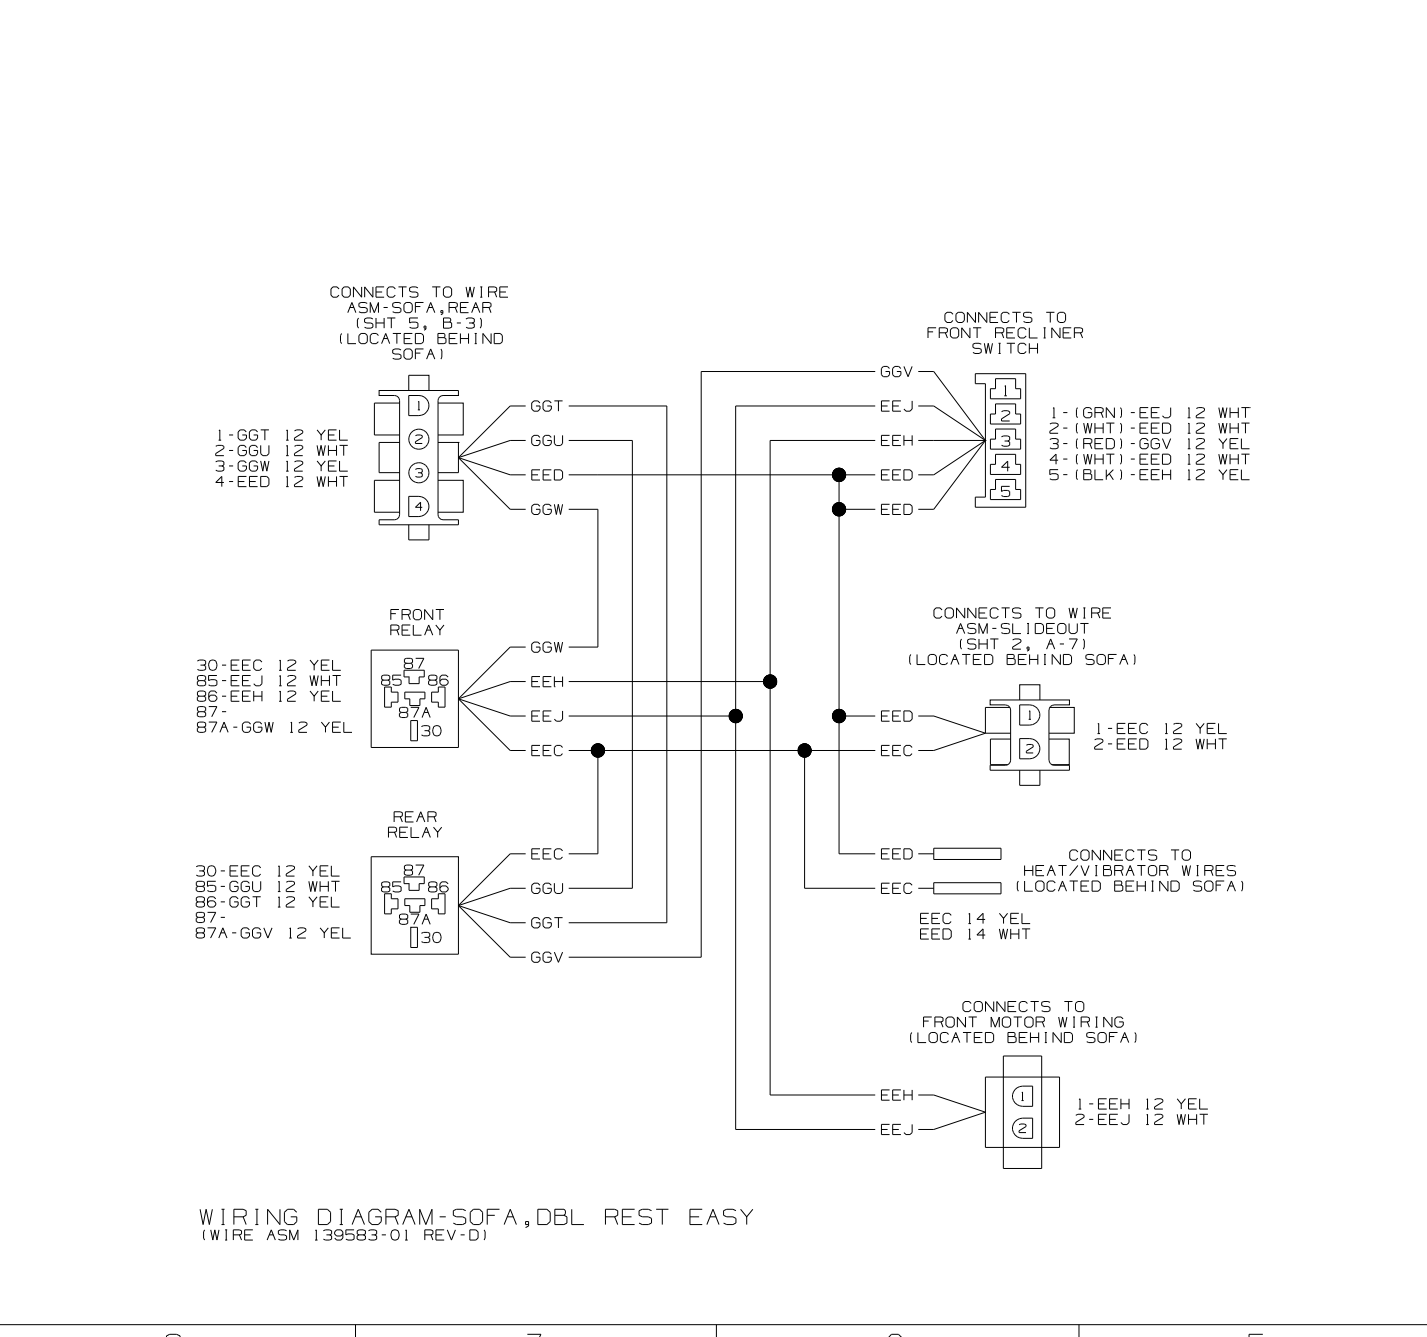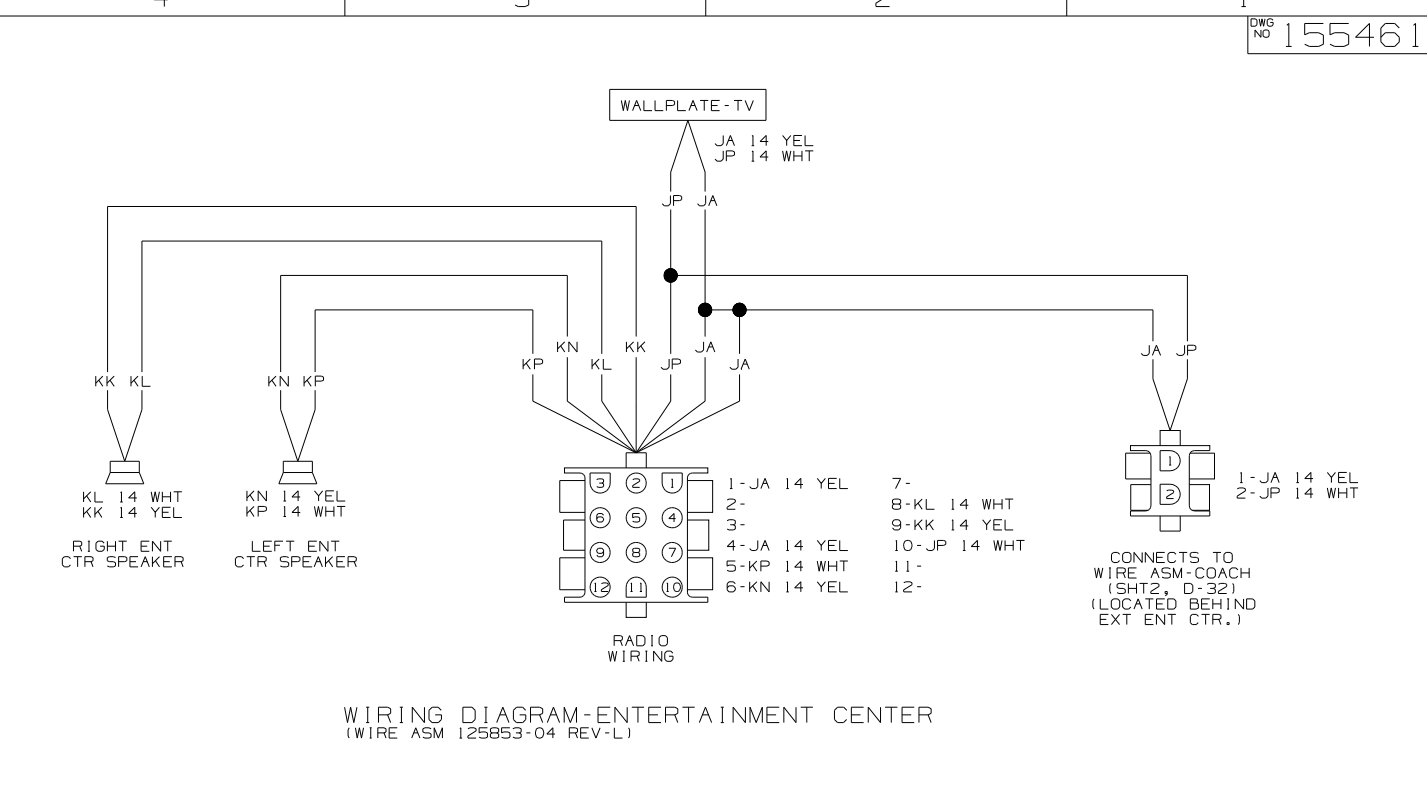

FIRST USED	06 P32T		
TITLE	DO NOT SCALE DRAWING		
	WIRING DIAGRAM-BODY, 12V		
SHEET 5	PART NO	155461	REV

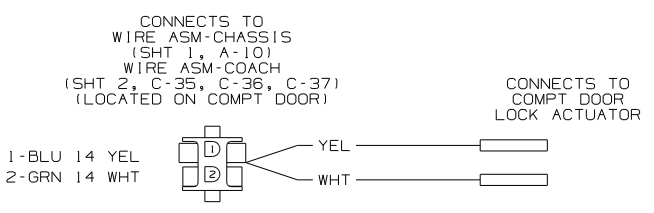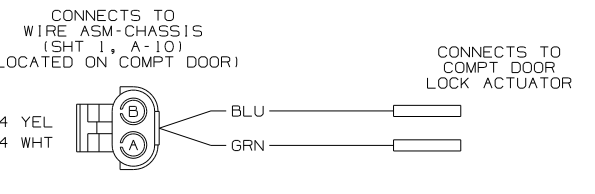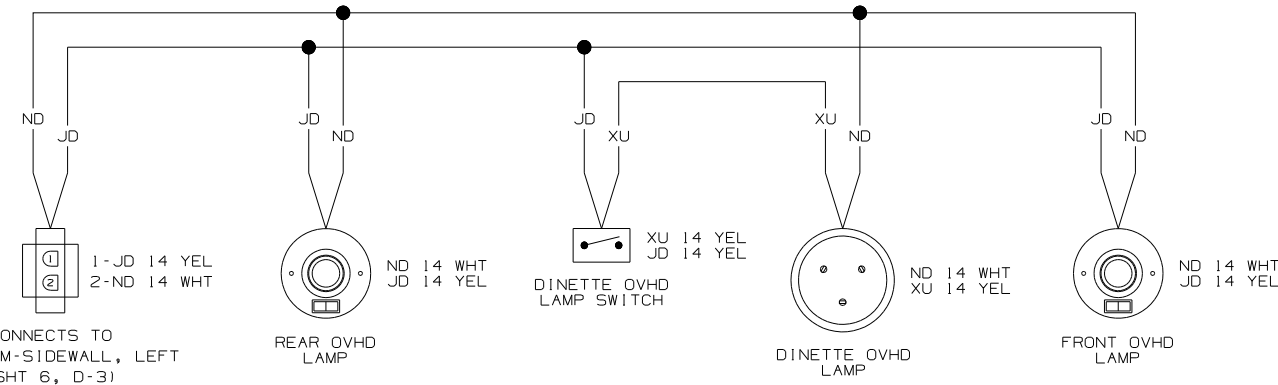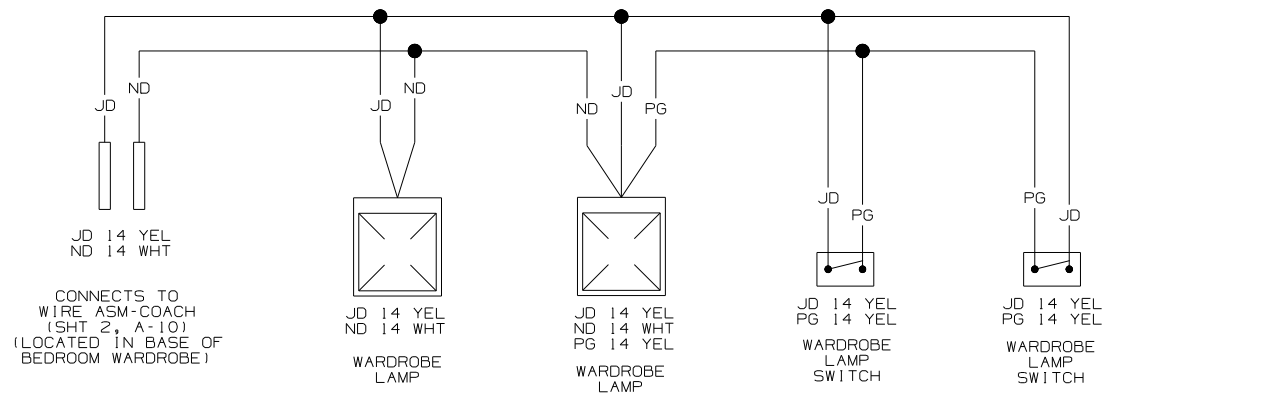

NOTES:  
1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

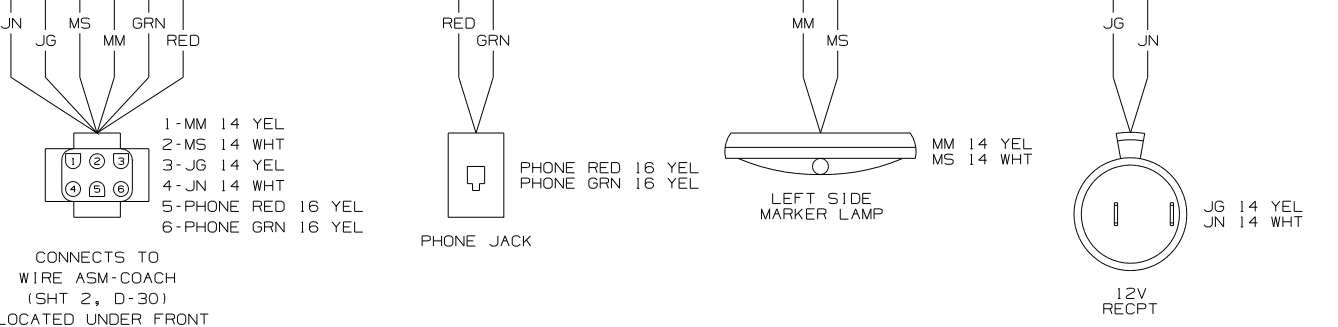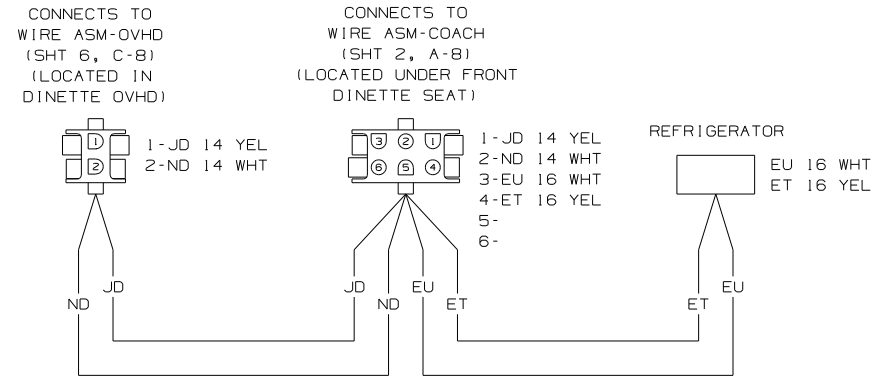

FIRST USED	06 P32T	
TITLE	DO NOT SCALE DRAWING	
TITLE	WIRING DIAGRAM-BODY, 12V	
SHEET 6	PART NO 155461	REV