




**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

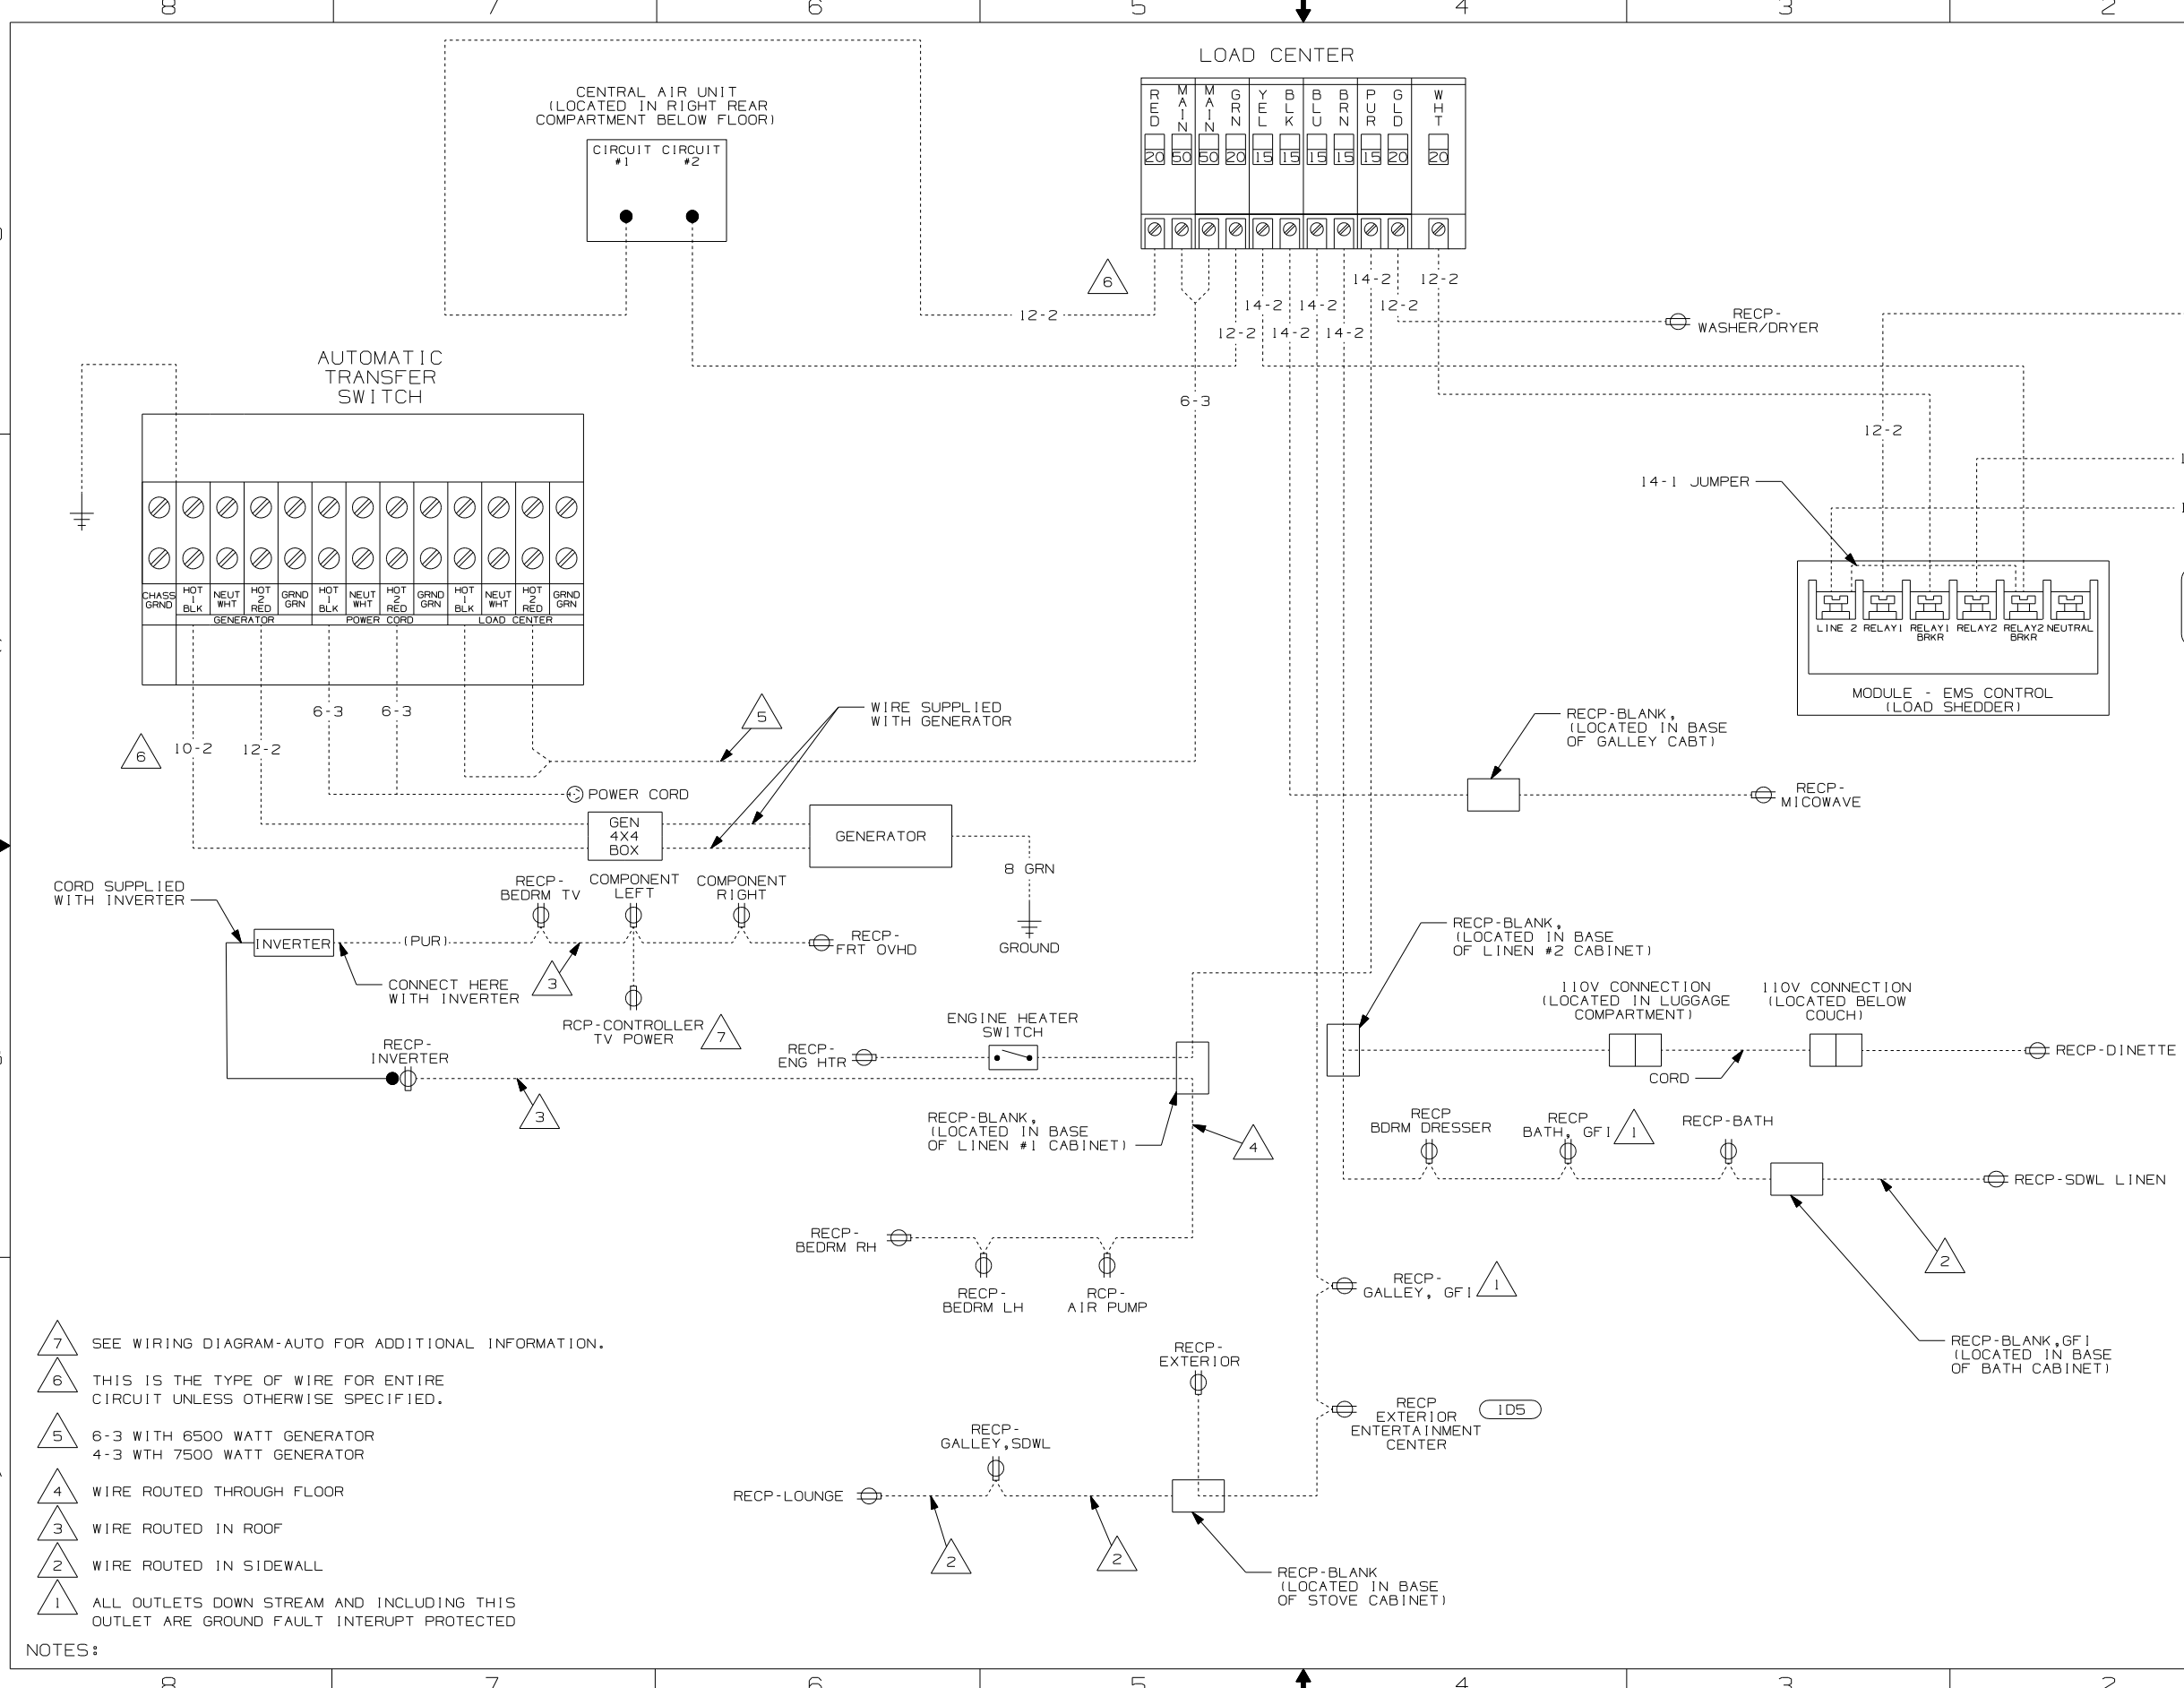

- 7 SEE WIRING DIAGRAM-AUTO FOR ADDITIONAL INFORMATION.
- 6 THIS IS THE TYPE OF WIRE FOR ENTIRE CIRCUIT UNLESS OTHERWISE SPECIFIED.
- 5 6-3 WITH 6500 WATT GENERATOR  
4-3 WITH 7500 WATT GENERATOR
- 4 WIRE ROUTED THROUGH FLOOR
- 3 WIRE ROUTED IN ROOF
- 2 WIRE ROUTED IN SIDEWALL
- 1 ALL OUTLETS DOWN STREAM AND INCLUDING THIS OUTLET ARE GROUND FAULT INTERRUPT PROTECTED

NOTES:

- 40D ACCESSORY PACKAGE
- 21K DINING/COMPUTER TABLE/CHAIRS
- 105 ENTERTAINMENT CENTR/EXT W/CD
- 1B2 WTR HTR-10GAL/ELEC/LP/MTRAIID
- 78J ELECTRICAL SYSTEM-50 AMP
- 265 CODES/STANDARDS-CSA/CMVSS
- 1B1 CODES/STANDARDS USA
- 1B1 265 78J 40D

**WINNEBAGO**

COPYRIGHT 2004  
WINNEBAGO  
INDUSTRIES, INC.

DFTR	ORIG. DATE
CHKR	ALL DIMENSIONS ARE IN MILLIMETERS
P.E.	FIRST USED
M.E.	06 P36G
DSNR	
UNSPECIFIED TOLERANCES ARE:	MATERIAL:
WHOLE DIM (X) :	
ONE-PLACE (X.X) :	
TWO-PLACE (X.XX) :	
ANGLE :	
THIRD ANGLE PROJECTION	
DO NOT SCALE DRAWING	
TITLE: WIRING DIAGRAM-BODY, 110V	
SHEET 1 OF 2	PART NO 153555
REF:	1 10/7/2005

