





Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.


If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

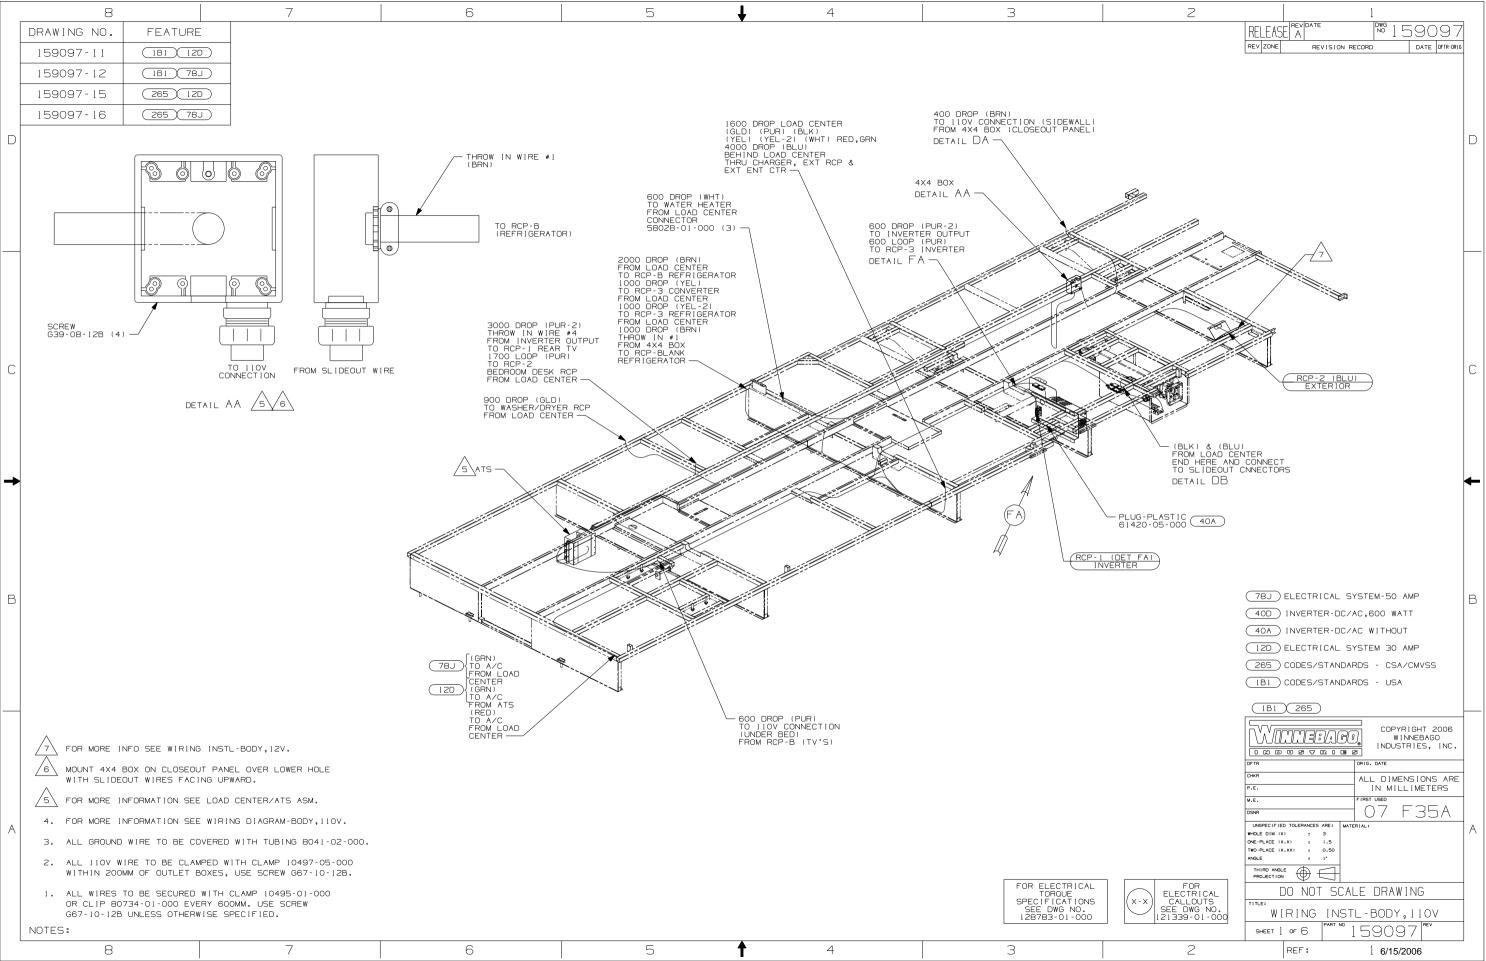

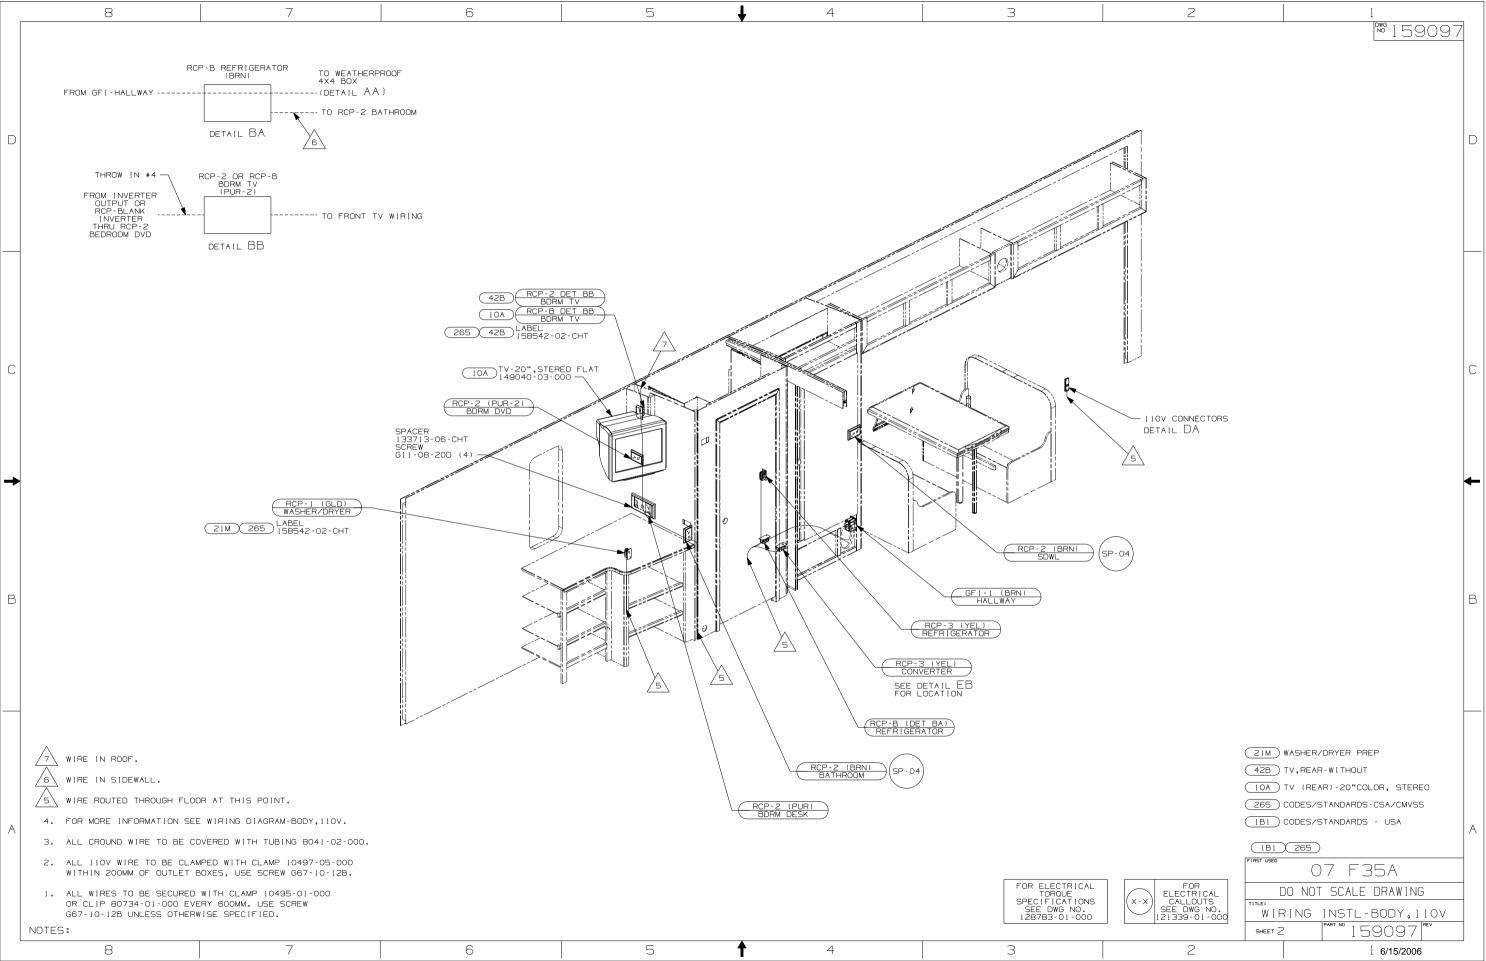

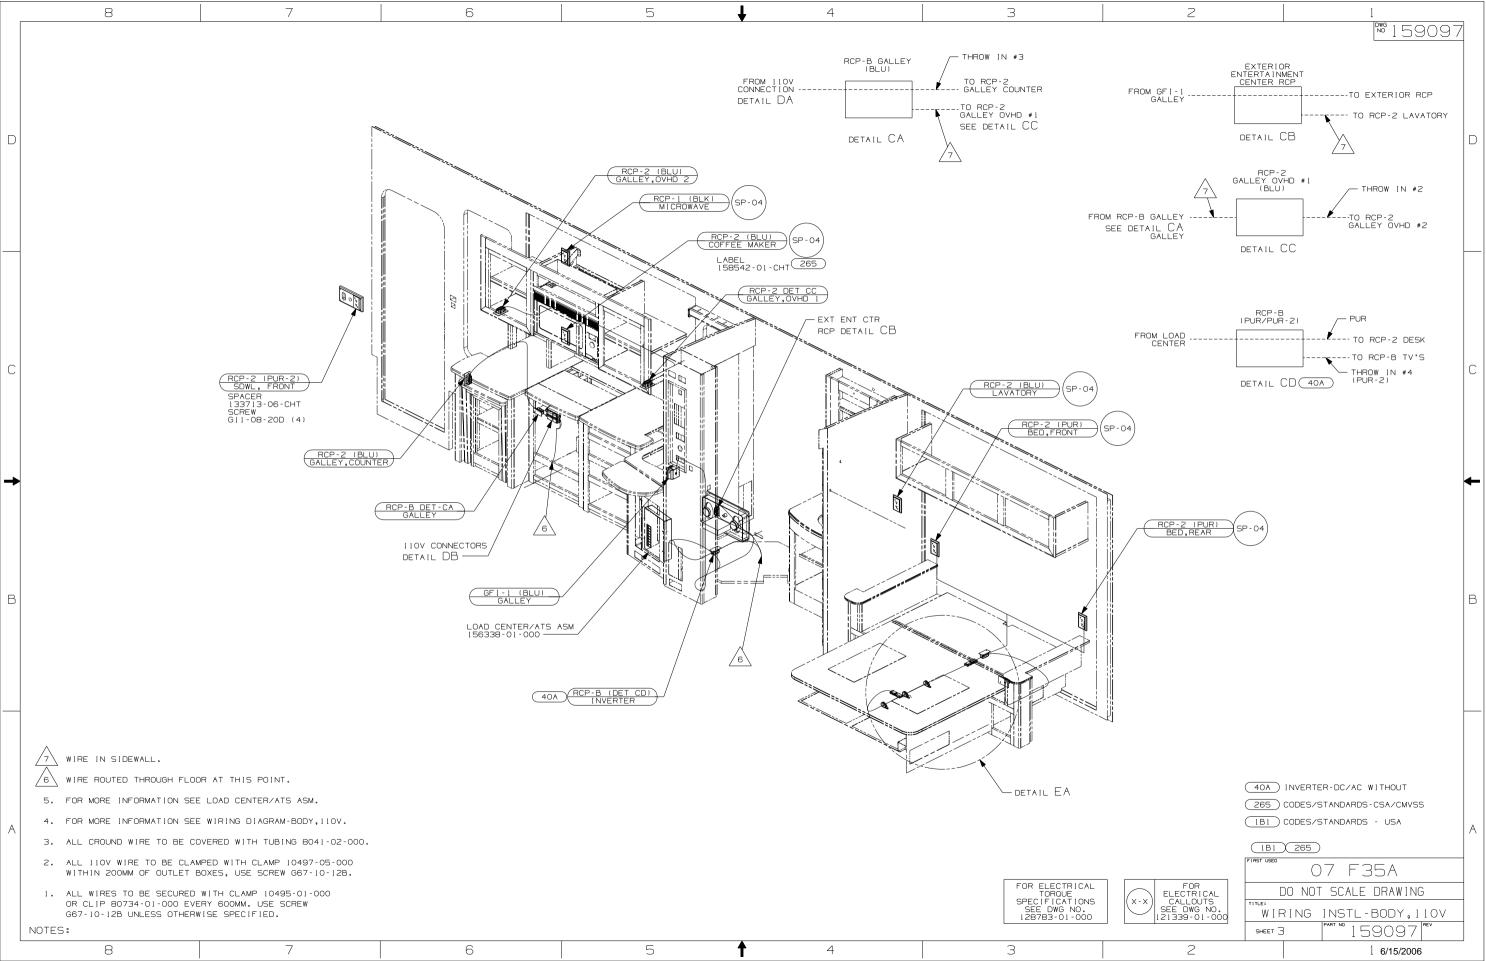

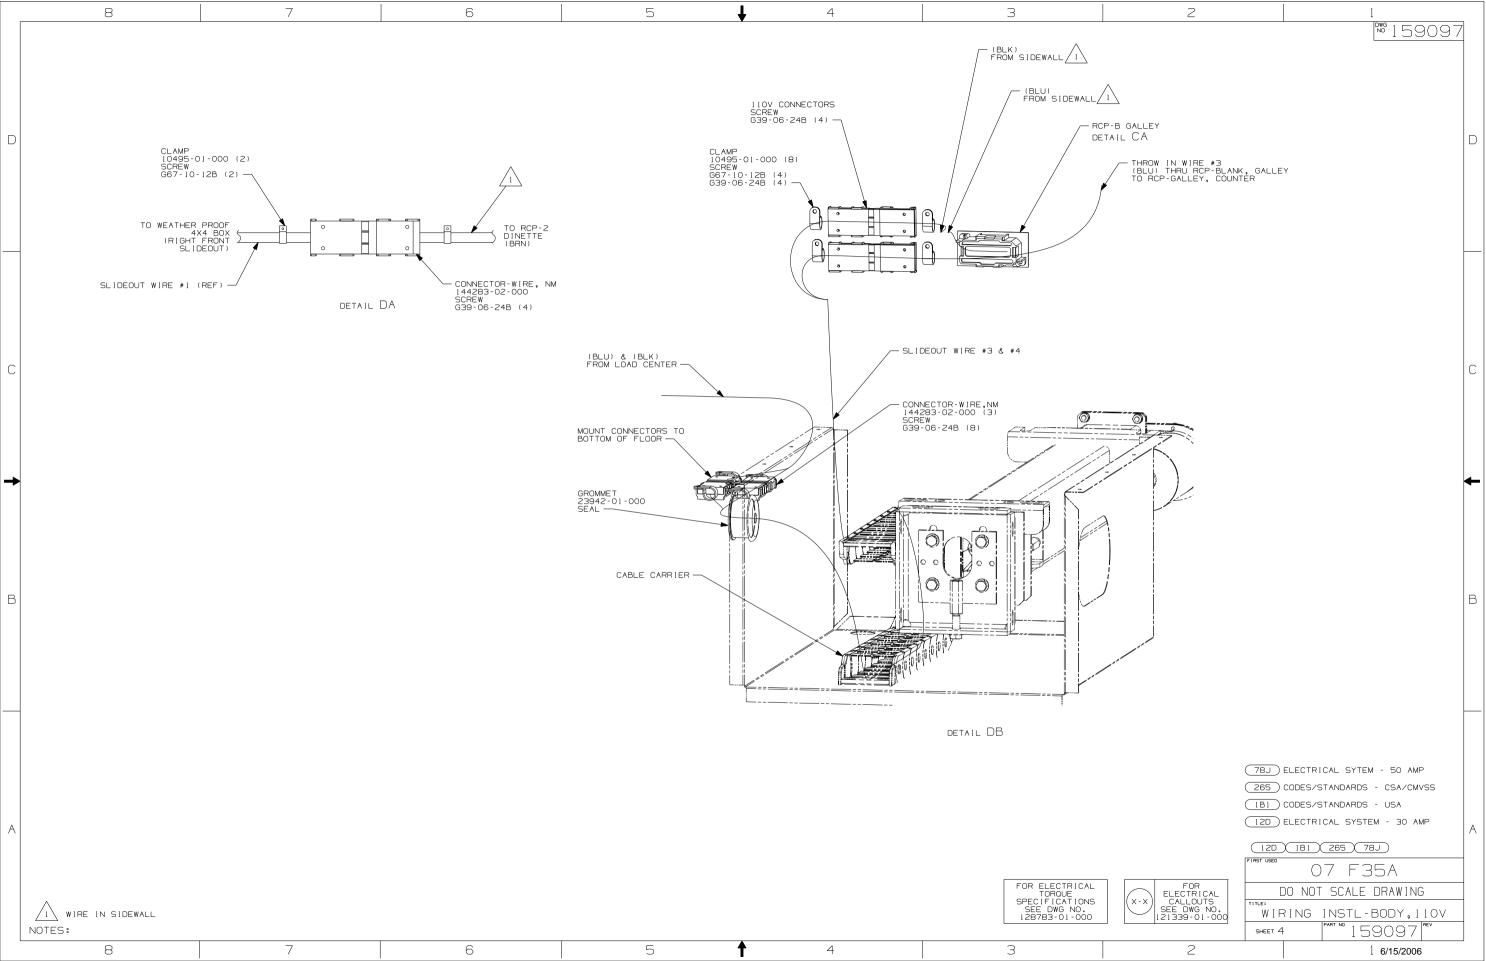

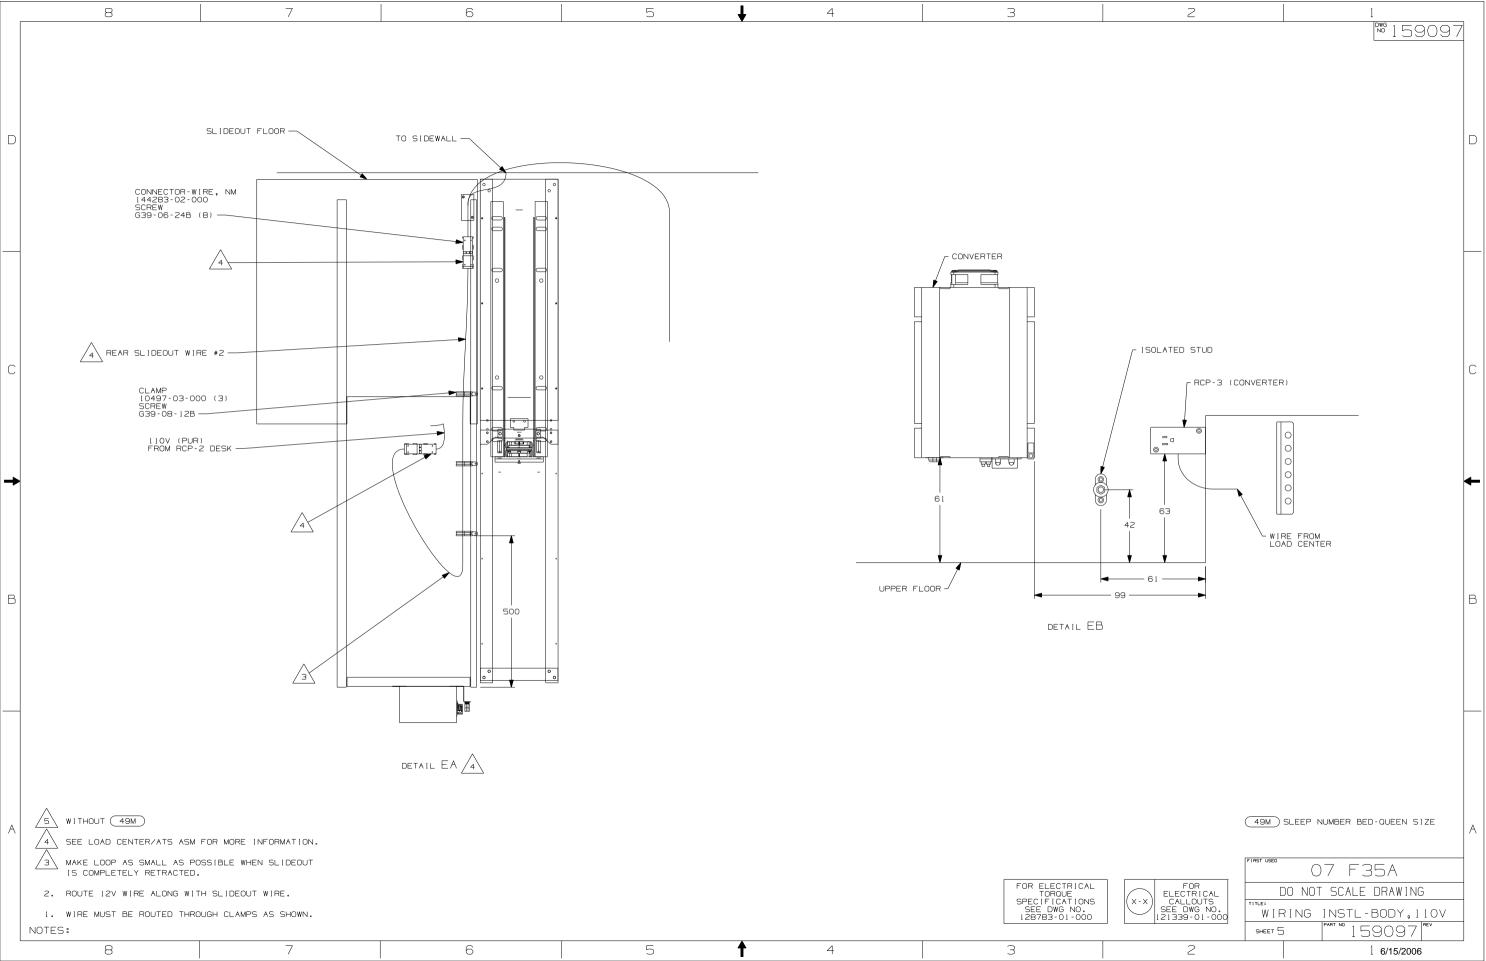

	8	7	6	5	4	3	2	1
D								№ 159097
C ▲	INVERTER-600 WATT 154511-01-000 SCREW G39-10-12U (4) DETAIL FB	PUR-2 THROW IN #5	SCC GG CL IO SC GG PUR: TO RI PUR: TO RI PUR	NNECTOR-WIRE, NM 4283-02-000 REW 495-01-000 (2) REW 7-10-12B (2) 2 (THROW IN #4) CP-B (TV'S) INVERTER (REF) R) LOOP M LOAD TER T-MODULE MOUNT -03-CHT -12U (4)		NEG CABLE FROM WIRE ASM-INVERTER POS CABLE FROM WIRE ASM-INVERTER REMOTE DISPLAY PANEL & REMOTE ON/OFF CONVECTION WIRE AC INPUT CORD AC OUTPUT HARD WIRE OPENING CASE GROUND FROM WIRE ASM- INVERTER		
A		DETAIL FA	RCP-IN COVER-ELECR 157462-02-04	VERTER (REF)	4	FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000	ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000	78.J ELECTRICAL SYSTEM-50 AMP 40.D INVERTER-DC/AC,600 WATT 265 CODES/STANDARDS - CSA/CMVSS 1B1 CODES/STANDARDS - USA 12D ELECTRICAL SYSTEM - 30 AMP 12D 1B1 265 78J FIRST USED 07 F35A DO NOT SCALE DRAWING TITUE! WIRING INSTL-BODY, 110V SHEET 6 PMT NO 159097 16/15/2006 1