




DANGER


Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION


If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

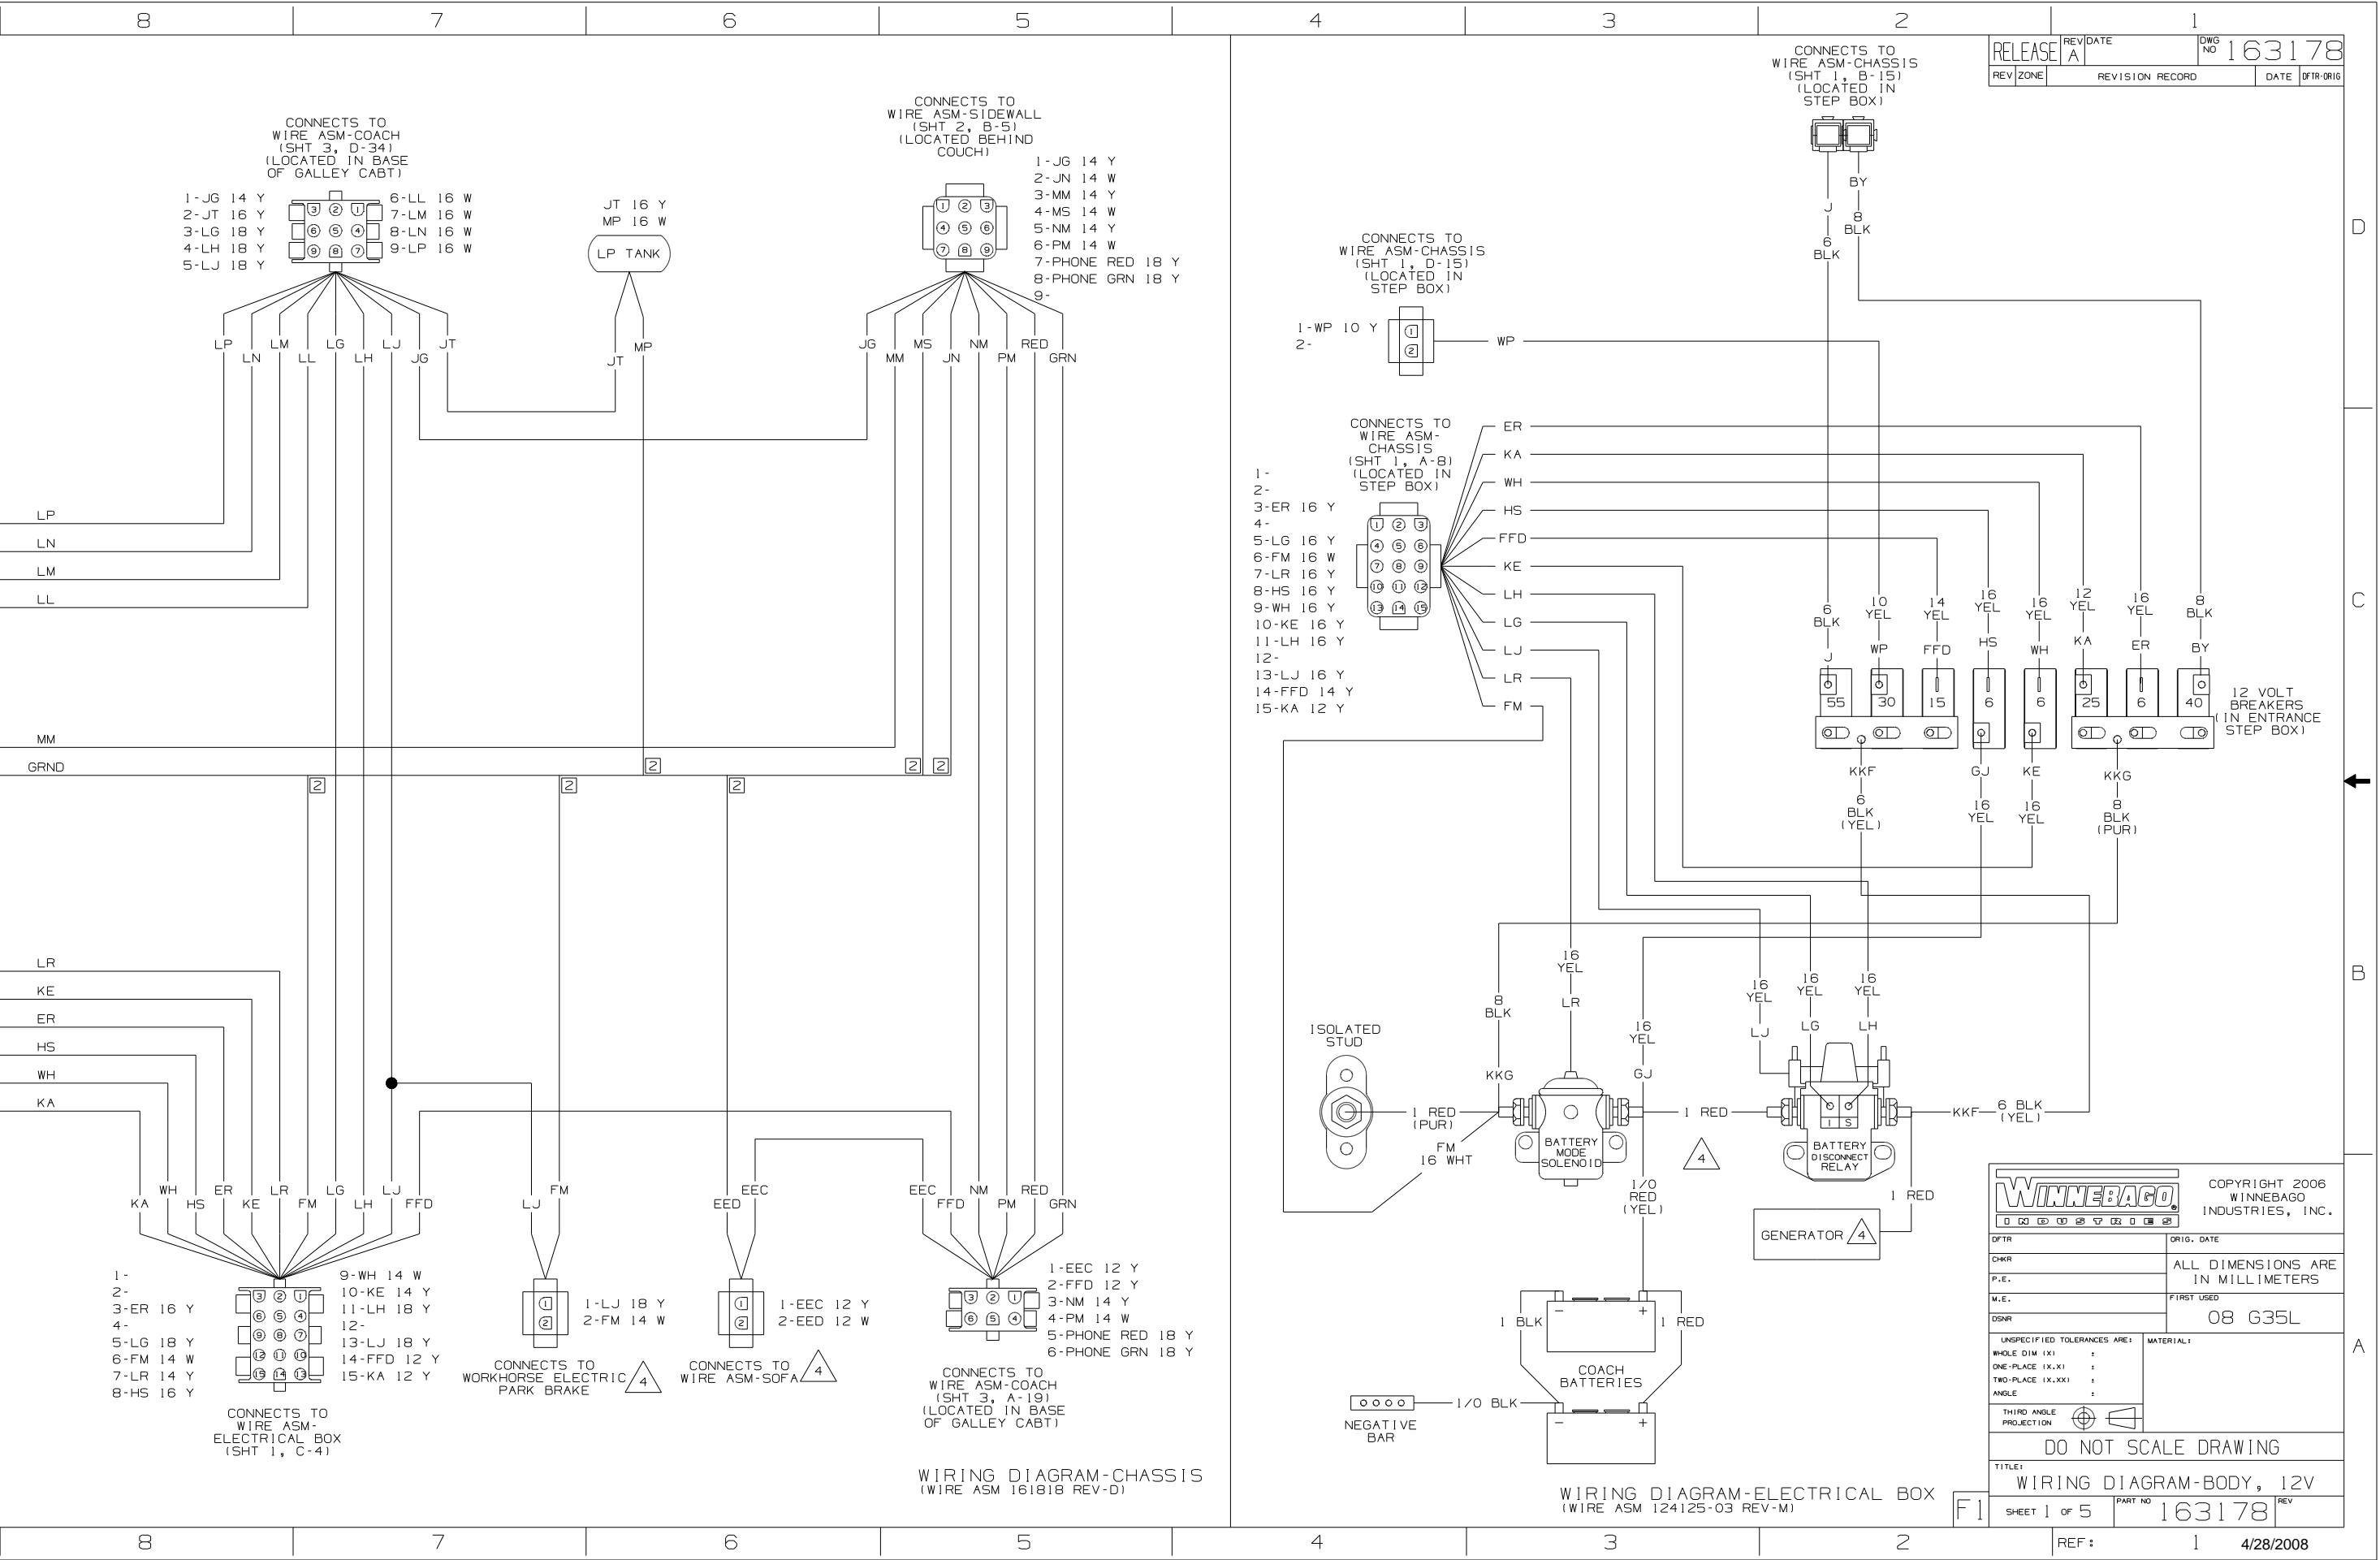

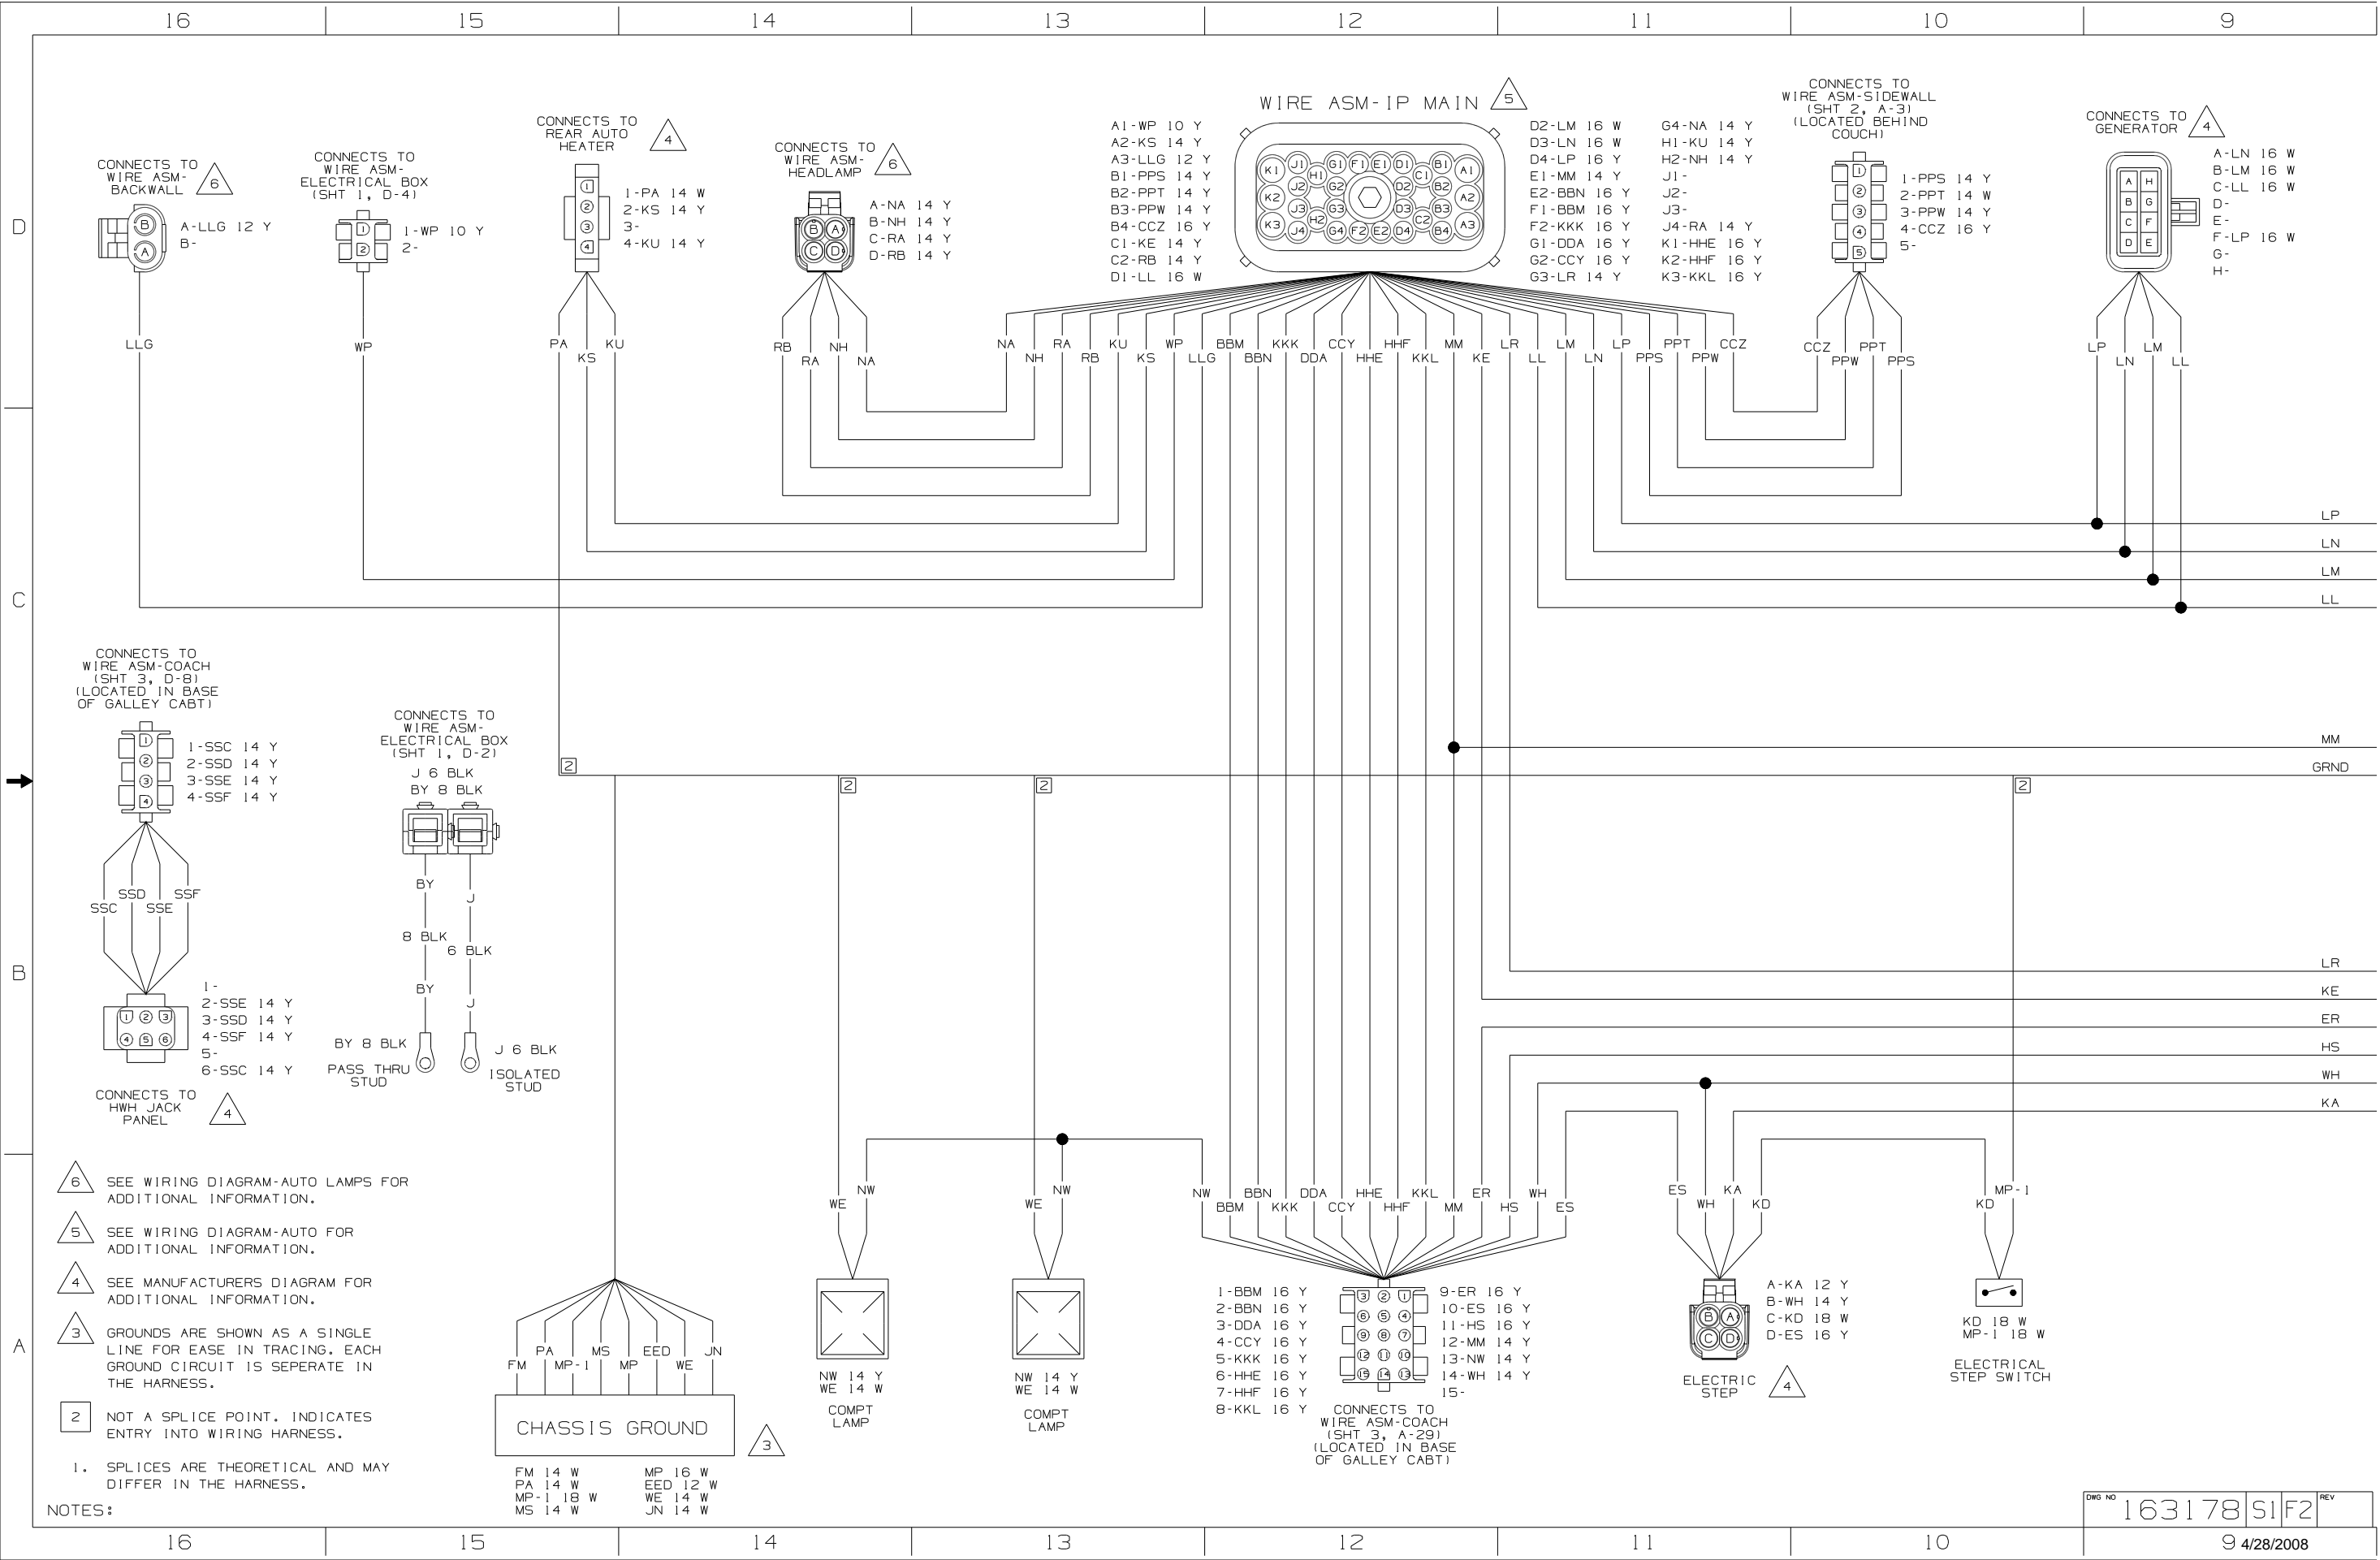

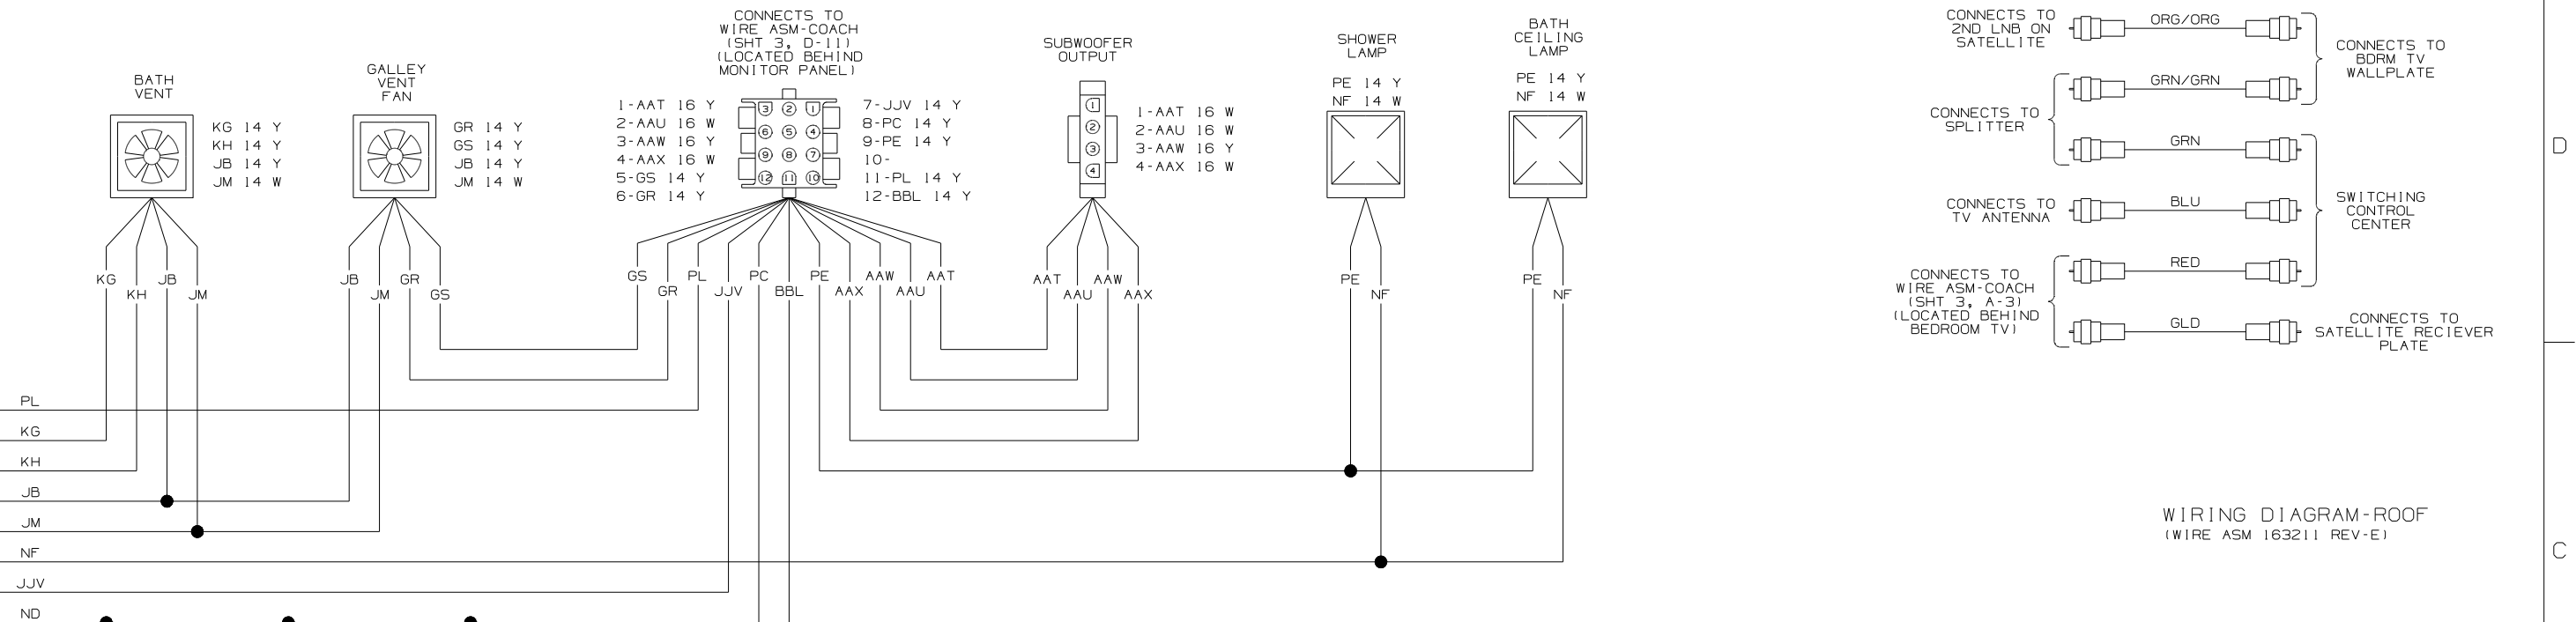


WIRING DIAGRAM-ROOF
(WIRE ASM 163211 REV-E)

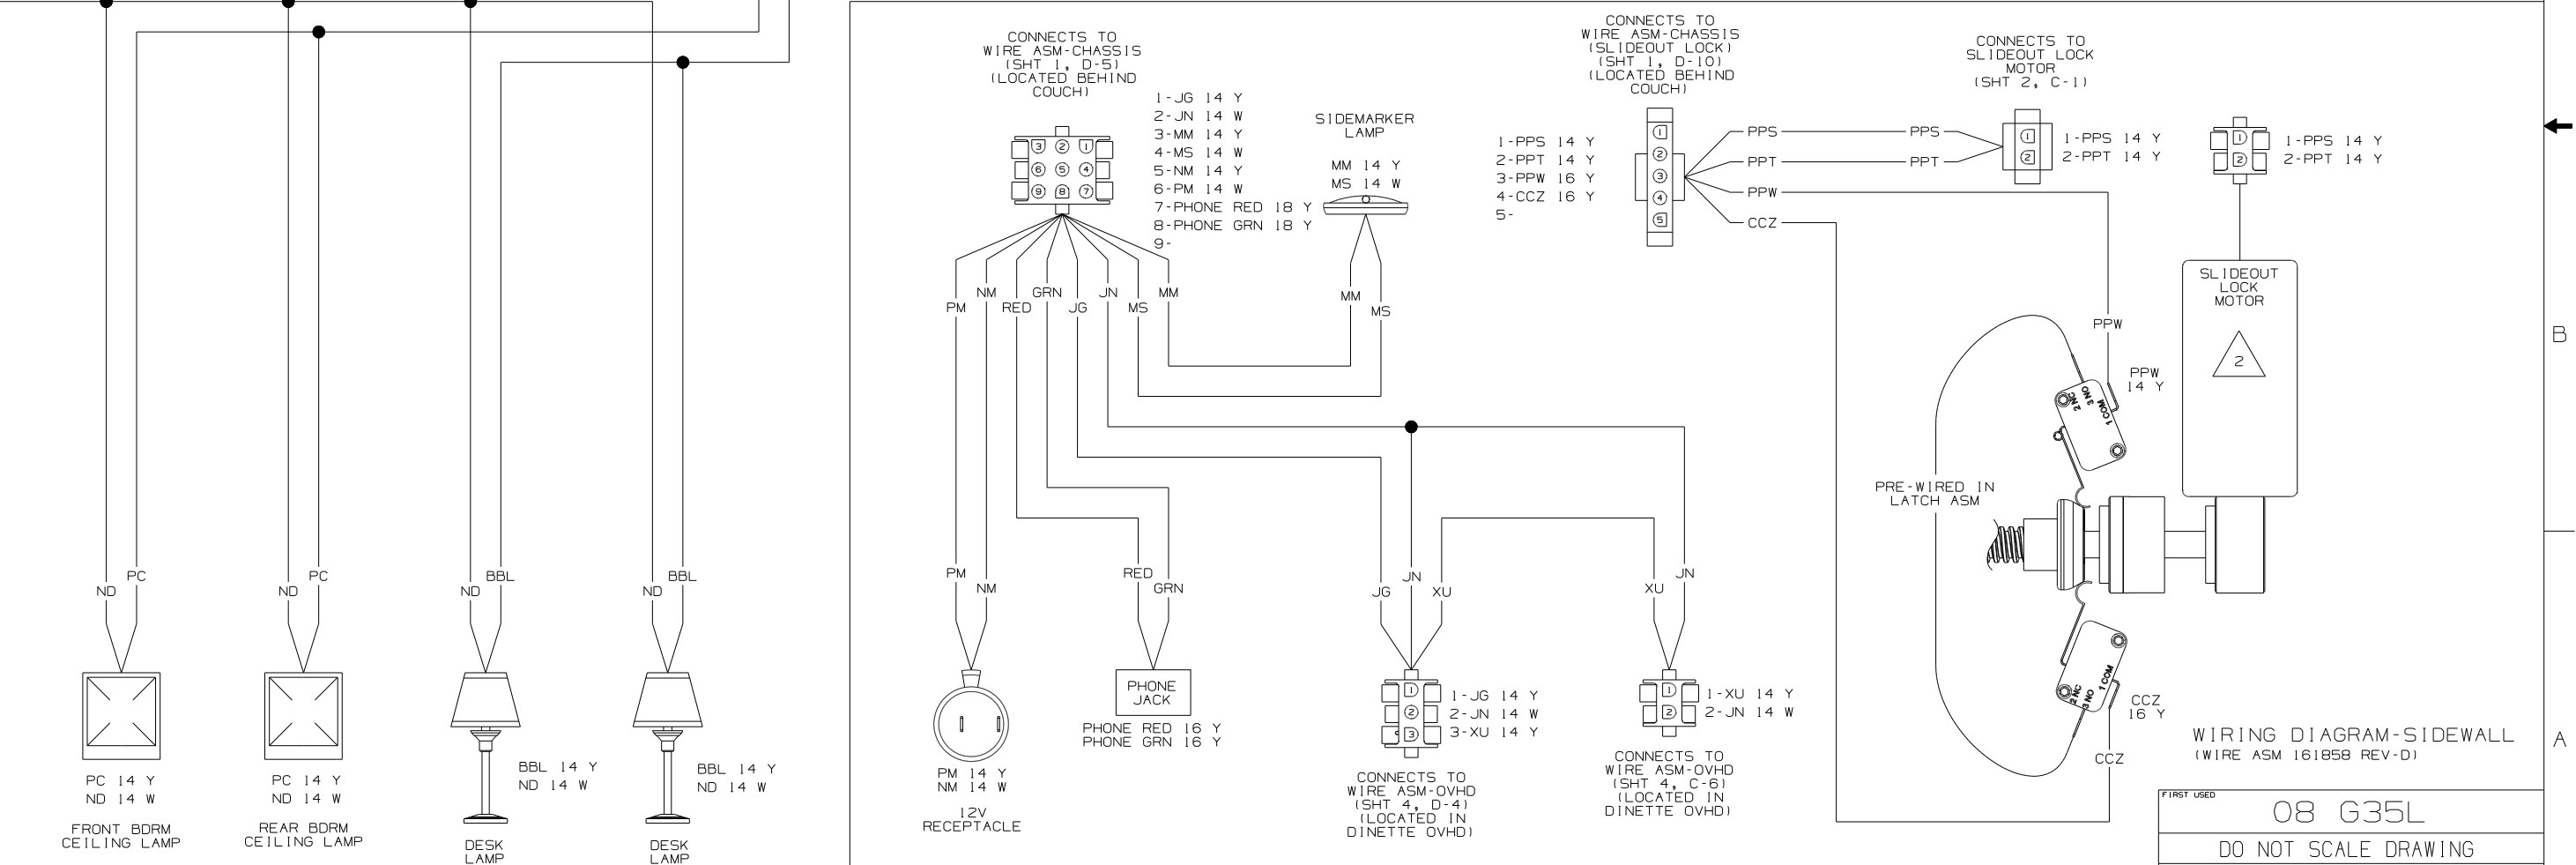


WIRING DIAGRAM-SIDEWALL
(WIRE ASM 161858 REV-D)

FIRST USED	08 G35L		
	DO NOT SCALE DRAWING		
TITLE#	WIRING DIAGRAM BODY, 12V		
F1	SHEET 2	PART NO	163178 REV


CONNECTS TO
WIRE ASM-CHASSIS
(SHT 1, C-16)
(LOCATED IN BASE
OF GALLEY CABT)

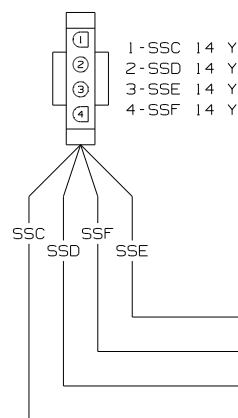


AUTO
LEVEL
SWITCH

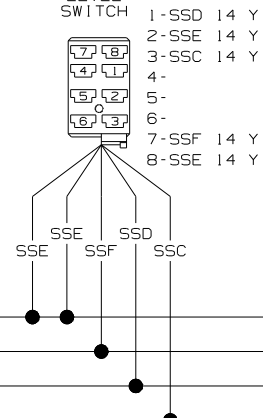

AUTO
LEVEL
SWITCH

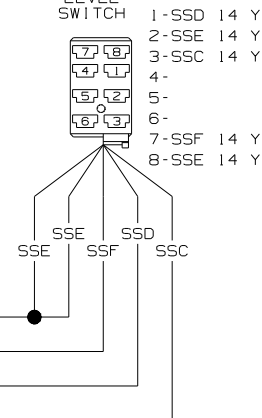


CONNECTS TO
WIRE ASM-SIDEWALL
(SHT 5, D-2)
(LOCATED IN BASE
OF GALLEY CABT)

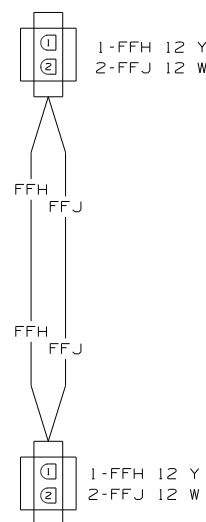


CONNECTS TO
AWNING
CONTROL BOX

CONNECTS TO
AWNING
SWITCH

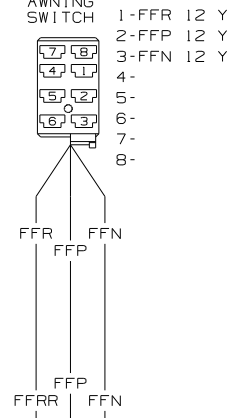


CONNECTS TO
AWNING
CONTROL BOX

CONNECTS TO
LOAD SHEDDER
MONITOR PANEL


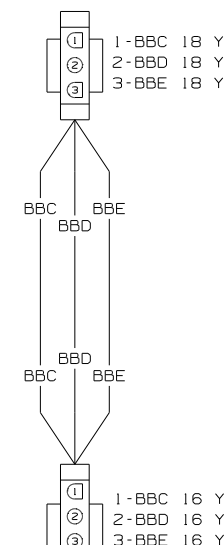


CONNECTS TO
LOAD SHEDDER
CONTROL BOARD

CONNECTS TO
WIRE ASM-SIDEWALL
(SHT 5, D-1)
(LOCATED IN BASE
OF GALLEY CABT)

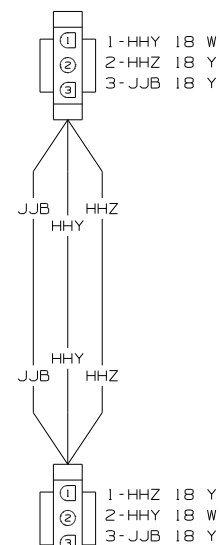

CONNECTS TO
AWNING
CONTROL BOX

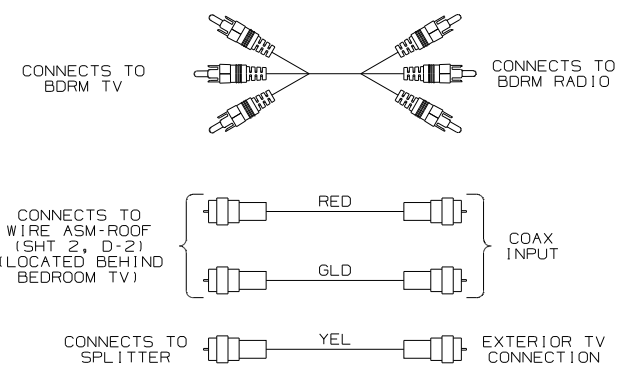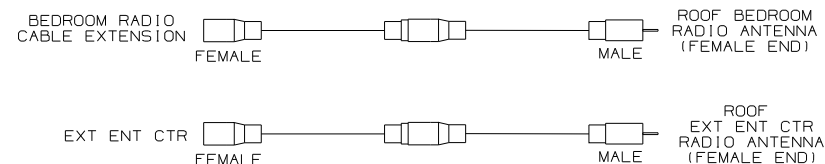

WIRING DIAGRAM-COACH
(WIRE ASM 163214 REV-C)

FIRST USED	08 G35L
TITLE	DO NOT SCALE DRAWING
WIRING DIAGRAM, BODY 12V	
SHEET 3	PART NO 163178

