




**DANGER**

**Danger of electrical shock, burns or death.** Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




**CAUTION**

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

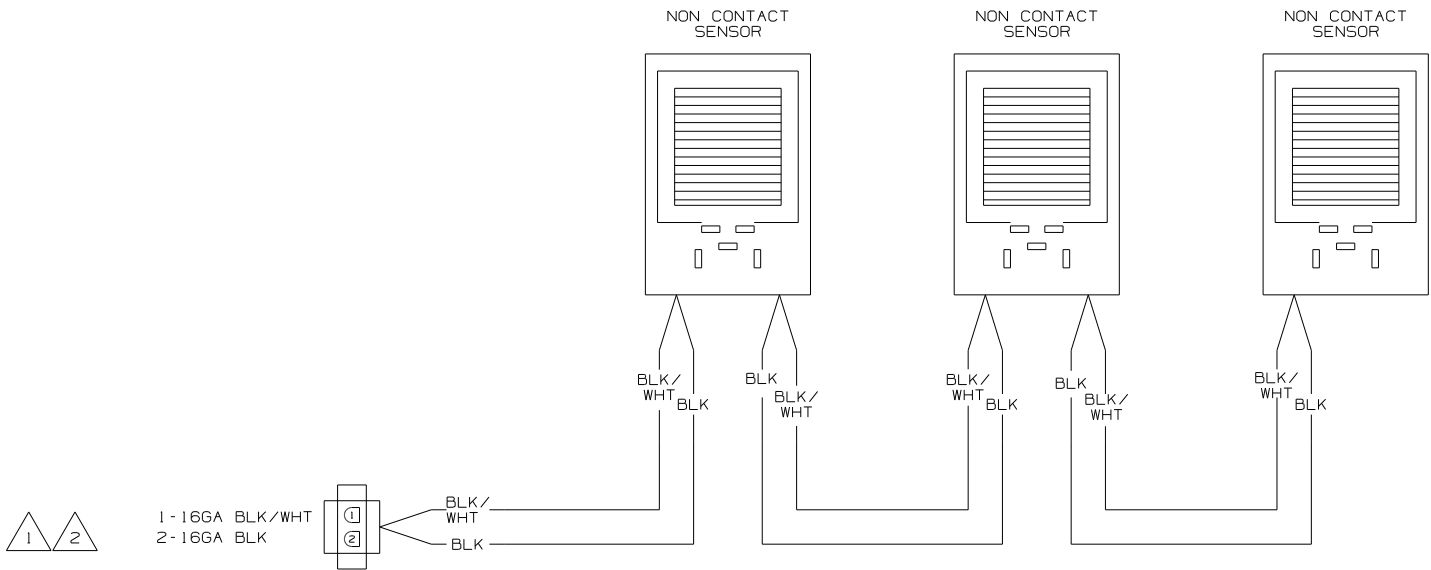

WIRING DIAGRAM-TANK ,WATER  
OR  
WIRING DIAGRAM-TANK ,MAIN  
(WIRE ASM-151316 REV A)

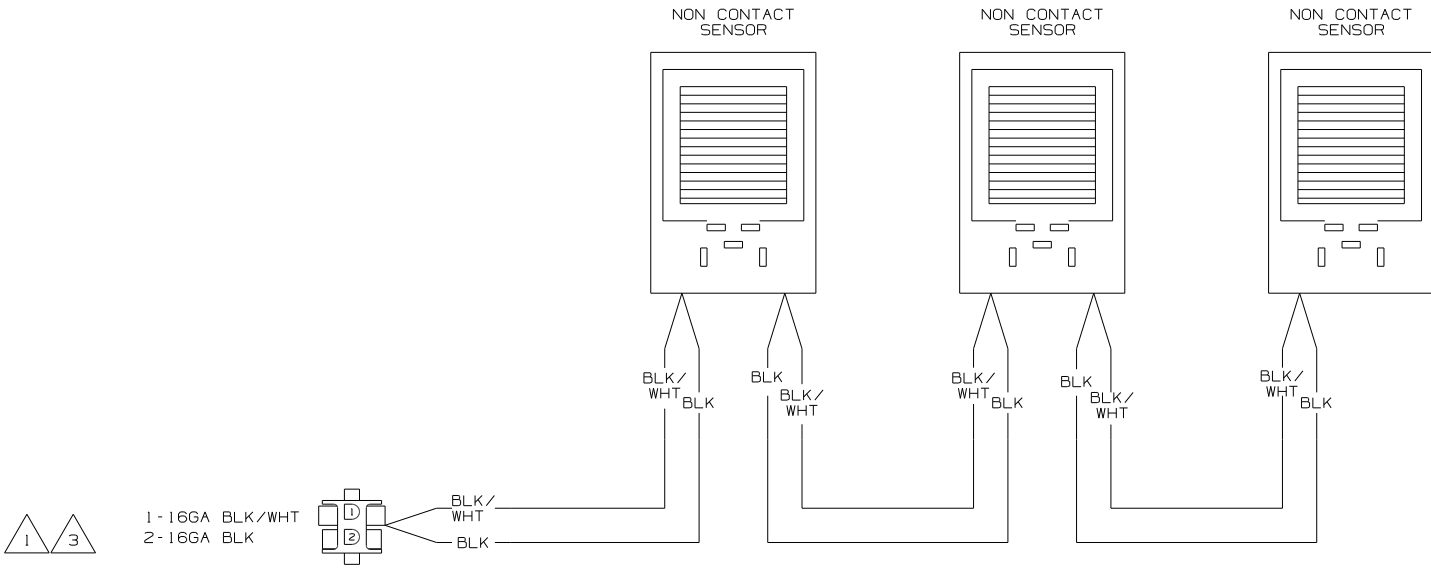

WIRING DIAGRAM-AUX HOLDING  
(WIRE ASM-151317 REV A)

- 3 IF TWO MONITOR PANELS ARE UTILIZED THIS WIRE ASM CONNECTS TO WIRE ASM-TANK,DIODE PACK 151808-01 SHT2.
- 2 IF TWO MONITOR PANELS ARE UTILIZED THIS WIRE ASM CONNECTS TO WIRE ASM-TANK,DIODE PACK 151808-02 SHT2.
- 1 IF ONLY ONE MONITOR PANEL IS USED SEE WIRING DIAGRAM-BODY FOR ADDITIONAL INFORMATION.

NOTES:

**Winnebago**

0 0 0 0 0 0 0 0 0 0

COPYRIGHT 2010  
WINNEBAGO  
INDUSTRIES, INC.

DFTB

CHKR

P.E.

M.E.

DSNR

ORIG. DATE

ALL DIMENSIONS ARE  
IN MILLIMETERS

FIRST USED

05 MOTOR HOMES

UNSPECIFIED TOLERANCES ARE:

WHOLE DIM (X) : 1

ONE-PLACE (X.X) : 1

TWO-PLACE (X.XX) : 1

ANGLE : 1

THIRD ANGLE  
PROJECTION

MATERIAL:

\*

\*

\*

\*

DO NOT SCALE DRAWING

TITLE:  
WIRING DIAGRAM-HOLDING TANKS

SHEET 1 of 2

PART NO  
152594

REV

REF :

1 2/23/2010



NOTES:

3 CONNECT TO WIRE ASM-TANK,AUX. SEE SHT 1.

2 CONNECT WIRE ASM-TANK,WATER OR MAIN. SEE SHT 1.

1 SEE WIRING DIAGRAM-BODY FOR ADDITIONAL INFORMATION.

FIRST USED		05 MOTOR HOMES	
TITLE:		DO NOT SCALE DRAWING	
SHEET 2		PART NO 152594	
REV		2/23/2010	