




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

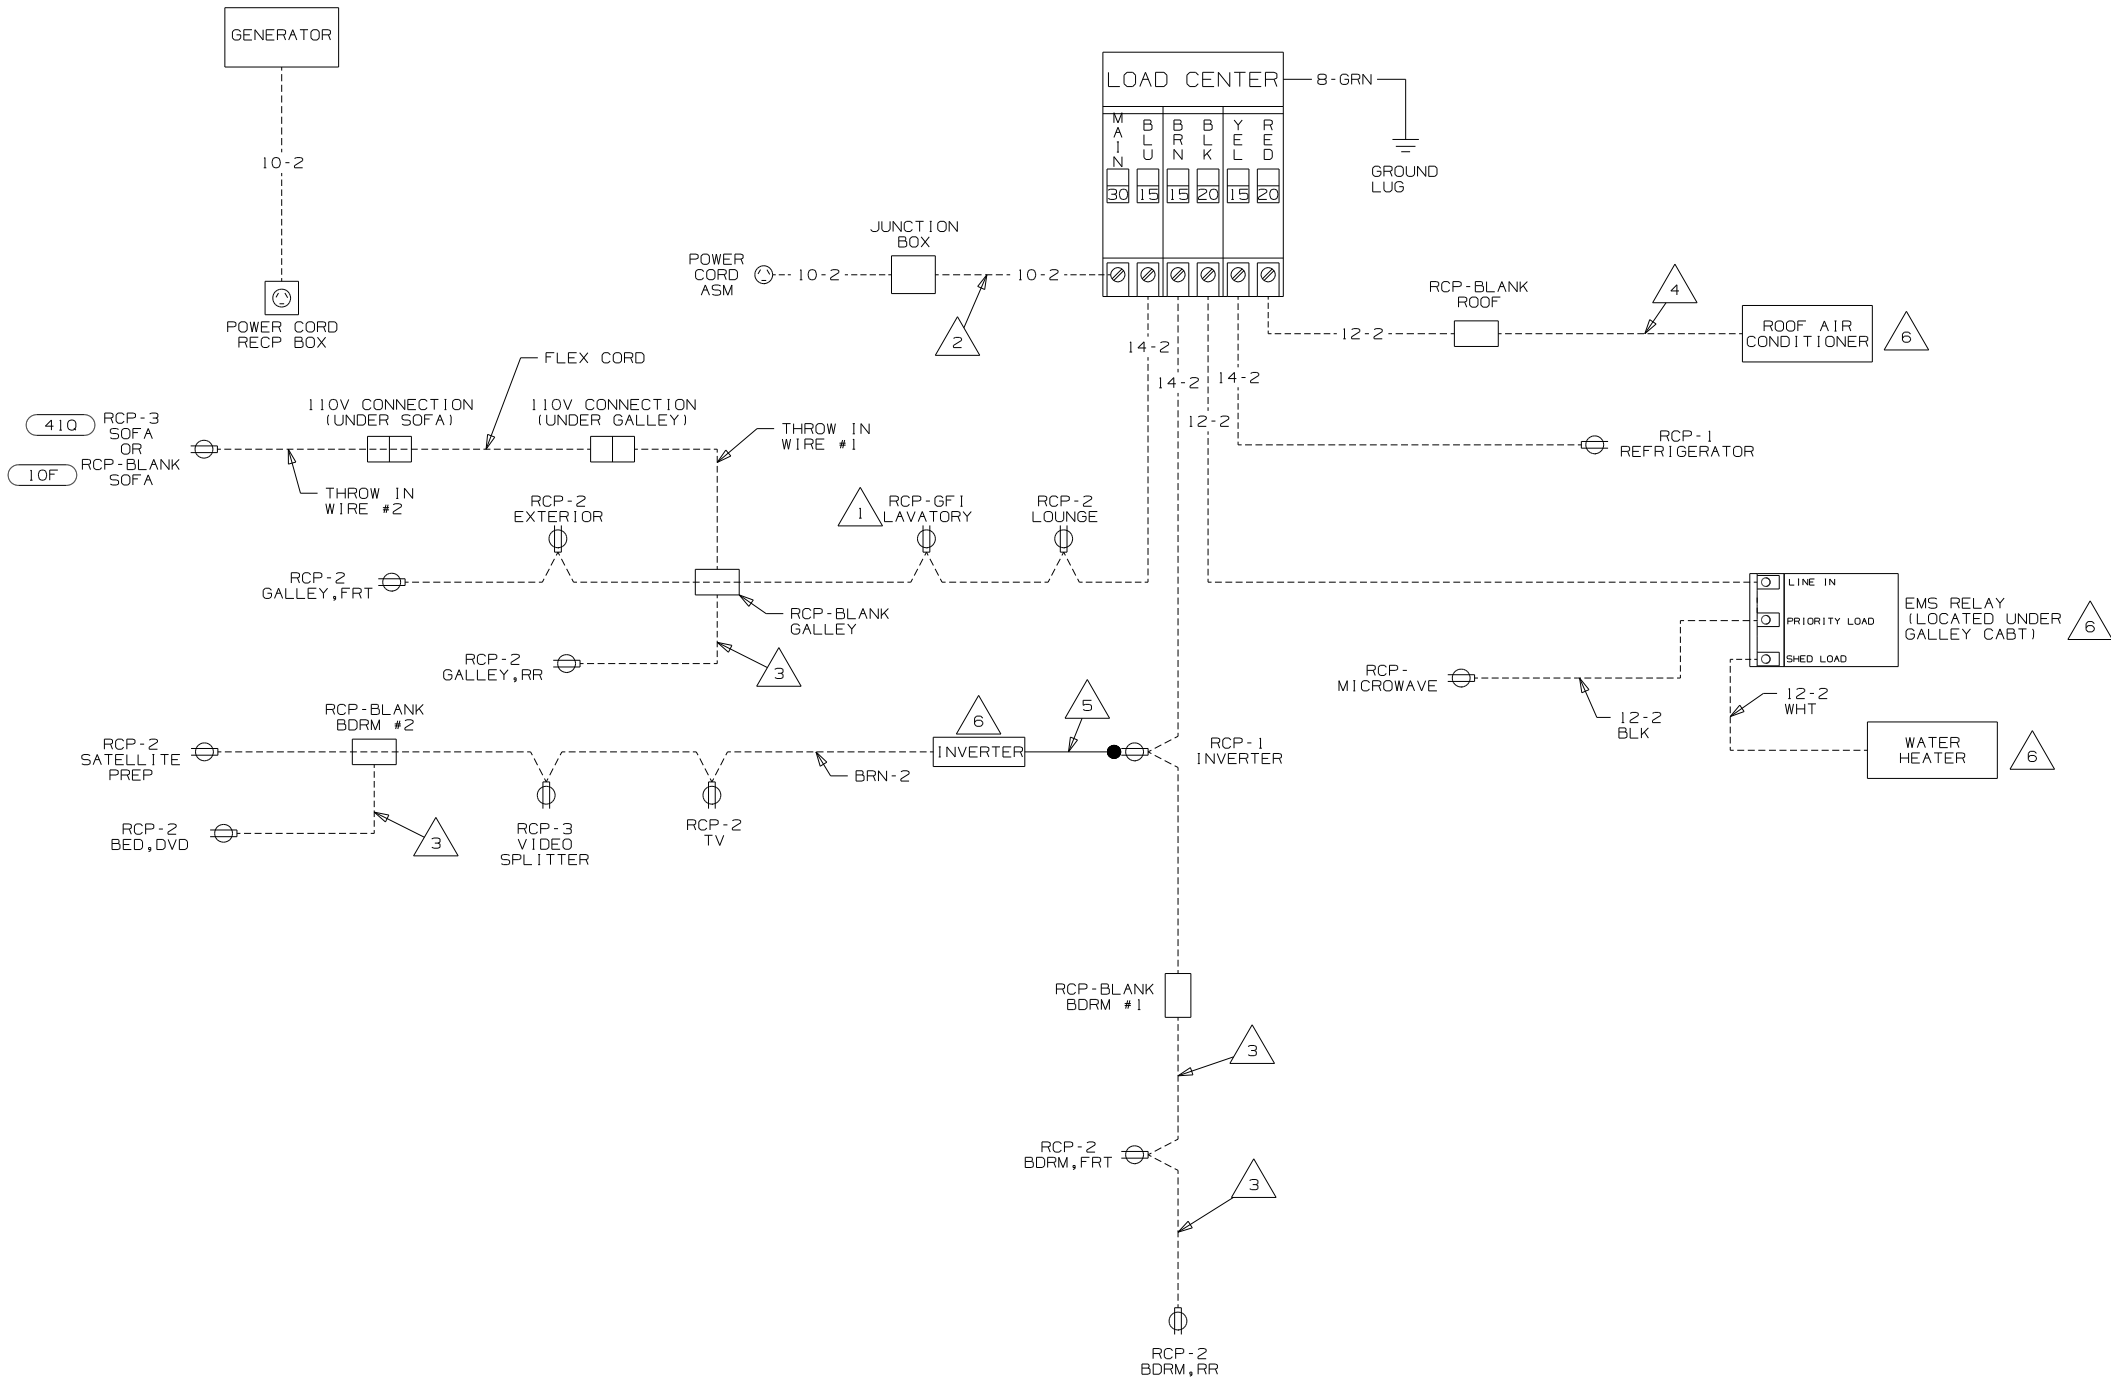

- 6

SEE MANUFACTURERS DIAGRAM.
- 5

POWER CORD SUPPLIED WITH INVERTER.
- 4

WIRE ROUTED IN ROOF.
- 3

WIRE ROUTED IN SIDEWALL.
- 2

WIRE ROUTED THRU FLOOR.
- 1

ALL WIRES DOWN STREAM AND INCLUDING THIS OUTLET ARE GROUND FAULT CIRCUIT INTERRUPT PROTECTED.

NOTES:

- 410 SOFA/SLEEPER-ULTRALEATHER HP
- 10F SOFA - ULTRALEATHER
- 120 ELECTRICAL SYSTEM 30 AMP
- 265 CODES/STANDARDS-CSA/CMVSS
- 1B1 CODES/STANDARDS USA

1B1265120

WINNEBAGO

0 0 0 0 0 0 0 0 0 0 0 0

COPYRIGHT 2010
WINNEBAGO
INDUSTRIES, INC.

DFTR

CHKR

P.E.

M.E.

DSNR

ORIG. DATE

ALL DIMENSIONS ARE
IN MILLIMETERS

FIRST USED

11 H25Q

UNSPECIFIED TOLERANCES ARE:

WHOLE DIM (X) ± 3

ONE-PLACE (X.X) ± 1.5

TWO-PLACE (X.XX) ± 0.50

ANGLE ± 1°

THIRD ANGLE
PROJECTION

⊕

⊖

DO NOT SCALE DRAWING

TITLE:
WIRING DIAGRAM-BODY, 110V

SHEET 1 OF 1PART NO
175194REV

REF :

1 4/13/2010

FOR ELECTRICAL
TORQUE
SPECIFICATIONS
SEE DWG NO.
128783-01-000

X-X

FOR
ELECTRICAL
CALLOUTS
SEE DWG NO.
121339-01-000