


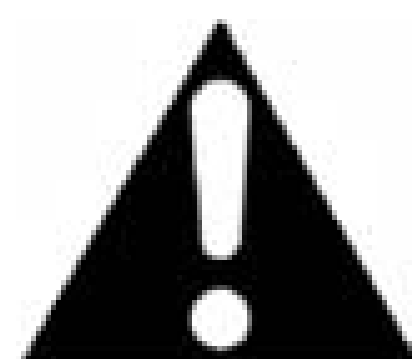


DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

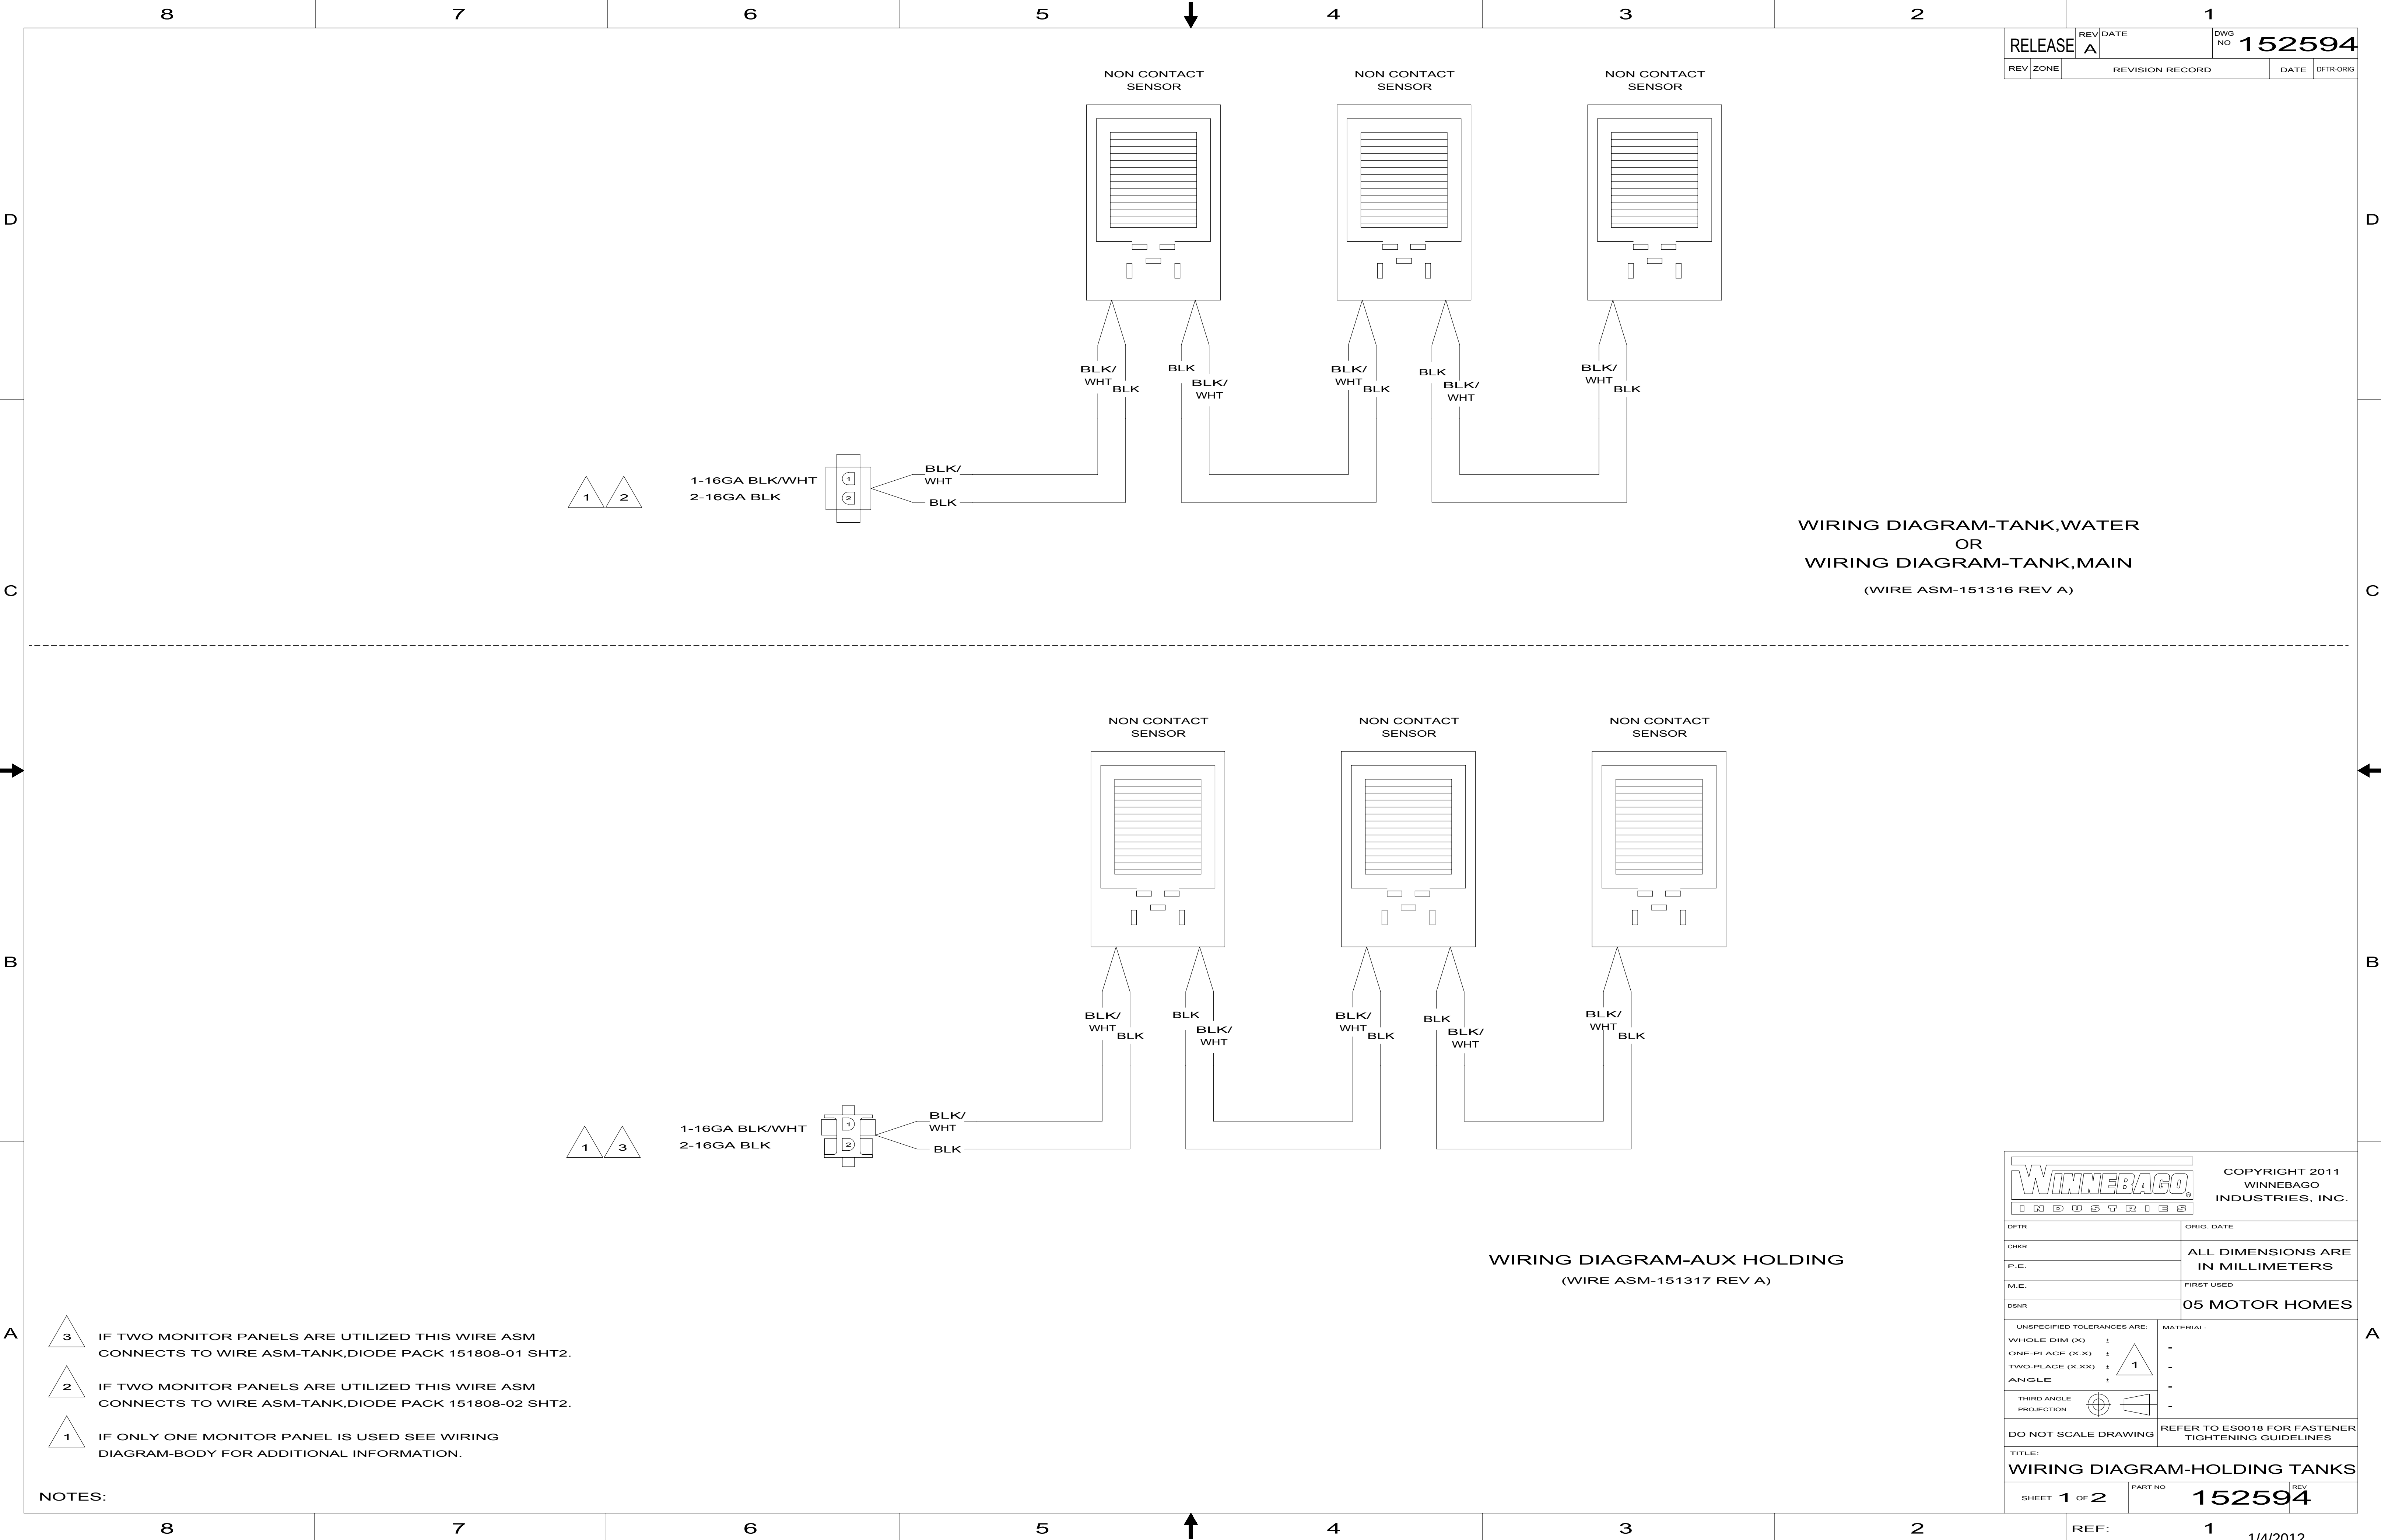

RELEASE	REV	DATE	DWG NO	152594
REV	ZONE	REVISION RECORD	DATE	DFT-ORIG

WINNEBAGO® INDUSTRIES		COPYRIGHT 2011 WINNEBAGO INDUSTRIES, INC.	
DFT-ORIG		ORIG. DATE	
CHK-OR		ALL DIMENSIONS ARE IN MILLIMETERS	
P.E.		FIRST USED	
M.E.		05 MOTOR HOMES	
DSNR		UNSPECIFIED TOLERANCES ARE:	
WHOLE DIM (X)		±	1
ONE-PLACE (X.X)		±	
TWO-PLACE (X.XX)		±	
ANGLE		±	
THIRD ANGLE PROJECTION			
DO NOT SCALE DRAWING		REFER TO ES0018 FOR FASTENER TIGHTENING GUIDELINES	
TITLE: WIRING DIAGRAM-HOLDING TANKS			
SHEET 1 OF 2		PART NO	REV
		152594	

