




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

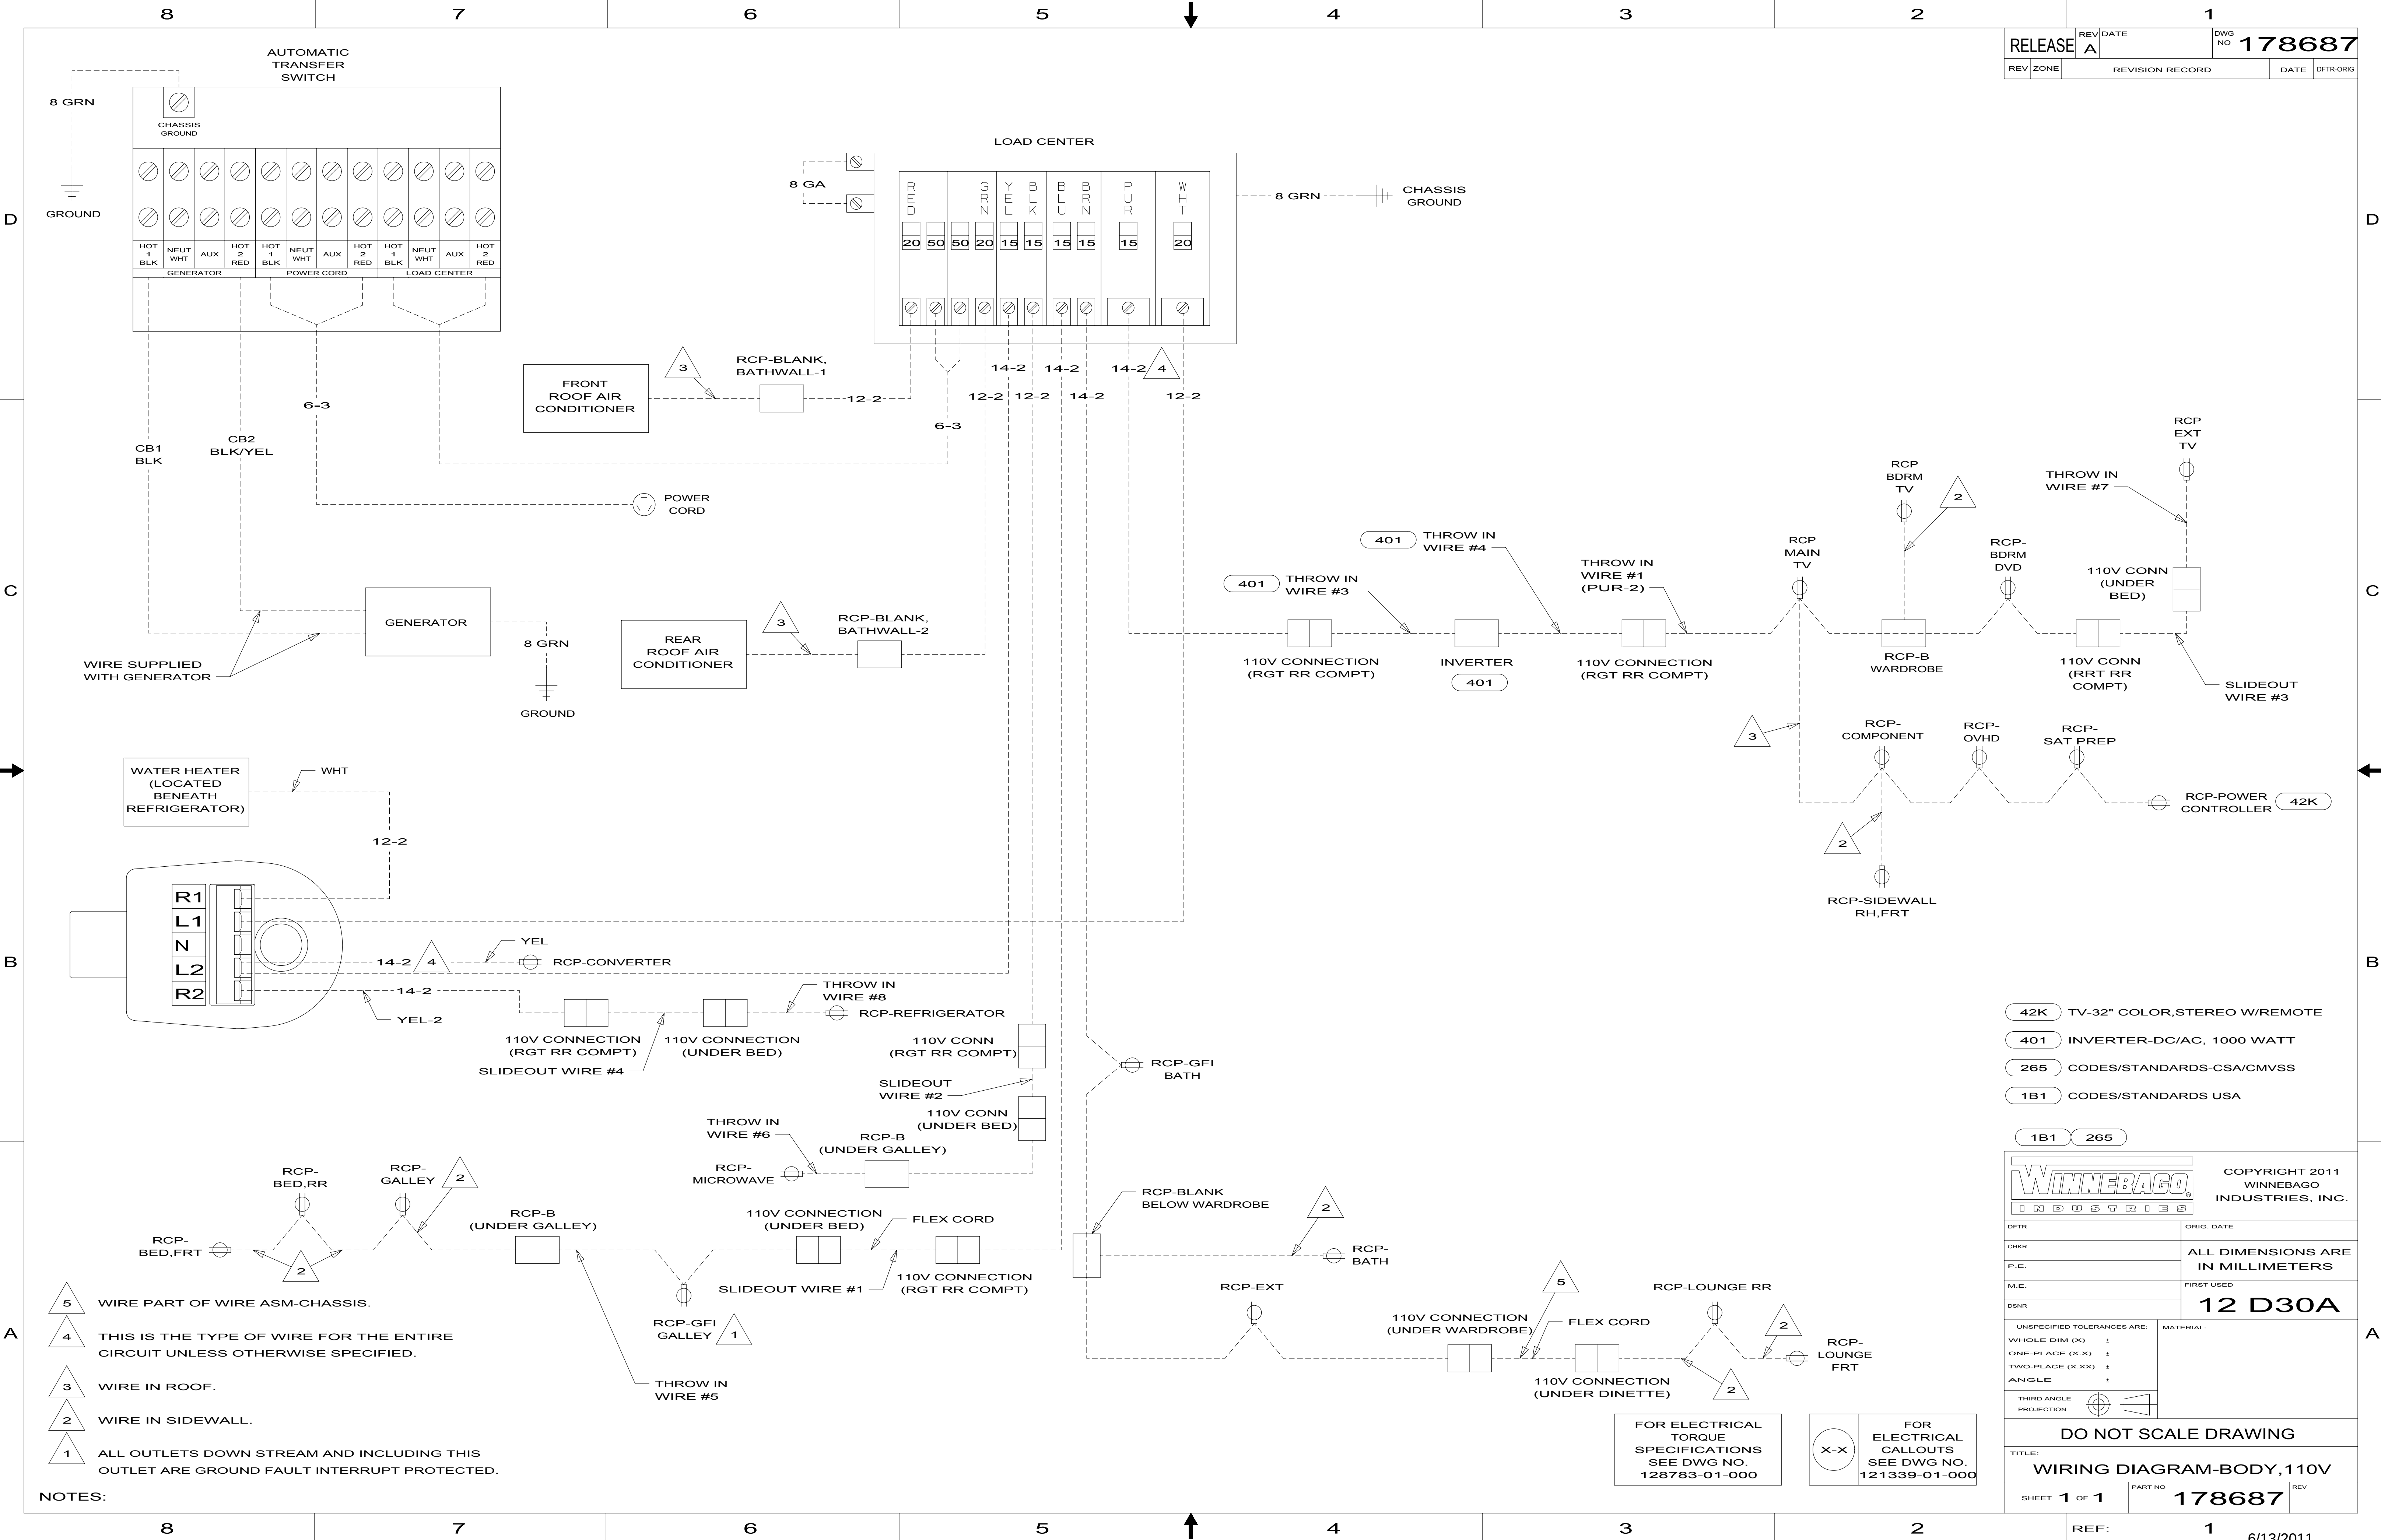

WINNEBAGO INDUSTRIES

COPYRIGHT 2011 WINNEBAGO INDUSTRIES, INC.

DFT-ORIG

CHGR

P.E.

M.E.

DSNR

ORIG. DATE

ALL DIMENSIONS ARE IN MILLIMETERS

12 D30A

UNSPECIFIED TOLERANCES ARE:

WHOLE DIM (X) ±

ONE-PLACE (X.X) ±

TWO-PLACE (X.XX) ±

ANGLE ±

THIRD ANGLE PROJECTION

MATERIAL:

DO NOT SCALE DRAWING

TITLE: WIRING DIAGRAM-BODY, 110V

SHEET 1 OF 1

PART NO 178687

REV

REF: 1

6/13/2011