




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

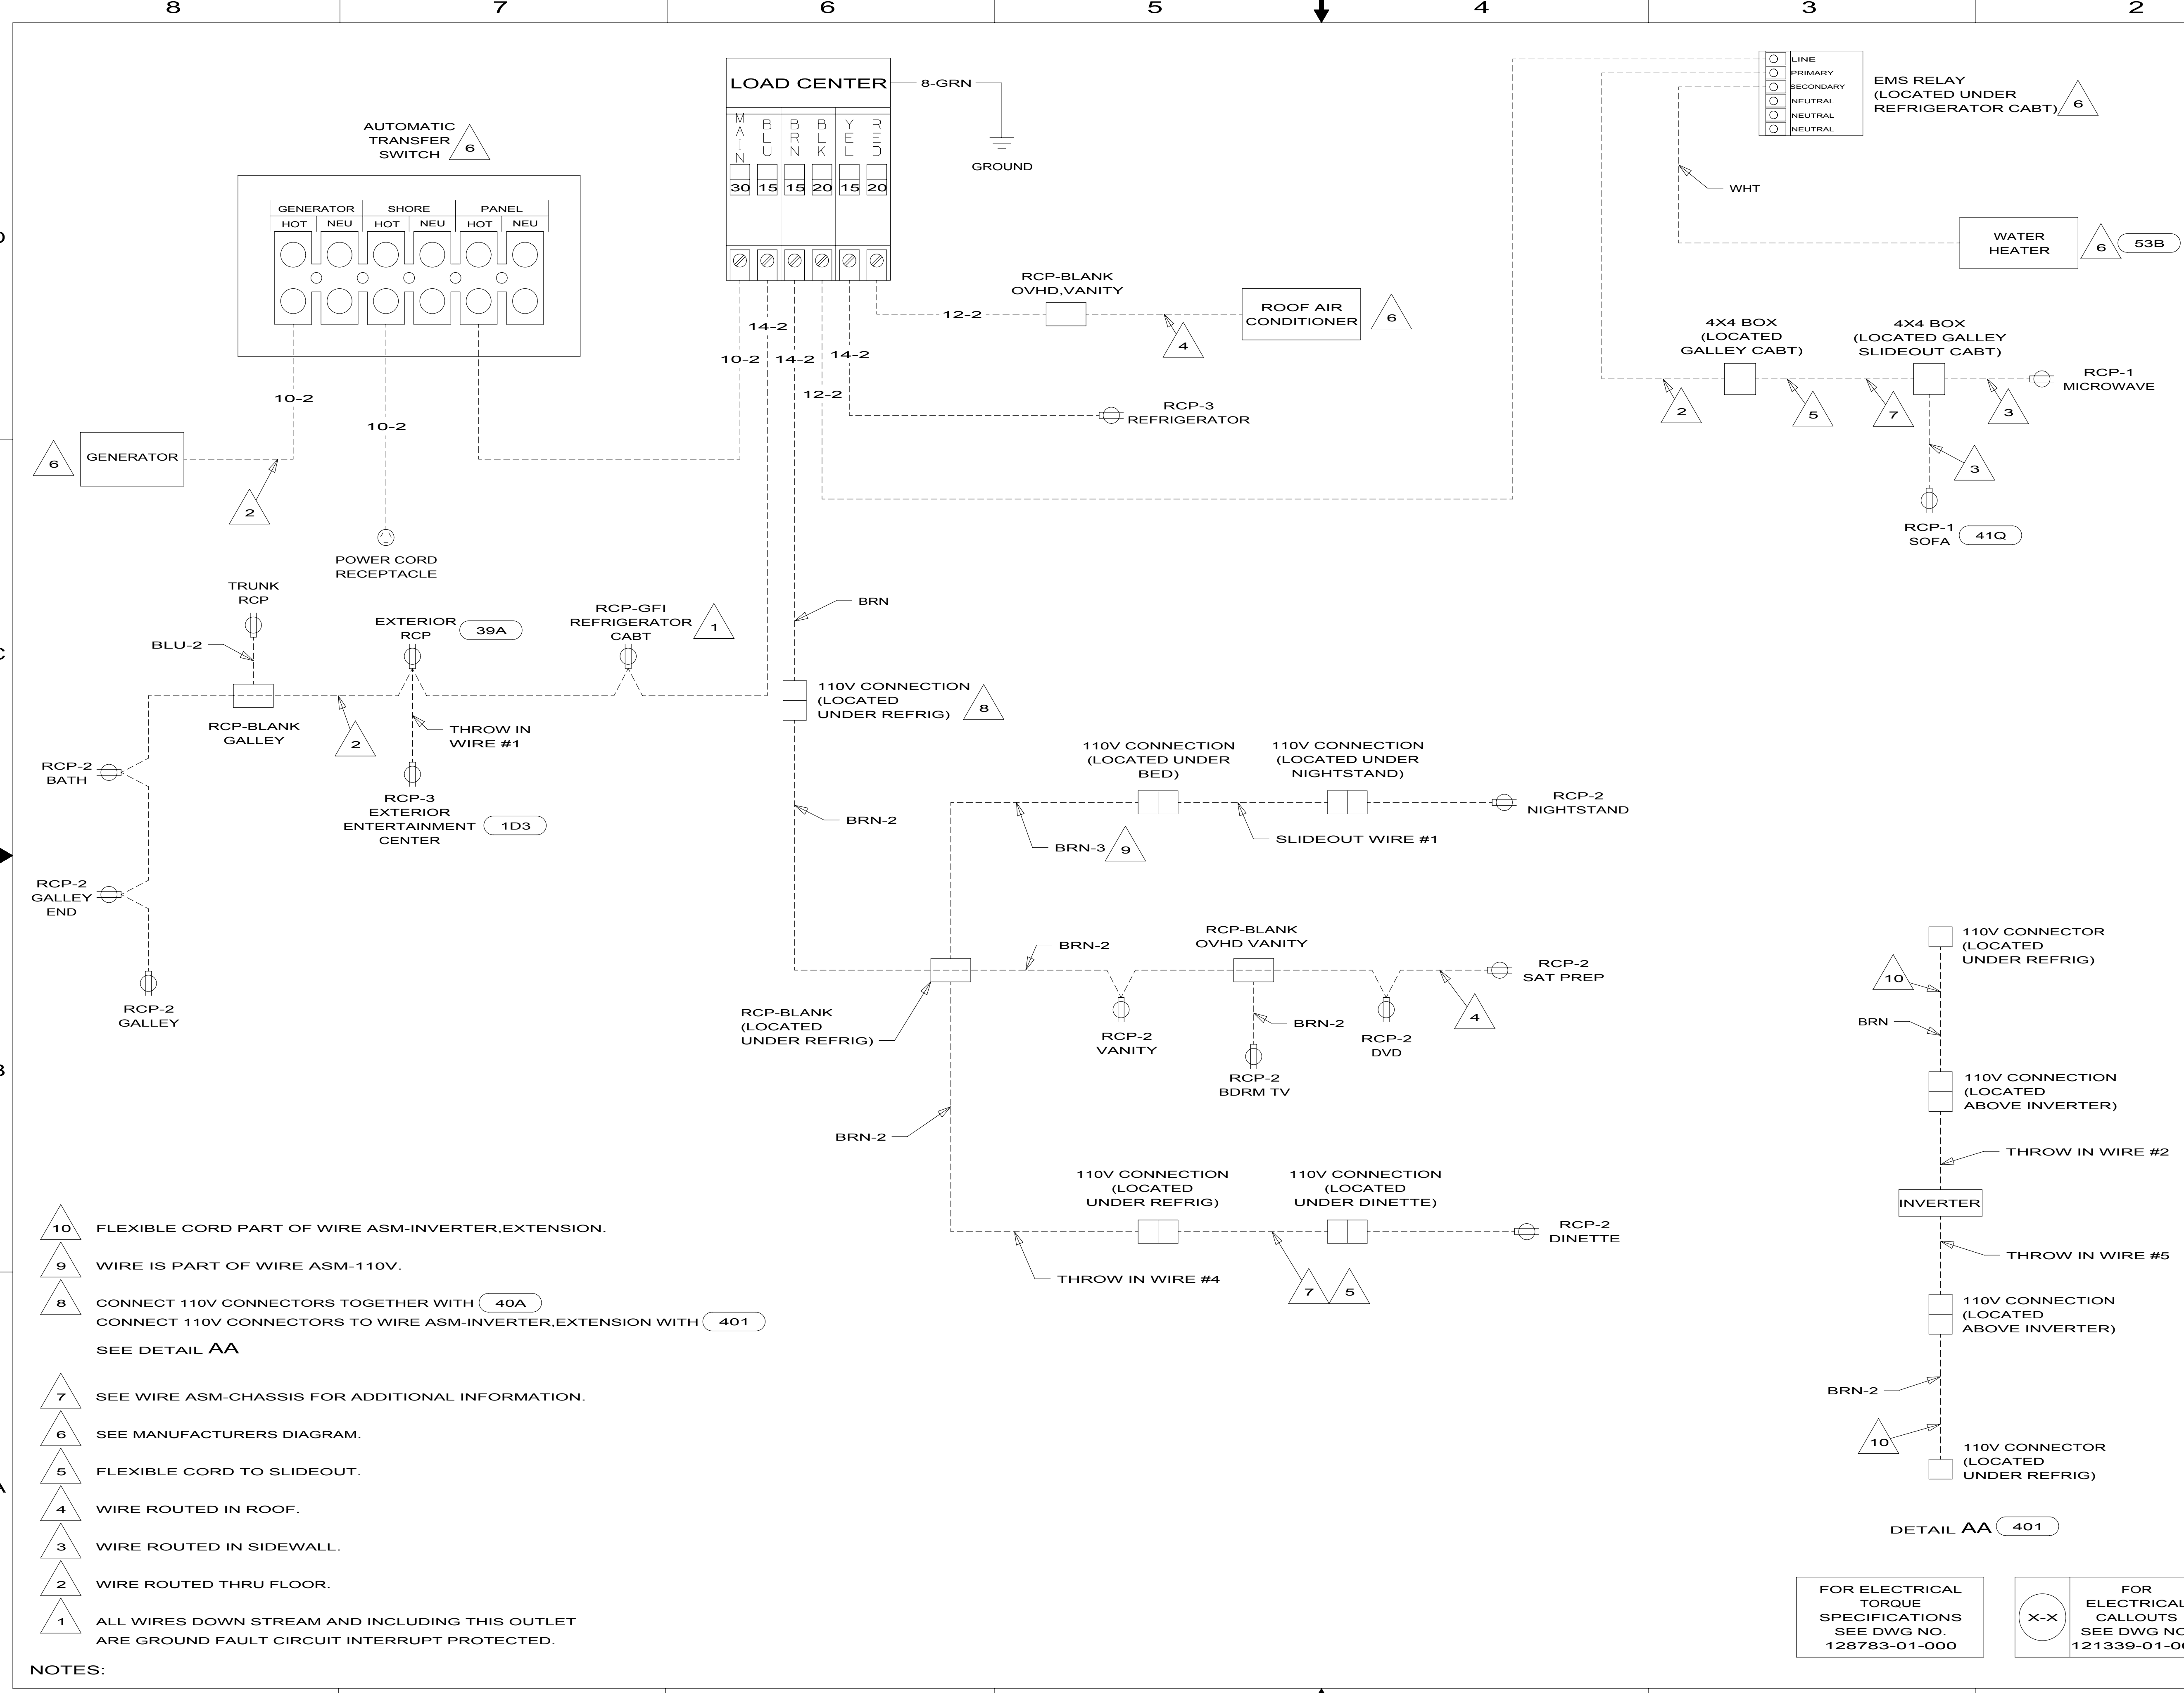

- NOTES:**
- 10 FLEXIBLE CORD PART OF WIRE ASM-INVERTER, EXTENSION.
 - 9 WIRE IS PART OF WIRE ASM-110V.
 - 8 CONNECT 110V CONNECTORS TOGETHER WITH (40A)
CONNECT 110V CONNECTORS TO WIRE ASM-INVERTER, EXTENSION WITH (401)
SEE DETAIL AA
 - 7 SEE WIRE ASM-CHASSIS FOR ADDITIONAL INFORMATION.
 - 6 SEE MANUFACTURERS DIAGRAM.
 - 5 FLEXIBLE CORD TO SLIDEOUT.
 - 4 WIRE ROUTED IN ROOF.
 - 3 WIRE ROUTED IN SIDEWALL.
 - 2 WIRE ROUTED THRU FLOOR.
 - 1 ALL WIRES DOWN STREAM AND INCLUDING THIS OUTLET ARE GROUND FAULT CIRCUIT INTERRUPT PROTECTED.

- (40A) INVERTER-DC/AC WITHOUT
- (401) INVERTER-DC/AC, 1000 WATT
- (41Q) SOFA/SLEEPER-ULTRALEATHER HP
- (53B) WTR HTR-6GAL ELECTRIC/LP GAS
- (1D3) ENTERTAIN CENTR/EXT TV-DVD
- (39A) EXT RECEPTACLE DPLX 120VAC
- (12D) ELECTRICAL SYSTEM 30 AMP
- (265) CODES/STANDARDS-CSA/CMVSS
- (1B1) CODES/STANDARDS USA

WINNEBAGO INDUSTRIES		COPYRIGHT 2011 WINNEBAGO INDUSTRIES, INC.	
DTR	ORIG. DATE	13 730C	
CHKR	ALL DIMENSIONS ARE IN MILLIMETERS		
P.E.	FIRST USED		
M.E.			
DSNR			
UNSPECIFIED TOLERANCES ARE:		MATERIAL:	
WHOLE DIM (X)	:		
ONE-PLACE (X.X)	:		
TWO-PLACE (X.XX)	:		
ANGLE	:		
THIRD ANGLE PROJECTION			
DO NOT SCALE DRAWING		REFER TO ES0018 FOR FASTENER TIGHTENING GUIDELINES	
TITLE: WIRING DIAGRAM-BODY, 110V			
SHEET 1 OF 1	PART NO	181712	REV

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000

(X-X)

FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000

DETAIL AA (401)