




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

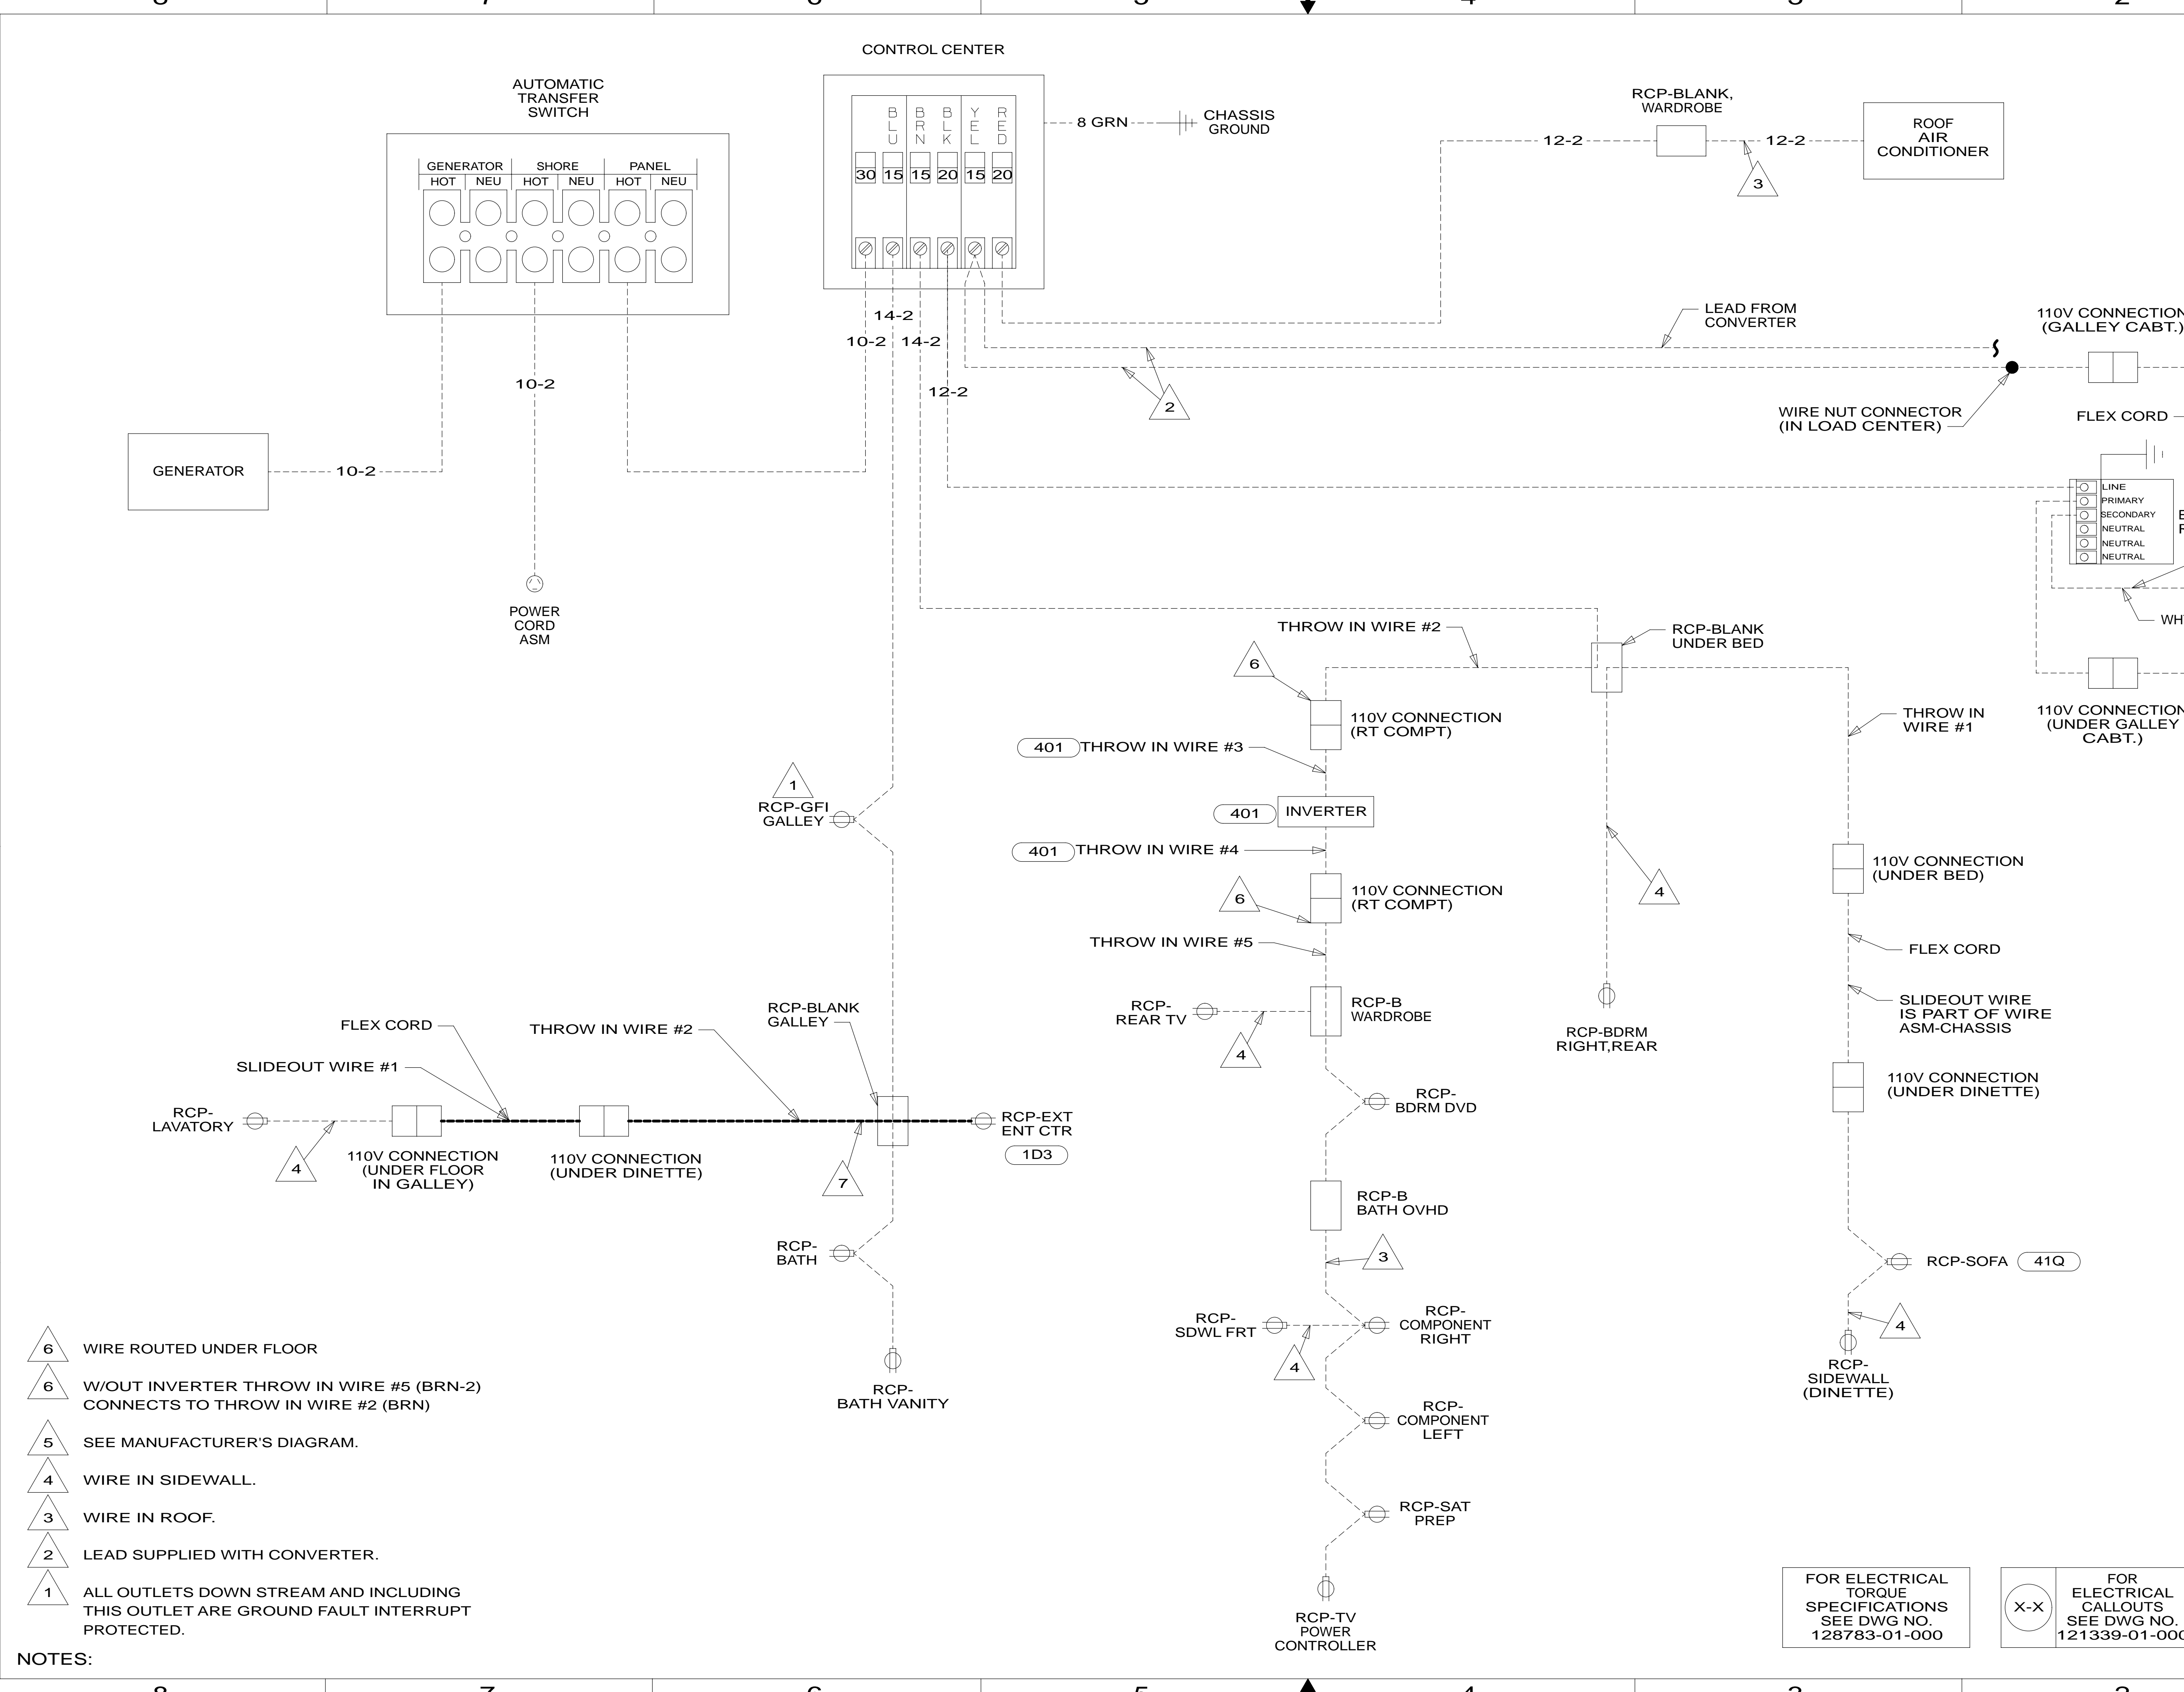

- NOTES:**
- 6 WIRE ROUTED UNDER FLOOR
 - 6 W/O/W INVERTER THROW IN WIRE #5 (BRN-2) CONNECTS TO THROW IN WIRE #2 (BRN)
 - 5 SEE MANUFACTURER'S DIAGRAM.
 - 4 WIRE IN SIDEWALL.
 - 3 WIRE IN ROOF.
 - 2 LEAD SUPPLIED WITH CONVERTER.
 - 1 ALL OUTLETS DOWN STREAM AND INCLUDING THIS OUTLET ARE GROUND FAULT INTERRUPT PROTECTED.

- 41Q SOFA/SLEEPER-ULTRALEATHER
- 53Z WTR HTR-6GAL/110V/LP/MTR/AUTO
- 401 INVERTER-DC/AC, 1000 WATT
- 1D3 ENTERTAINMENT CENTR/EXT W/CD/TV
- 265 CODES/STANDARDS-CSA/CMVSS
- 1B1 CODES/STANDARDS USA

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000

FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000

| | | | |
|--|------------|--|-----------|
| WINNEBAGO | | COPYRIGHT 2011 WINNEBAGO INDUSTRIES, INC. | |
| DFT-ORIG | ORIG. DATE | ALL DIMENSIONS ARE IN MILLIMETERS | |
| CHR | | FIRST USED | |
| P.E. | | 13 E27N | |
| M.E. | | UNSPECIFIED TOLERANCES ARE: | |
| DSNR | | WHOLE DIM (X) : | MATERIAL: |
| | | ONE-PLACE (X.X) : | |
| | | TWO-PLACE (X.XX) : | |
| | | ANGLE : | |
| | | THIRD ANGLE PROJECTION | |
| DO NOT SCALE DRAWING | | REFER TO ES0018 FOR FASTENER TIGHTENING GUIDELINES | |
| TITLE: WIRING DIAGRAM-BODY,110V | | | |
| SHEET 1 OF 1 | PART NO | 182297 | REV |
| REF: | 1 | 03-Jul-2012 | |