

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.


Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



Copyright © 2014 Winnebago Industries, Inc.

	8	7	6
D			
			ר ה ה ה ר ב ר
С			
-			
В			
			B ERO 1 REV ECN These drawings and s themselves nor any in
A			Title Final One P ERO # 2011253
	1. SUGGESTED VEND NOTES:	OR: PRECISION CIRCUITS	; M/N 00-10038-000.
	8	7	6

8 7 6

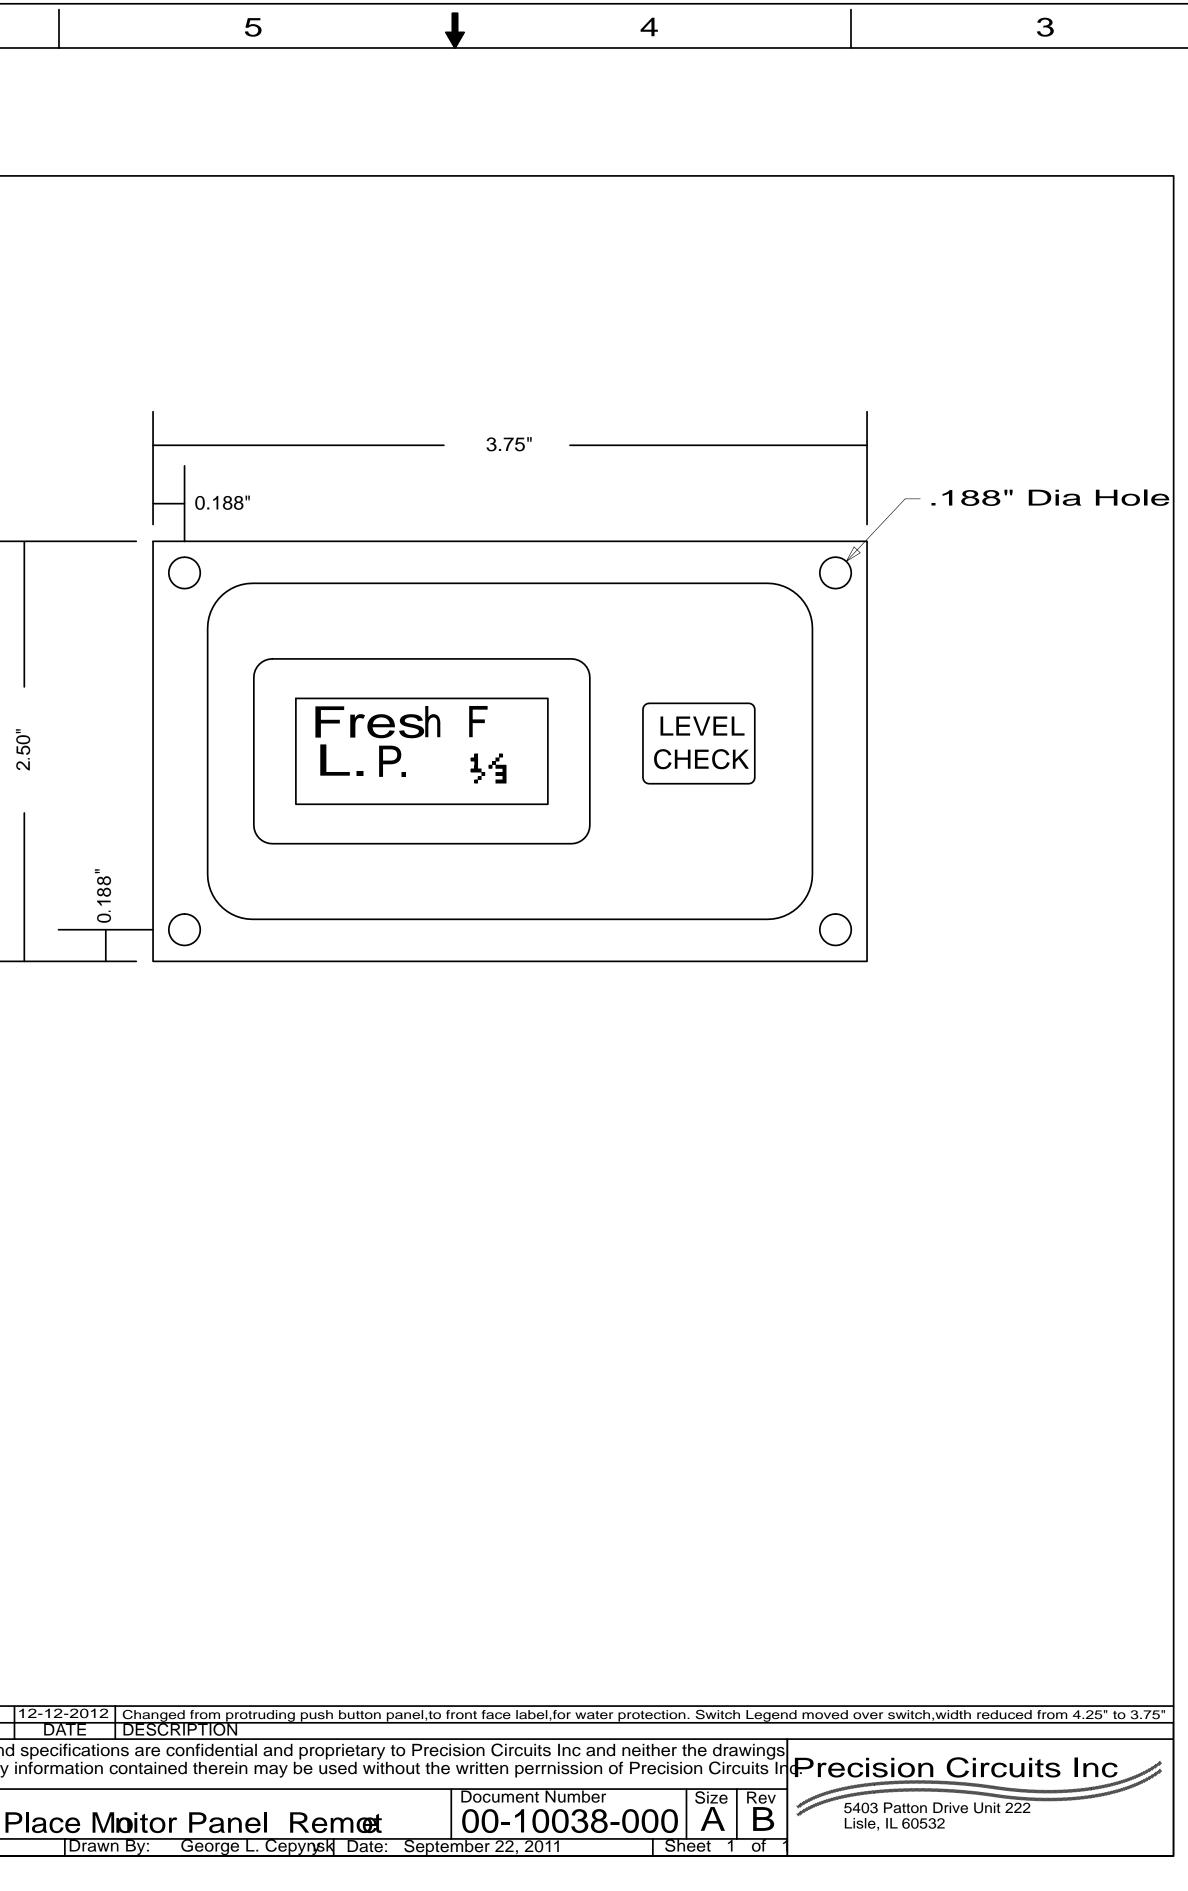

5 1 3

2	1					
	RELEAS			NO 18	2207	
	REV ZONE		ON RECORI	C	DATE DFTR-ORIG	
						D
						С
						╋
						B
			RO		IGHT 2014 NEBAGO	-
			®		RIES, INC.	
	DFTR		ORIG	. DATE		
	CHKR P.E.			L DIMENS	SIONS ARE 1ETERS	
	M.E.					
	DSNR UNSPECIFIE	D TOLERANCES ARE:	MATERIAL:		ERIES	
	WHOLE DIM ONE-PLACE	(X.X) ± 1.5	WEIG	GHT: 0.2 I	BS	A
	TWO-PLACE	(X.XX) ± 0.50 ± 1°				
	THIRD ANGL PROJECTION					
		CALE DRAWING	REFER TIG	FO ES0018 F HTENING GI	FOR FASTENER UIDELINES	
	TITLE:	PANEL-RE	MOTE	MONIT	OR	
		OF 1		2207		
2	Į	REF:			an-2014	I