



DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

PANEL-SERVICE
132862-04-CHT
SCREW
G11-10-10U (4)
SCREW-COVER
93249-01-000 (4)


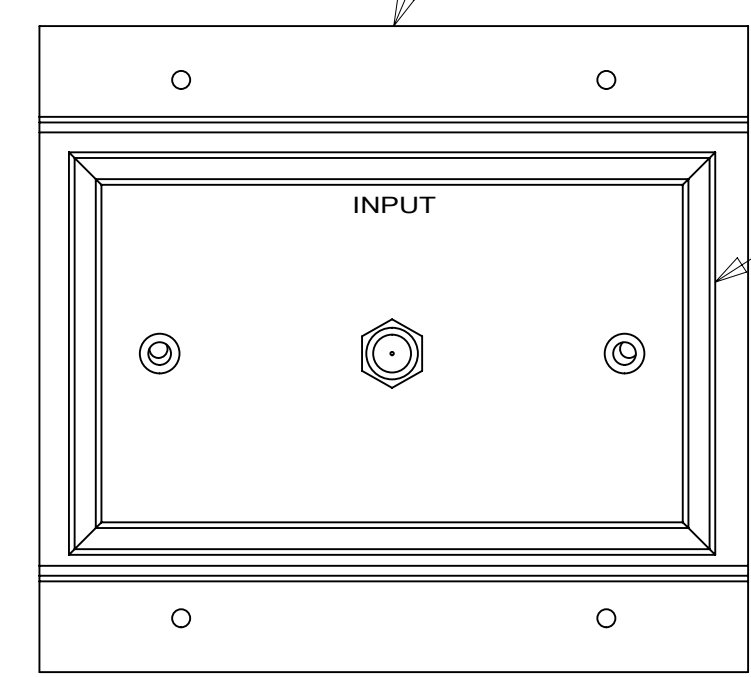


PLATE-WALL_DUAL COAX
149557-07-CHT
SCREW
G39-08-08U (2)

DETAIL AA

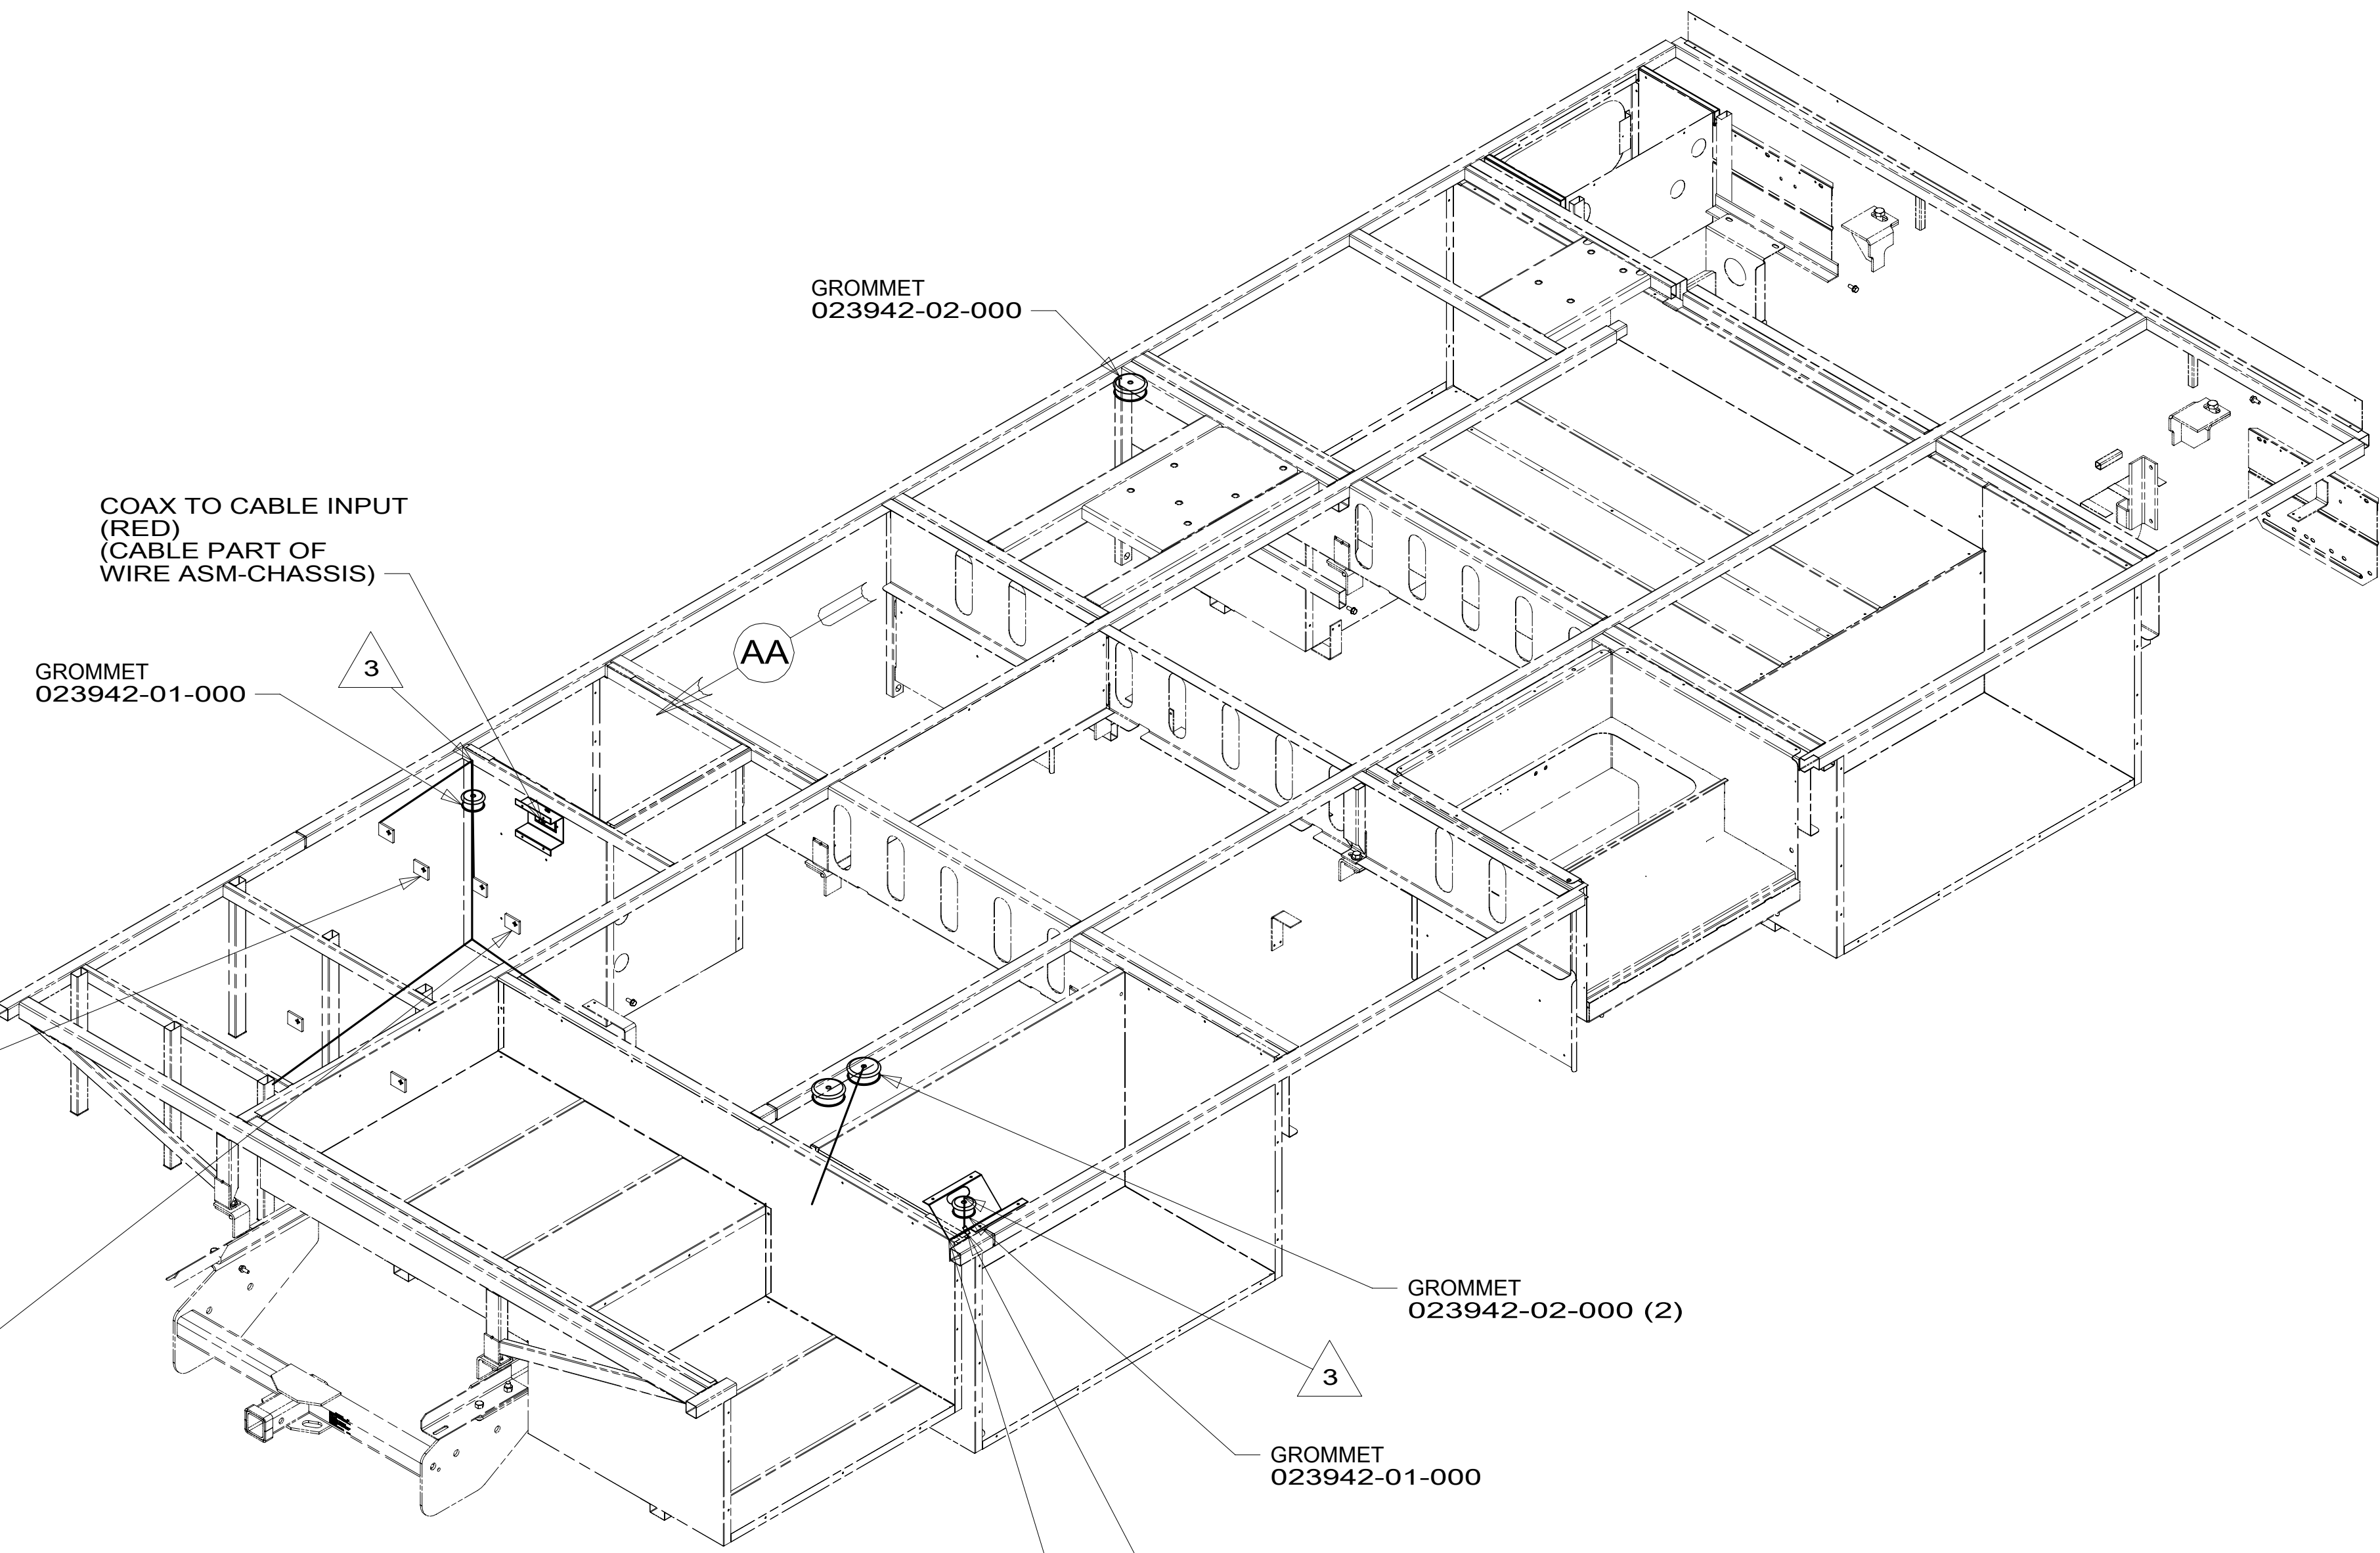

COAX TO CABLE INPUT
(RED)
(CABLE PART OF
WIRE ASM-CHASSIS)

GROMMET
023942-01-000

4 WIRE ASM-MAIN
HOLDING TANK
151317-02-000
(CONNECTS TO
WIRE ASM-LEFT)

4 WIRE ASM-AUX
HOLDING TANK
151316-02-000
(CONNECTS TO
WIRE ASM-LEFT)

GROMMET
023942-02-000 (2)

GROMMET
023942-01-000

COAX TO EXT JACK
(YEL)
(CABLE PART OF
WIRE ASM-COACH)

PANEL-RECEPTACLE
151376-02-CHT
ADAPTER
82134-01-000
NUT
82136-01-000
LABEL-COAX
157486-01-CHT
SCREW
G67-10-12B (4)

4 PLACE CROSS LOCATOR ON SENSORS OVER DIMPLES ON TANK.

3 WIRE PASSES THROUGH FLOOR IN THIS AREA.

2. ROUTE TANK SENSOR WIRES SO THEY DO NOT PASS OVER SENSORS. USE WIRE TIE MOUNT 155366-01-000 AND WIRE TIE 8343-01-000 AS NEEDED. TANK SURFACE MUST BE CLEANED USING ISOPROPYL ALCOHOL AND PRIMED WITH PRIMER 94.

1. AT MINIMUM ALL WIRES TO BE SUPPORTED AND SECURED PER CODE REQUIREMENTS. USE CLAMP 10495 OR 10497 OR WIRE TIE 8343 OR 108046 AND SCREW G67-XX-XXX OR G56-XX-XXX AS APPROPRIATE FOR INSTALLATION.

NOTES:

265 CODES/STANDARDS-CSA/CMVSS
1B1 CODES/STANDARDS USA

1B1 265



DFT-ORIG	ORIG. DATE
CHKR	ALL DIMENSIONS ARE IN MILLIMETERS
P.E.	
M.E.	FIRST USED
DSNR	15 A26A
UNSPECIFIED TOLERANCES ARE:	
WHOLE DIM (X)	: 3
ONE-PLACE (X.X)	: 1.5
TWO-PLACE (X.XX)	: 0.50
ANGLE	: 1°
THIRD ANGLE PROJECTION	
DO NOT SCALE DRAWING	REFER TO ES0018 FOR FASTENER TIGHTENING GUIDELINES





FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000

FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000

TITLE: WIRING INSTL-BODY, 12V
SHEET 1 OF 7 PART NO 188251 REV

REF: 1 29-Dec-2014

*188251 *A

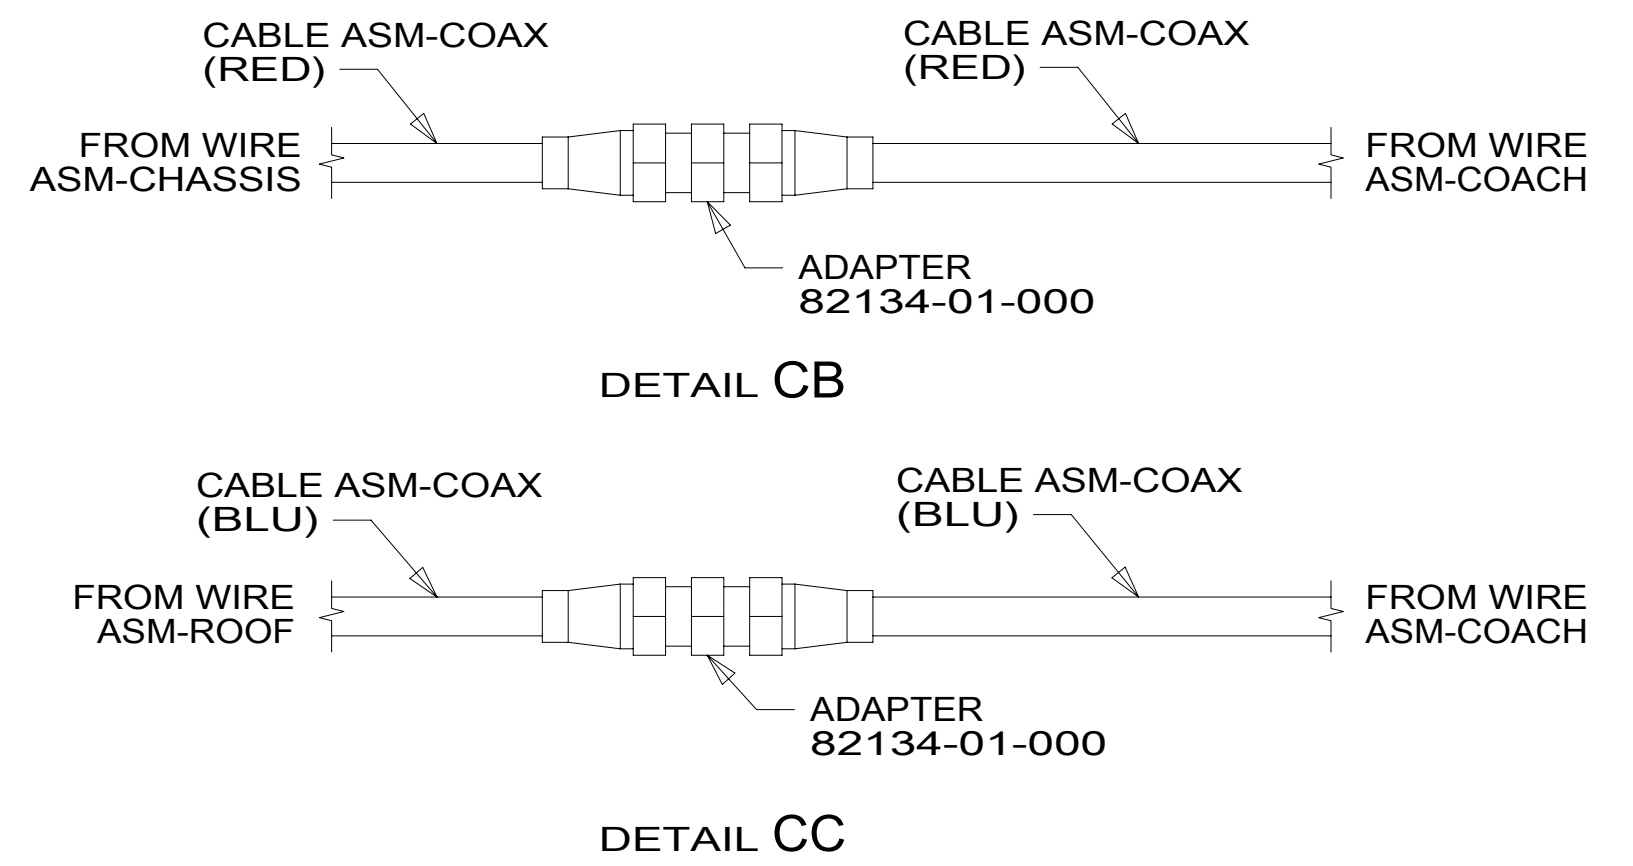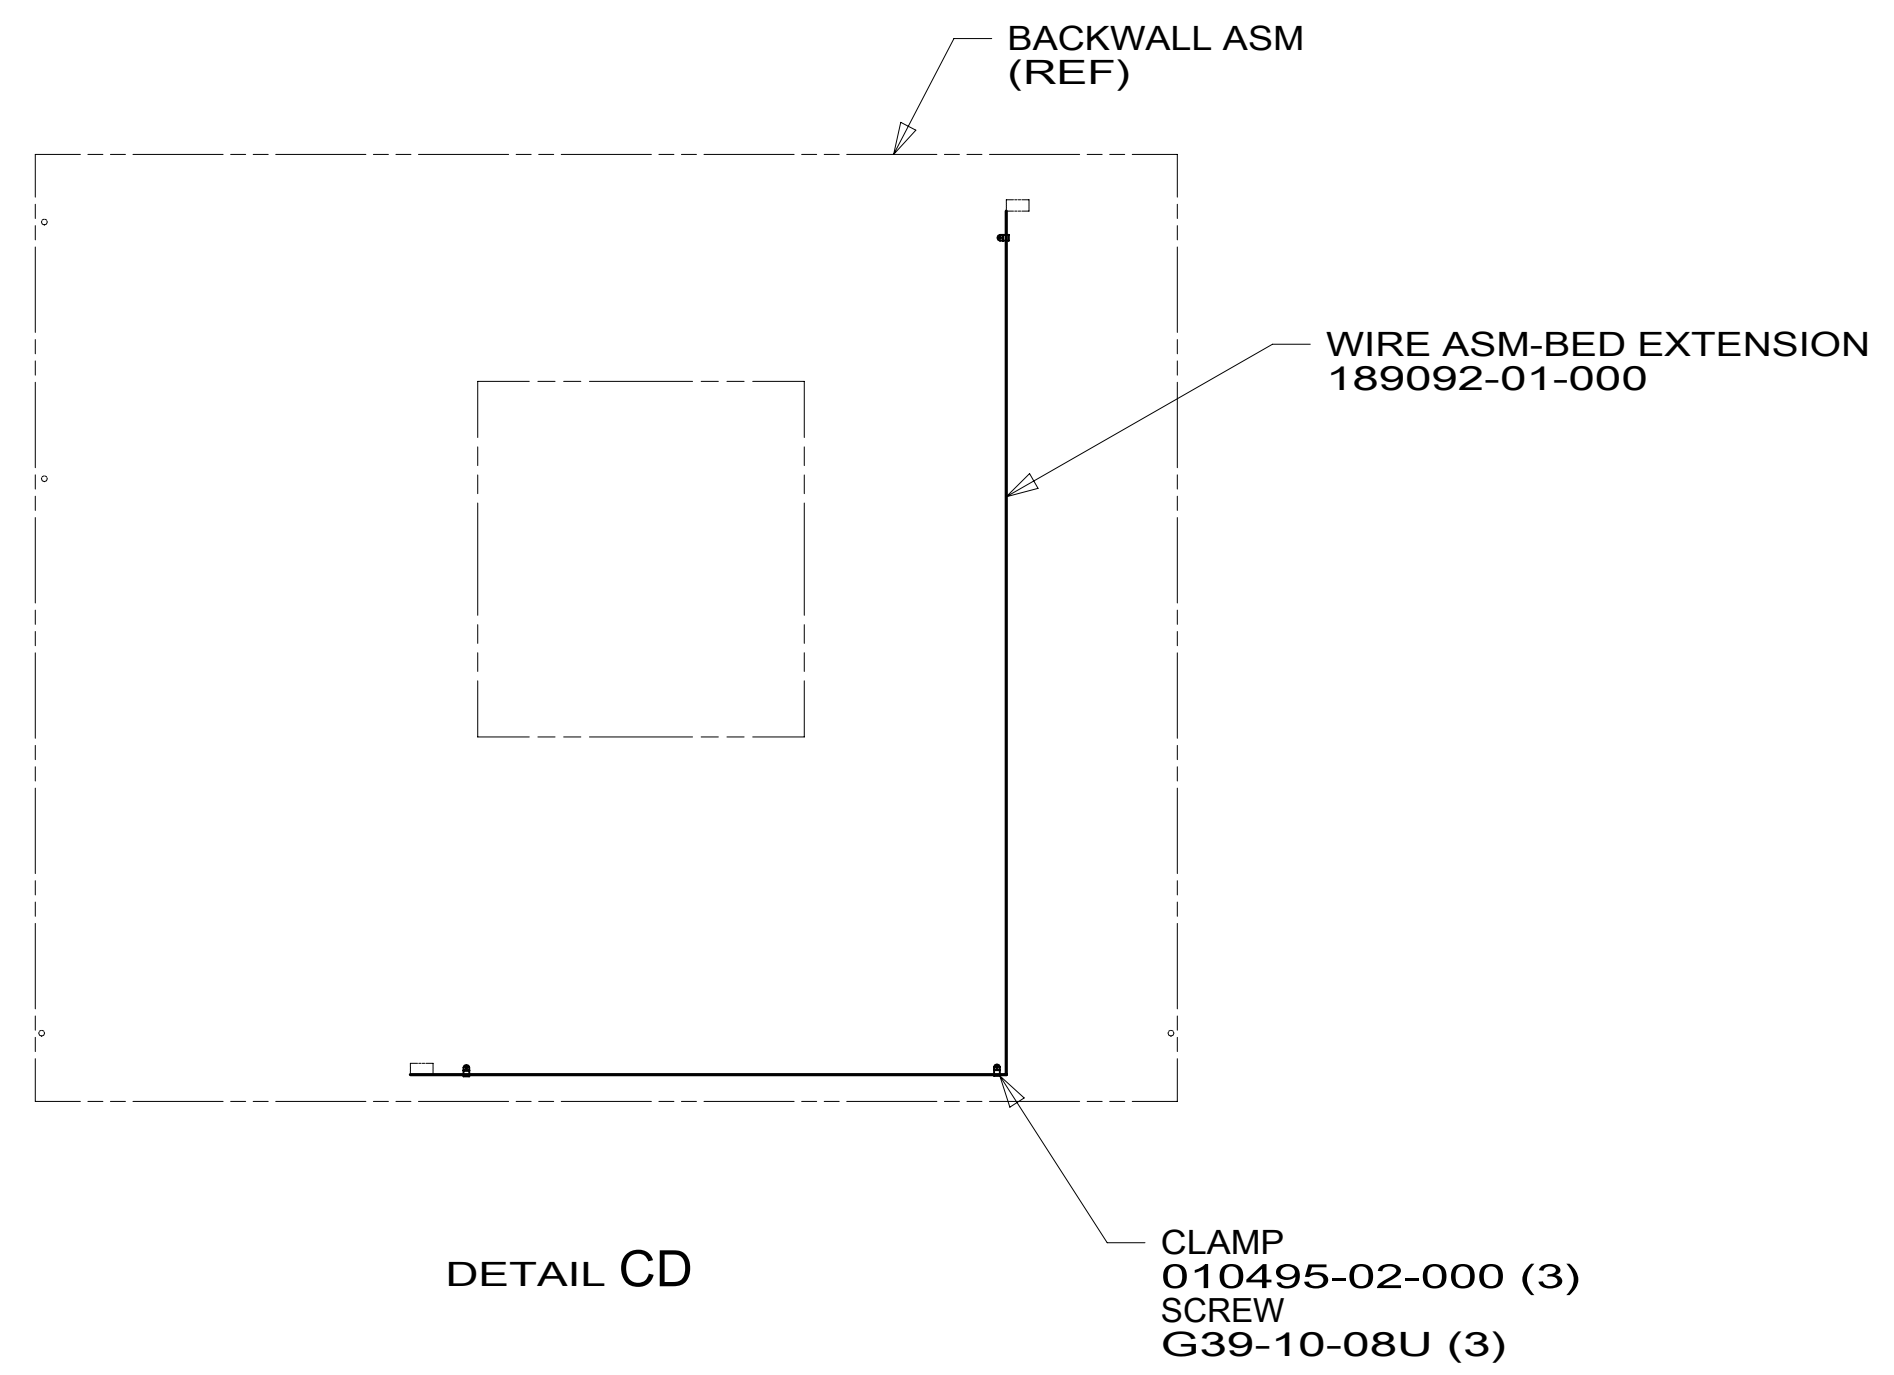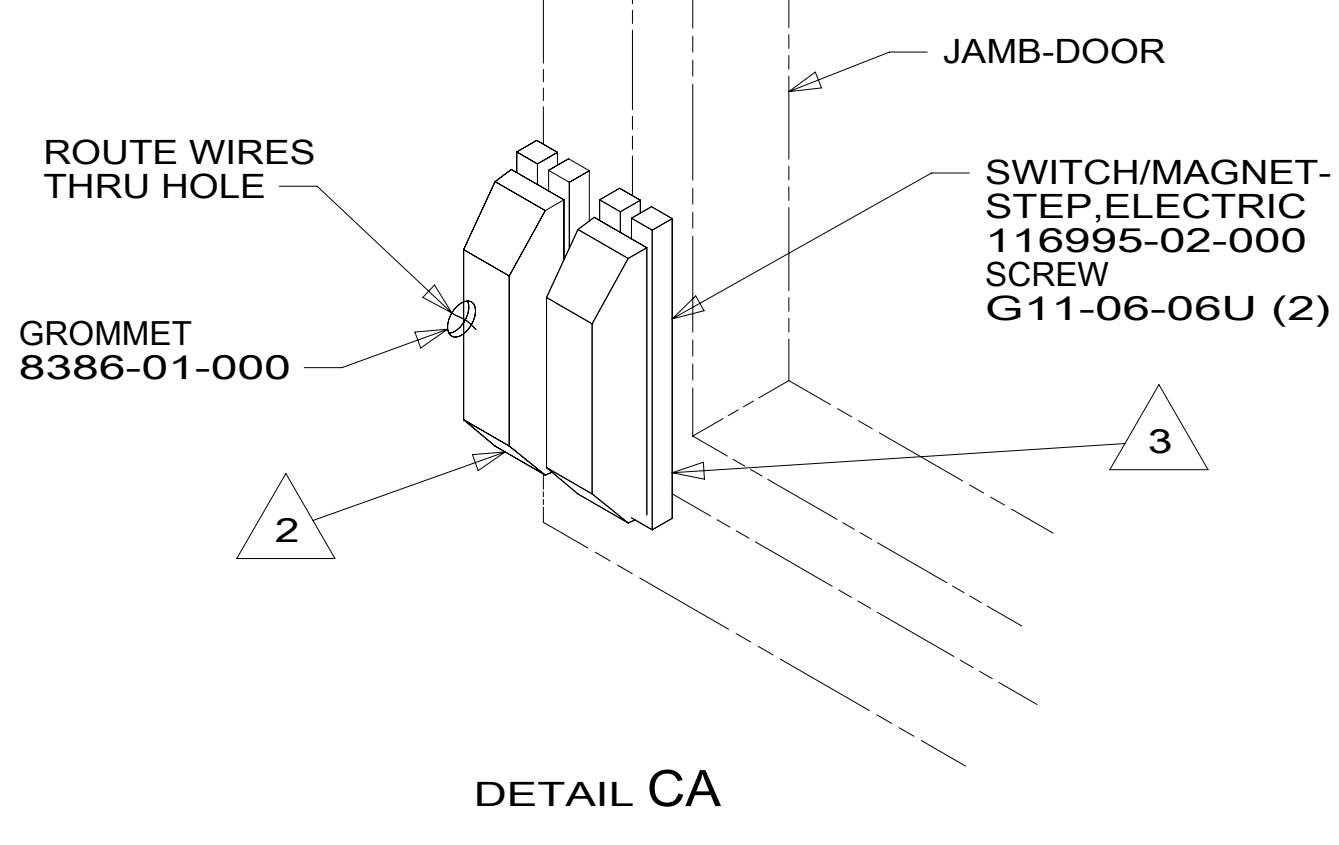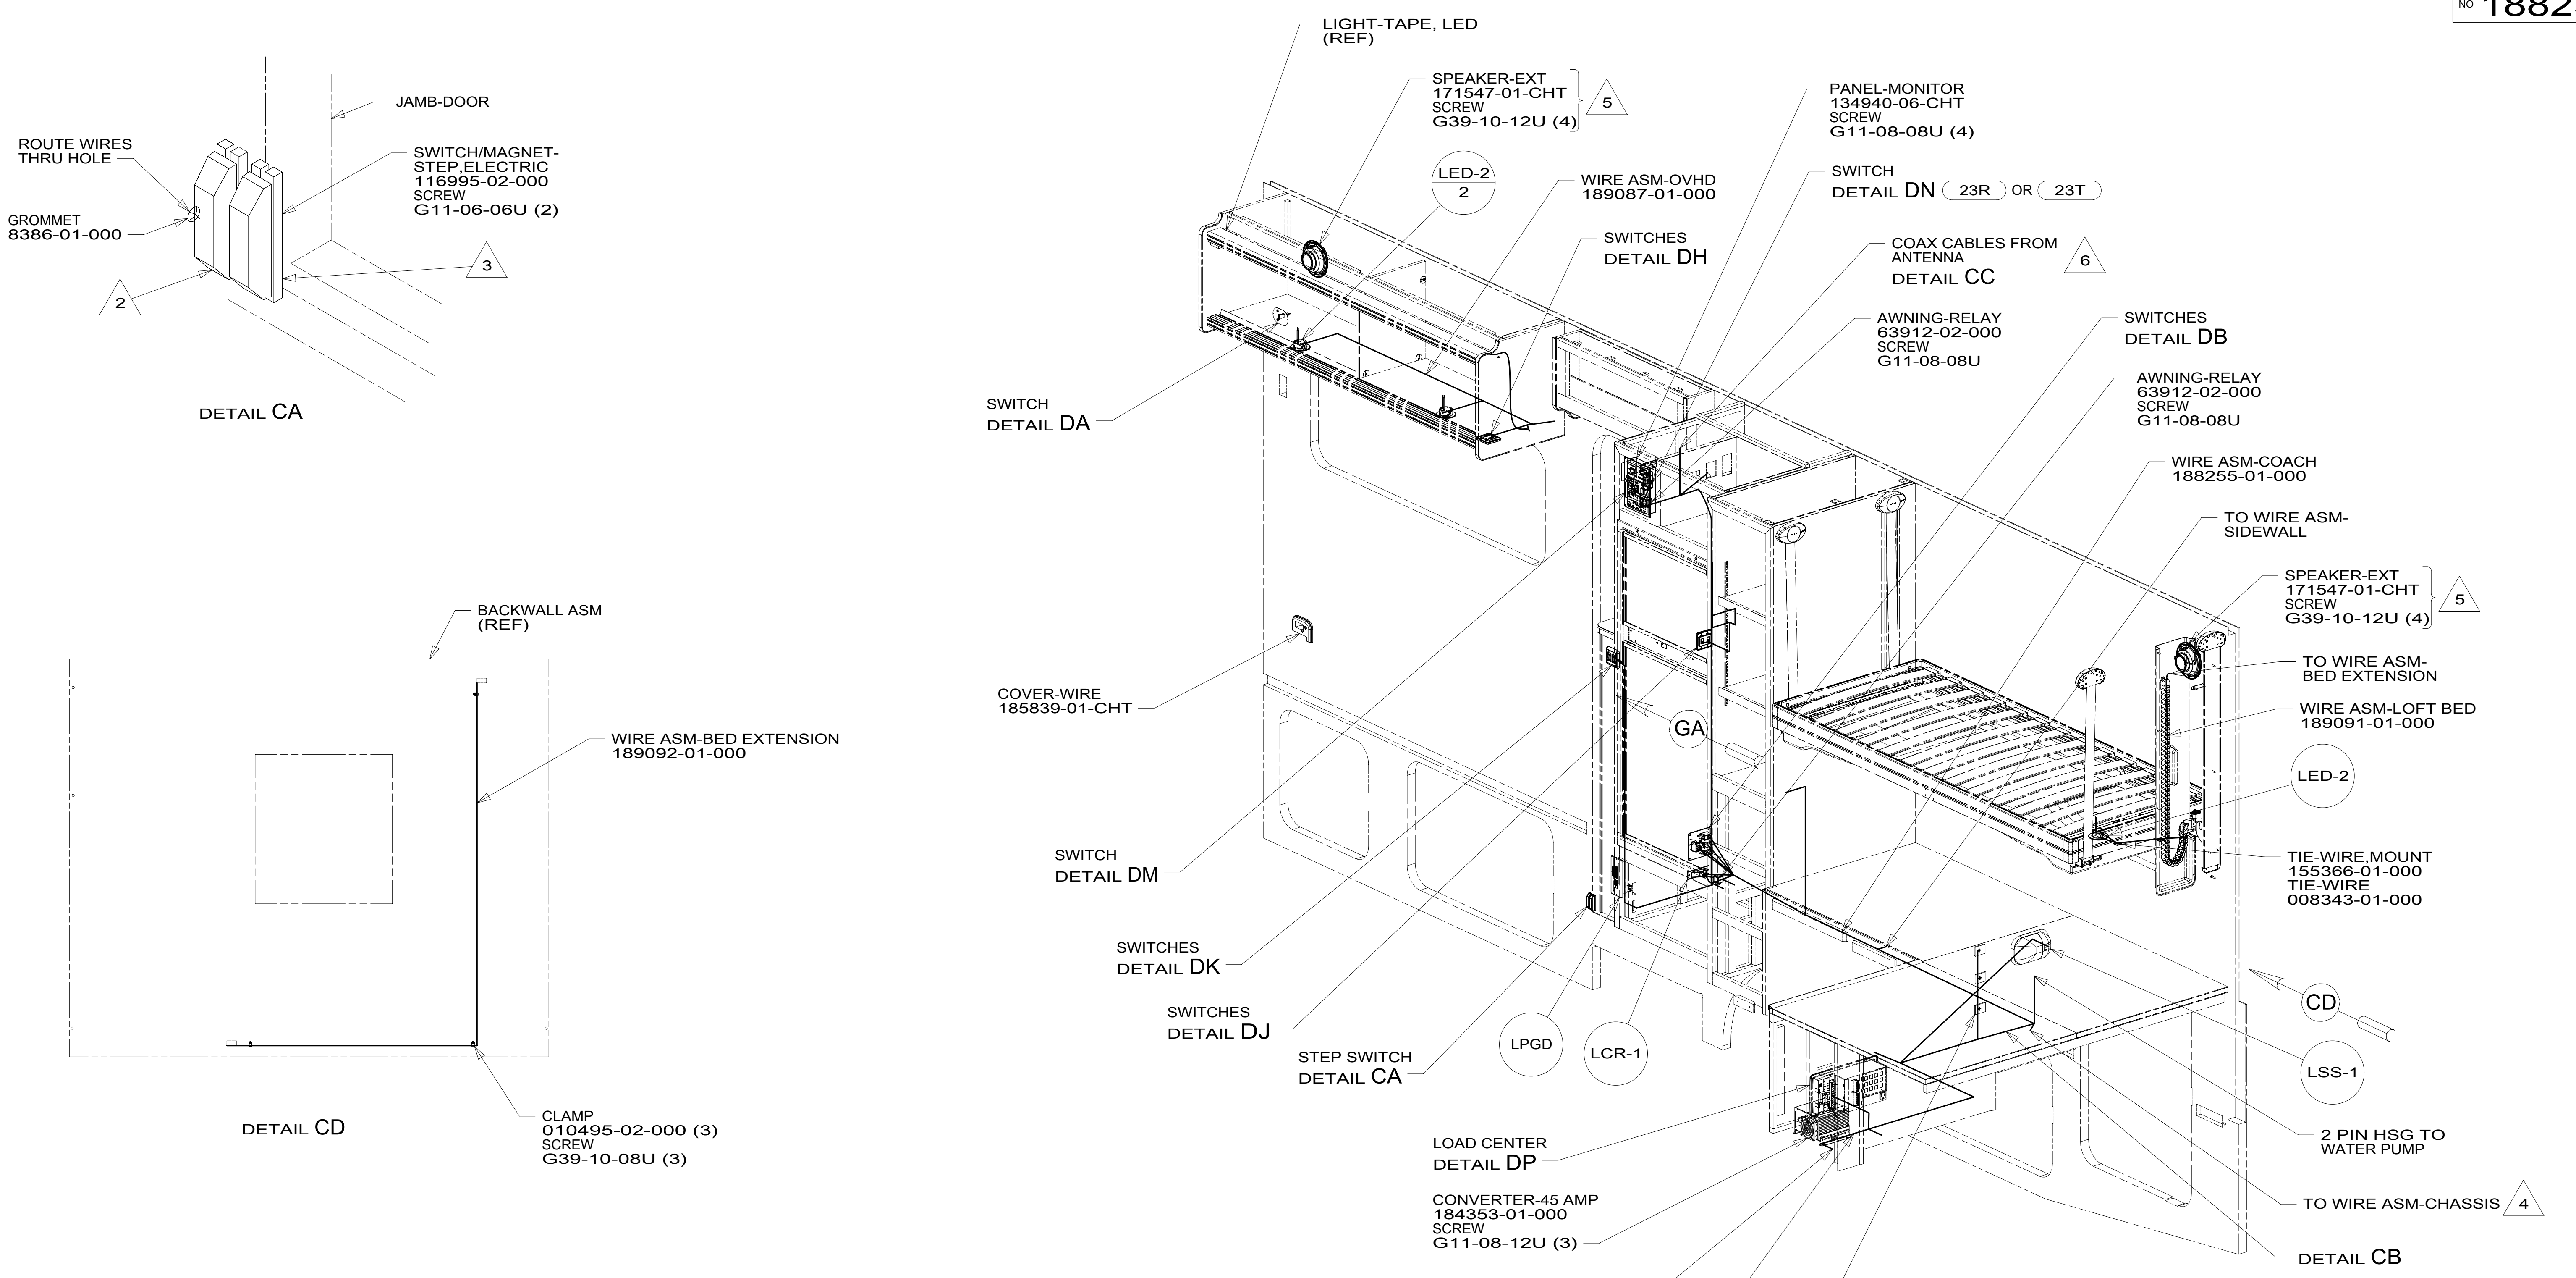

- NOTES:
- 7 PLACE CROSS LOCATOR ON SENSORS OVER DIMPLES ON TANK.
 - 6 WIRE FROM ROOF.
 - 5 MOUNTED TO EXTERIOR SURFACE OF SIDEWALL.
 - 4 WIRE PASSES THROUGH FLOOR IN THIS AREA.
 - 3 MOUNT MAGNET TO SCREEN DOOR FRAME, MOUNT WITH MAGNET TOWARD SWITCH.
 - 2 MOUNT SWITCH TO DOOR JAMB WITH TAPE 076322-21-000.
 - 1. AT MINIMUM ALL WIRES TO BE SUPPORTED AND SECURED PER CODE REQUIREMENTS. USE CLAMP 10495 OR 10497 OR WIRE TIE 8343 OR 108046 AND SCREW G67-XX-XXX OR G56-XX-XXX AS APPROPRIATE FOR INSTALLATION.


- 23R DRAINAGE SYSTEM/HEAT-PREWIRE
- 23T DRAINAGE SYSTEM-HEATED
- 265 CODES/STANDARDS-CSA/CMVSS
- 1B1 CODES/STANDARDS USA

FIRST USED		15 A26A	
DO NOT SCALE DRAWING			
WIRING INSTL-BODY, 12V			
SHEET 3	PART NO	188251	REV
		1 29-Dec-2014	

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000


FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000

*188251 *A

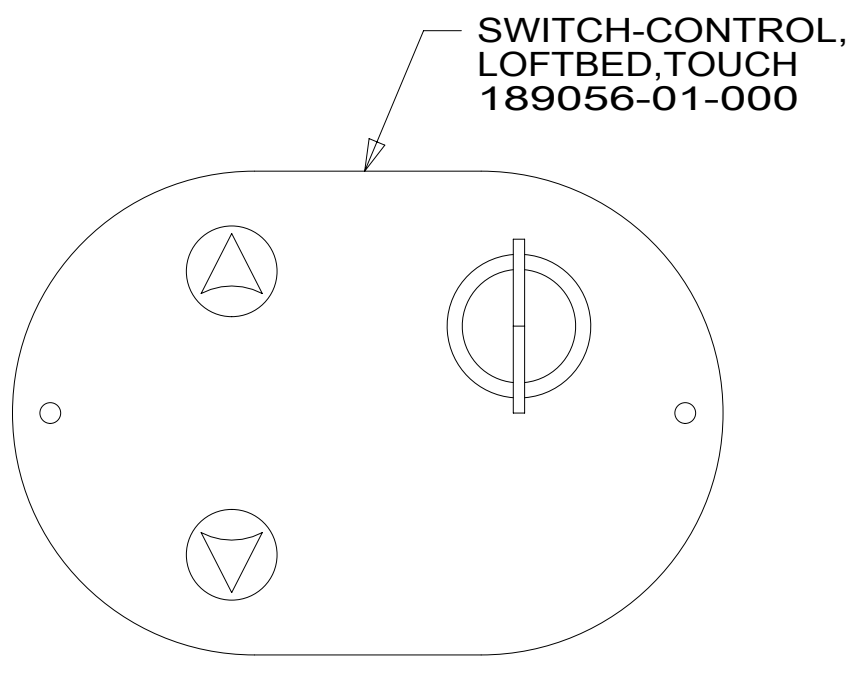


DETAIL DA

SWITCH-CONTROL,
LOFTBED, TOUCH
189056-01-000

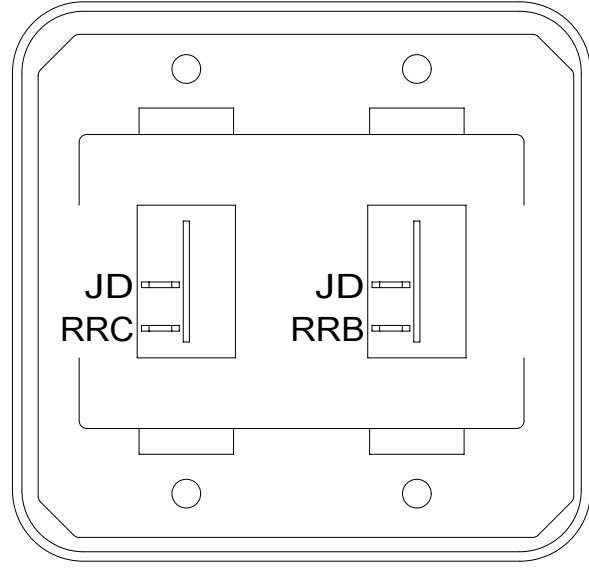


DETAIL DC

SWITCH-ROCKER
135740-01-CHT (2)
SWITCH-BASE
135741-02-CHT
SWITCH-BEZEL
135742-02-CHT
SCREW
G11-08-08U (4)

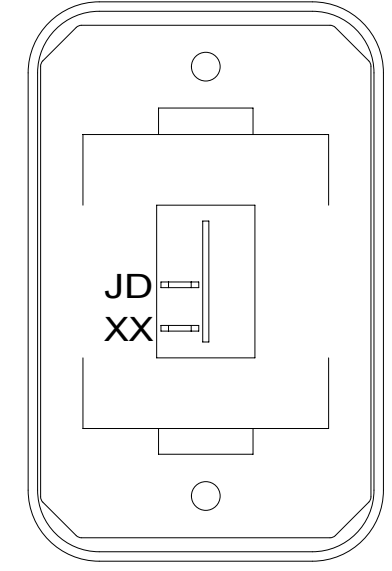


DETAIL DF

SWITCH-ROCKER
135740-01-CHT
SWITCH-BASE
135741-01-CHT
SWITCH-BEZEL
135742-01-CHT
SCREW
G11-08-08U (2)

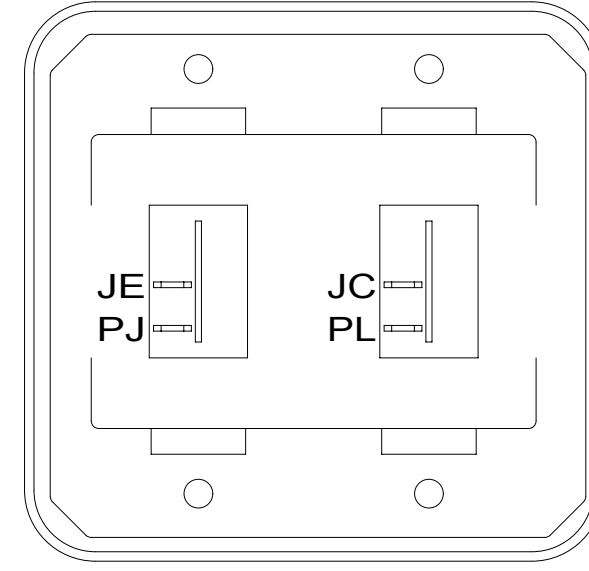


DETAIL DJ

SWITCH-ROCKER
135740-01-CHT (2)
SWITCH-BASE
135741-02-CHT
SWITCH-BEZEL
135742-02-CHT
SCREW
G11-08-08U (4)

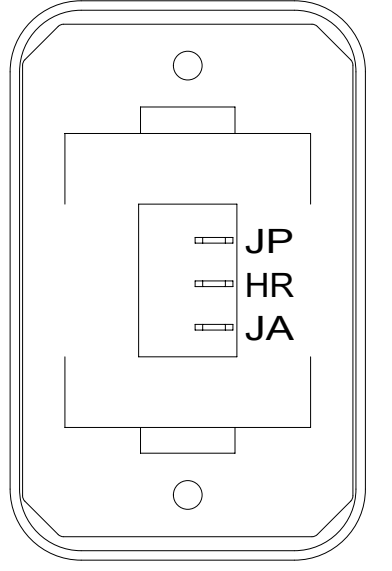


DETAIL DN 23T OR 23R

SWITCH-ROCKER
135740-06-CHT
SWITCH-BASE
135741-01-CHT
SWITCH-BEZEL
135742-01-CHT
SCREW
G11-08-08U (2)

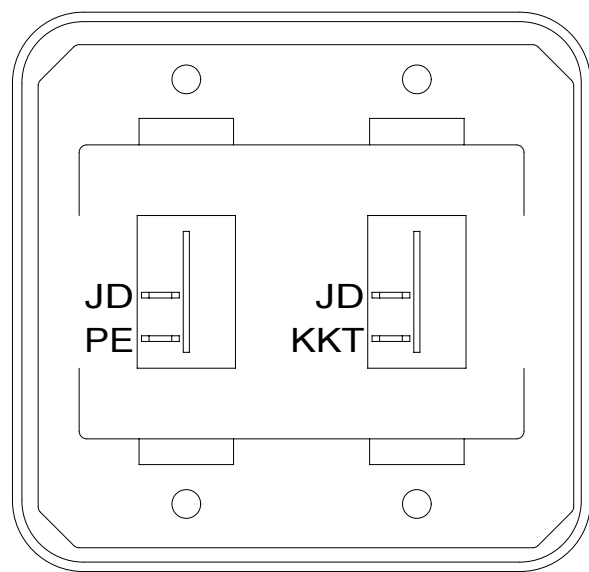


DETAIL DD

SWITCH-ROCKER
135740-01-CHT (2)
SWITCH-BASE
135741-02-CHT
SWITCH-BEZEL
135742-02-CHT
SCREW
G11-08-08U (4)

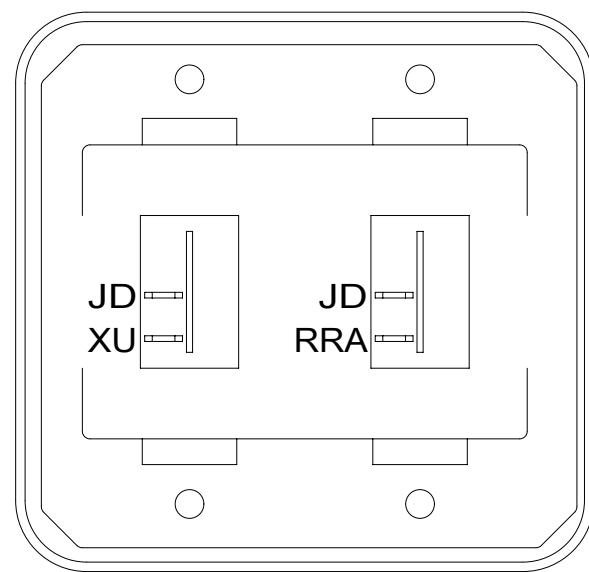


DETAIL DG

SWITCH-ROCKER
135740-01-CHT (2)
SWITCH-BASE
135741-02-CHT
SWITCH-BEZEL
135742-02-CHT
SCREW
G11-08-08U (4)

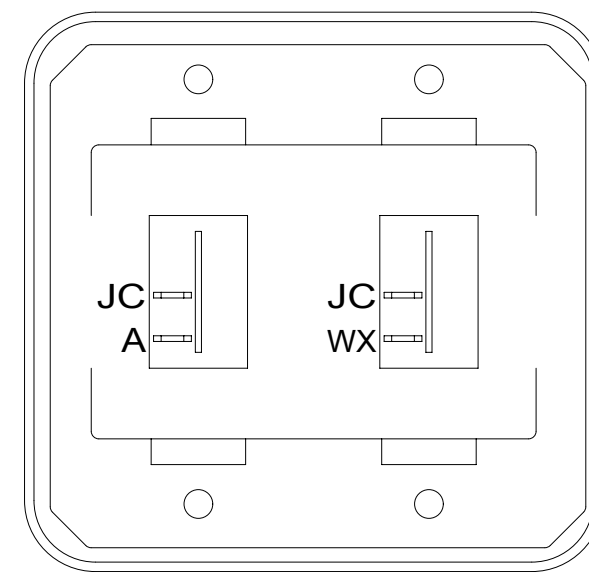


DETAIL DK

SWITCH-ROCKER
135740-01-CHT (2)
SWITCH-BASE
135741-02-CHT
SWITCH-BEZEL
135742-02-CHT
SCREW
G11-08-08U (4)

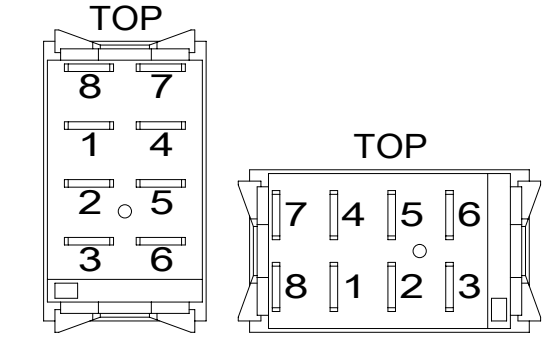


DETAIL DR

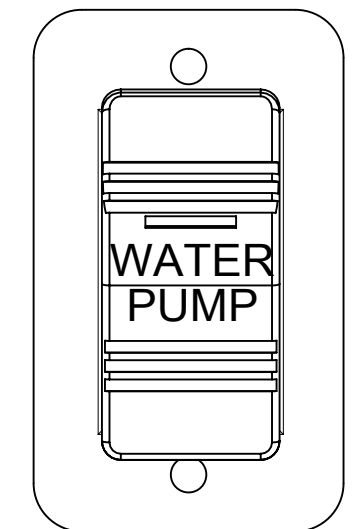


DETAIL DE

SWITCH-ROCKER
108357-15-000
ACTUATOR-SWITCH
108356-23-CHT
PLATE-SWITCH
098351-07-CHT
SCREW
G11-06-10U (2)

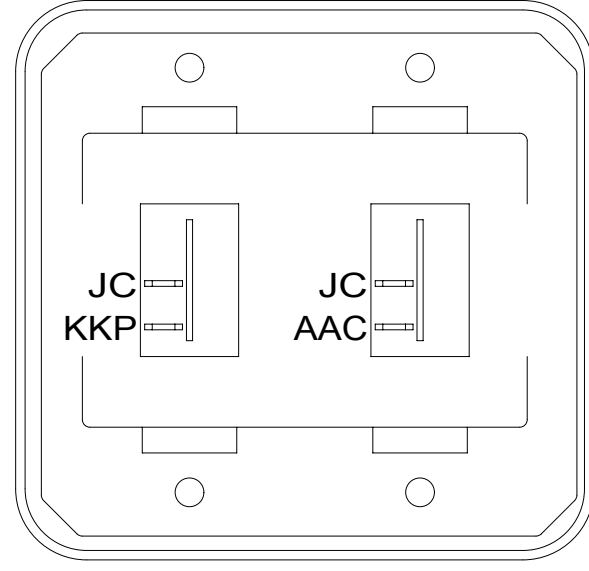


DETAIL DH

SWITCH-ROCKER
135740-01-CHT (2)
SWITCH-BASE
135741-02-CHT
SWITCH-BEZEL
135742-02-CHT
SCREW
G11-08-08U (4)

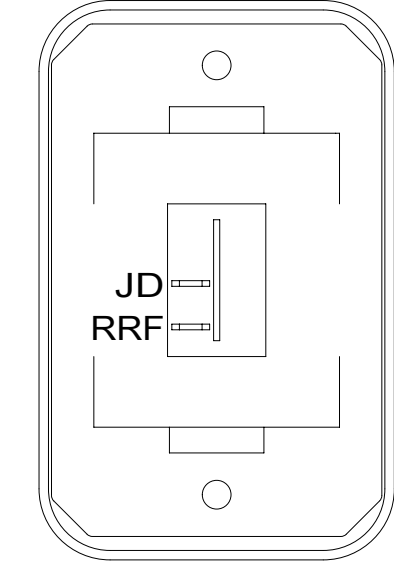


DETAIL DL

SWITCH-ROCKER
135740-01-CHT
SWITCH-BASE
135741-01-CHT
SWITCH-BEZEL
135742-01-CHT
SCREW
G11-08-08U (2)

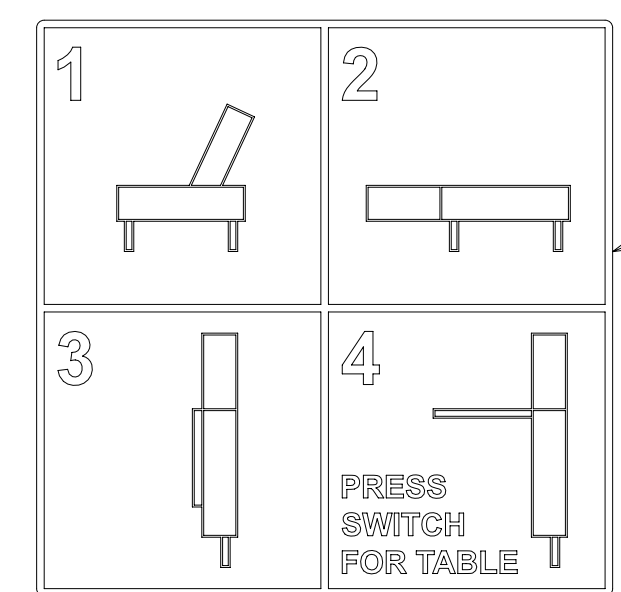

LABEL-SOFA,
MULTIFUNCTION, TABLE
190126-01-CHT

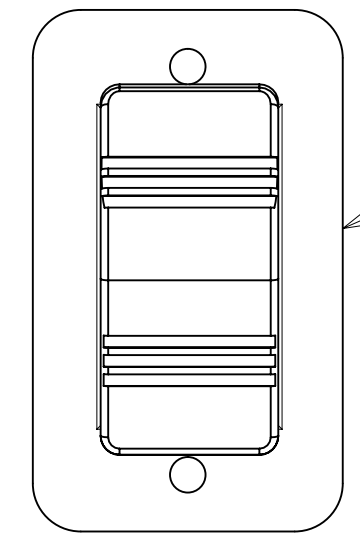


DETAIL DM

SWITCH-ROCKER
108357-06-000
ACTUATOR-SWITCH
108356-01-CHT
PLATE-SWITCH
098351-07-CHT
SCREW
G11-06-10U (2)

- 23T DRAINAGE SYSTEM-HEATED
- 23R DRAINAGE SYSTEM/HEAT-PREWIRED
- 265 CODES/STANDARDS-CSA/CMVSS
- 1B1 CODES/STANDARDS USA

1B1 265

FIRST USED	
15 A26A	
DO NOT SCALE DRAWING	
WIRING INSTL-BODY, 12V	
SHEET 4	PART NO 188251 REV

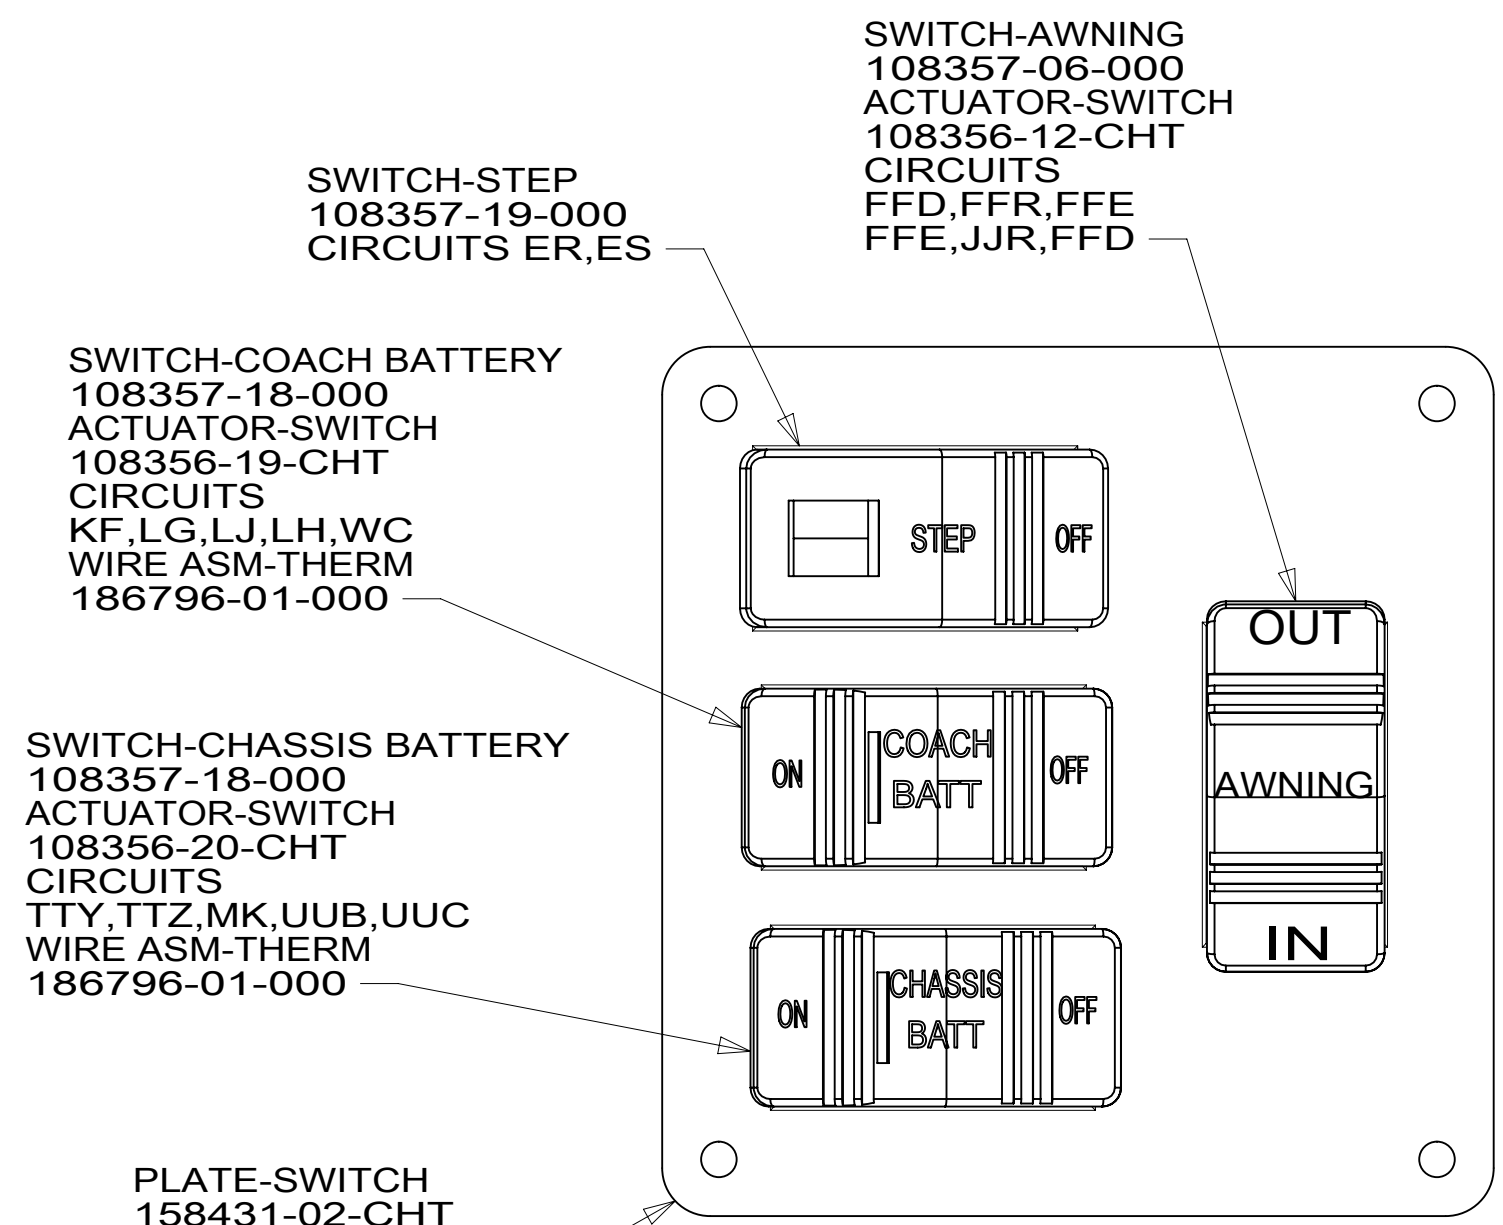

DETAIL DB 1

SWITCH-COACH BATTERY
108357-18-000
ACTUATOR-SWITCH
108356-19-CHT
CIRCUITS
KF, LG, LJ, LH, WC
WIRE ASM-THERM
186796-01-000


SWITCH-CHASSIS BATTERY
108357-18-000
ACTUATOR-SWITCH
108356-20-CHT
CIRCUITS
TTY, TTZ, MK, UUB, UUC
WIRE ASM-THERM
186796-01-000

PLATE-SWITCH
158431-02-CHT
SCREW
G11-06-10U (6)

SWITCH-AWNING
108357-06-000
ACTUATOR-SWITCH
108356-12-CHT
CIRCUITS
FFD, FFR, FFE
FFE, JJR, FFD

SWITCH-STEP
108357-19-000
CIRCUITS ER, ES

- NOTES:
- 4 CIRCUIT FROM WIRE ASM-CHASSIS.
 - 3 CIRCUIT FROM WIRE ASM-COACH.
 - 2 FOR REFERENCE ONLY, SEE LOAD CENTER/ATS ASM FOR ADDITIONAL INFORMATION.
 - 1 FOR SWITCH ORIENTATION SEE DETAIL DR.

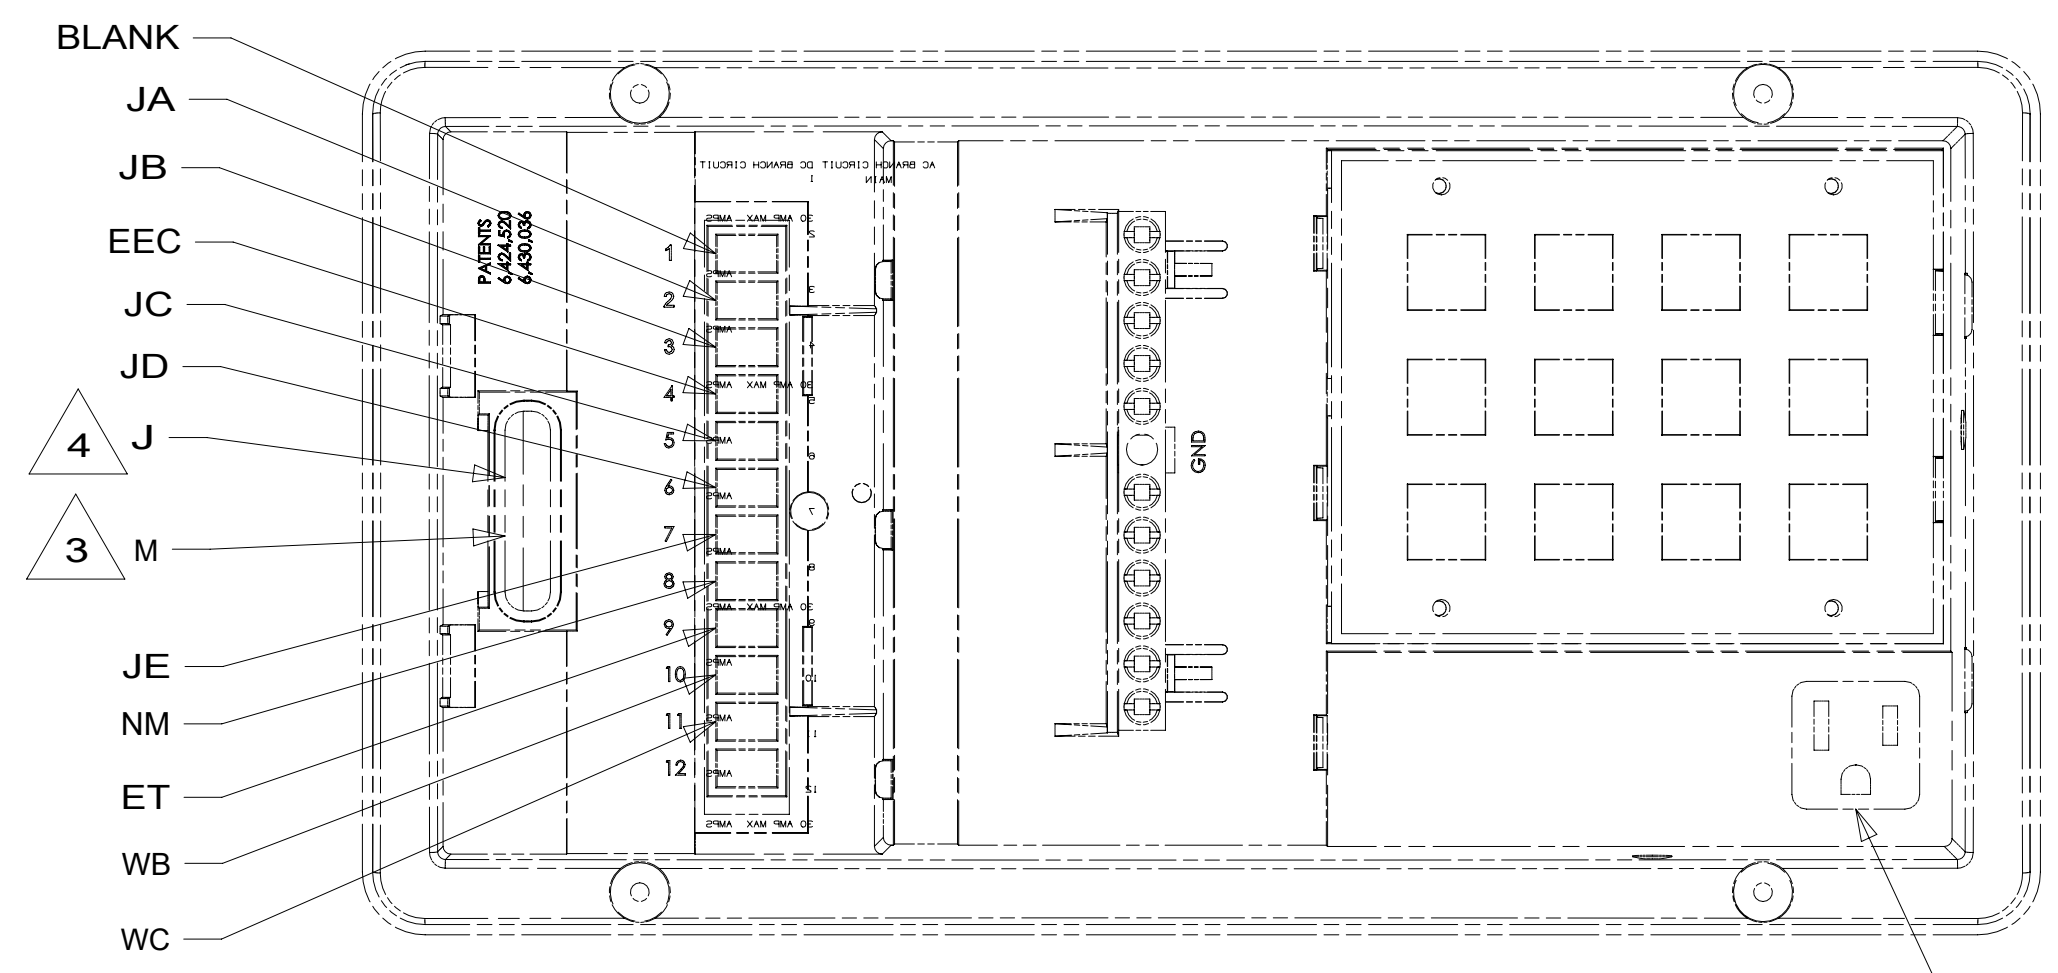


DETAIL DP 2

PLUG CONVERTER
POWER CORD
INTO CONVENIENCE
RECEPTACLE

FOR ELECTRICAL
TORQUE
SPECIFICATIONS
SEE DWG NO.
128783-01-000

FOR ELECTRICAL
CALLOUTS
SEE DWG NO.
121339-01-000

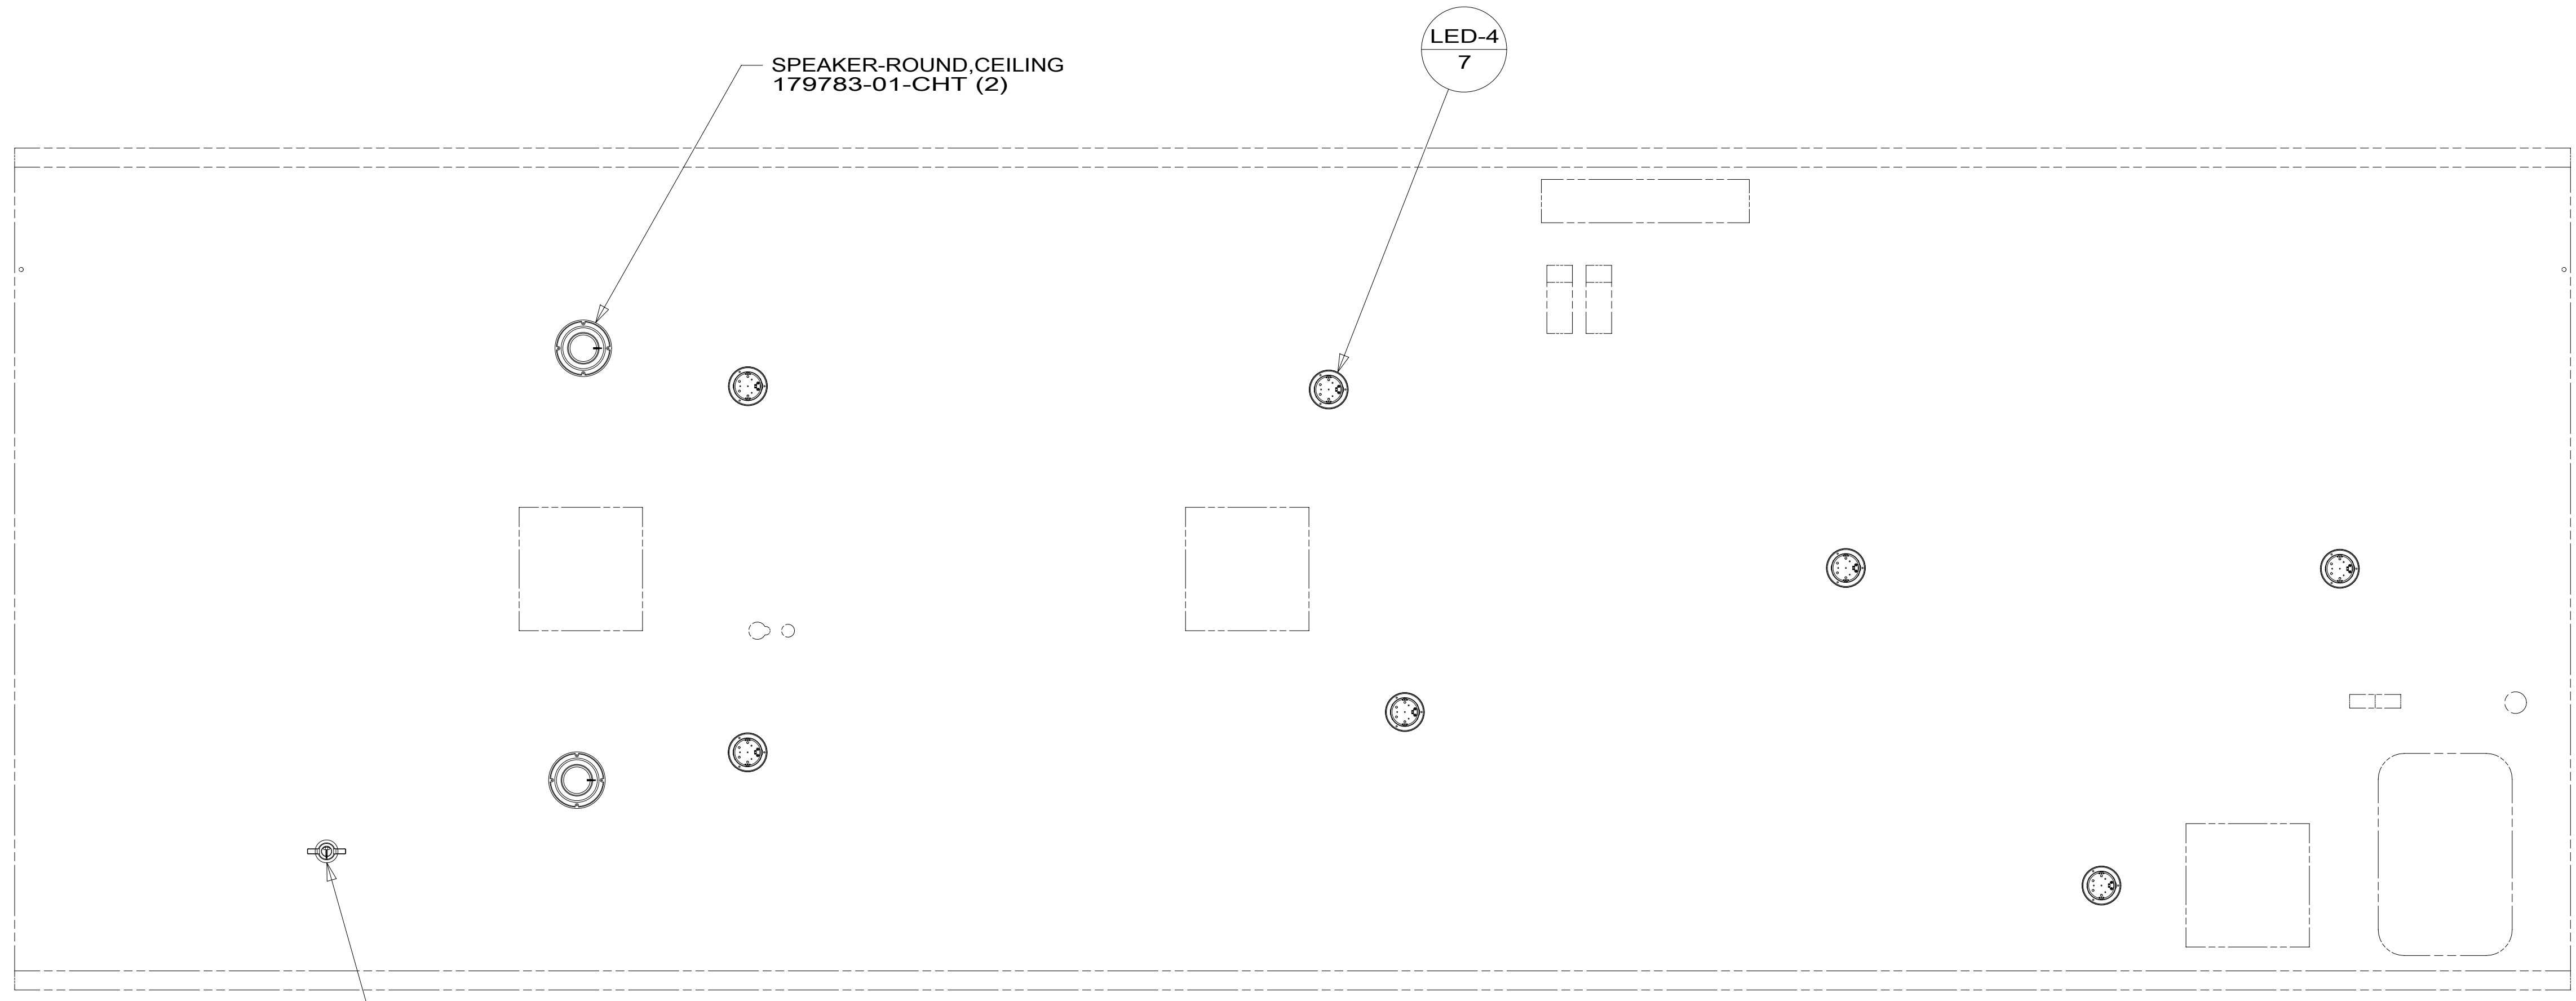

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000

FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000

265 CODES/STANDARDS-CSA/CMVSS

1B1 CODES/STANDARDS USA

1B1 265

FIRST USED **15 A26A**

DO NOT SCALE DRAWING

TITLE: **WIRING INSTL-BODY, 12V**

SHEET 5 PART NO **188251** REV

*188251 *A

8

7

6

5

↓

4

3

2

1

D

D

C


C

B

B

A

A

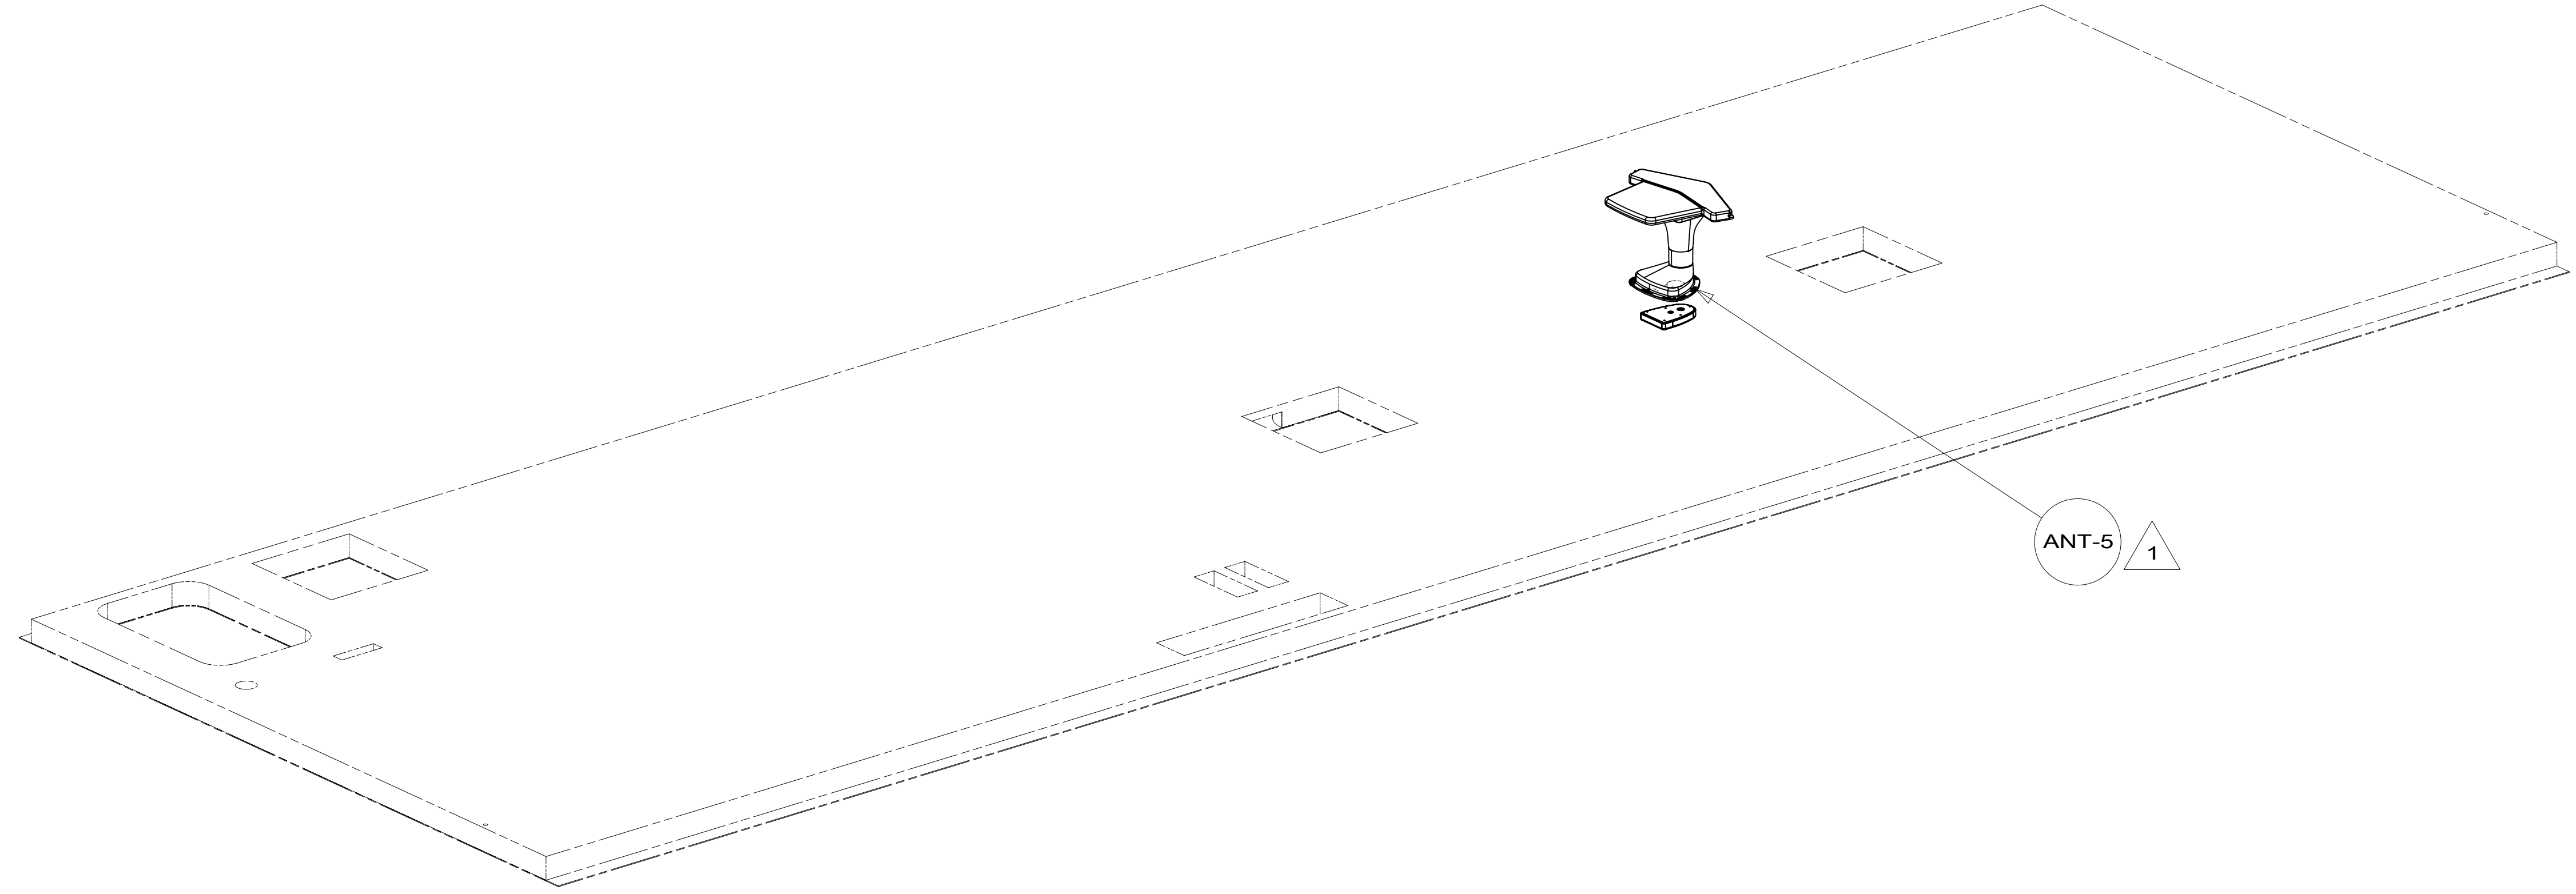

NOTES:

1 SEE ANTENNA INSTALLATION MANUAL FOR CORRECT INSTALLATION PROCEDURE.

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000

FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000

265 CODES/STANDARDS-CSA/CMVSS

1B1 CODES/STANDARDS USA


1B1 265

FIRST USED **15 A26A**

DO NOT SCALE DRAWING

TITLE: **WIRING INSTL-BODY, 12V**

SHEET 6 PART NO **188251** REV

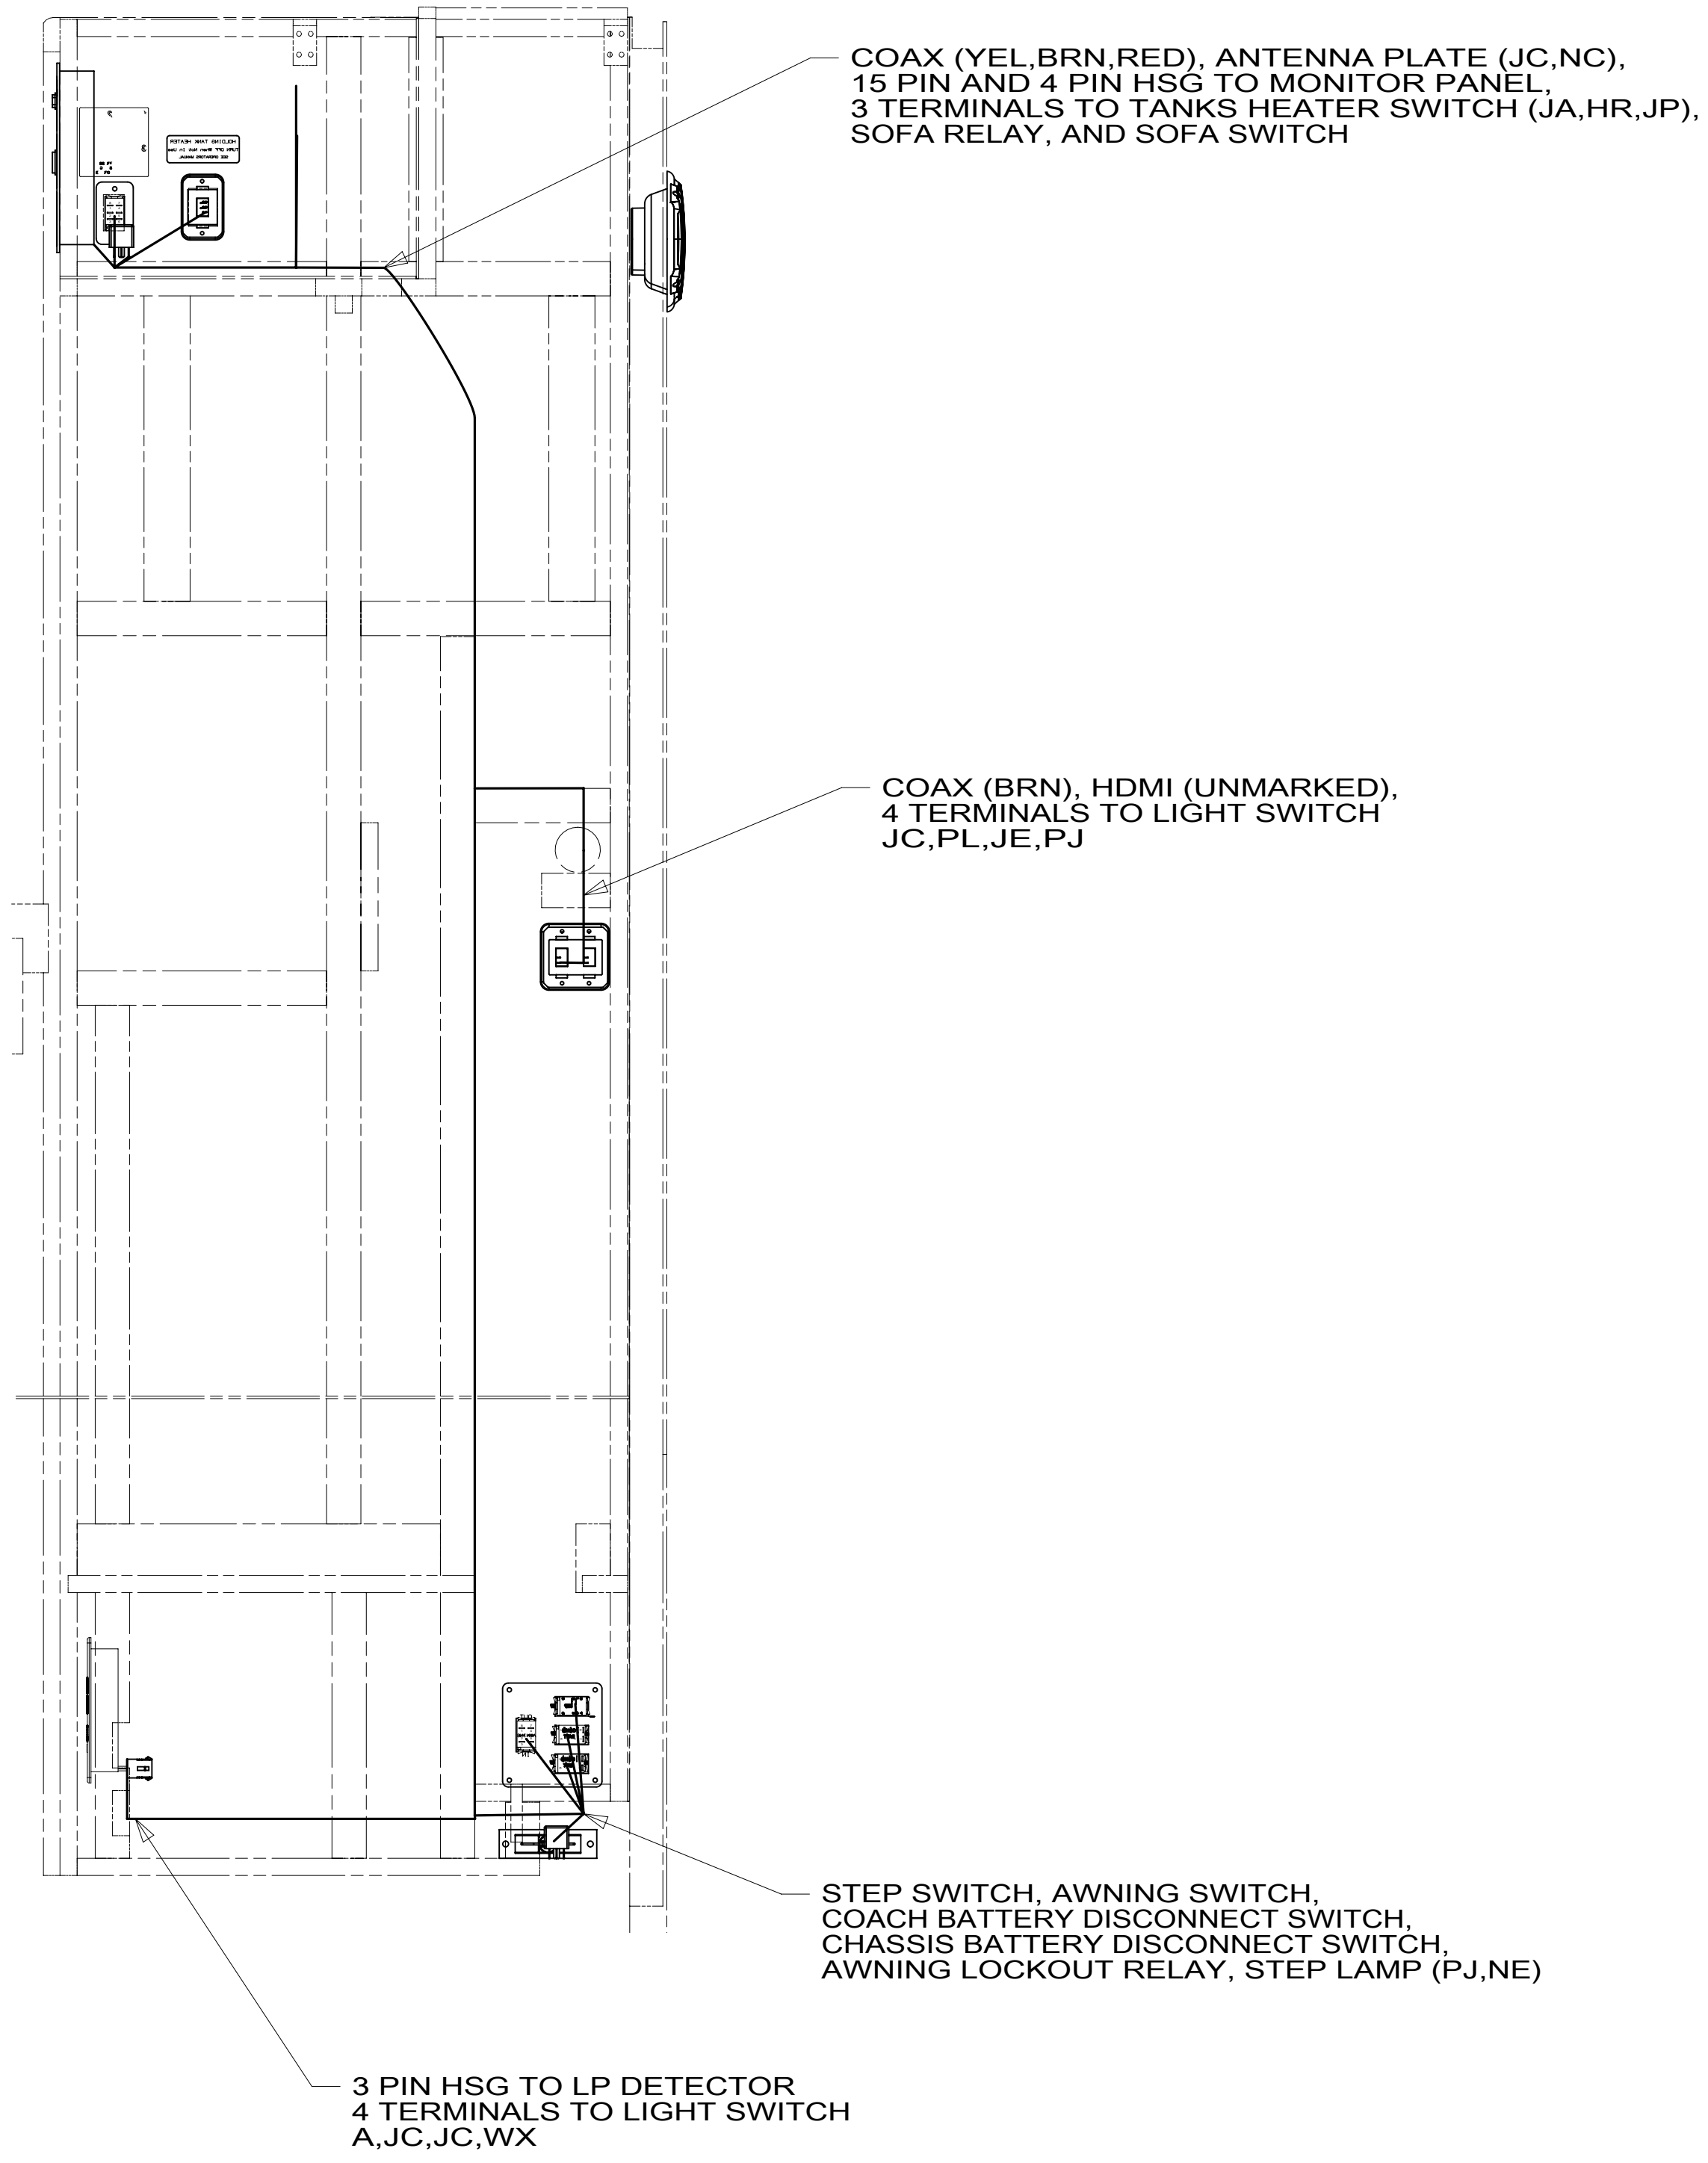

DETAIL GA

1. AT MINIMUM ALL WIRES TO BE SUPPORTED AND SECURED PER CODE REQUIREMENTS. USE CLAMP 10495 OR 10497 OR WIRE TIE 8343 OR 108046 AND SCREW G67-XX-XXX OR G56-XX-XXX AS APPROPRIATE FOR INSTALLATION.

NOTES:

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000

FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000

265 CODES/STANDARDS-CSA/CMVSS

1B1 CODES/STANDARDS USA

1B1 265

FIRST USED **15 A26A**

DO NOT SCALE DRAWING

TITLE: **WIRING INSTL-BODY, 12V**

SHEET 7 PART NO **188251** REV

*188251 *A