



If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.


Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



Copyright © 2015 Winnebago Industries, Inc.

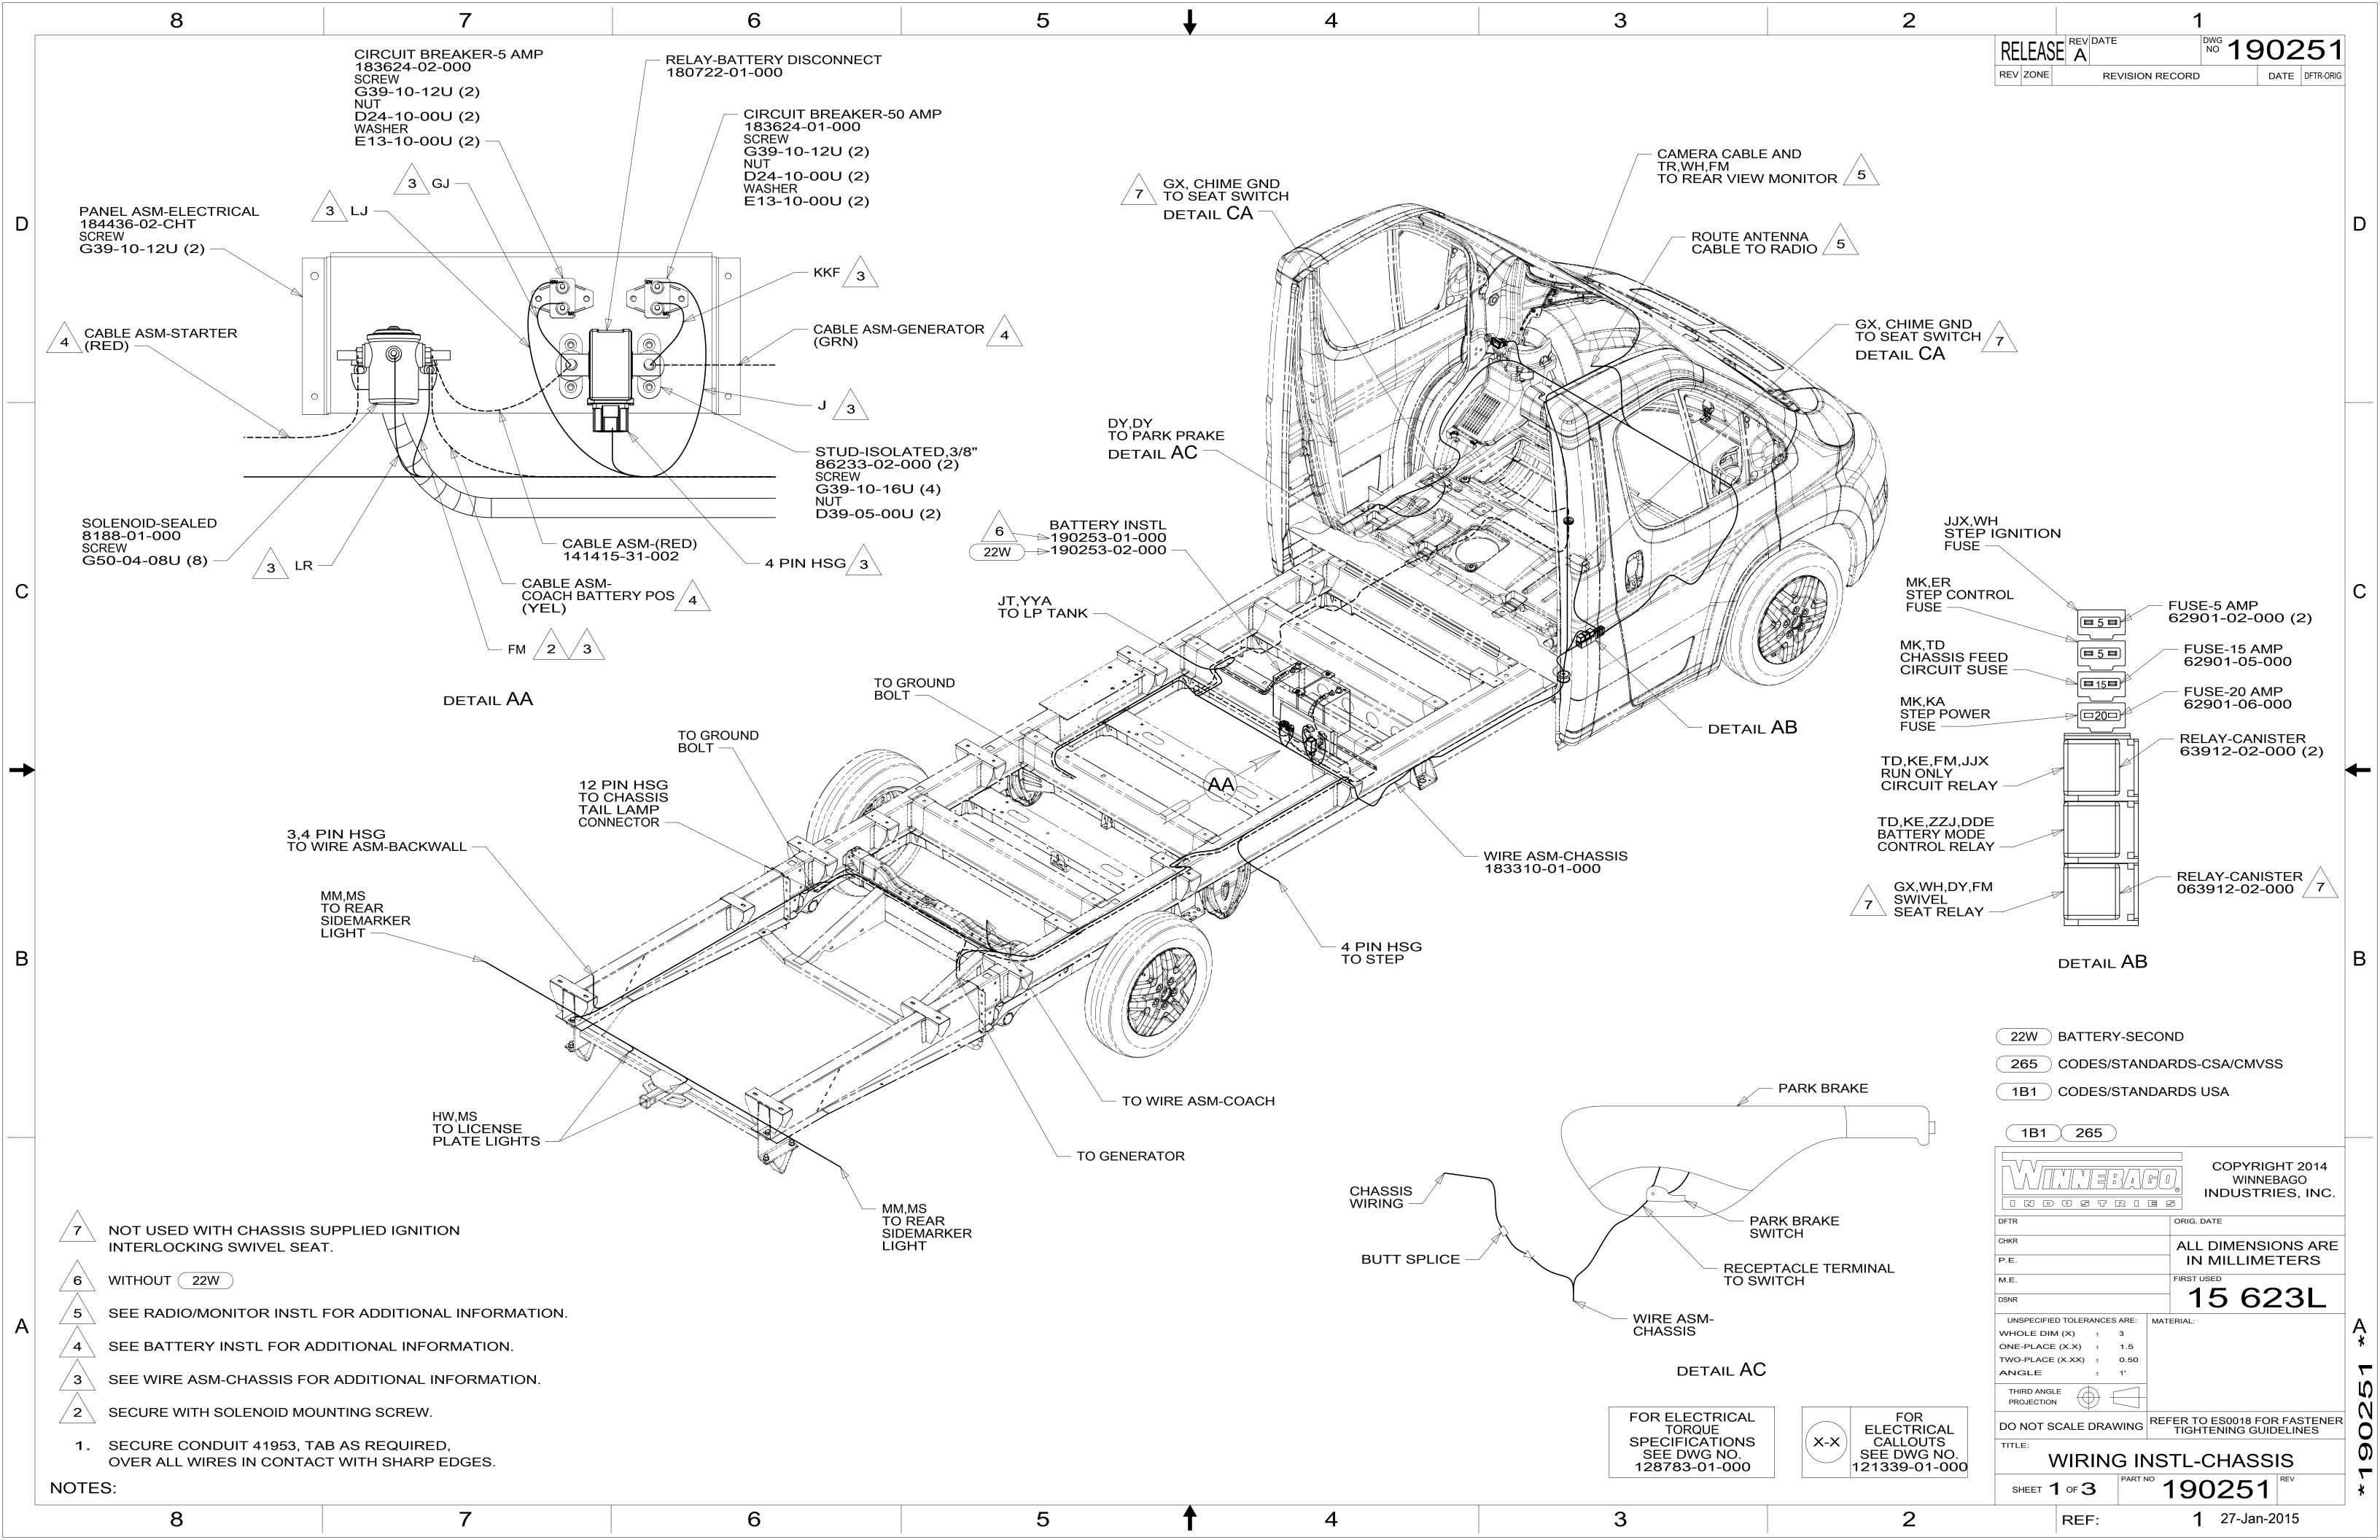

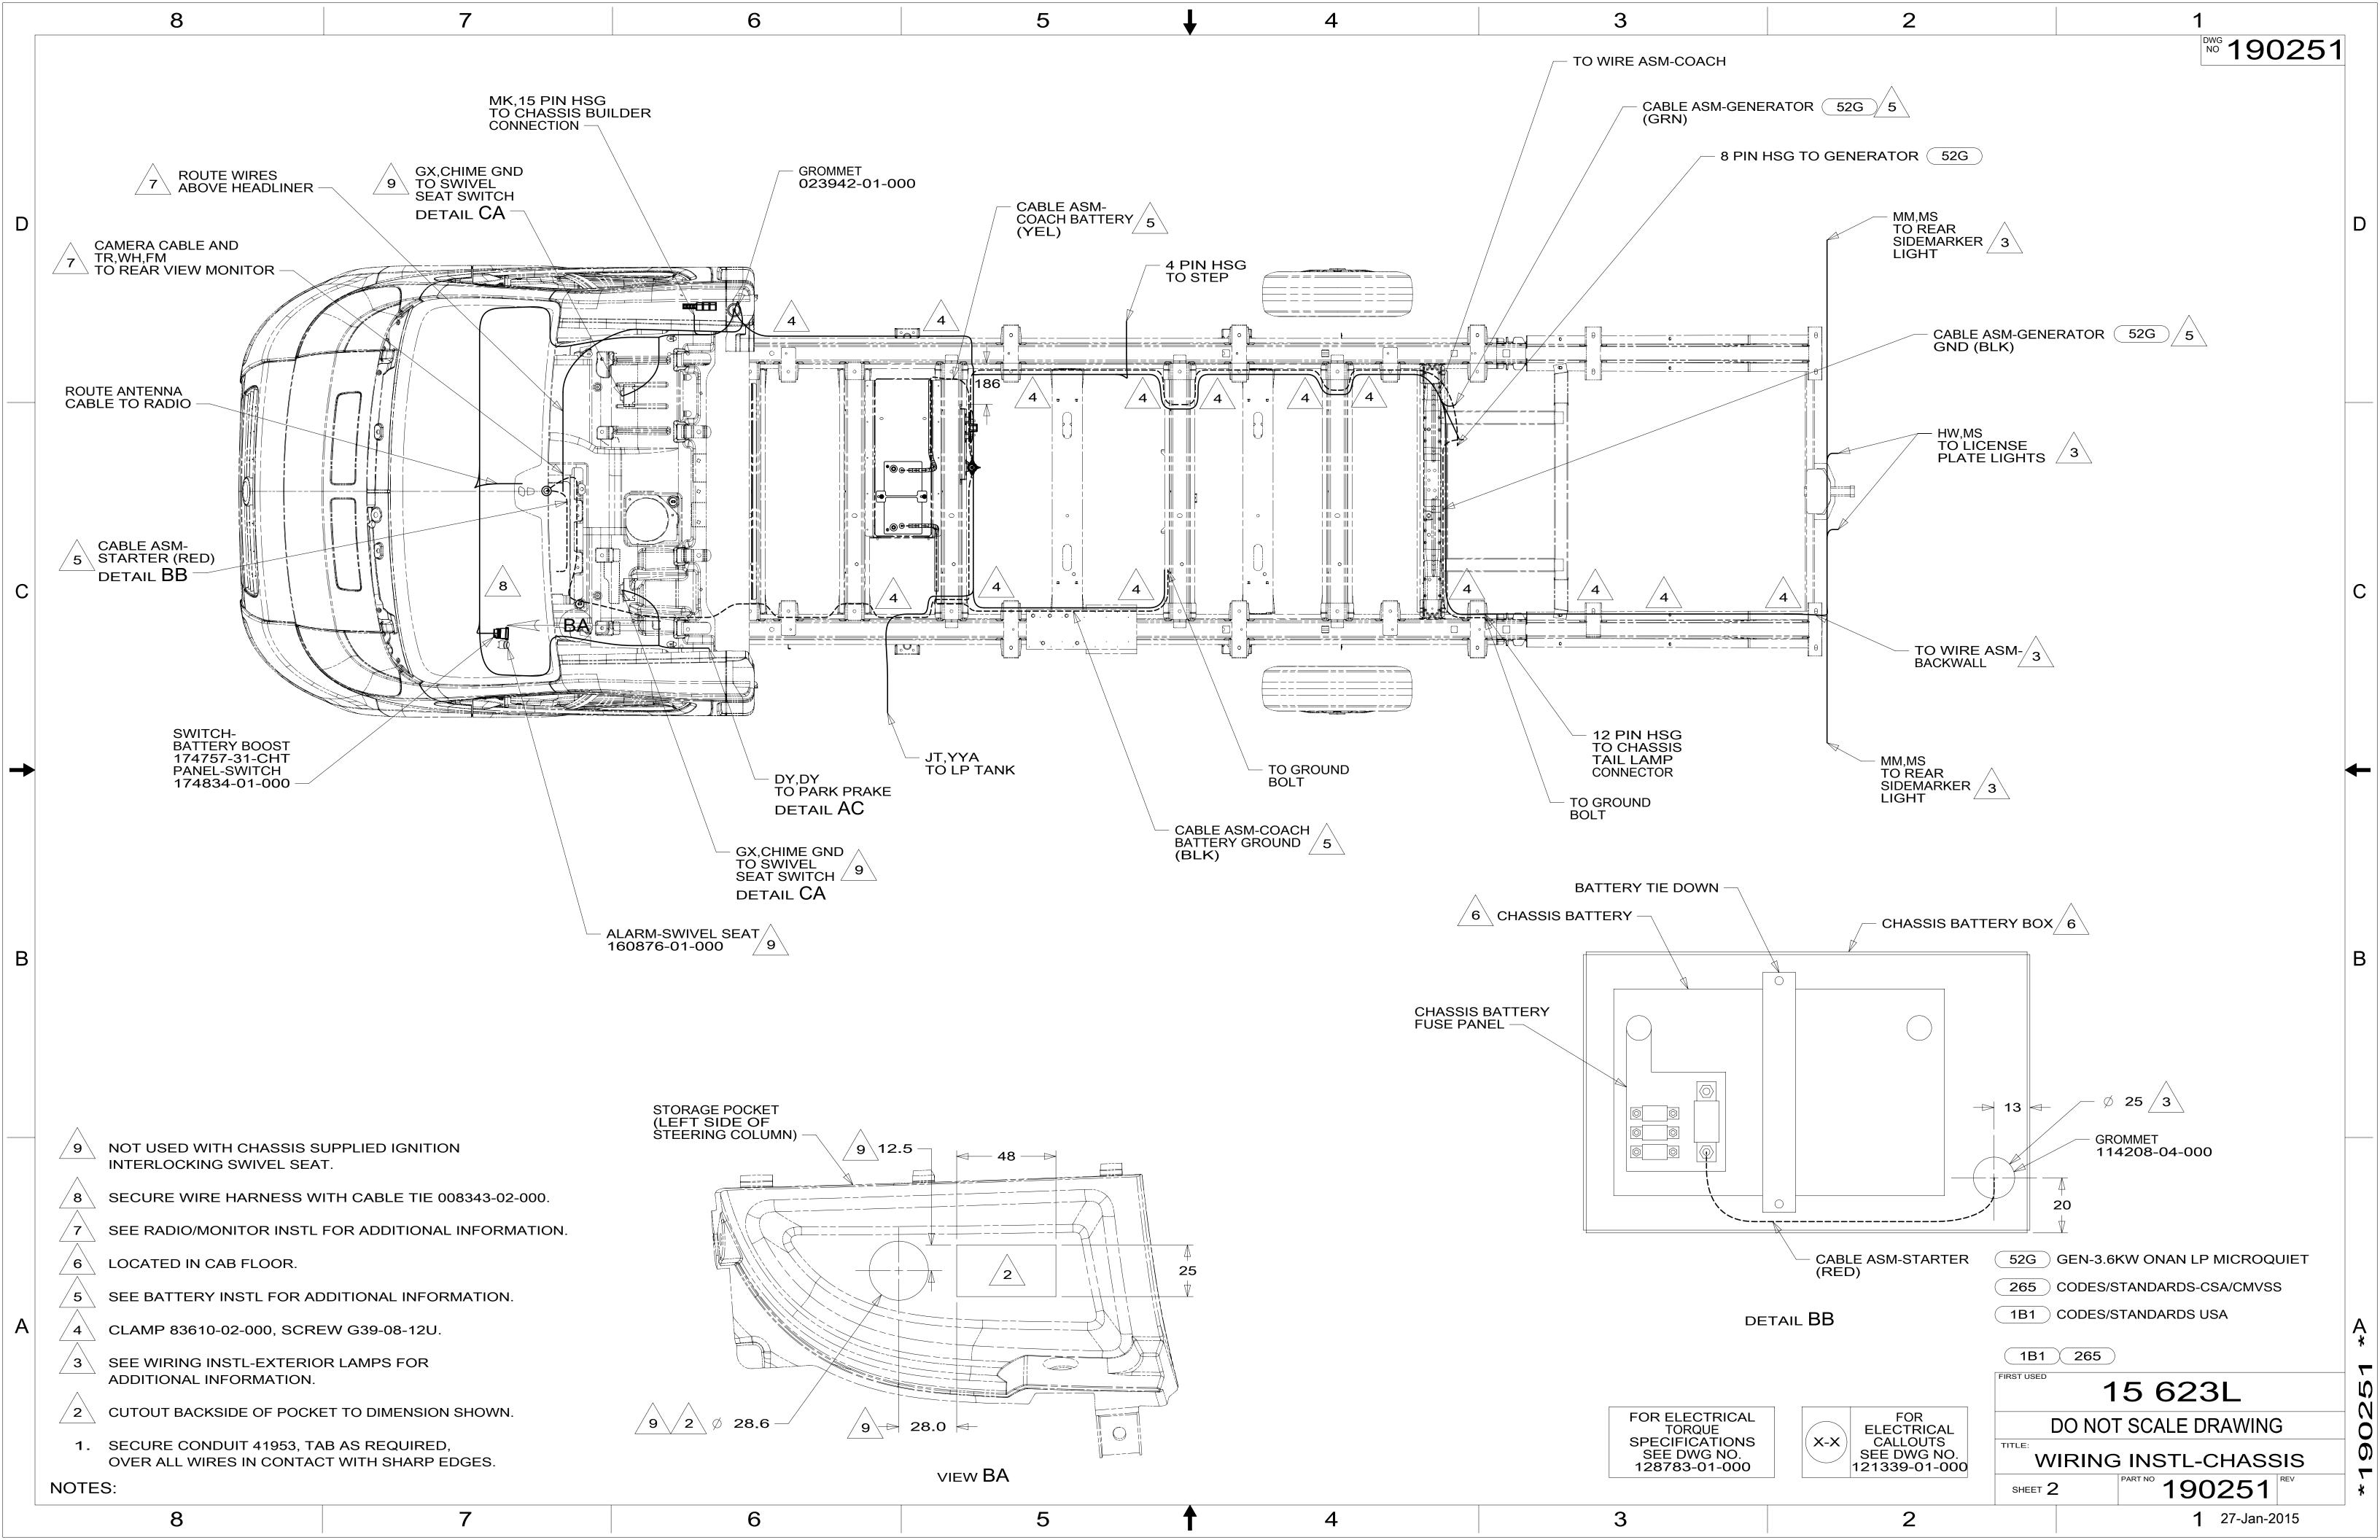

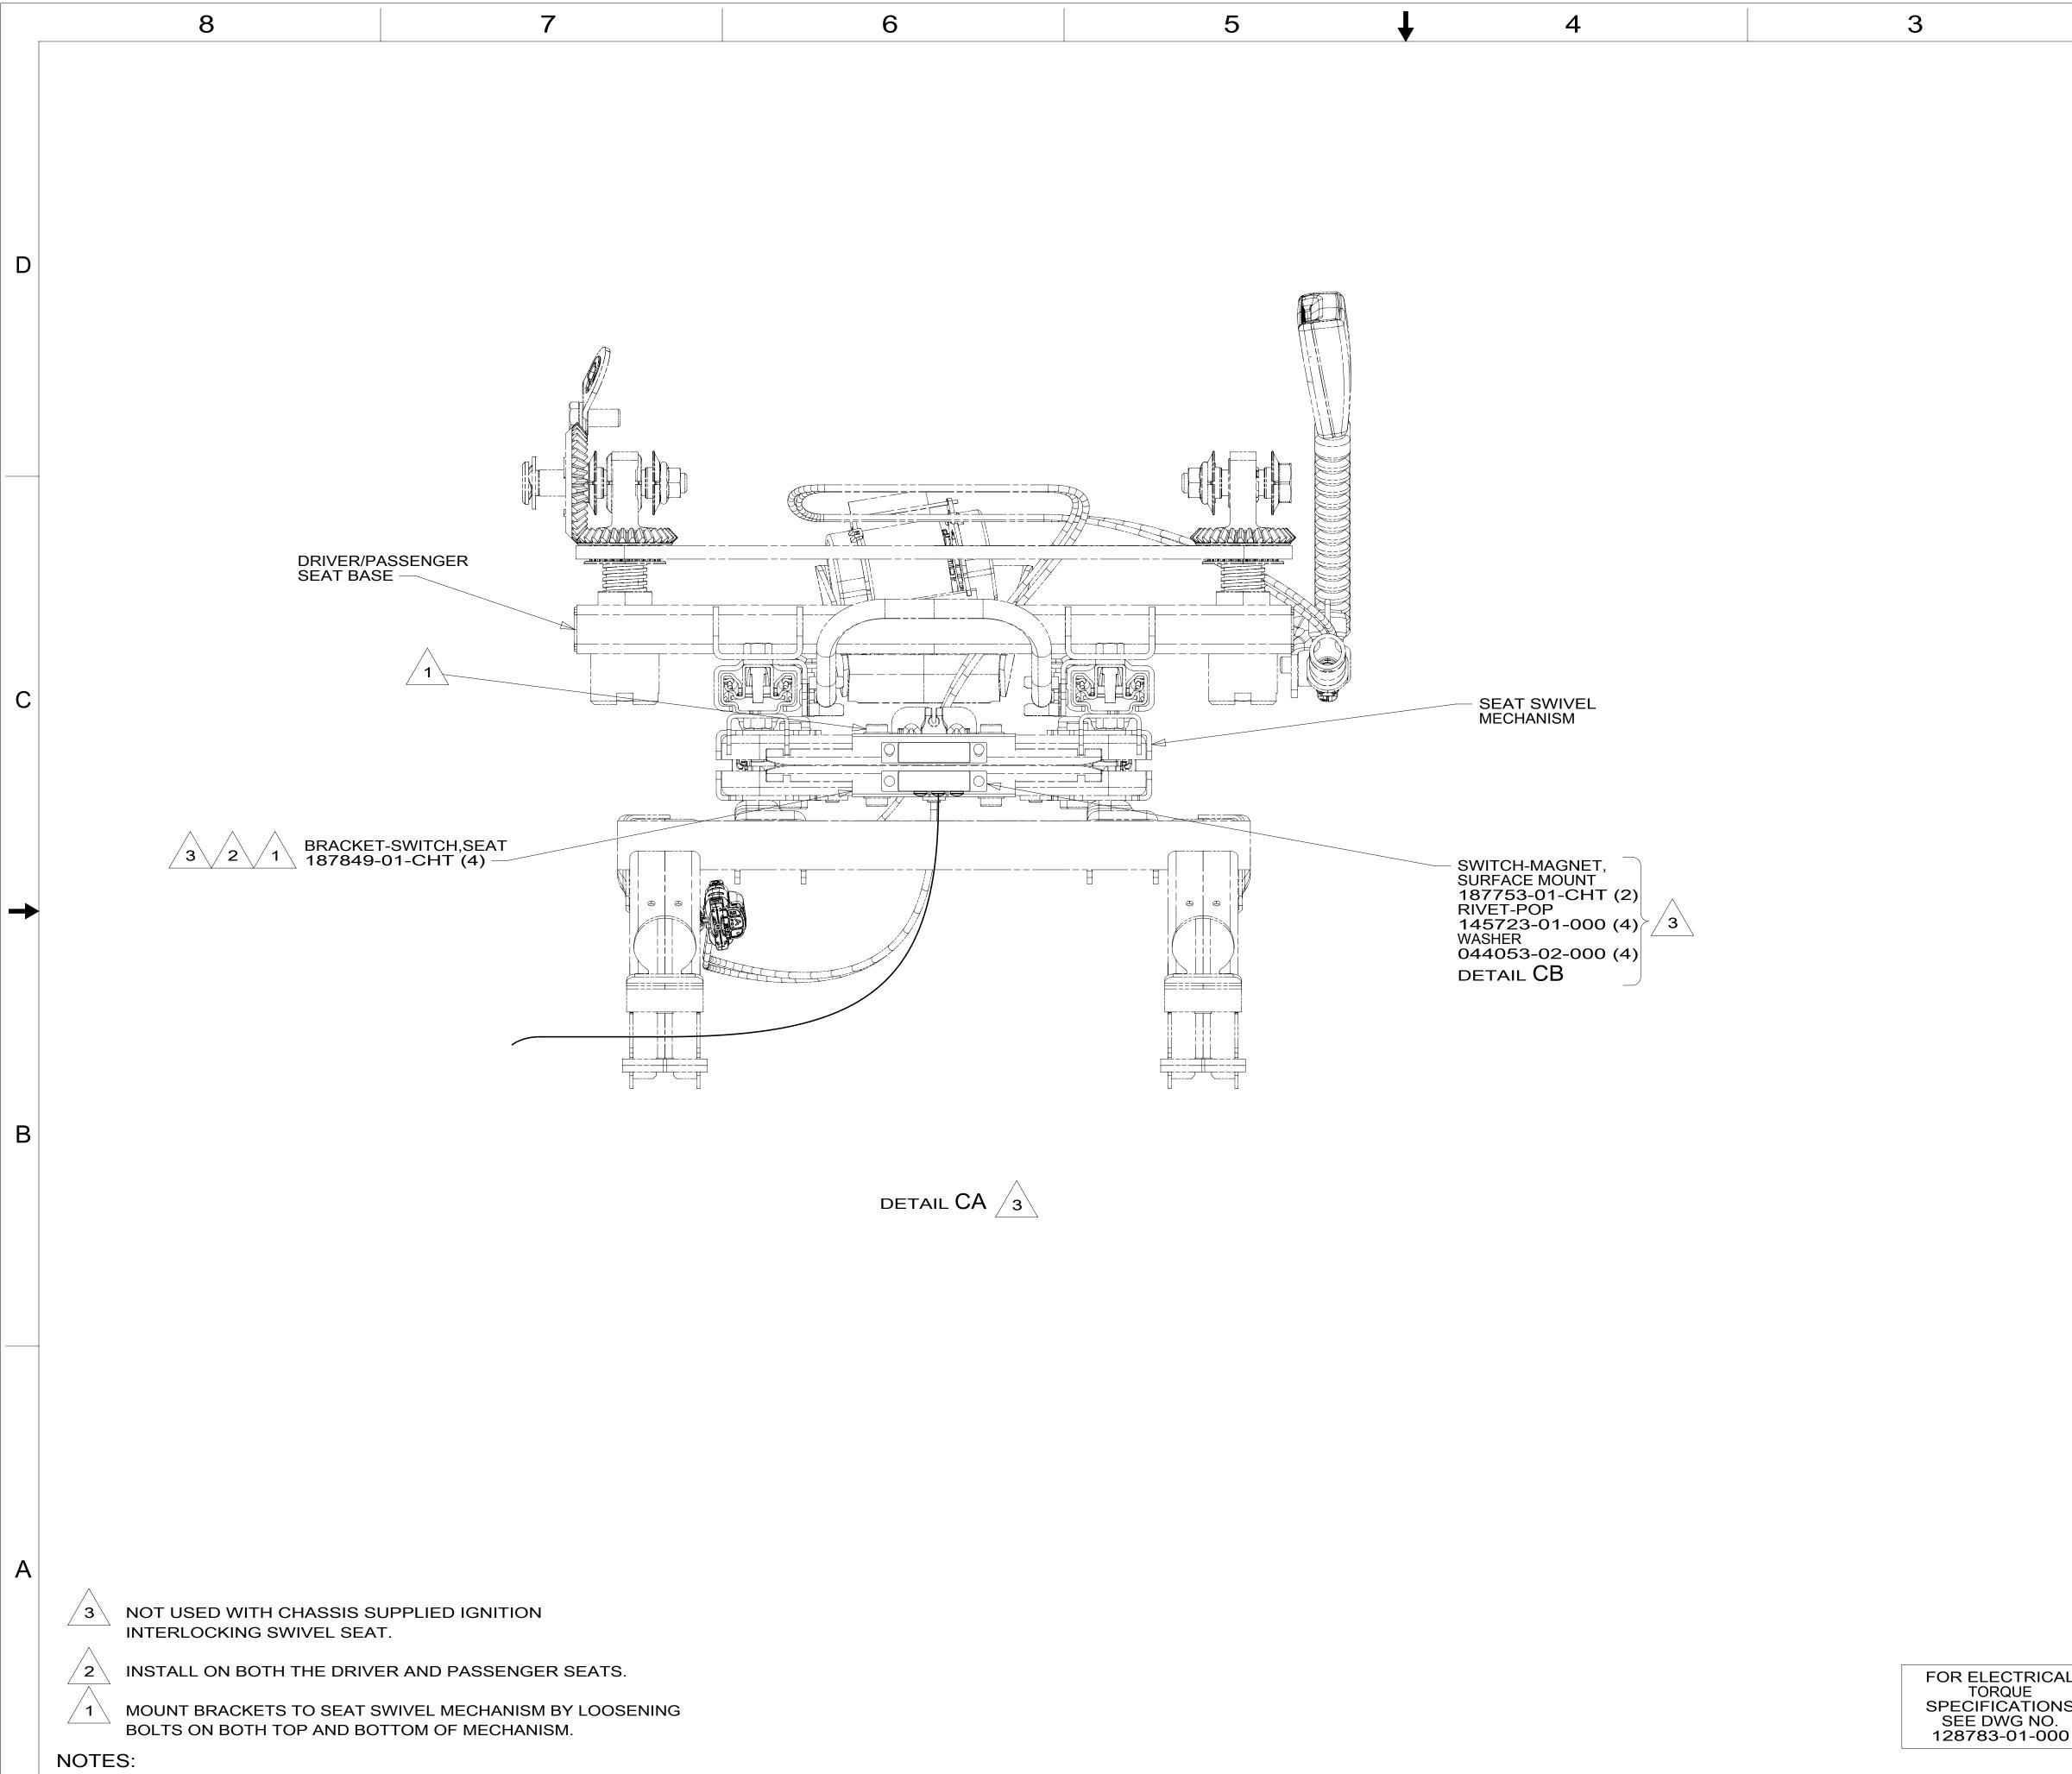

| 8 |  |
|---|--|

| us<br>o<br>Listing the set of the set |    | WIRE ASM-<br>IP MAIN<br>GX CHIME GND  | D                |
|--|----|---|------------------|
| AL<br>AL<br>AL<br>AL<br>AL<br>AL<br>AL<br>AL<br>AL<br>AL   |    |   | С                |
| AL<br>AL<br>AL<br>AL<br>AL<br>AL<br>AL<br>AL<br>AL<br>AL   |    |   | -                |
| 1B1 CODES/STANDARDS USA     1B1 265     1D0 NOT     1D0 NOT     1D0 NOT     1D1 1D1     1D2 1D1     1D2 1D1     1D2  |    |   | В                |
| 1B1 CODES/STANDARDS USA     1B1 265     1D0 NOT     1D0 NOT     1D0 NOT     1D1 1D1     1D2 1D1     1D2 1D1     1D2  |    |   |                  |
| UU NUT SCALE DRAWING<br>DU NUT SCALE DRAWING<br>0<br>UTITLE:<br>VIRING INSTL-CHASSIS<br>VIRING 190251<br>REV   | AL | 1B1 CODES/STANDARDS USA<br>1B1 265<br>FIRST USED 15623L<br>FOR DO NOT COAL E DDAMAIN O  | -                |
| 2 1 27-Jan-2015  |    | ELECTRICAL<br>CALLOUTS<br>SEE DWG NO.<br>121339-01-000<br>SHEET 3<br>DO NOT SCALE DRAWING<br>TITLE:<br>WIRING INSTL-CHASSIS<br>SHEET 3<br>PART NO<br>190251 | * 1 00<br>* 1 00 |

NO 190251