


If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.


Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.





Copyright © 2014 Winnebago Industries, Inc.

	8	3	7	6	
	DRAWING NO	FEATURE			
	184677-01				
	184677-12	<b>1B1</b>			
	184677-16	265			
D			(BLU) 2800 DROP (THROW IN #1) (ORG) 6000 DROP 1000 DROP INVERTER		-
			1000 DROP INVERTER 1000 DROP INVERTER I 1000 DROP LOAD CEN	RETURN	
			BRN,BLK,PUR,YEL,GR WHT,RED,GRN,LT BLU GLD2,BLU ARE ALL RO ABOVE FLOOR —	GLD, UTED	0
			300 DROP PUR,GRY, & YEL SLIDE WIRES- ROOM #3 WIRES 1,2, & 3 DETAIL EC	5 AB	
C					
			5		
-					
В					
	Δ.				
	6 SEE LOAI		FOR ADDITIONAL INFORMATI	ON.	
	4 SEE GEN		ION FOR ADDITIONAL INFORM	1ATION.	
A	3. WIRES TH	HAT REST ON WIRE	TRAYS ARE TO BE		
		D FLOOR SUPPORT T AMP 10497-01-000	UBES AS NECESSARY		
	OR WIRE	TIE 8343 OR 10804	WITH CLAMP 10495 OR 1049 6 EVERY 600MM, USE SCRE\ ( AS APPROPRIATE FOR INST	N	
	NOTES: <b>6</b>	3	7	6	
			1	1	

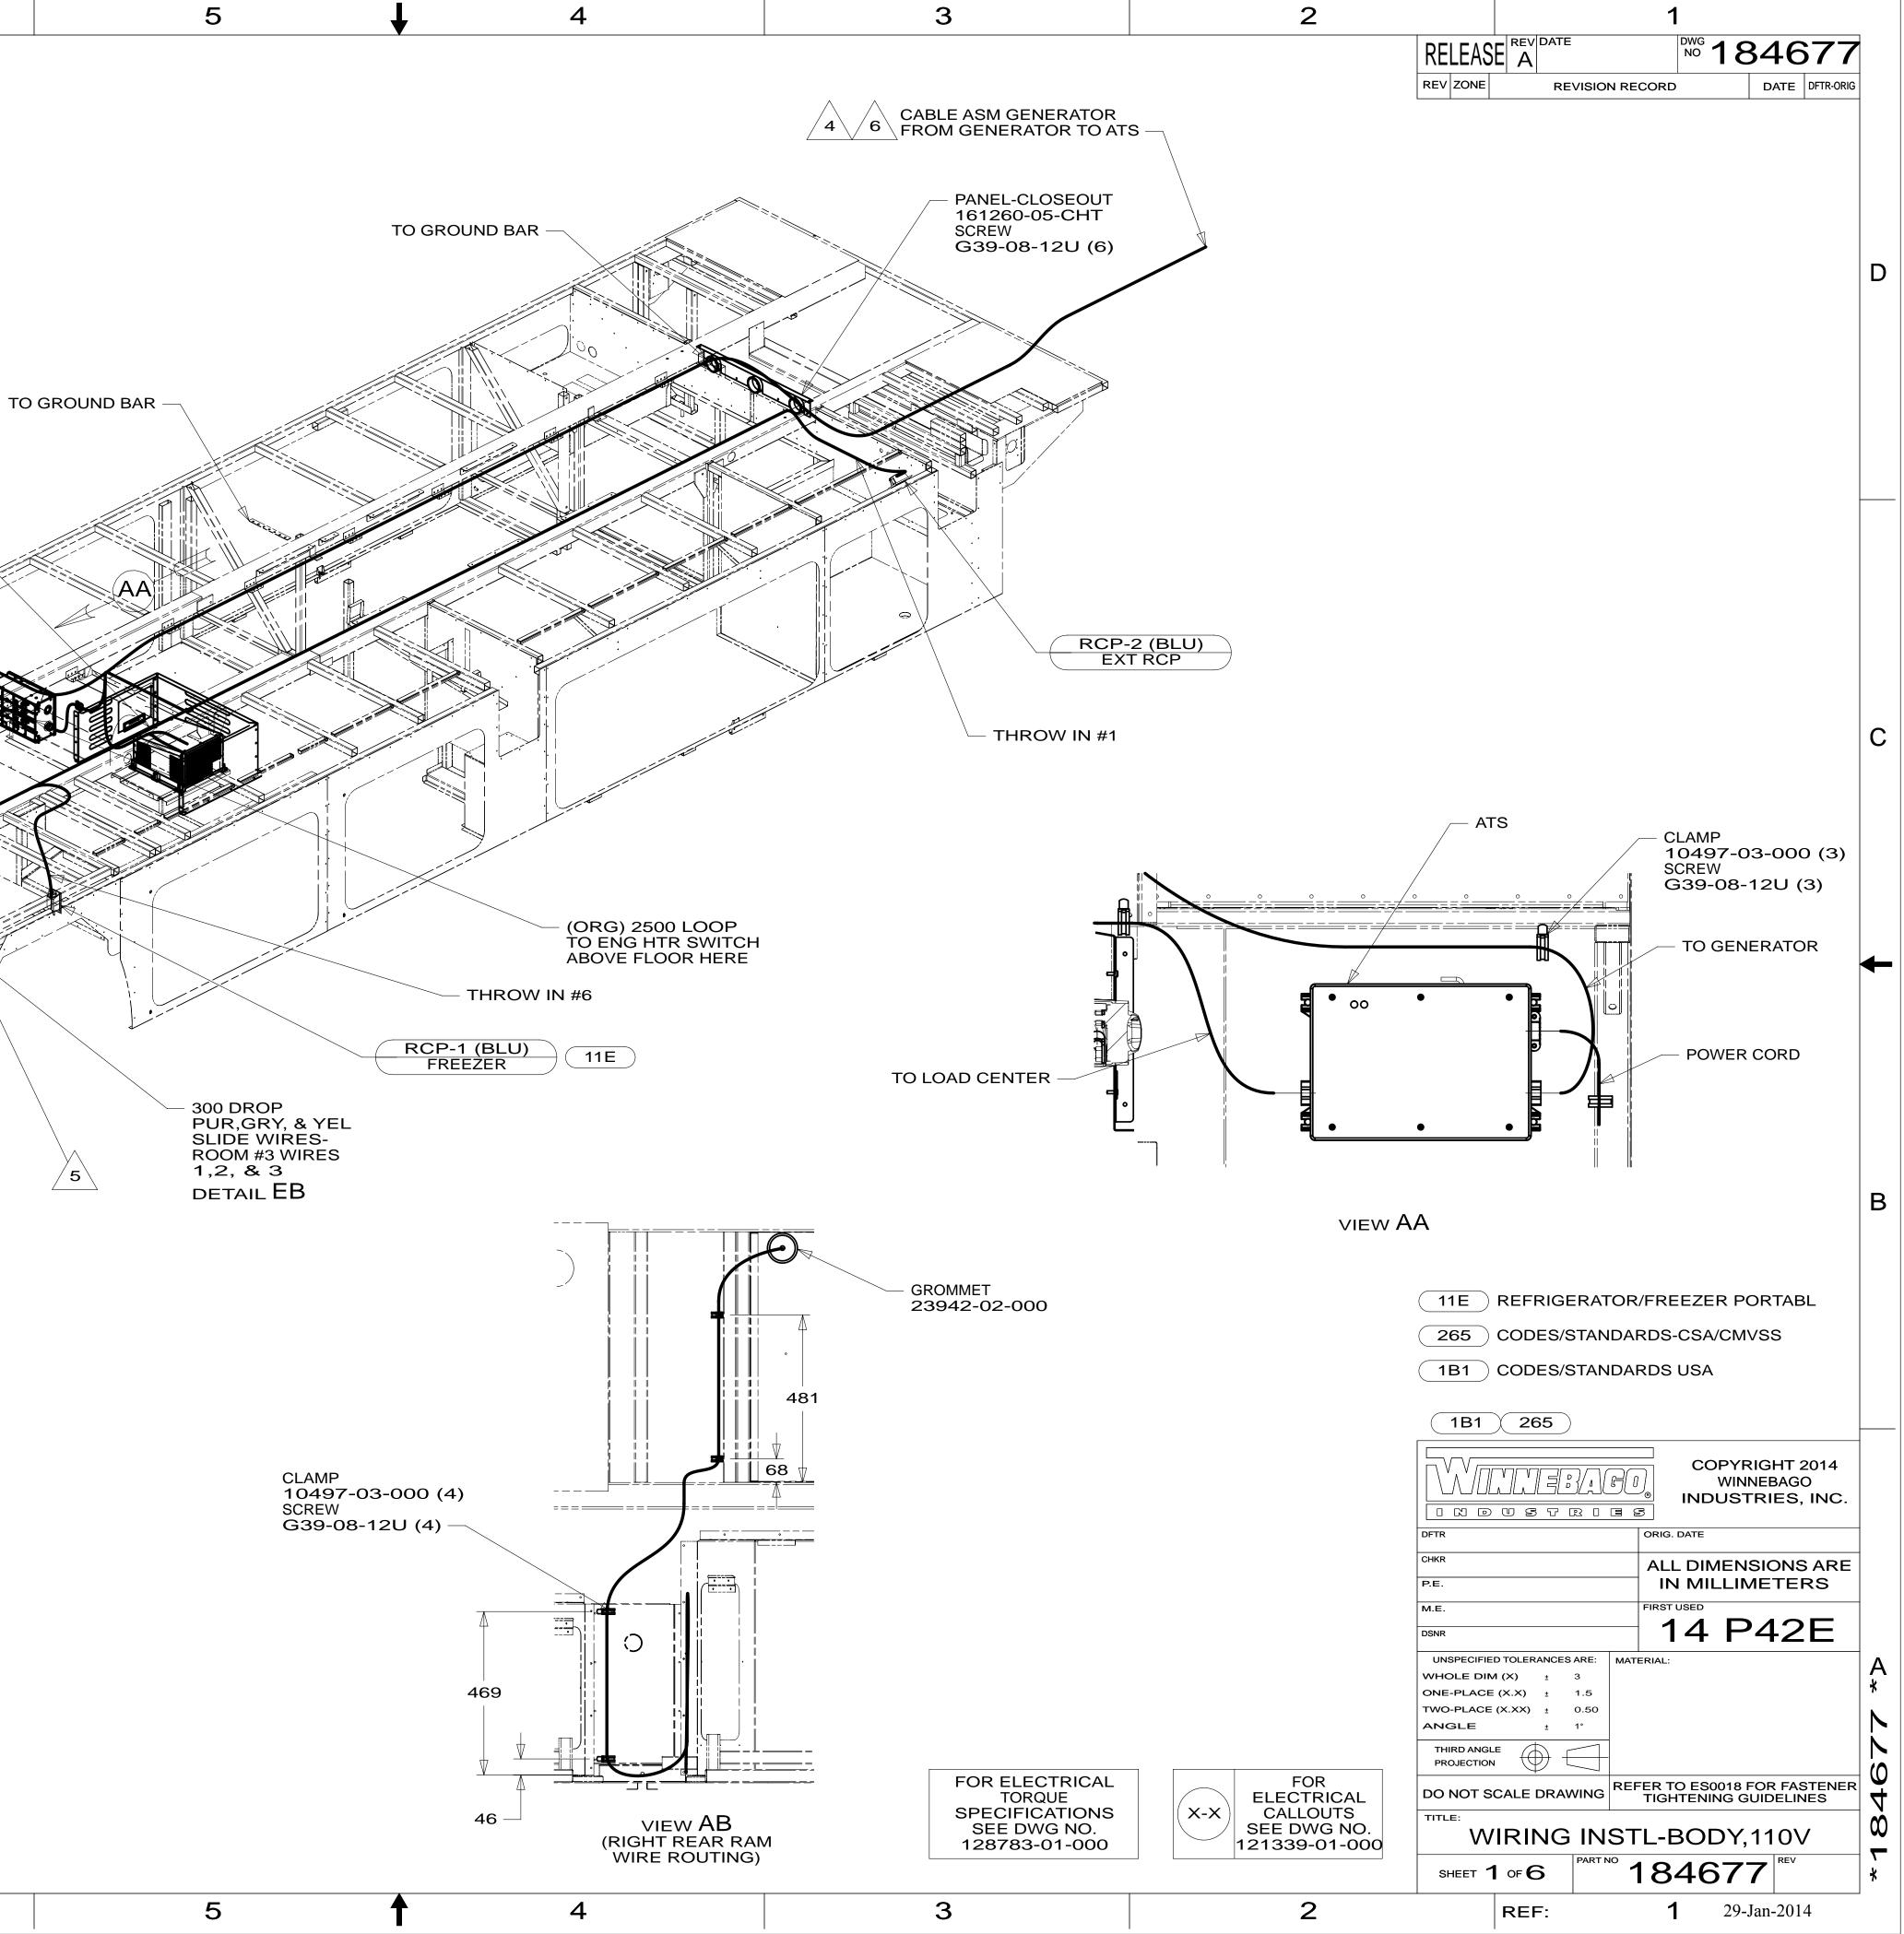

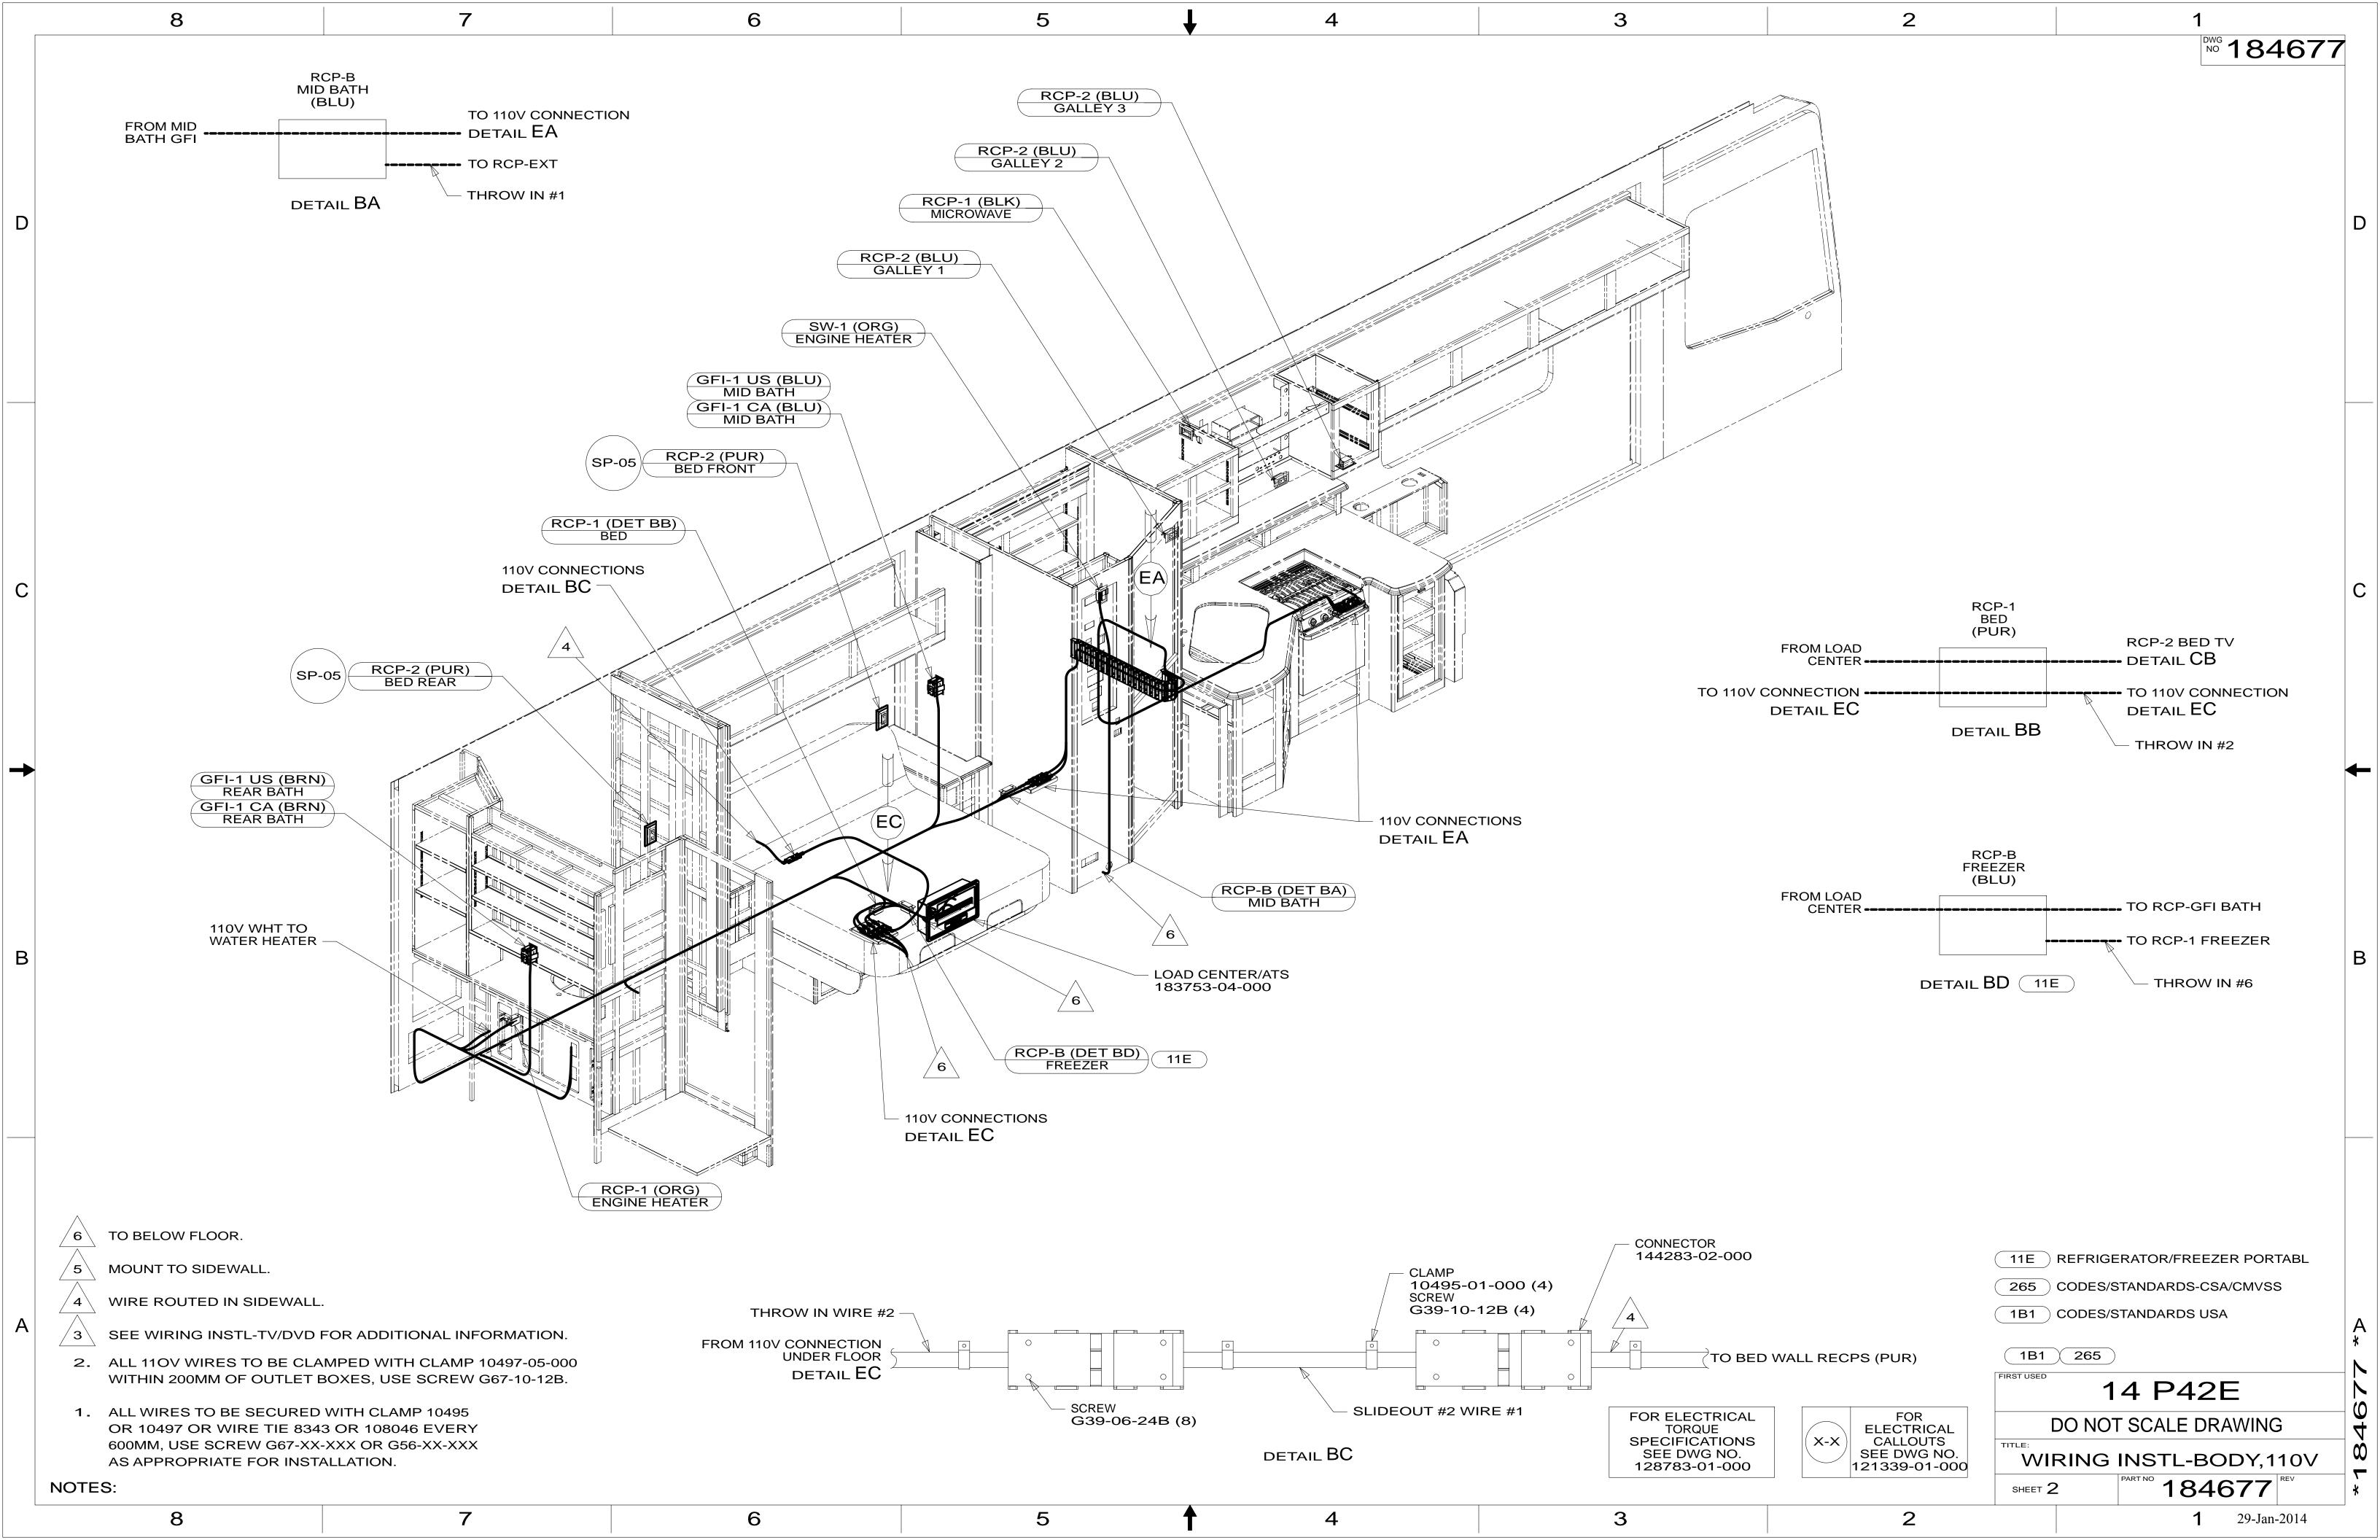

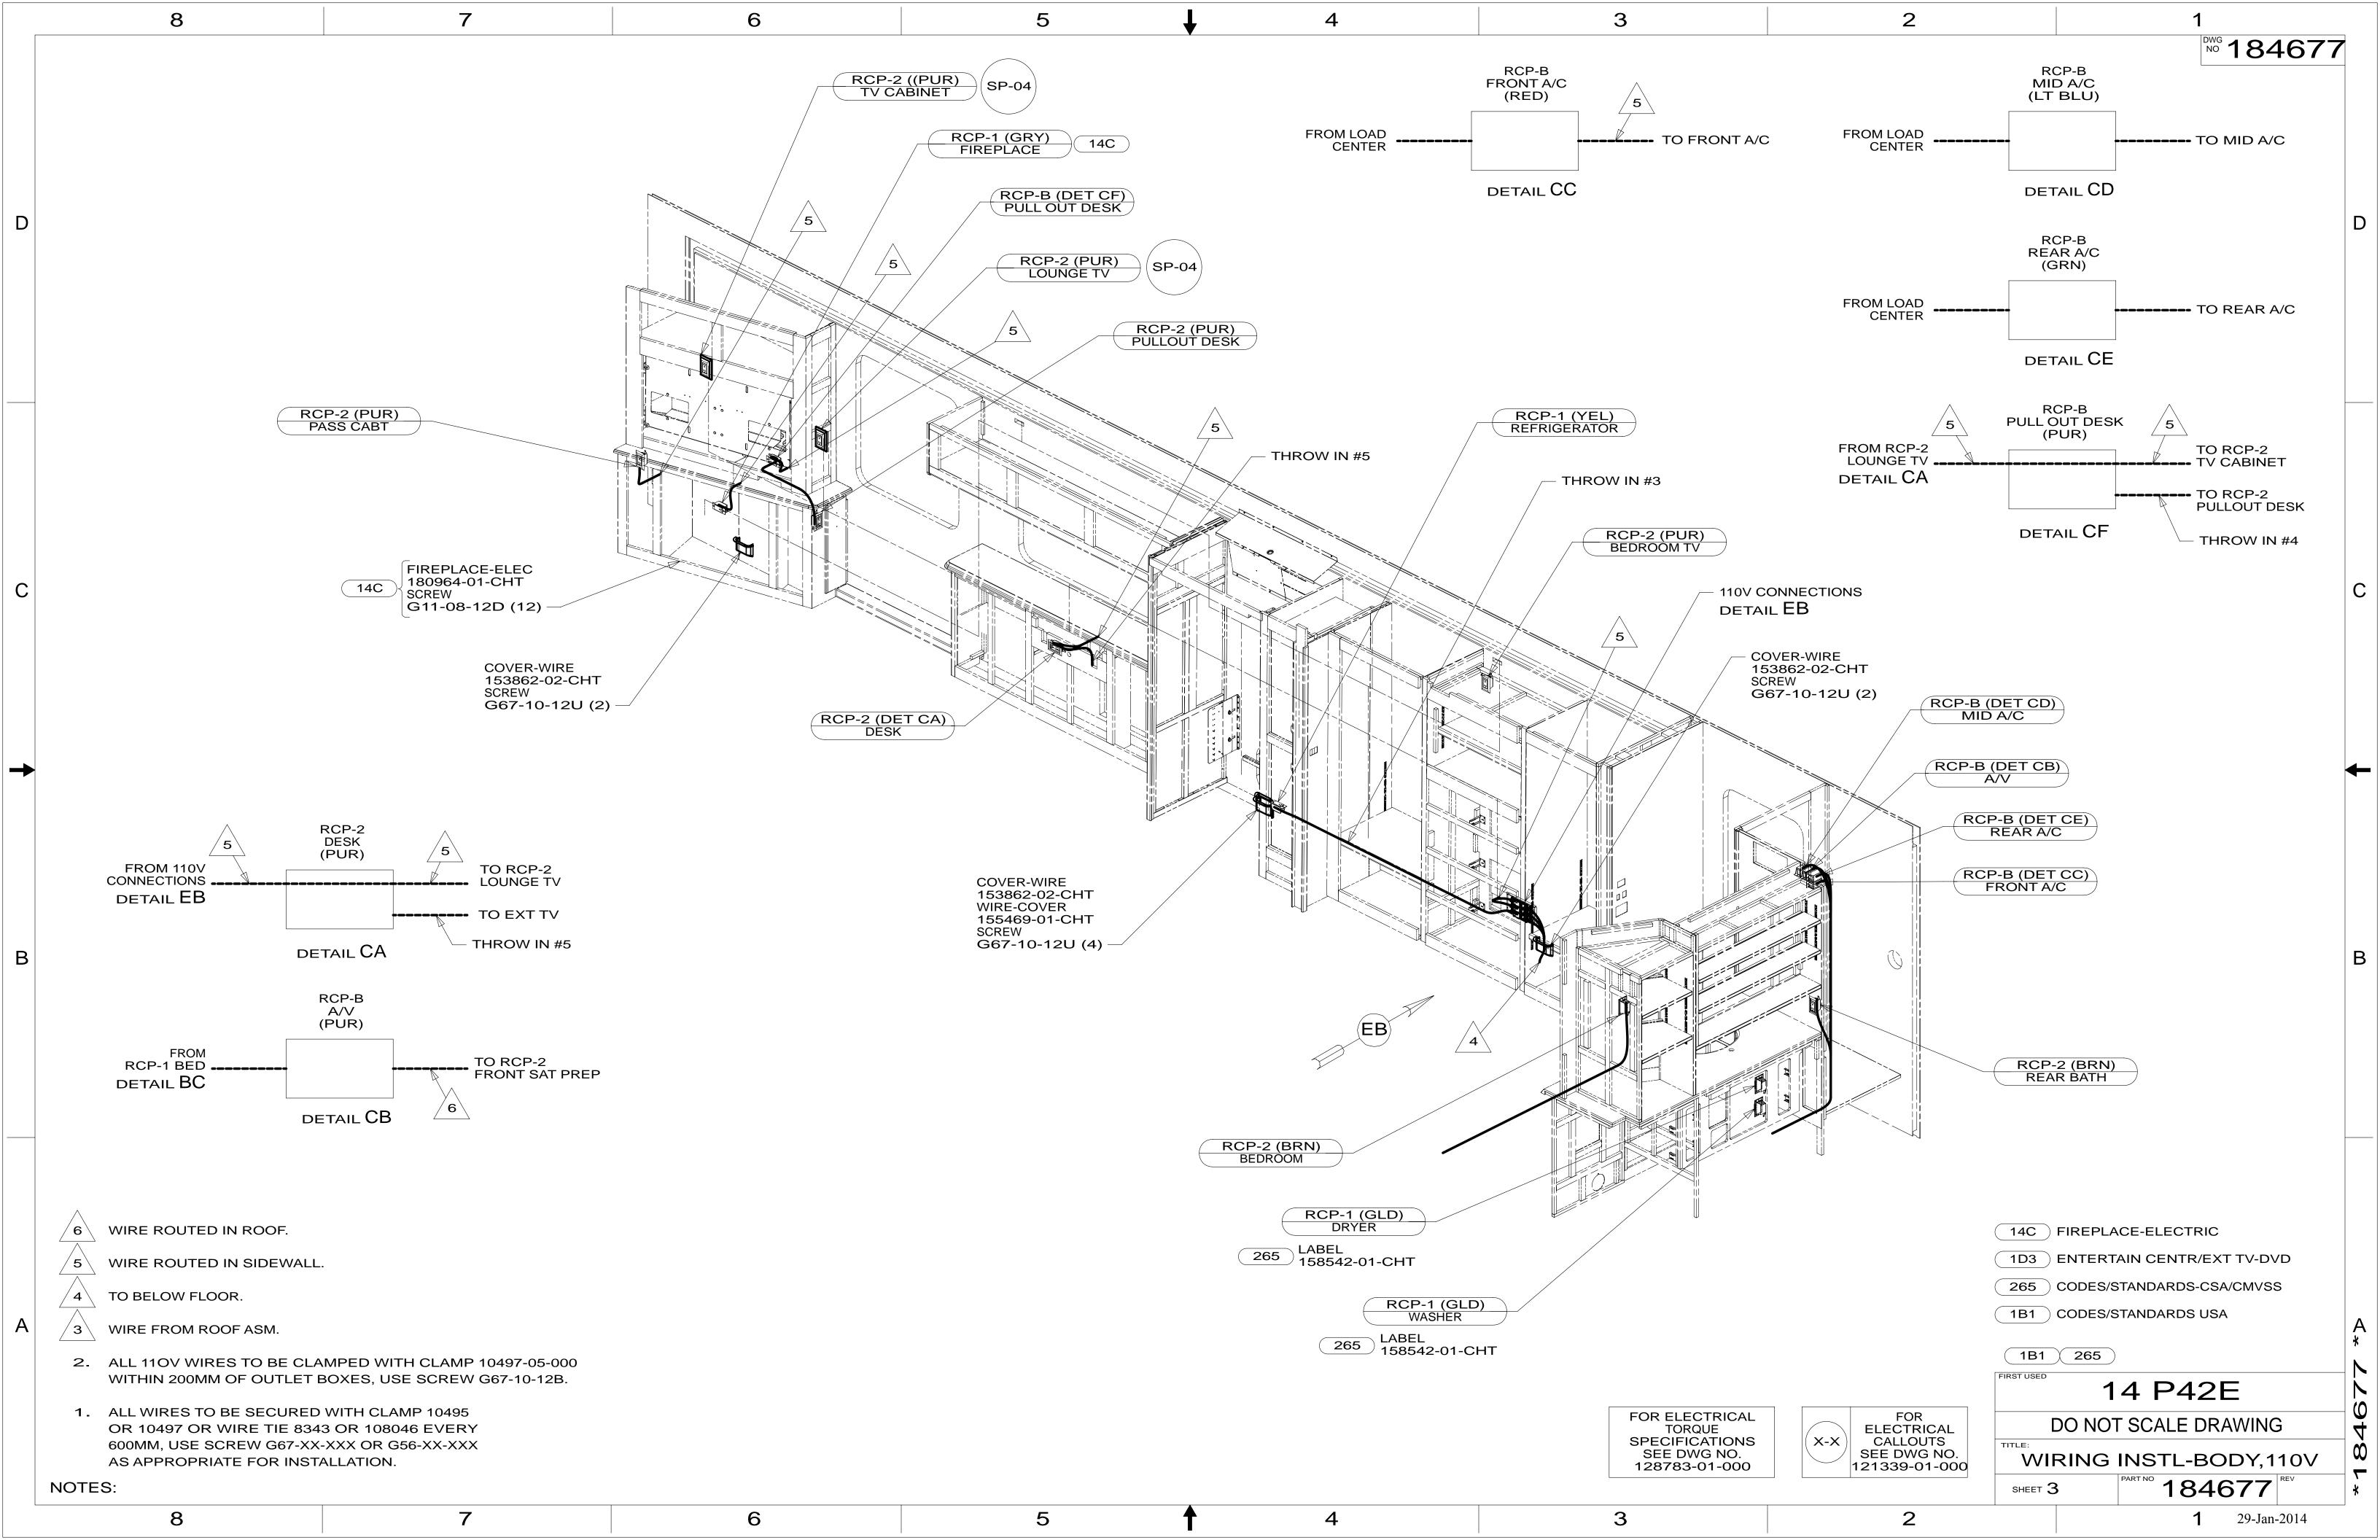

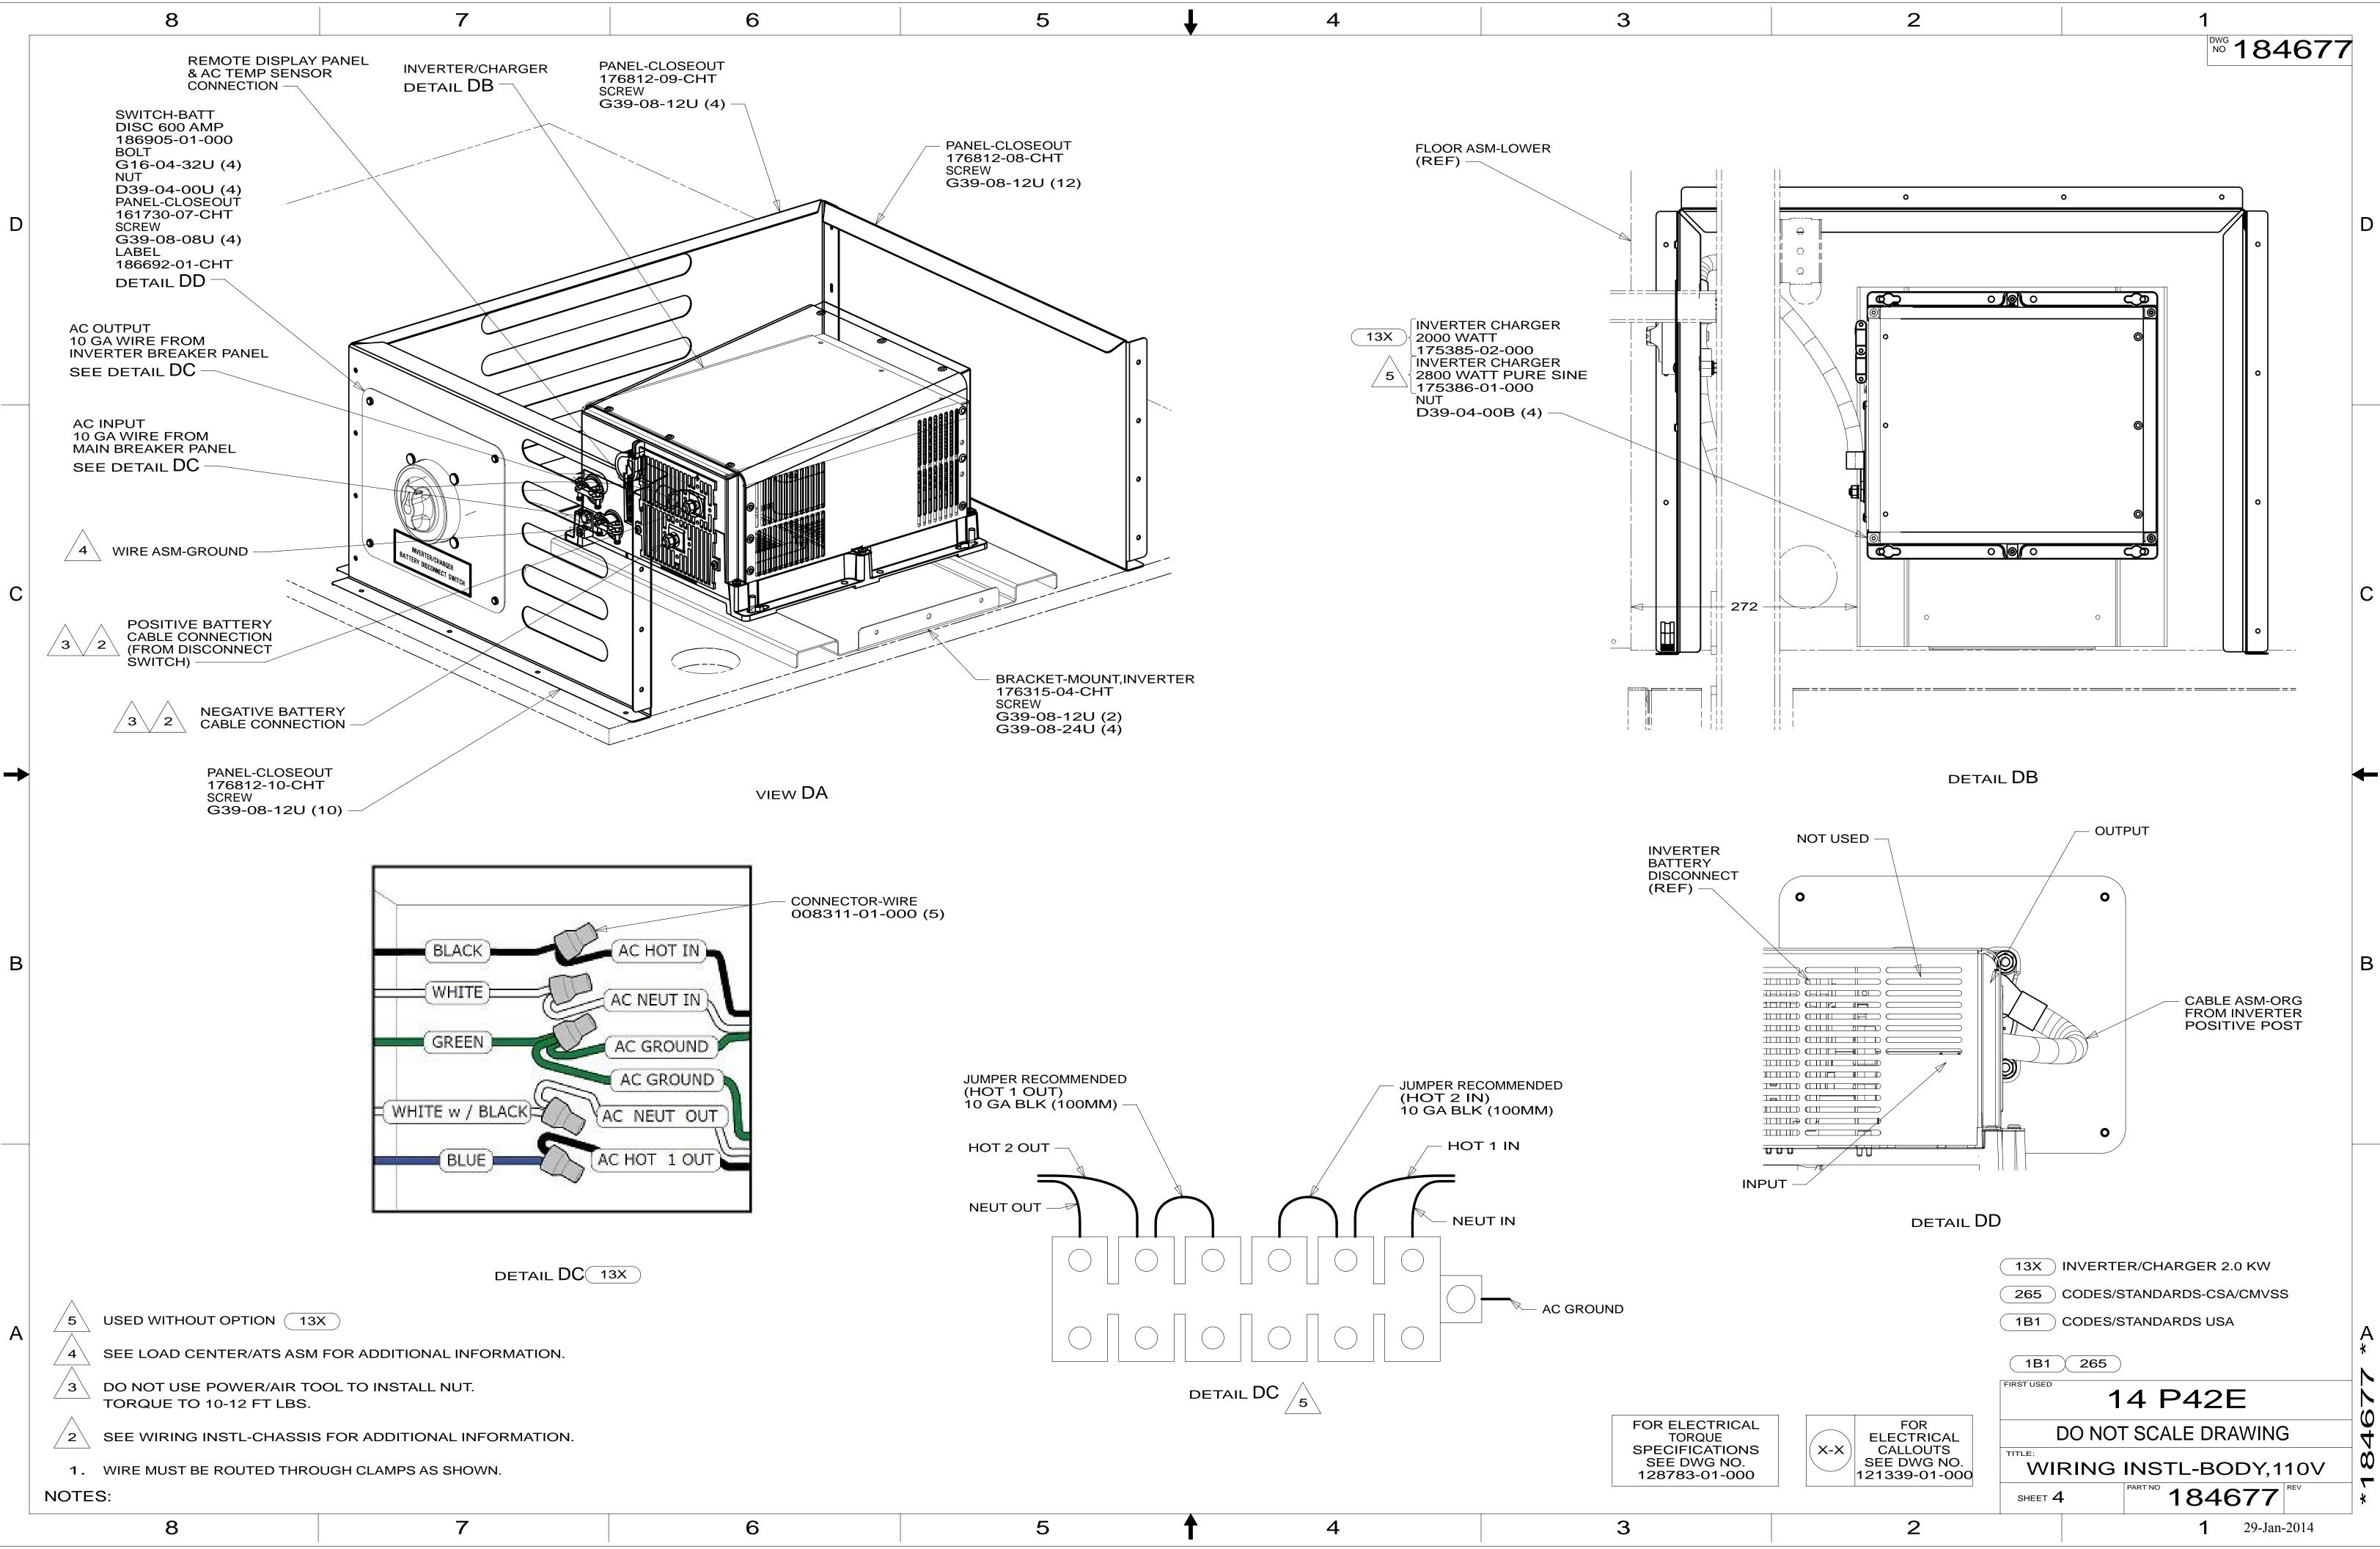

8	7	6
---	---	---

