

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.


Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.





Copyright © 2014 Winnebago Industries, Inc.

	DRAWING NO.	FEATURE			
	185188-01				
	185188-11	1B1 12D			
	185188-15	265 12D			
-					
D					
С					
				1400 DROP (BRN) THROW IN #1	
				FROM RIGHT SIDE	
-			CLAMP		
			10497-01-000 (3) SCREW		
			G67-10-08U (3)		
			\wedge		
			3 POWER CORD BOX		
В					
			<i>.</i> , <i>o</i>		
			, lo		·
A					
		343 OR 108046 EVERY 6 XXX AS APPROPRIATE	500MM, USE SCREW G67-X FOR INTALLATION.	~~~~	
	3 SEE LOAD C	ENTER/ATS ASM FOR A	DDITIONAL INFORMATION.		
		ES THROUGH FLOOR IN	I THIS AREA.		
	1. WIRES ROUT	ED UNDER FLOOR.			
	NOTES:				
l l					

8 7	6
-----	---

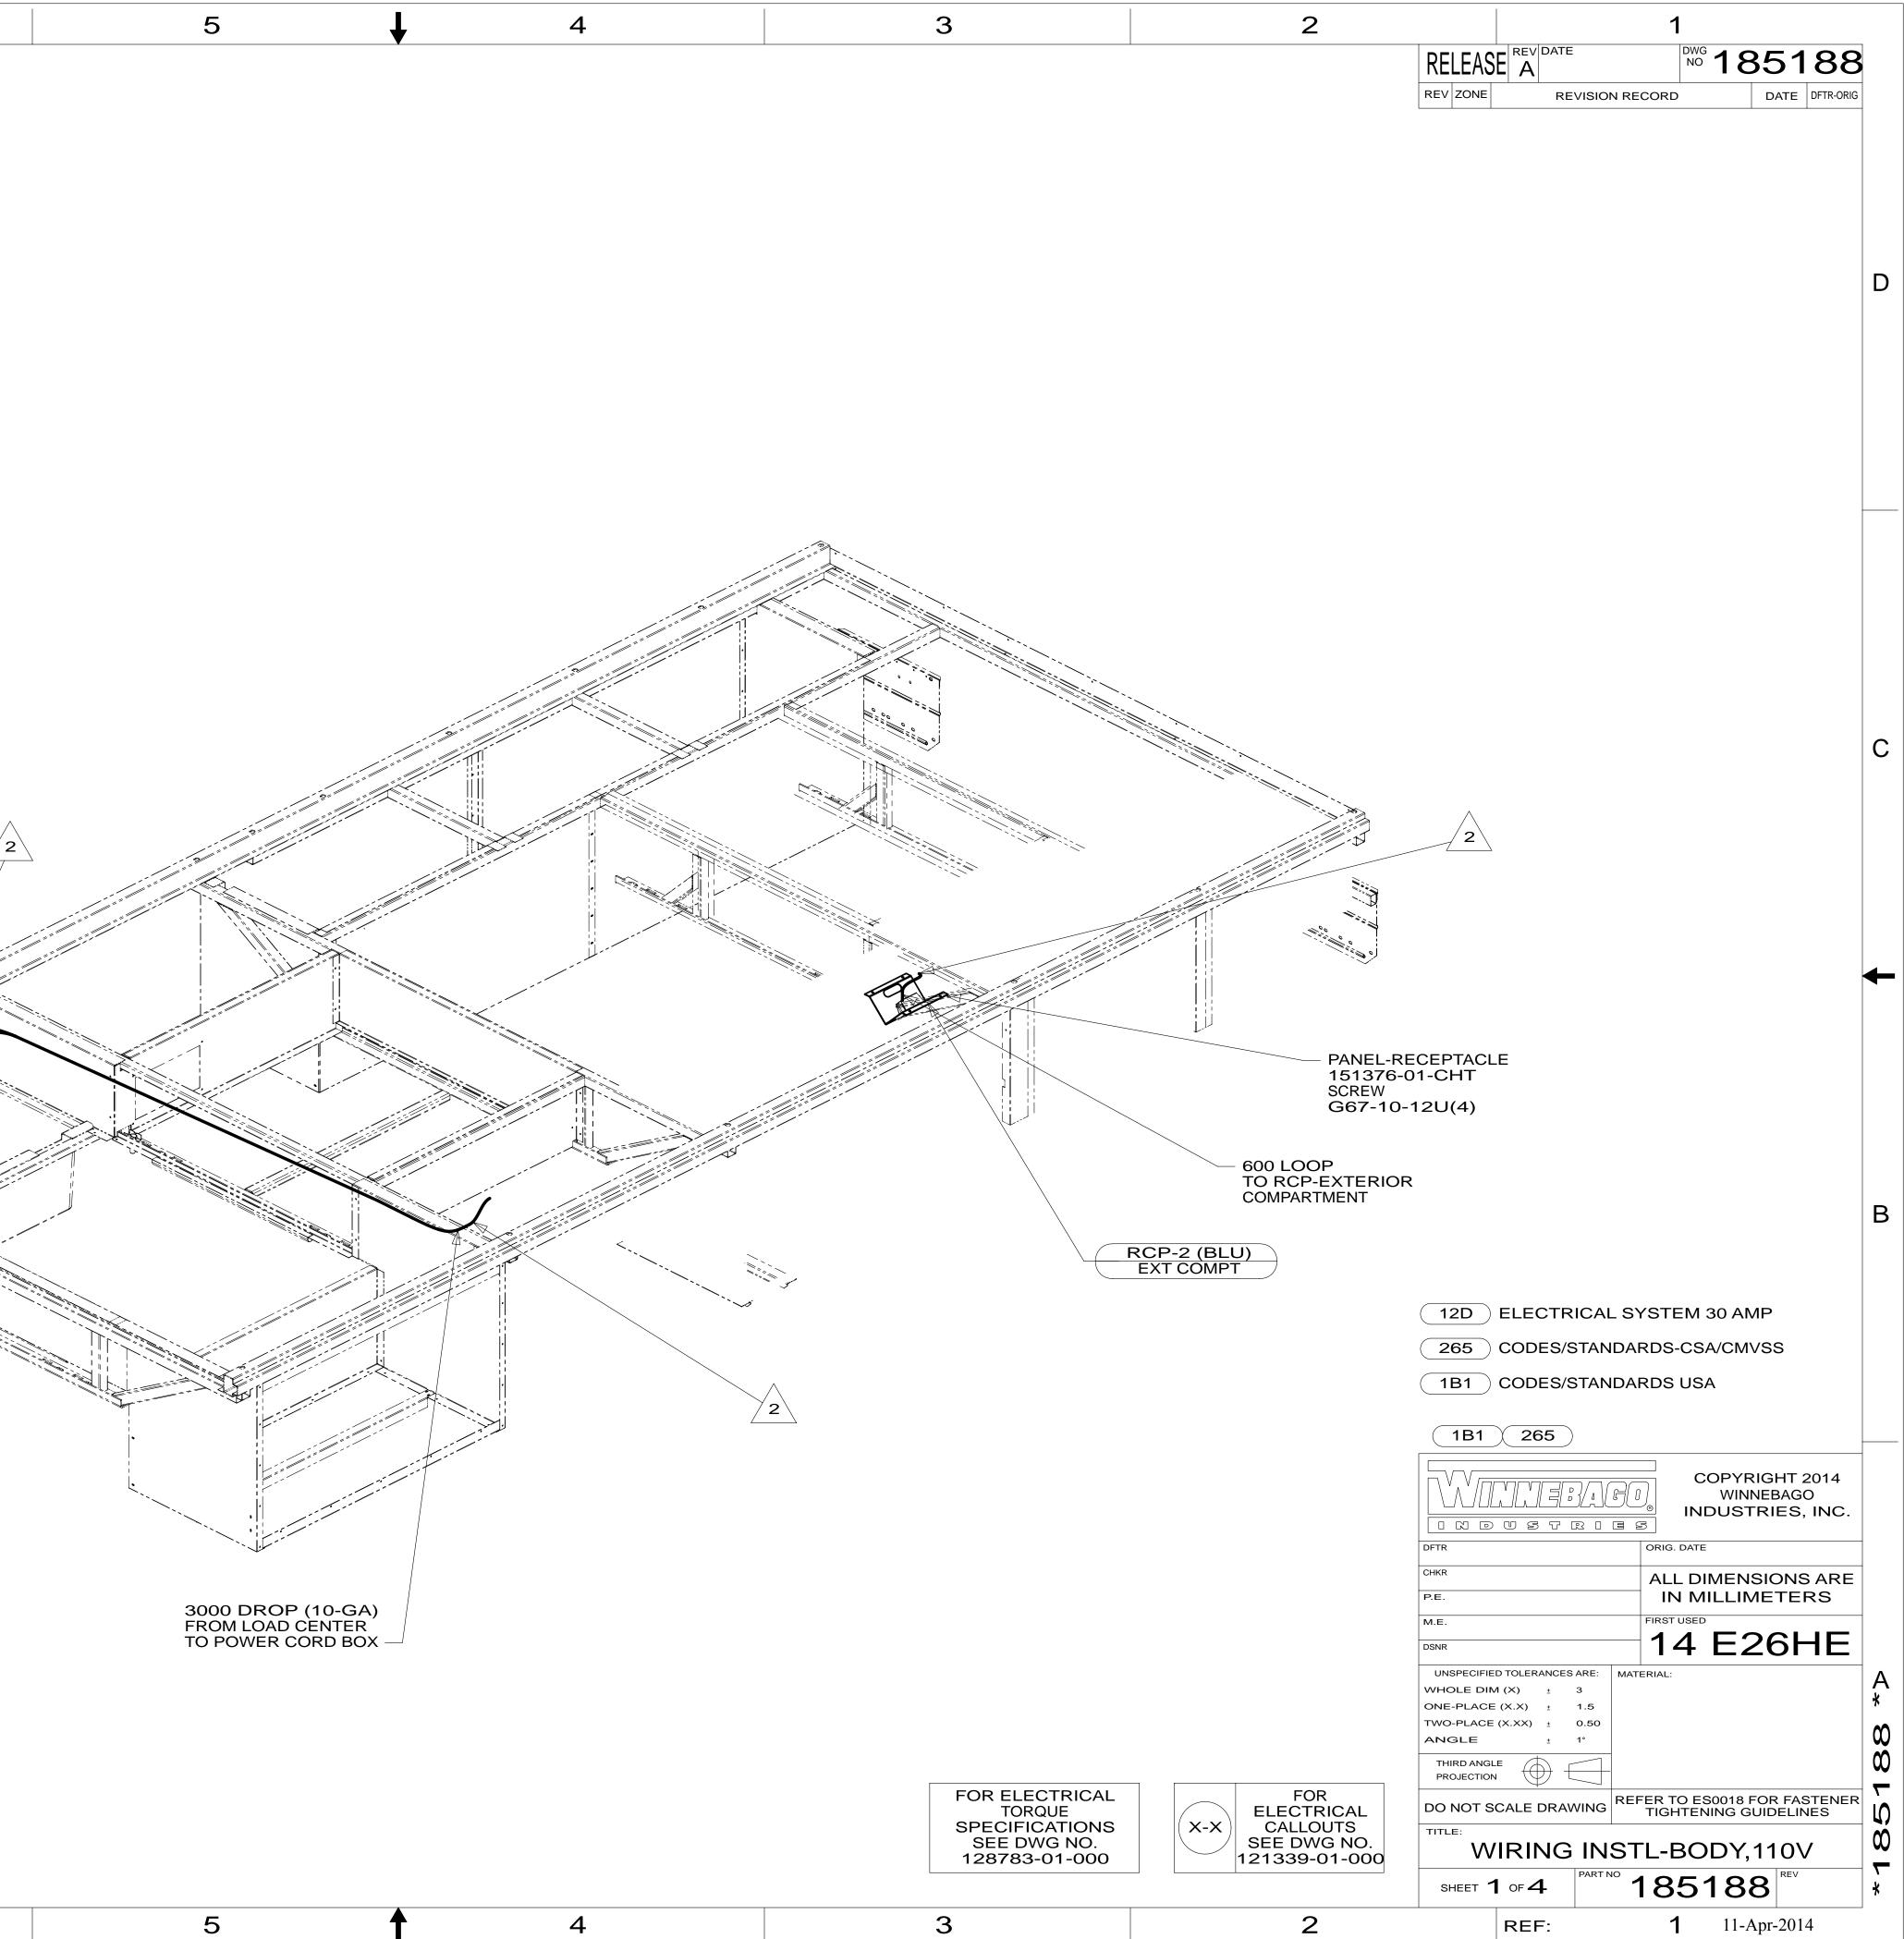

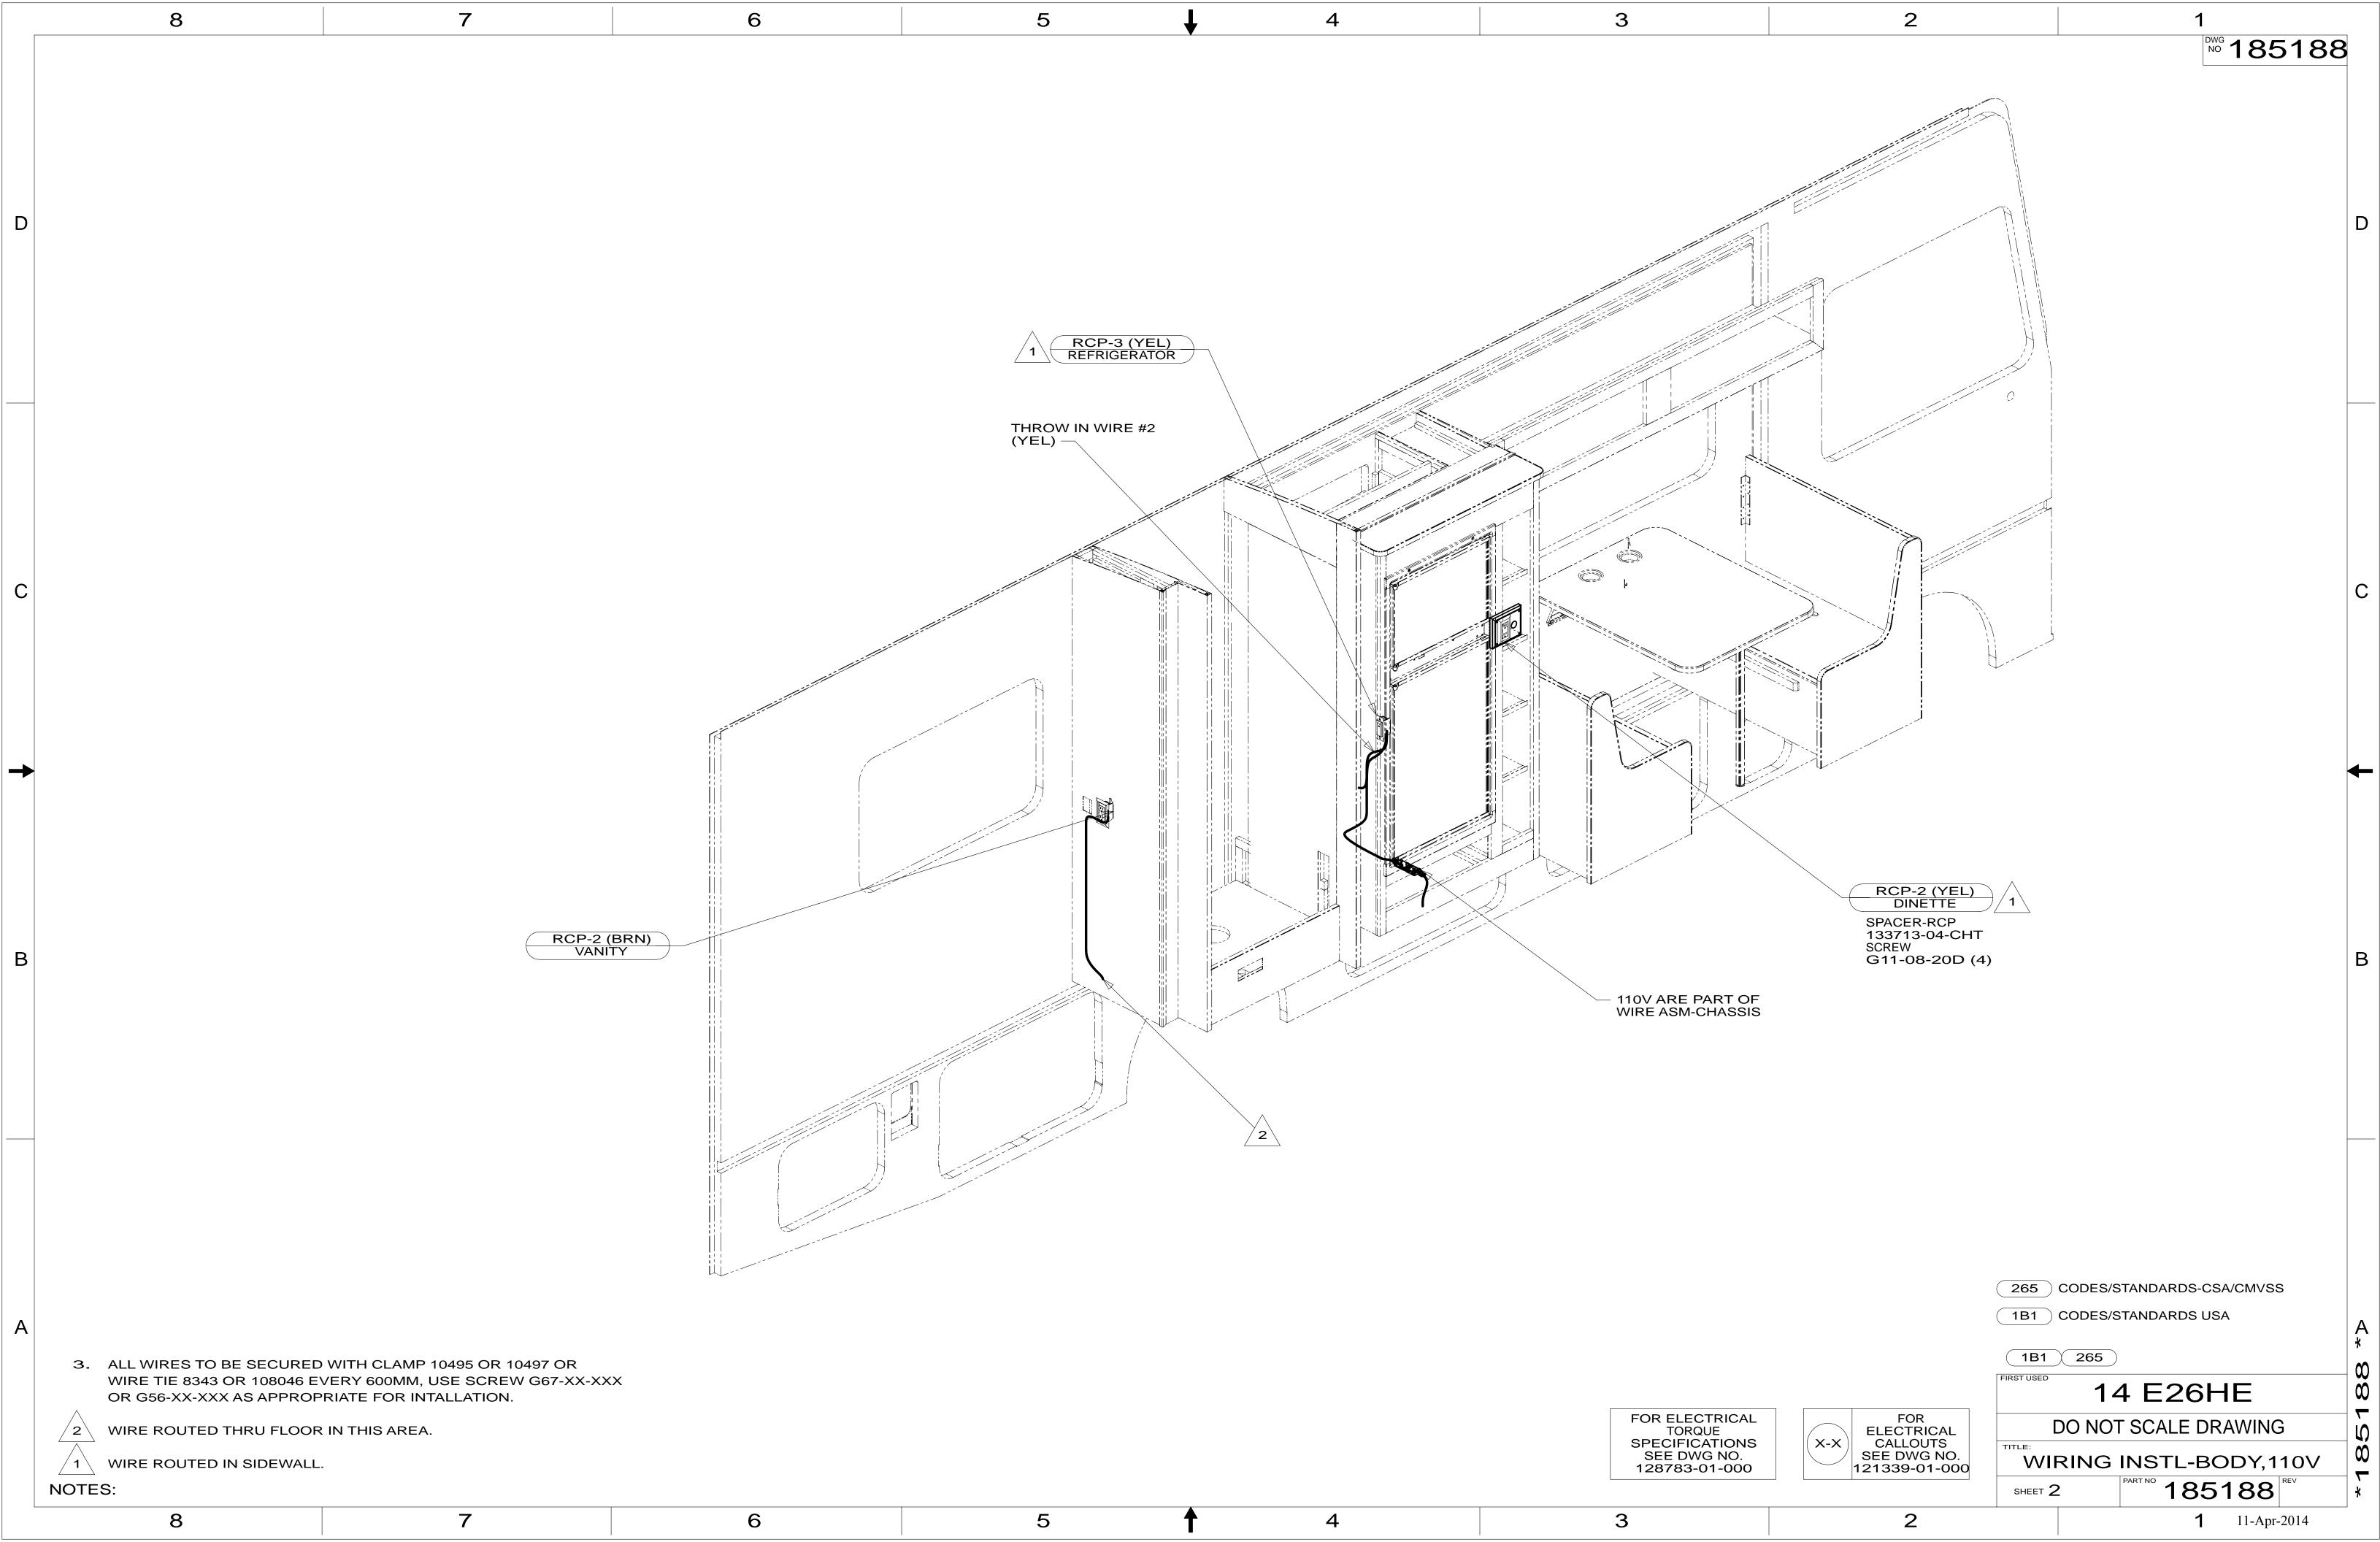

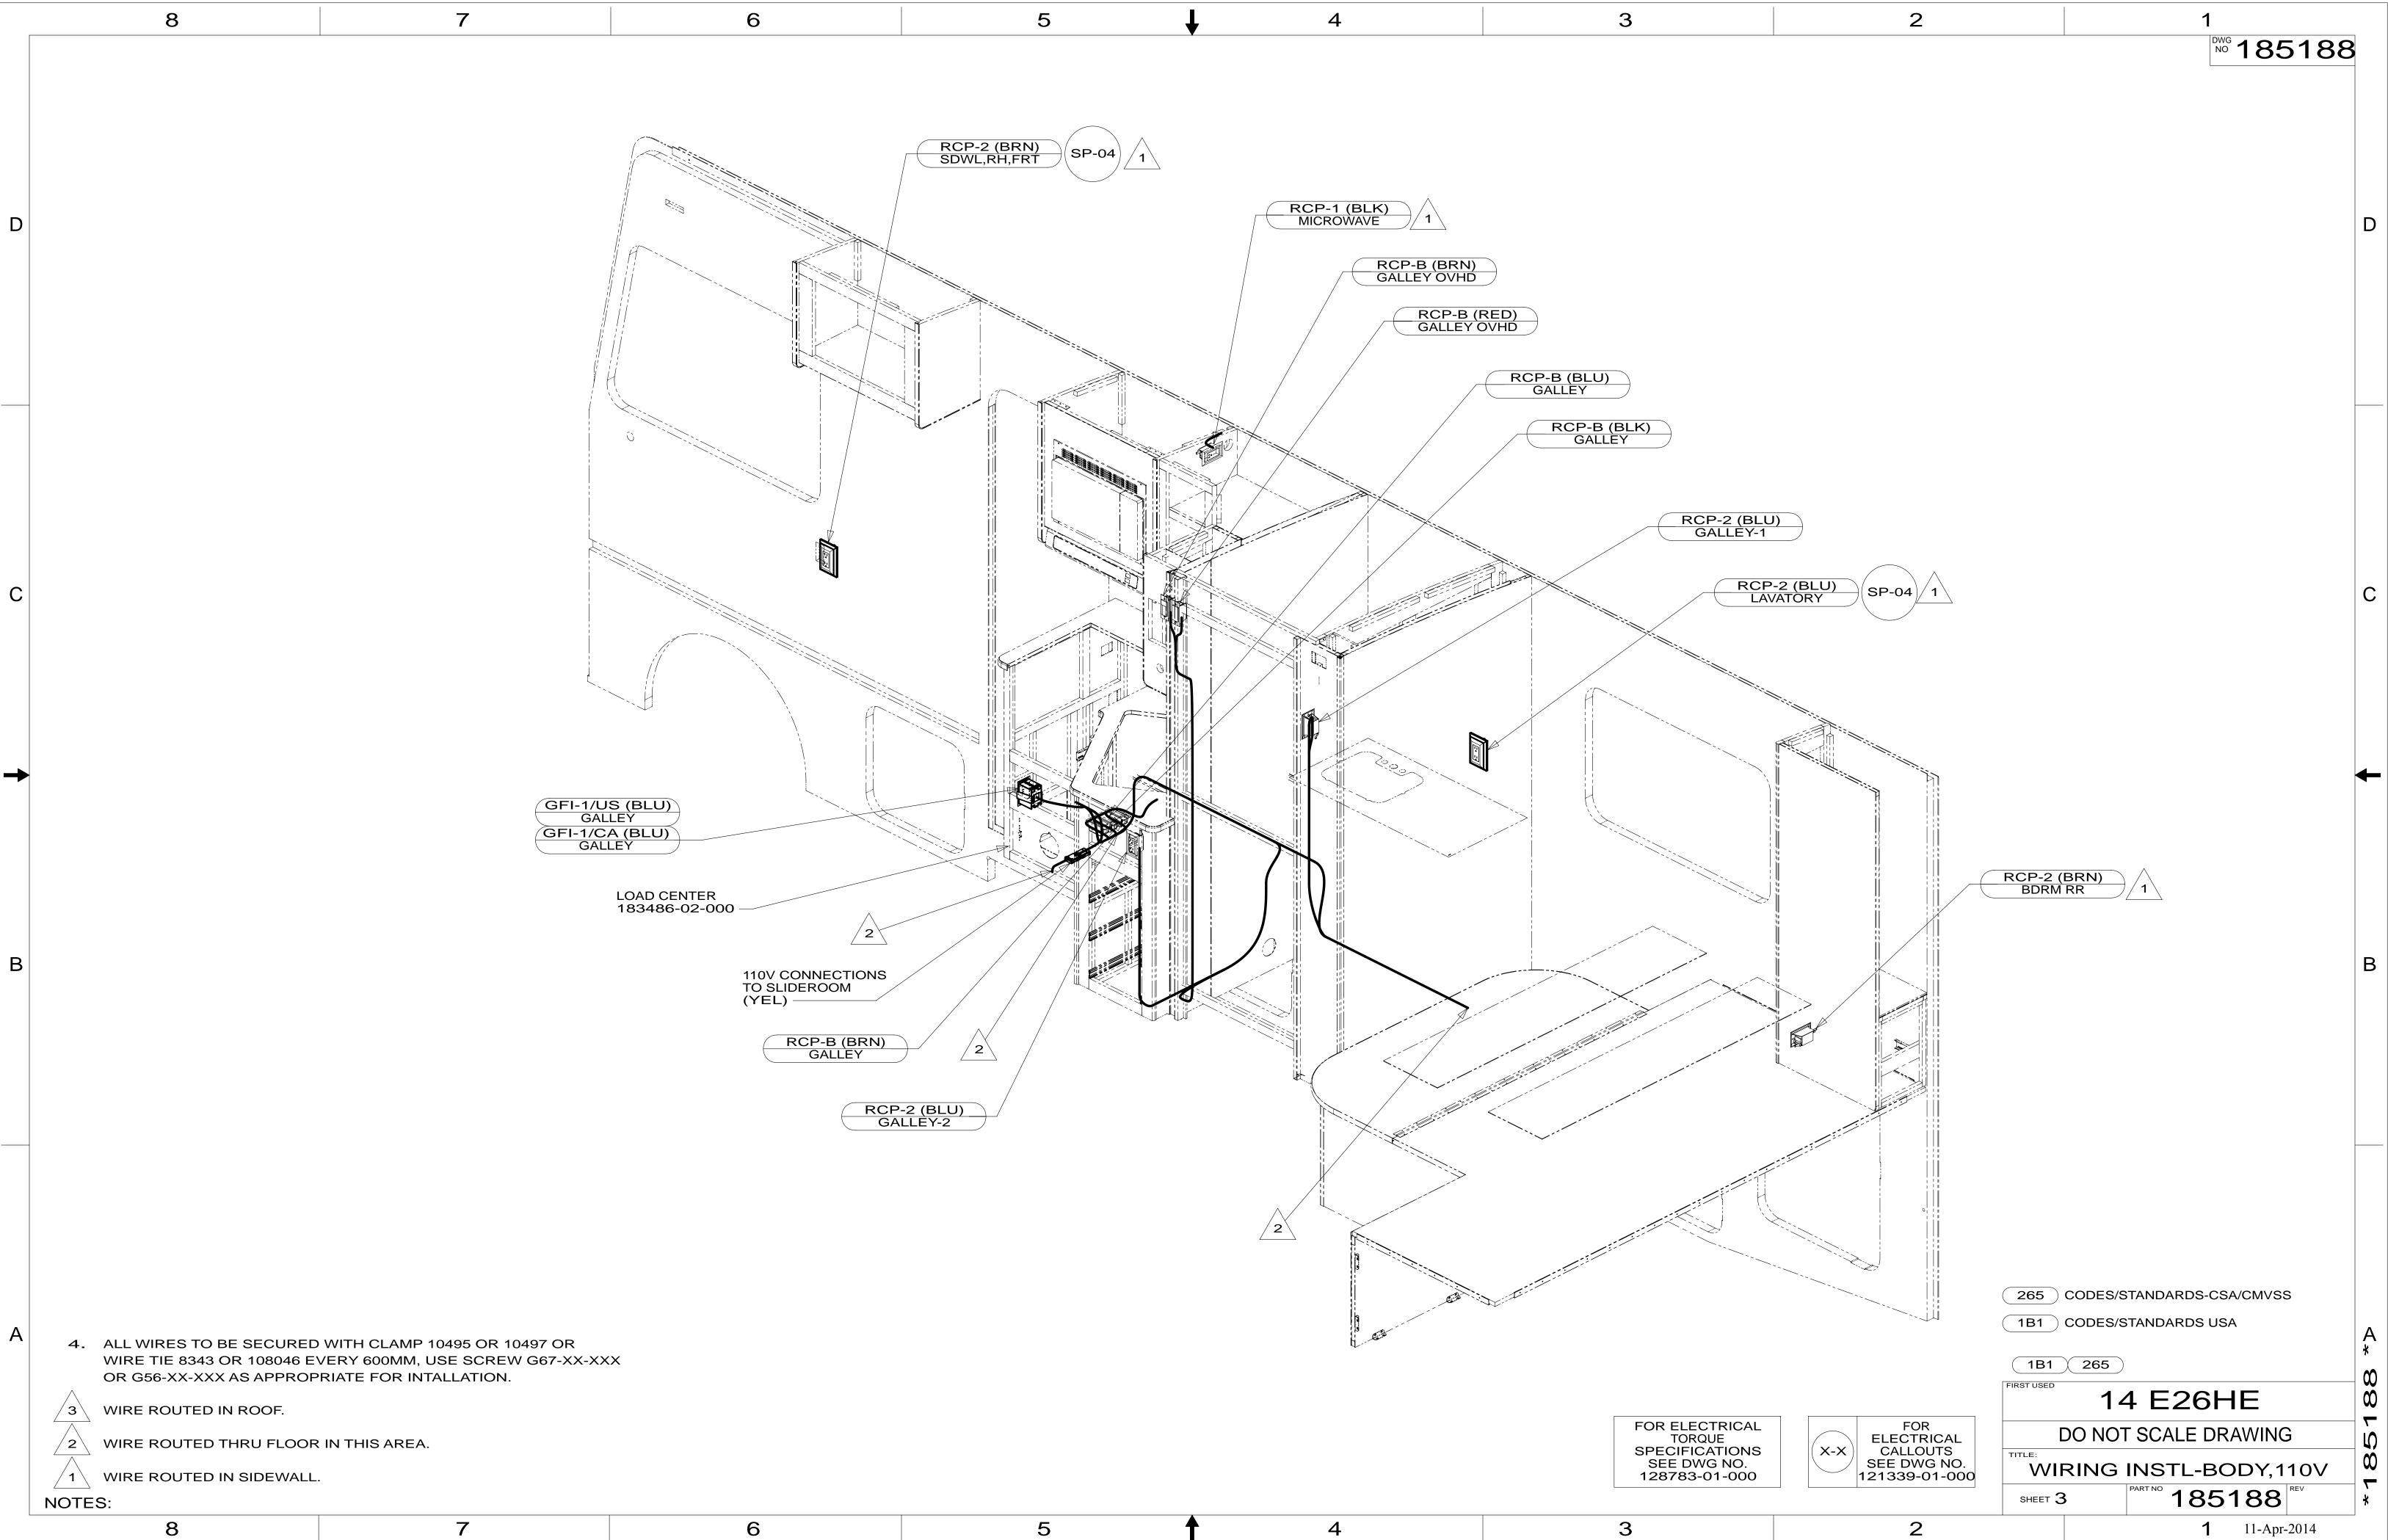

8	7	6

