


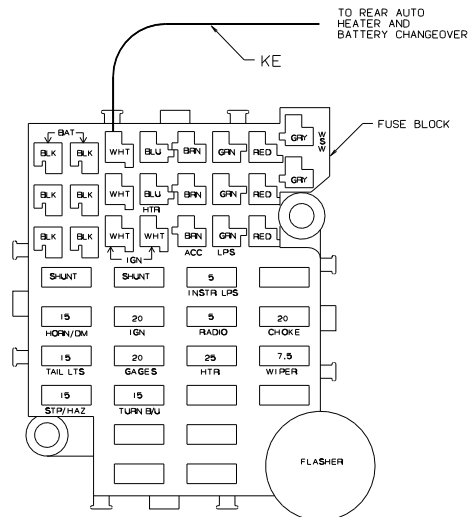
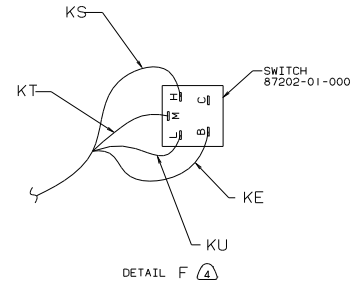
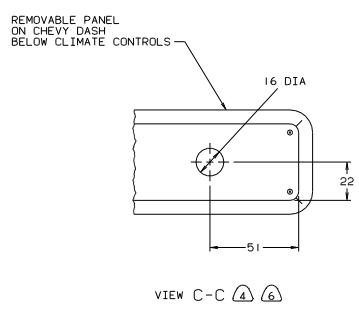
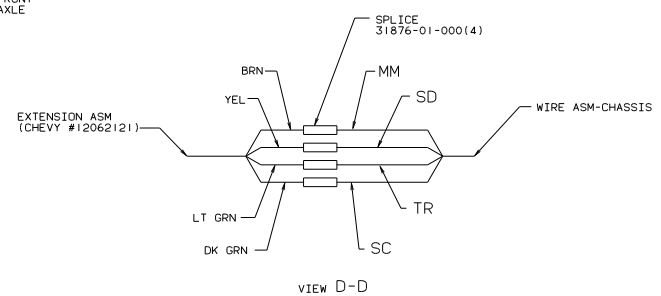
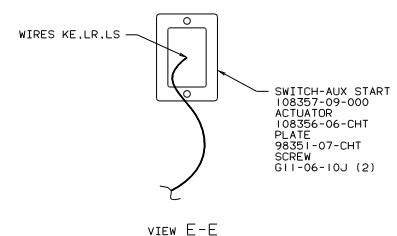


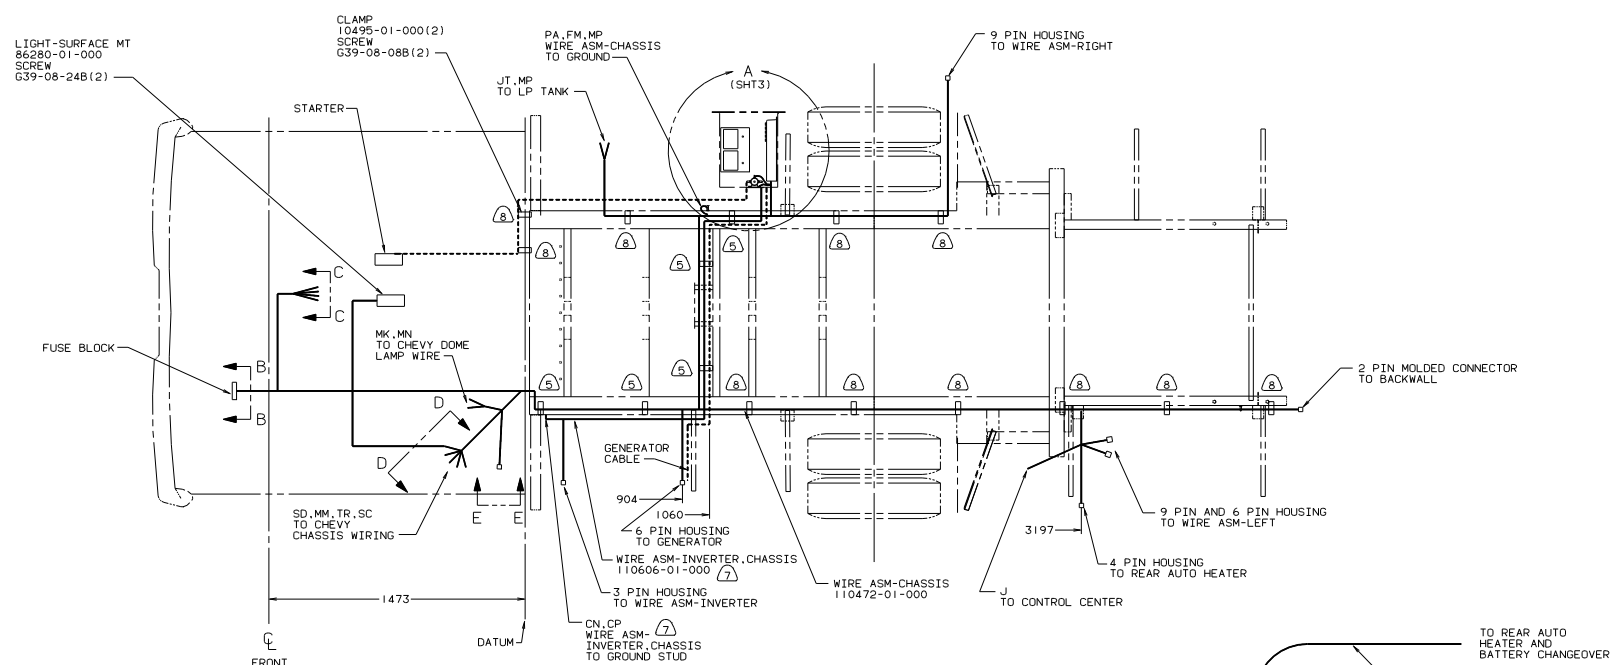


- NOTES:
- LEGEND: — WINNEBAGO, - - - - - CABLE, - · - - - CHASSIS SUPPLIED WIRING.
 - SECURE CONDUIT 41953-01-000 OVER ALL WIRE IN CONTACT WITH SHARP EDGES.
 - USE WITH TIES 8343-01-000 AND WIRE CLAMP 10497-03-000 AND 8361-01-000 APPROXIMATELY 600MM ON CENTER UNLESS OTHERWISE SPECIFIED.
 - USE WITH MOTOR AID HEATER ONLY.
 - CLAMP 10497-03-000 AND SCREW 839-08-08B.
 - SEE DETAIL F FOR MOTOR AID HEATER SWITCH WIRING.
 - WITH INVERTER.
 - CLAMP 10495-01-000 AND SCREW 839-08-08B.

WINNEBAGO		94 421RB
QTR	UNSPECIFIED TOLERANCES ARE:	MATERIAL
CHD	WHOLE DIM (IN) ± 1/16	
P/E	ONE-PLACE (IN) ± 1/32	
M/E	TWO-PLACE (IN) ± 1/64	
IN/E	THREE-PLACE (IN) ± 1/128	
CONP	THREE-PLACE (IN) ± 1/128	
LAINT	421RB4	WIRING INSTL-CHASSIS
DIA #	SCALE: NONE	30 NET SCALE DRAWING
ALL DIMENSIONS ARE IN MILLIMETERS	SHEET 1 OF 4	110471

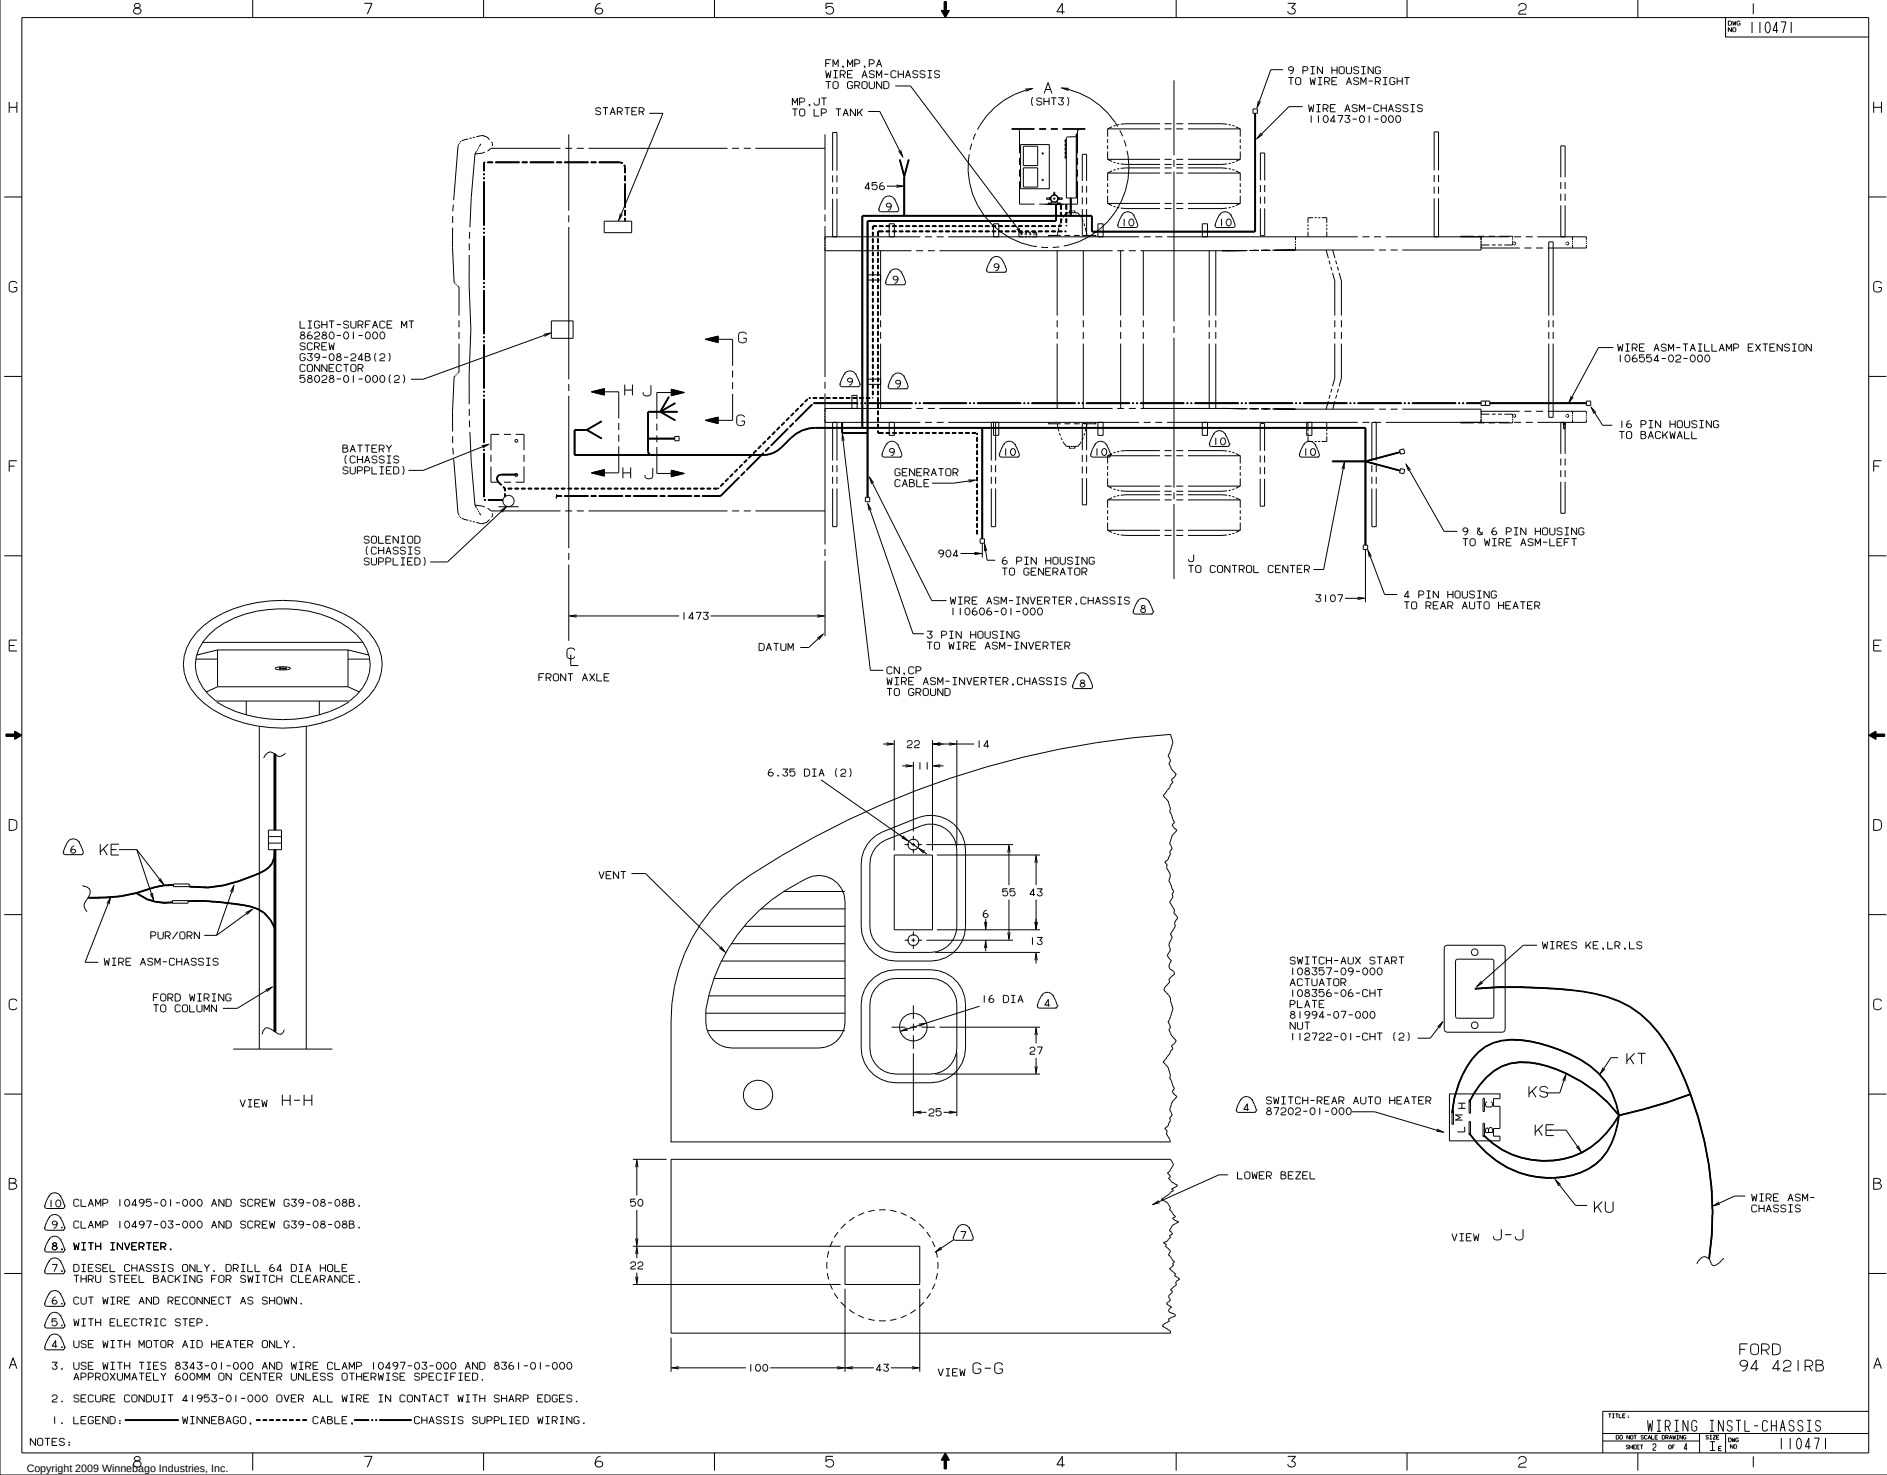

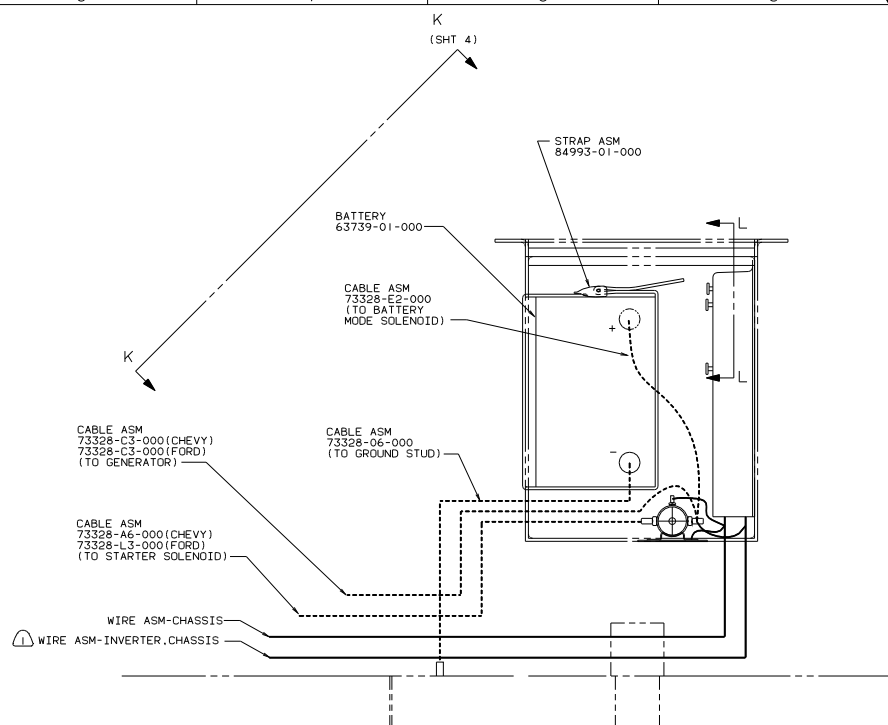


DETAIL A
(W/SINGLE BATTERY)

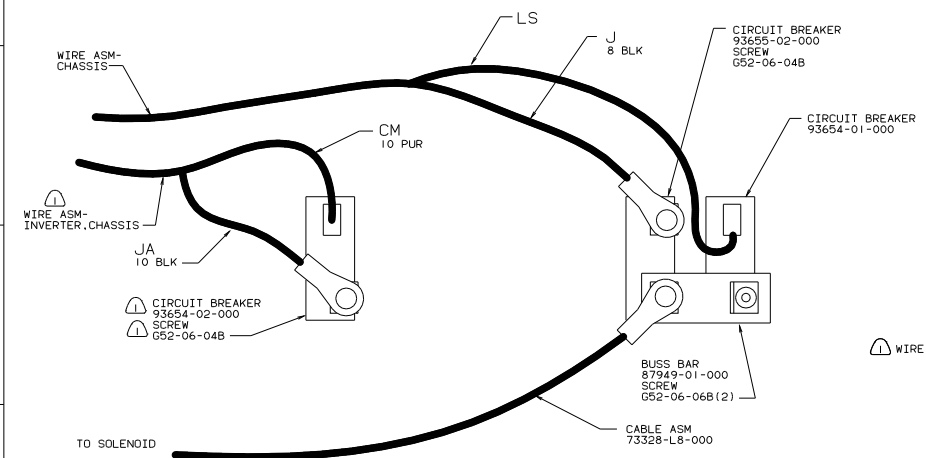

DETAIL A
(W/TWO BATTERIES)

NOTES:
WITH INVERTER.

VIEW L-L

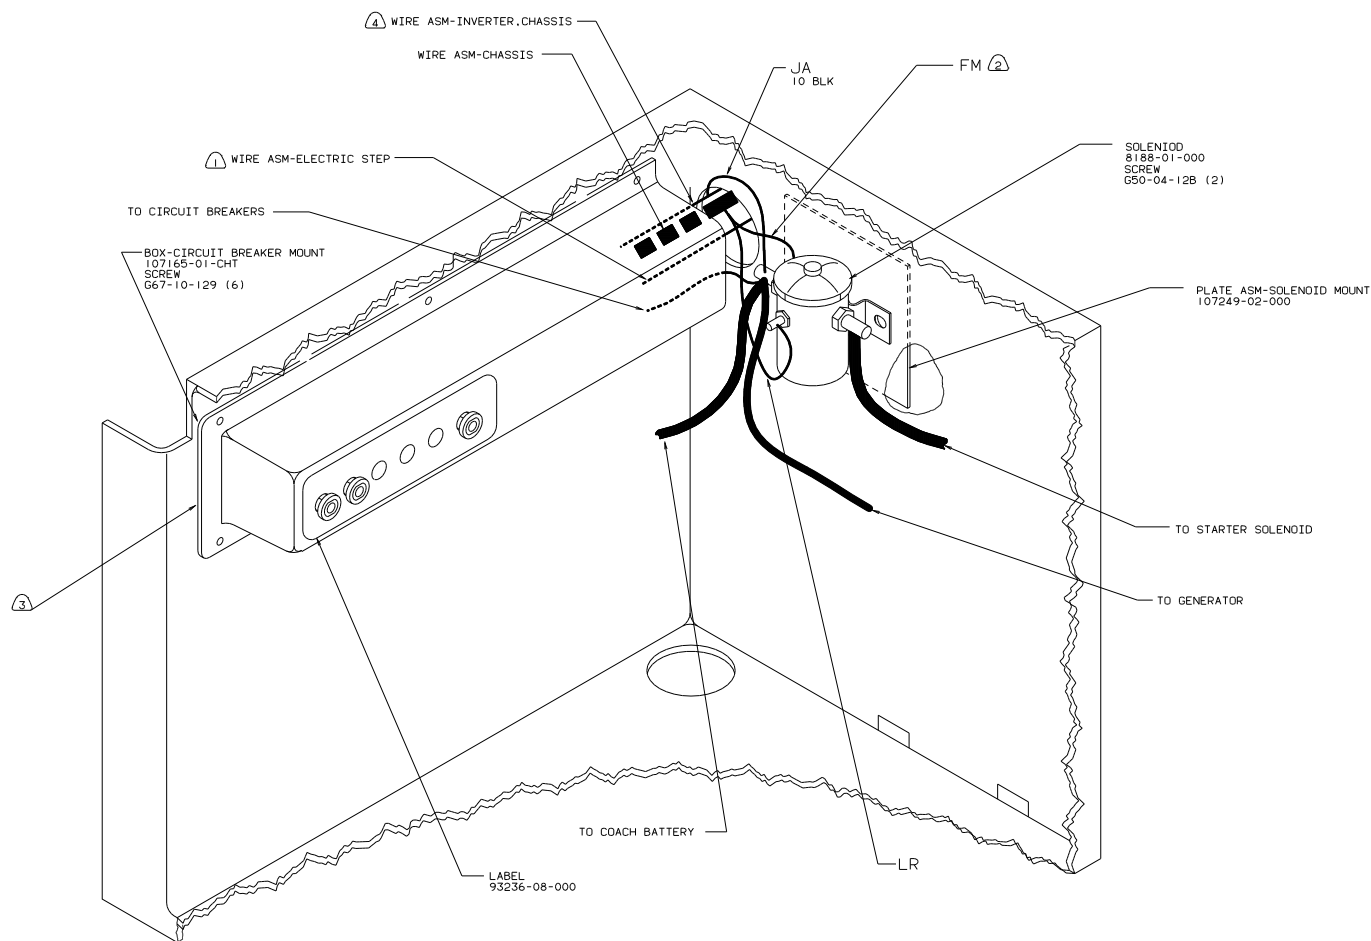

- NOTES:
- ④ WITH INVERTER.
 - ③ LOCATE BOX VERTICALLY BY CENTERING ON HOLE IN REAR OF COMPARTMENT.
 - ② SECURE WITH SOLENOID MOUNTING BOLT.
 - ① WITH ELECTRIC STEP.