


H
G
F
E
D
C
B
A

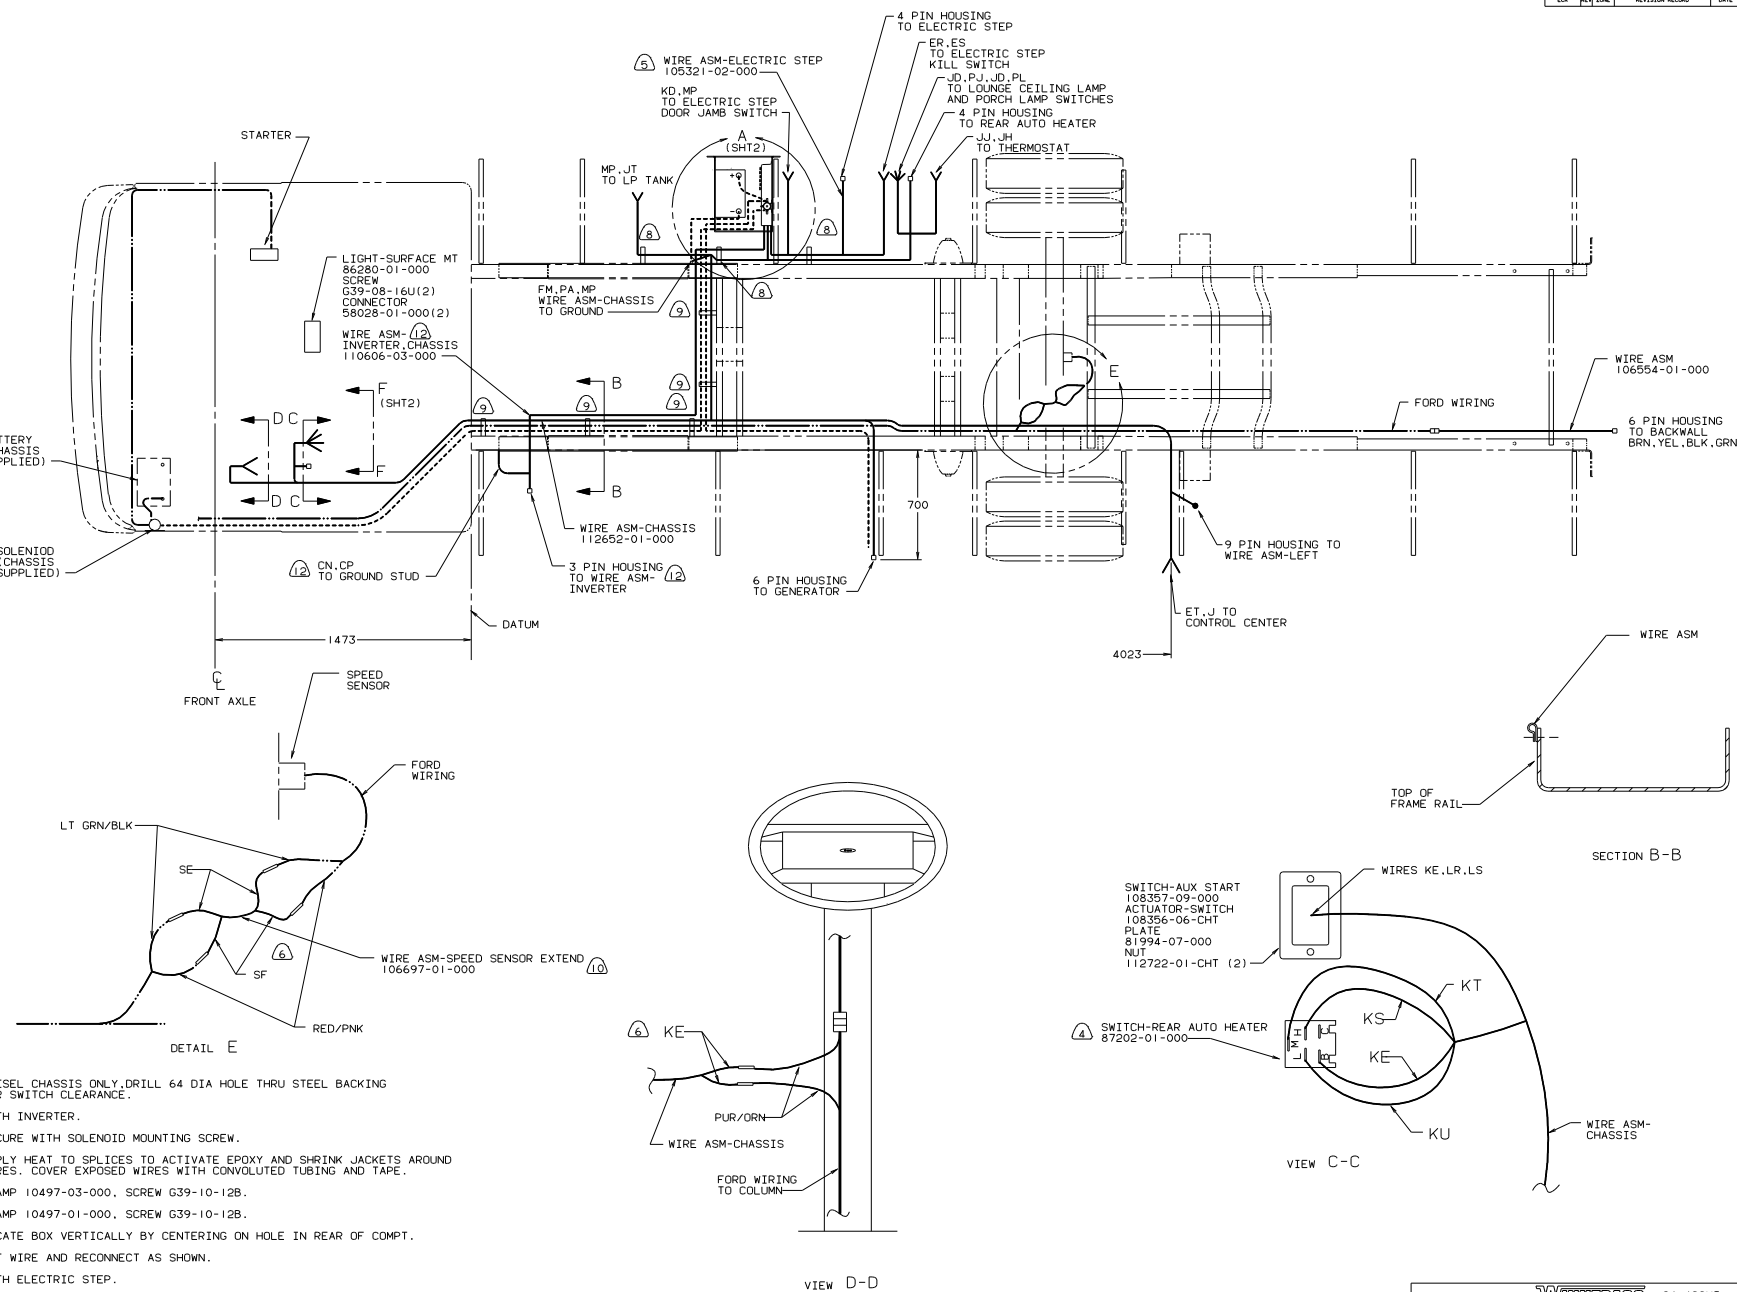

1. LEGEND: --- FORD WIRING --- WINNEBAGO WIRING ----- CABLE.
2. SECURE CONDUIT 41953-01-000 OVER ALL WIRE IN CONTACT WITH SHARP EDGES.
3. USE WIRE TIES 8343-01-000 AND WIRE CLAMP 10497-01-000 APPROXIMATELY 600MM ON CENTER UNLESS OTHERWISE SPECIFIED.
4. USE WITH MOTOR AID HEATER ONLY.
5. WITH ELECTRIC STEP.
6. CUT WIRE AND RECONNECT AS SHOWN.
7. LOCATE BOX VERTICALLY BY CENTERING ON HOLE IN REAR OF COMPT.
8. CLAMP 10497-01-000, SCREW G39-10-12B.
9. CLAMP 10497-03-000, SCREW G39-10-12B.
10. APPLY HEAT TO SPLICES TO ACTIVATE EPOXY AND SHRINK JACKETS AROUND WIRES. COVER EXPOSED WIRES WITH CONVOLUTED TUBING AND TAPE.
11. SECURE WITH SOLENOID MOUNTING SCREW.
12. WITH INVERTER.
13. DIESEL CHASSIS ONLY, DRILL 64 DIA HOLE THRU STEEL BACKING FOR SWITCH CLEARANCE.

NOTES:

UNSPECIFIED TOLERANCES ARE:			
WIRE DIA (13)	± 1/8		
ONE-PLATE (18.81)	±		
TWO-PLATE (18.88)	±		
WIRE			
THIRD ANGLE PROJECTION			
TITLE: WIRING INSTL-CHASSIS			
DATE: 94 429W1			
DIA #	SCALE: NONE	SHEET 1 OF 3	112653
ALL DIMENSIONS ARE IN MILLIMETERS			

