


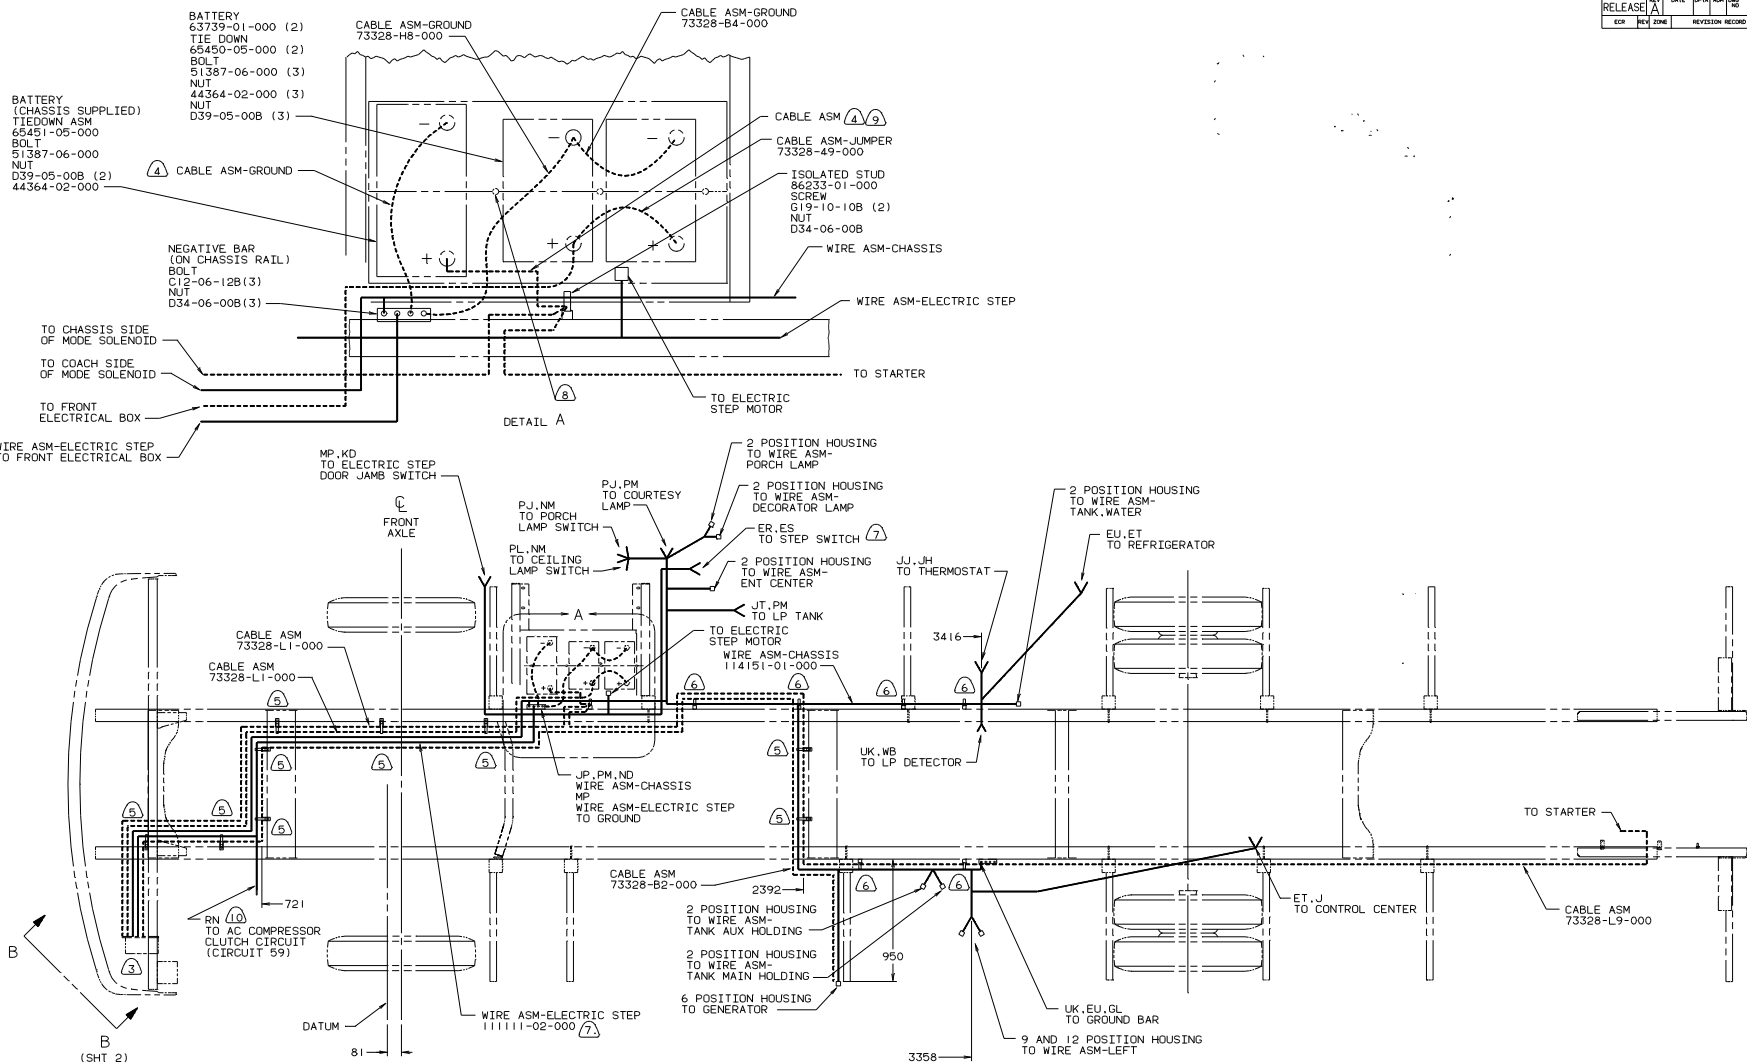

- ① REMOVE WIRE 59 FROM HOUSING AND SPLICE TO RN, APPLY HEAT TO ACTIVATE EPOXY SEALANT IN SPLICE.
- ② CUT TO 350MM, TERMINATE WITH 8348-01-000.
- ③ USE TWO NUTS HERE TO ACCOUNT FOR BATTERY HEIGHT DIFFERENCE.
- ④ USE WITH ELECTRIC STEP.
- ⑤ CLAMP 10497-03-000, SCREW G11-10-16B.
- ⑥ CLAMP 83610-01-000, SCREW G11-10-16B.
- ⑦ CHASSIS SUPPLIED.
- ⑧ SEE WIRING INSTL-FRONT END FOR ADDITIONAL INFORMATION.

2. SECURE CONDUIT 41953-10 AND -11 OVER ALL WIRES IN CONTACT WITH SHARP EDGES.

1. LEGEND: — WINNEBAGO, - - - - - CABLE, ——— CHASSIS SUPPLIED.

WINNEBAGO 95 F32R0


OPTD	UNSPECIFIED TOLERANCES ARE	MATERIAL
CHWD	WALLS DIM 1/16"	
PIE	ONE-PLATE 1/8"	1 3 0
PIE	TWO-PLATE 1/8"	
CONP	THIRD ANGLE PROJECTION	

LAUNCH F23R05 TITLE: WIRING INSTL-CHASSIS

DIA OF SCALE: NONE 30 MET SCALE DRAWING

ALL DIMENSIONS ARE IN MILLIMETERS SHEET 1 OF 2

114150

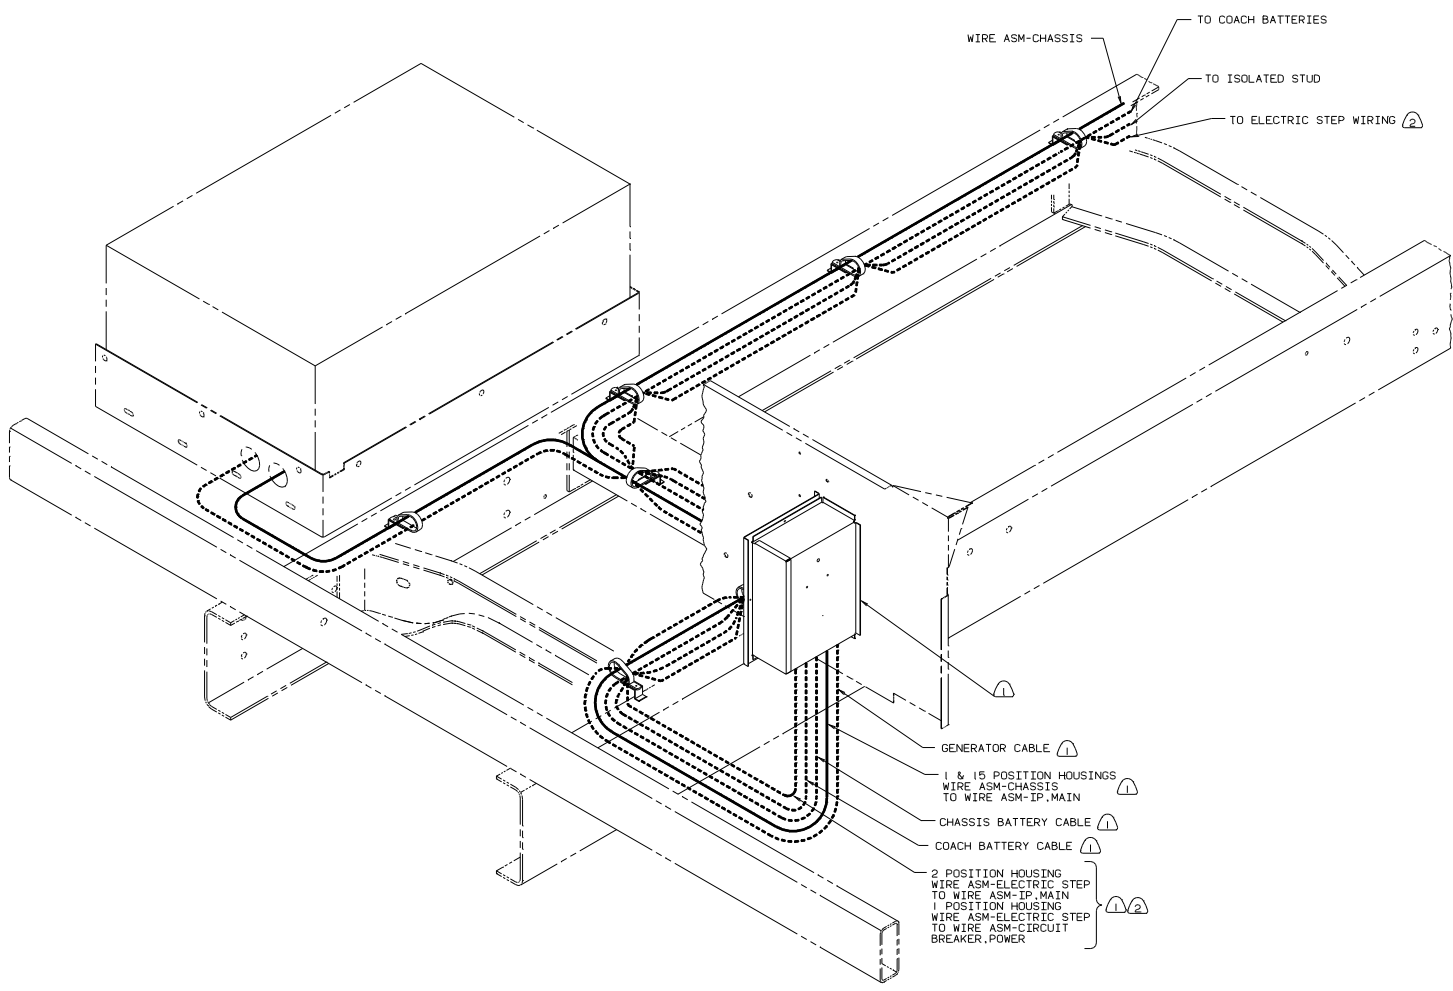

VIEW B-B

- NOTES:
- (2) WITH ELECTRIC STEP.
 - (1) SEE WIRING INSTL-FRONT END FOR ADDITIONAL INFORMATION.

95 F32R0

TITLE			
WIRING INSTL-CHASSIS			
30 NET SCALE DRAWING	SHEET	2 OF 2	114150