




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

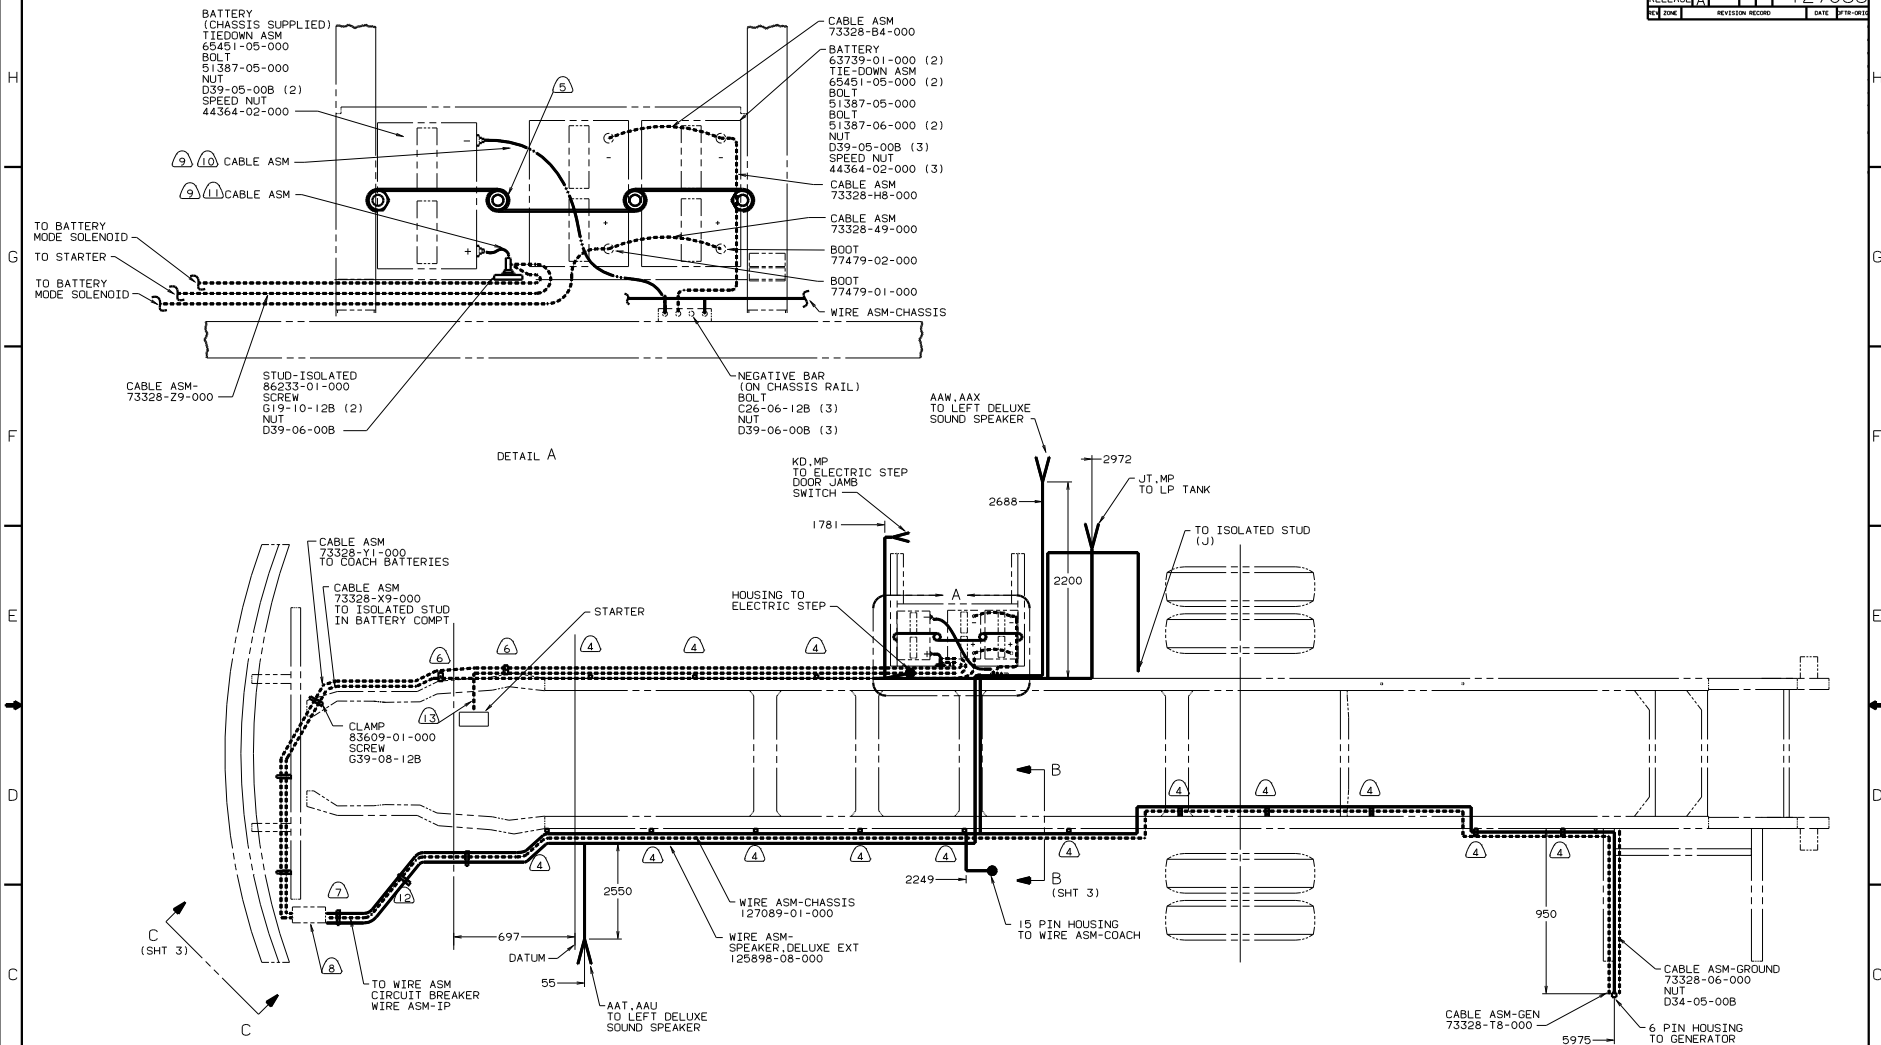


13. BATTERY CABLES MUST BE INSTALLED TO STARTER MOTOR BEFORE ENGINE WIRING HARNESS AND ROUTED IN SUCH A MANNER AS TO PREVENT AND POSSIBLE DEGRADATION FROM THE EXHAUST SYSTEM.
12. COVER WITH CONDUIT 41953-09, -10-11-000 AS REQUIRED
11. TRIM CABLE TO 400MM, ADD TERMINAL 8348-01-000.
10. TRIM CABLE TO 800MM, ADD TERMINAL 8348-01-000.
9. SUPPLIED WITH CHASSIS.
8. SEE WIRING INSTL-FRONT END FOR ADDITIONAL INFORMATION.
7. CLAMP 83610-01-000, SCREW G11-10-16B.
6. WIRE TIE 1166731-01-000.
5. USE TWO NUTS HERE TO ACCOUNT FOR BATTERY HEIGHT DIFFERENCE.
4. WIRE TIE 8343-02-000. FASTEN AT LEAST ONCE EVERY 600MM.
3. ALL DIMENSIONS ARE FROM DATUM UNLESS OTHERWISE SPECIFIED.
2. SECURE CONDUIT 41953-01-000, 41953-02-000 AND 41953-03-000 OVER ALL WIRES IN CONTACT WITH SHARP EDGES.
1. LEGEND: ----- WINNEBAGO, - - - - - CABLE, - - - - - CHASSIS SUPPLY

NOTES:

1CQ CHEVY CHASSIS, GAS
1B1 CODE STANDARDS-USA
265 CODE STANDARDS-CSA



WINNEBAGO		98 F & G30WD
QFTD	DATE	UNINSPECTED TOWNSHIPS ARE: NATURAL
CHWD	DATE	WALL SPACE (X, Y) 7.8
P E	DATE	ONE PLACE (X, Y) 1.1
N E	DATE	TWO PLACE (X, Y) 3.1
COND	DATE	ANGLE
		THIRD ANGLE
		PROJECTION
LEAD IN	TITLE	
G29RD		
WIRING INSTL-CHASSIS		
Q14 OK SCALE: NONE	NO SCALE	
ALL DIMENSIONS ARE IN HUNDRETHS	SHEET 1 OF 4	
		127088

FOR ELECTRICAL
TORQUE
SPECIFICATIONS:
SEE DWG NO.
128783-01-000


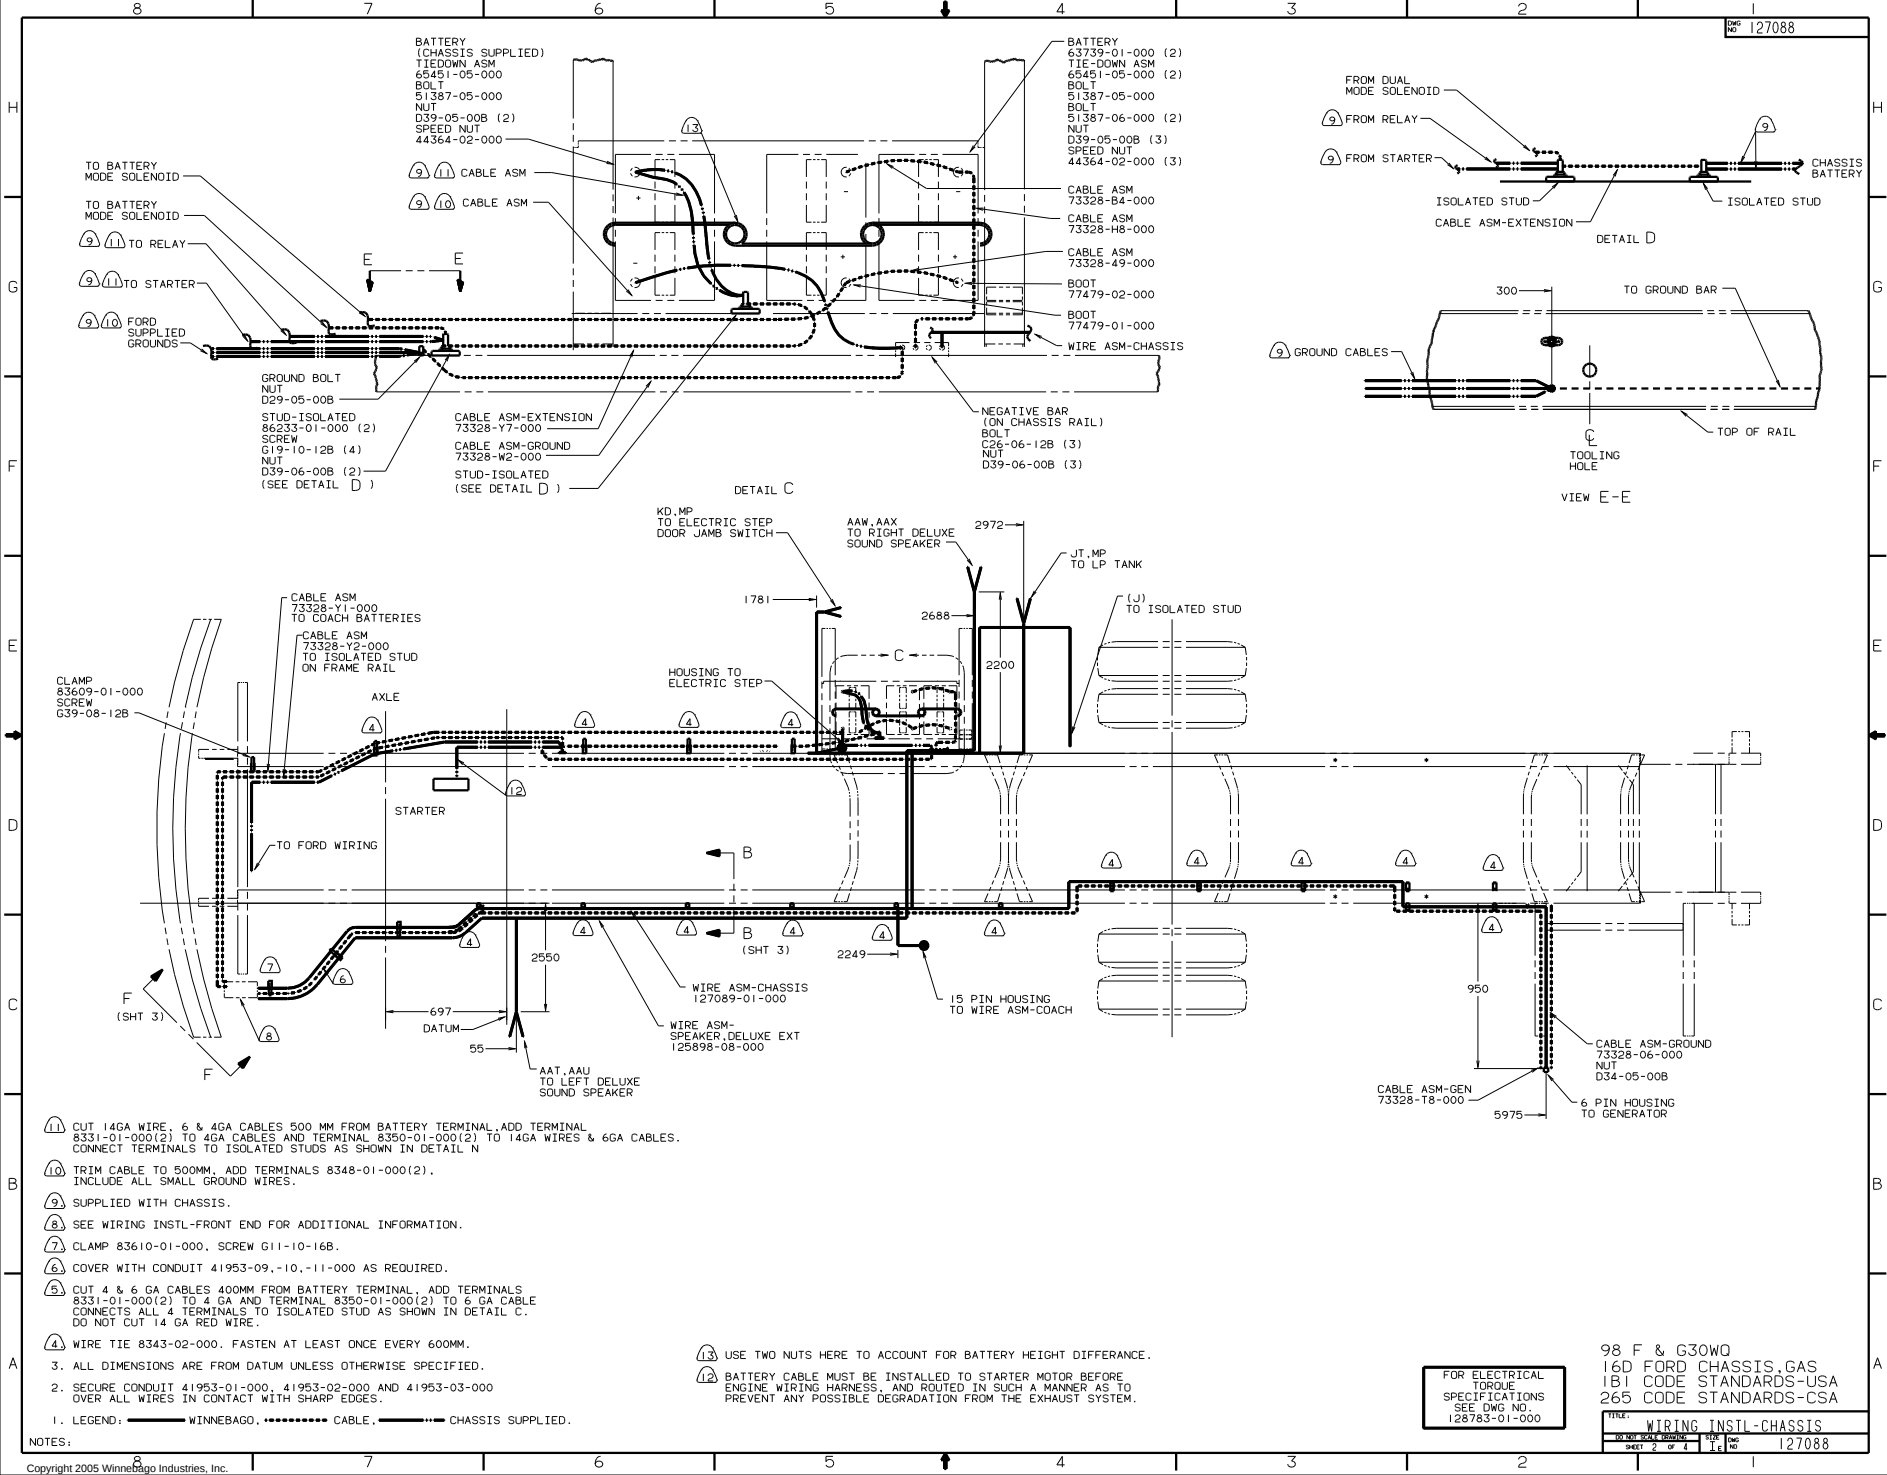


BATTERY
(CHASSIS SUPPLIED)
TIEDOWN ASM
65451-05-000
BOLT
51387-05-000
NUT
D39-05-00B (2)
SPEED NUT
44364-02-000

BATTERY
63739-01-000 (2)
TIE-DOWN ASM
65451-05-000 (2)
BOLT
51387-05-000
NUT
D39-05-00B (2)
SPEED NUT
44364-02-000 (3)

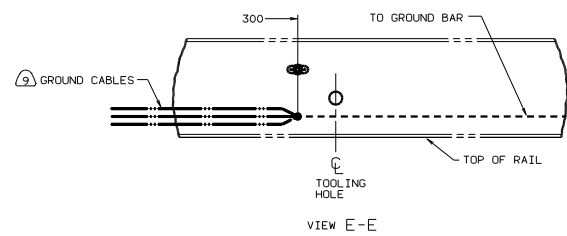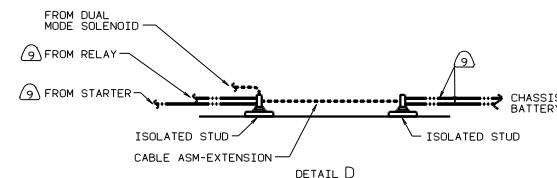

DETAIL C

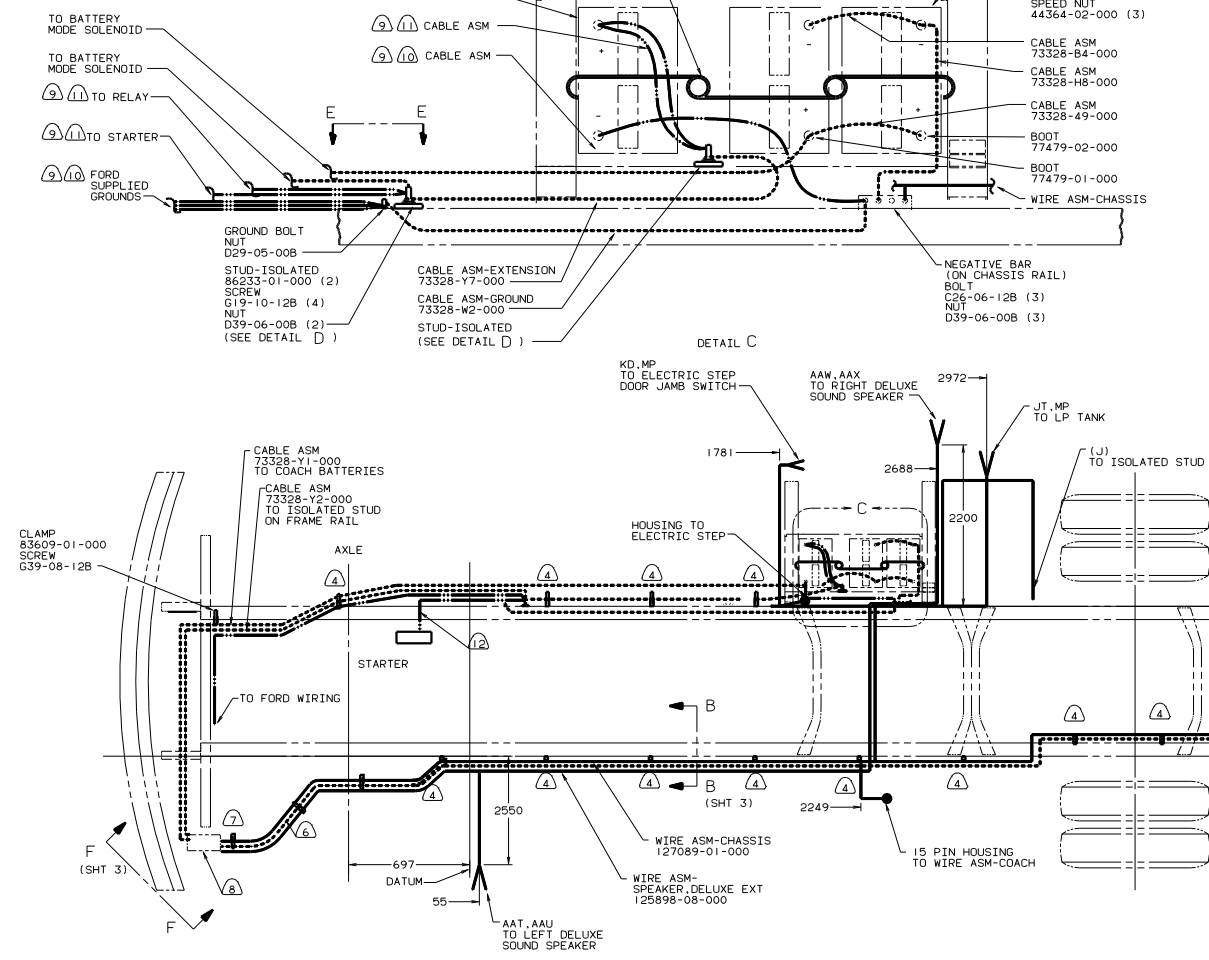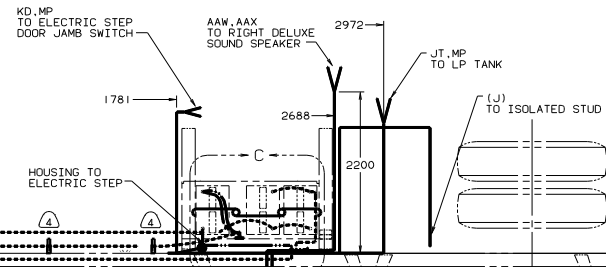

- 11 CUT 14GA WIRE. 6 & 4GA CABLES 500 MM FROM BATTERY TERMINAL. ADD TERMINAL 8331-01-000(2) TO 4GA CABLES AND TERMINAL 8350-01-000(2) TO 14GA WIRES & 6GA CABLES. CONNECT TERMINALS TO ISOLATED STUDS AS SHOWN IN DETAIL N.
- 10 TRIM CABLE TO 500MM. ADD TERMINALS 8348-01-000(2). INCLUDE ALL SMALL GROUND WIRES.
- 9 SUPPLIED WITH CHASSIS.
- 8 SEE WIRING INSTL-FRONT END FOR ADDITIONAL INFORMATION.
- 7 CLAMP 83610-01-000. SCREW G11-10-16B.
- 6 COVER WITH CONDUIT 41953-09,-10,-11-000 AS REQUIRED.
- 5 CUT 4 & 6 GA CABLES 400MM FROM BATTERY TERMINAL. ADD TERMINALS 8331-01-000(2) TO 4 GA AND TERMINAL 8350-01-000(2) TO 6 GA CABLE. CONNECTS ALL 4 TERMINALS TO ISOLATED STUD AS SHOWN IN DETAIL C. DO NOT CUT 14 GA RED WIRE.
- 4 WIRE TIE 8343-02-000. FASTEN AT LEAST ONCE EVERY 600MM.


- 13 USE TWO NUTS HERE TO ACCOUNT FOR BATTERY HEIGHT DIFFERENCE.
- 12 BATTERY CABLE MUST BE INSTALLED TO STARTER MOTOR BEFORE ENGINE WIRING HARNESS. AND ROUTED IN SUCH A MANNER AS TO PREVENT ANY POSSIBLE DEGRADATION FROM THE EXHAUST SYSTEM.

NOTES:
1. LEGEND: — WINNEBAGO, CABLE, — CHASSIS SUPPLIED.


FOR ELECTRICAL
TORQUE
SPECIFICATIONS
SEE DWG NO.
128783-01-000

98 F & G30WQ
16D FORD CHASSIS, GAS
1B1 CODE STANDARDS-USA
265 CODE STANDARDS-CSA


TITLE: WIRING INSTL-CHASSIS	
20 THE WIRE HARNESS	16
SHEET 2 OF 4	16

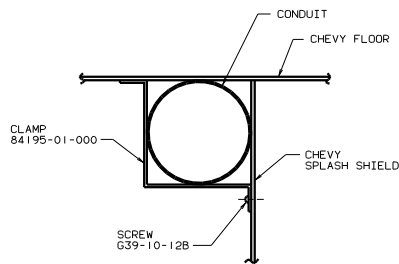


VIEW G-G

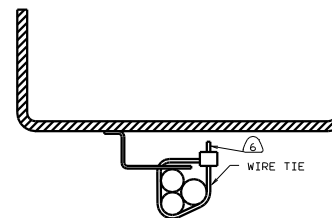

VIEW B-B

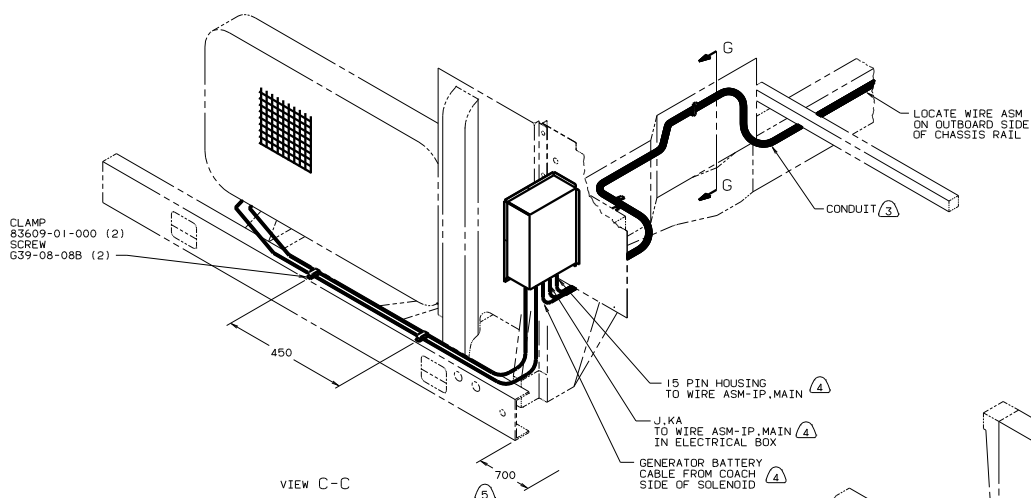

VIEW C-C

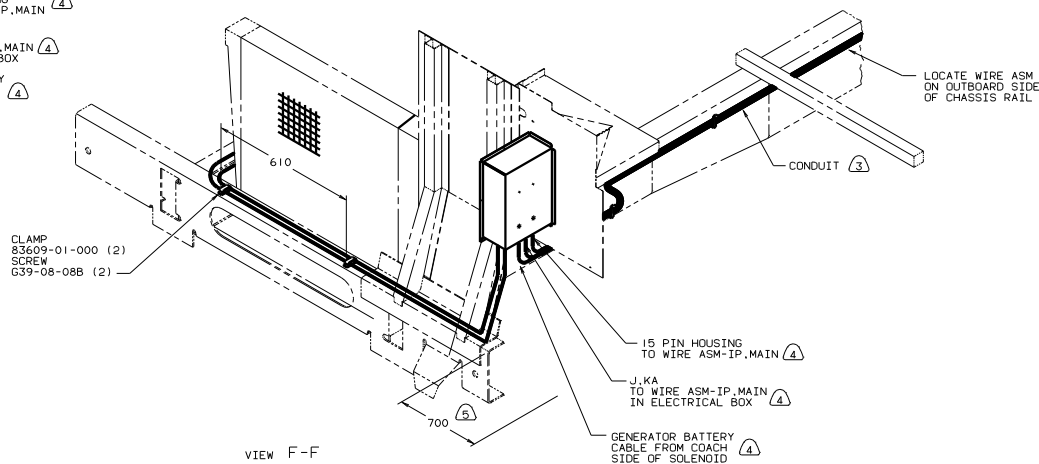

VIEW F-F

(6) CUT OFF EXCESS END OF WIRE TIE.

(5) LAY BATTERY AND GENERATOR CABLE TO THIS DIMENSION FROM END OF CHASSIS CROSSMEMBER TO START INSTALLATION.

(4) SEE WIRING INSTL-FRONT END FOR ADDITIONAL INFORMATION.

(3) COVER WITH CONDUIT 41953-09,-10,-11-000 AS REQUIRED.

2. SECURE CONDUIT 41953-01-000, 41953-02-000 AND 41953-03-000 OVER ALL WIRES IN CONTACT WITH SHARP EDGES.


1. LEGEND: — WINNEBAGO, - - - - - CABLE, — CHASSIS SUPPLIED.

NOTES:

FOR ELECTRICAL
TORQUE
SPECIFICATIONS
SEE DWG NO.
128783-01-000

98 F & G30WD

TITLE: WIRING INSTL-CHASSIS
SHEET 3 OF 4
127088

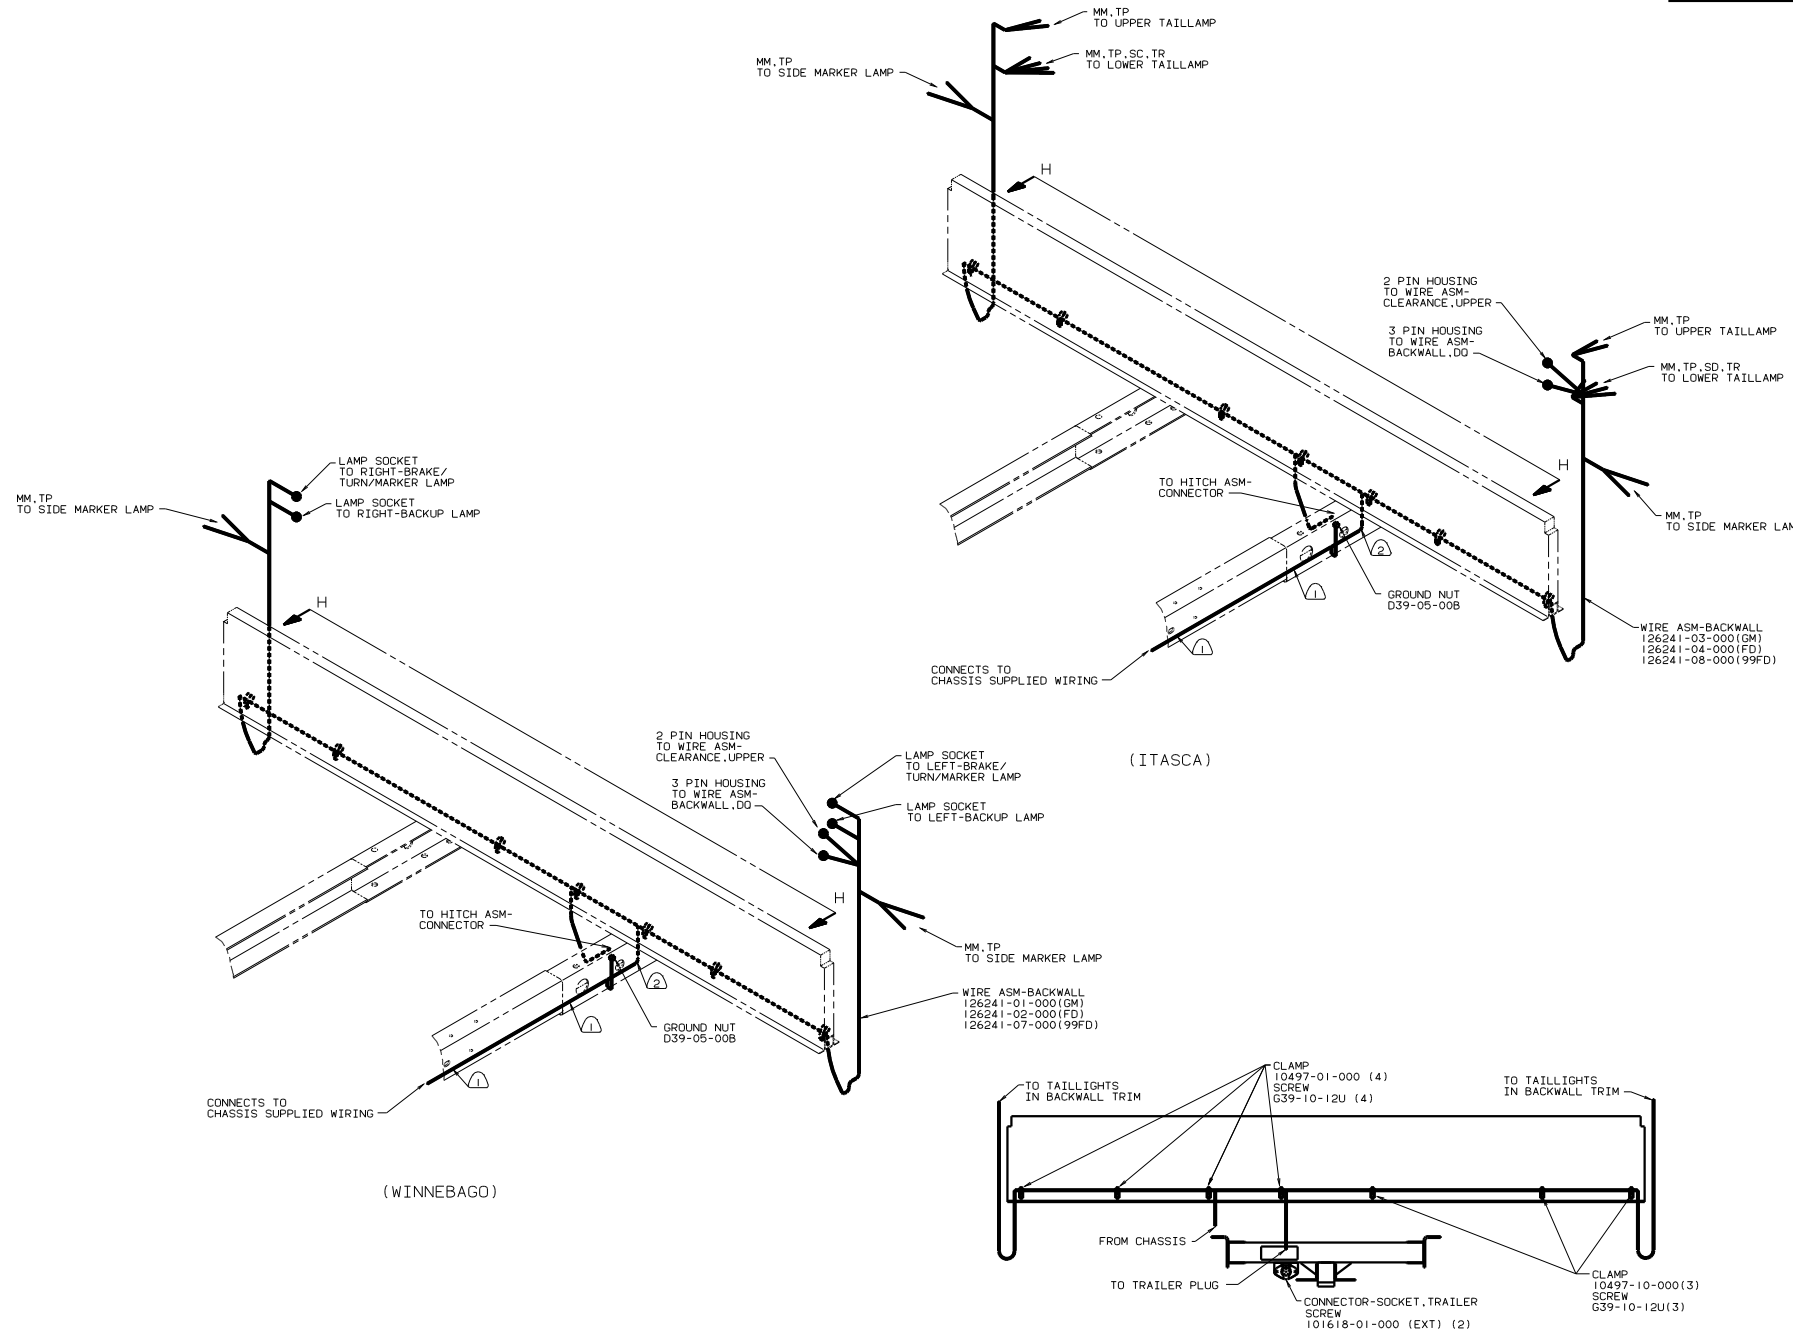

NOTES:

② WIRE TO BE ROUTED ON BACK SIDE OF RISER.

① WIRE TIE 8343-02. FASTEN TO FRAME AT LEAST ONCE EVERY 600MM.

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO: 128783-01-000

98 63000 ONLY

TITLE: WIRING INSTL-CHASSIS	
DO NOT SCALE DRAWING	FILE NO: 127088
SHEET 4 OF 4	