



DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

DRAWING NO.	MODEL
151876-01	400 SERIES
151876-02	300 & 700 SERIES

RELEASE	REV DATE	ORIG NO	151876
REV ZONE	REVISION RECORD	DATE	DFTR-ORIG

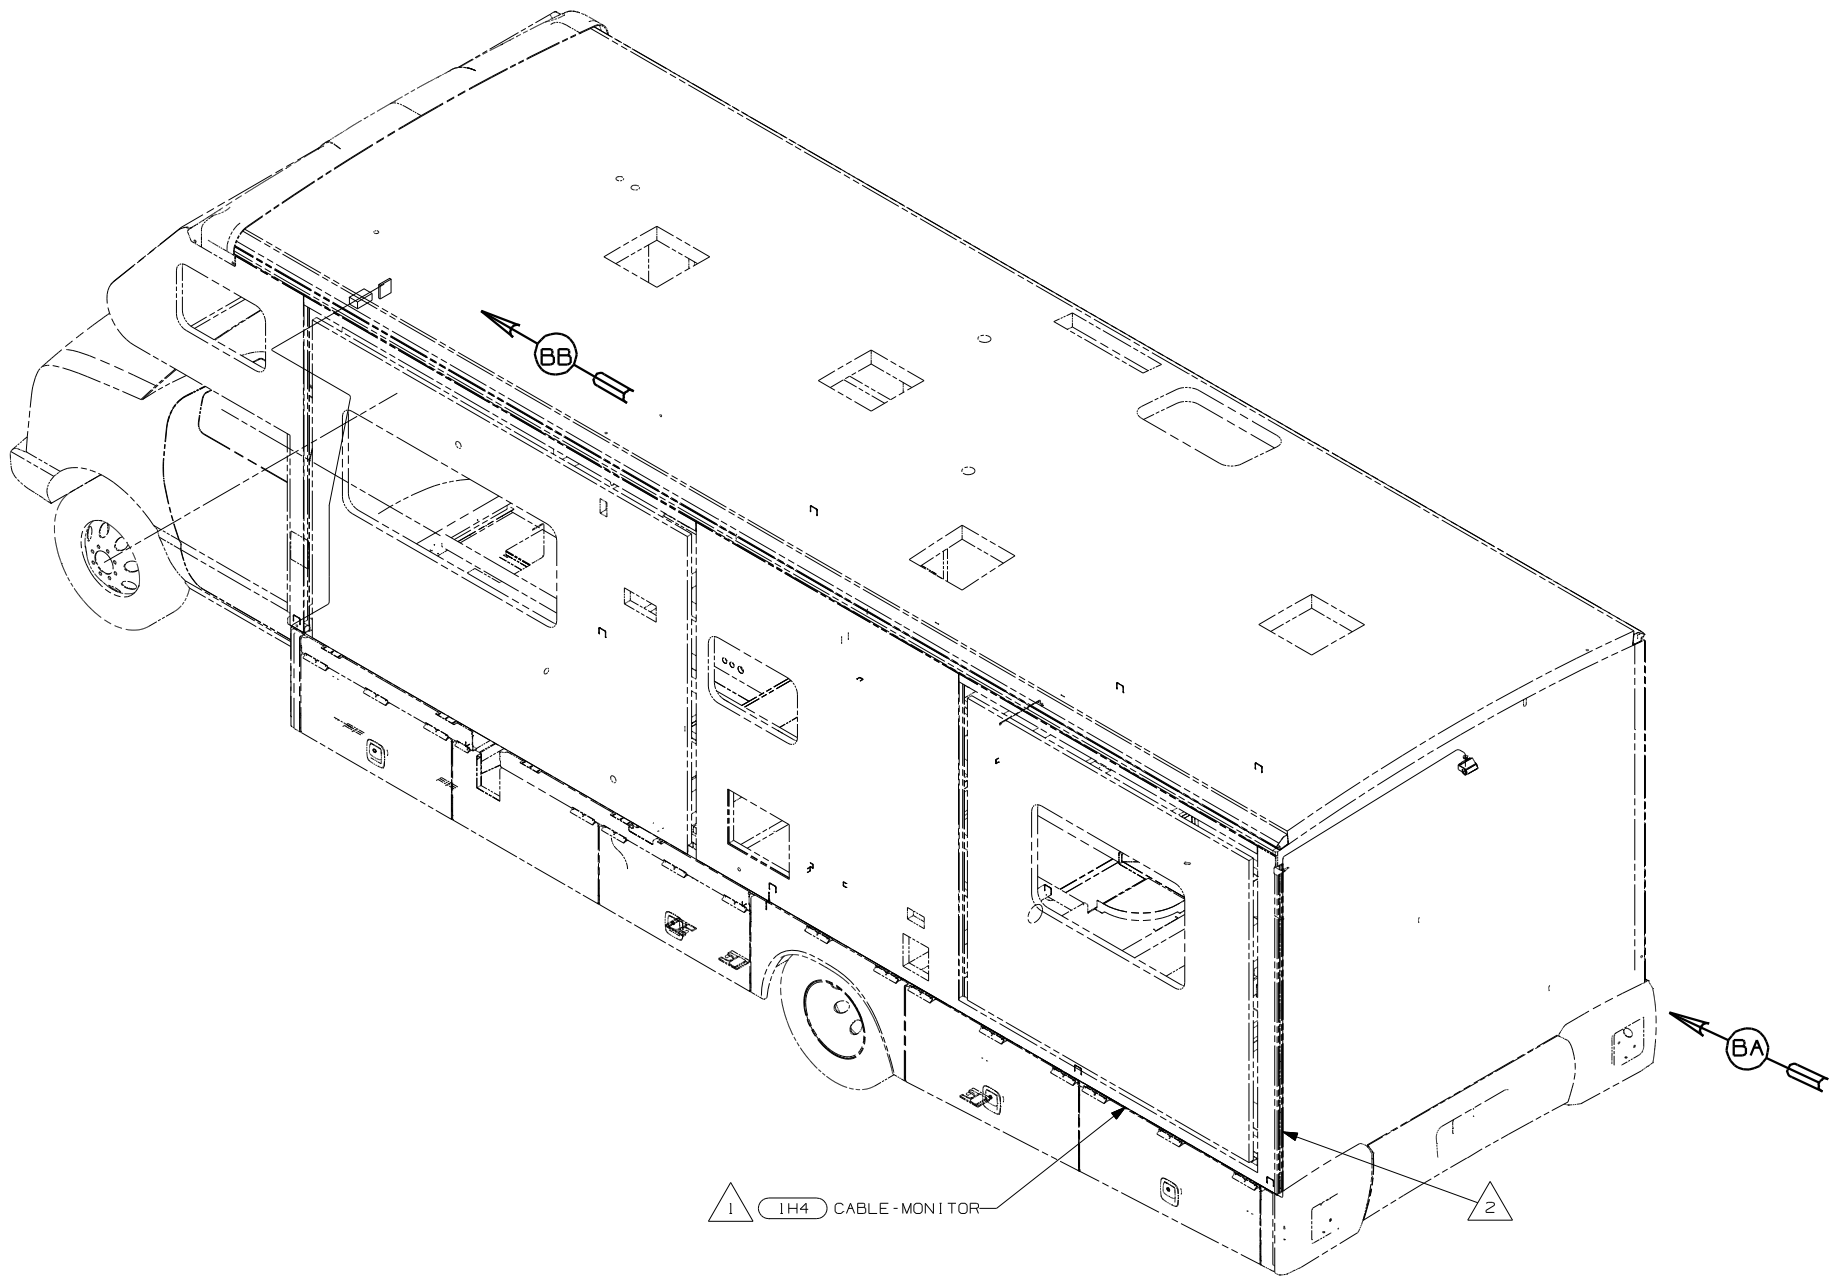


- 74A RR MONITOR SYS-SUNVISOR MNTR
- 74J REARVIEW MONITOR SYSTEM
- 1H4 REARVIEW MONITOR-WIRE PREP

2 WIRE ROUTED IN RECESSED AREA BETWEEN SIDEWALL AND BACKWALL.


1 REAR MONITOR CAMERA CABLE IS PART OF WIRE ASSEMBLY CHASSIS AND RUNS ALONG LEFT FRAME RAIL.

NOTES:

FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000

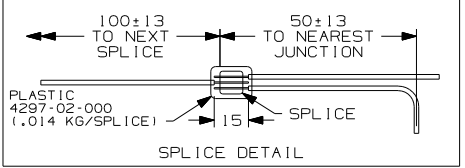

WINNEBAGO		COPYRIGHT 2004 WINNEBAGO INDUSTRIES, INC.	
DFTR	ORIG. DATE		
CHKR	ALL DIMENSIONS ARE IN MILLIMETERS		
P.E.	FIRST USED		
M.E.	06 C-BODIES		
DSNR	UNSPECIFIED TOLERANCES ARE:	MATERIAL:	
	WHOLE DIM (X) : 1	.	
	ONE-PLACE (X,X) : 1	.	
	TWO-PLACE (X,XX) : 1	.	
	ANGLE : 1	.	
	THIRD ANGLE PROJECTION : 1	.	
DO NOT SCALE DRAWING			
TITLE: MONITOR INSTL.			
SHEET 1 OF 3		PART NO 151876	
REF:		1 7/25/2005	

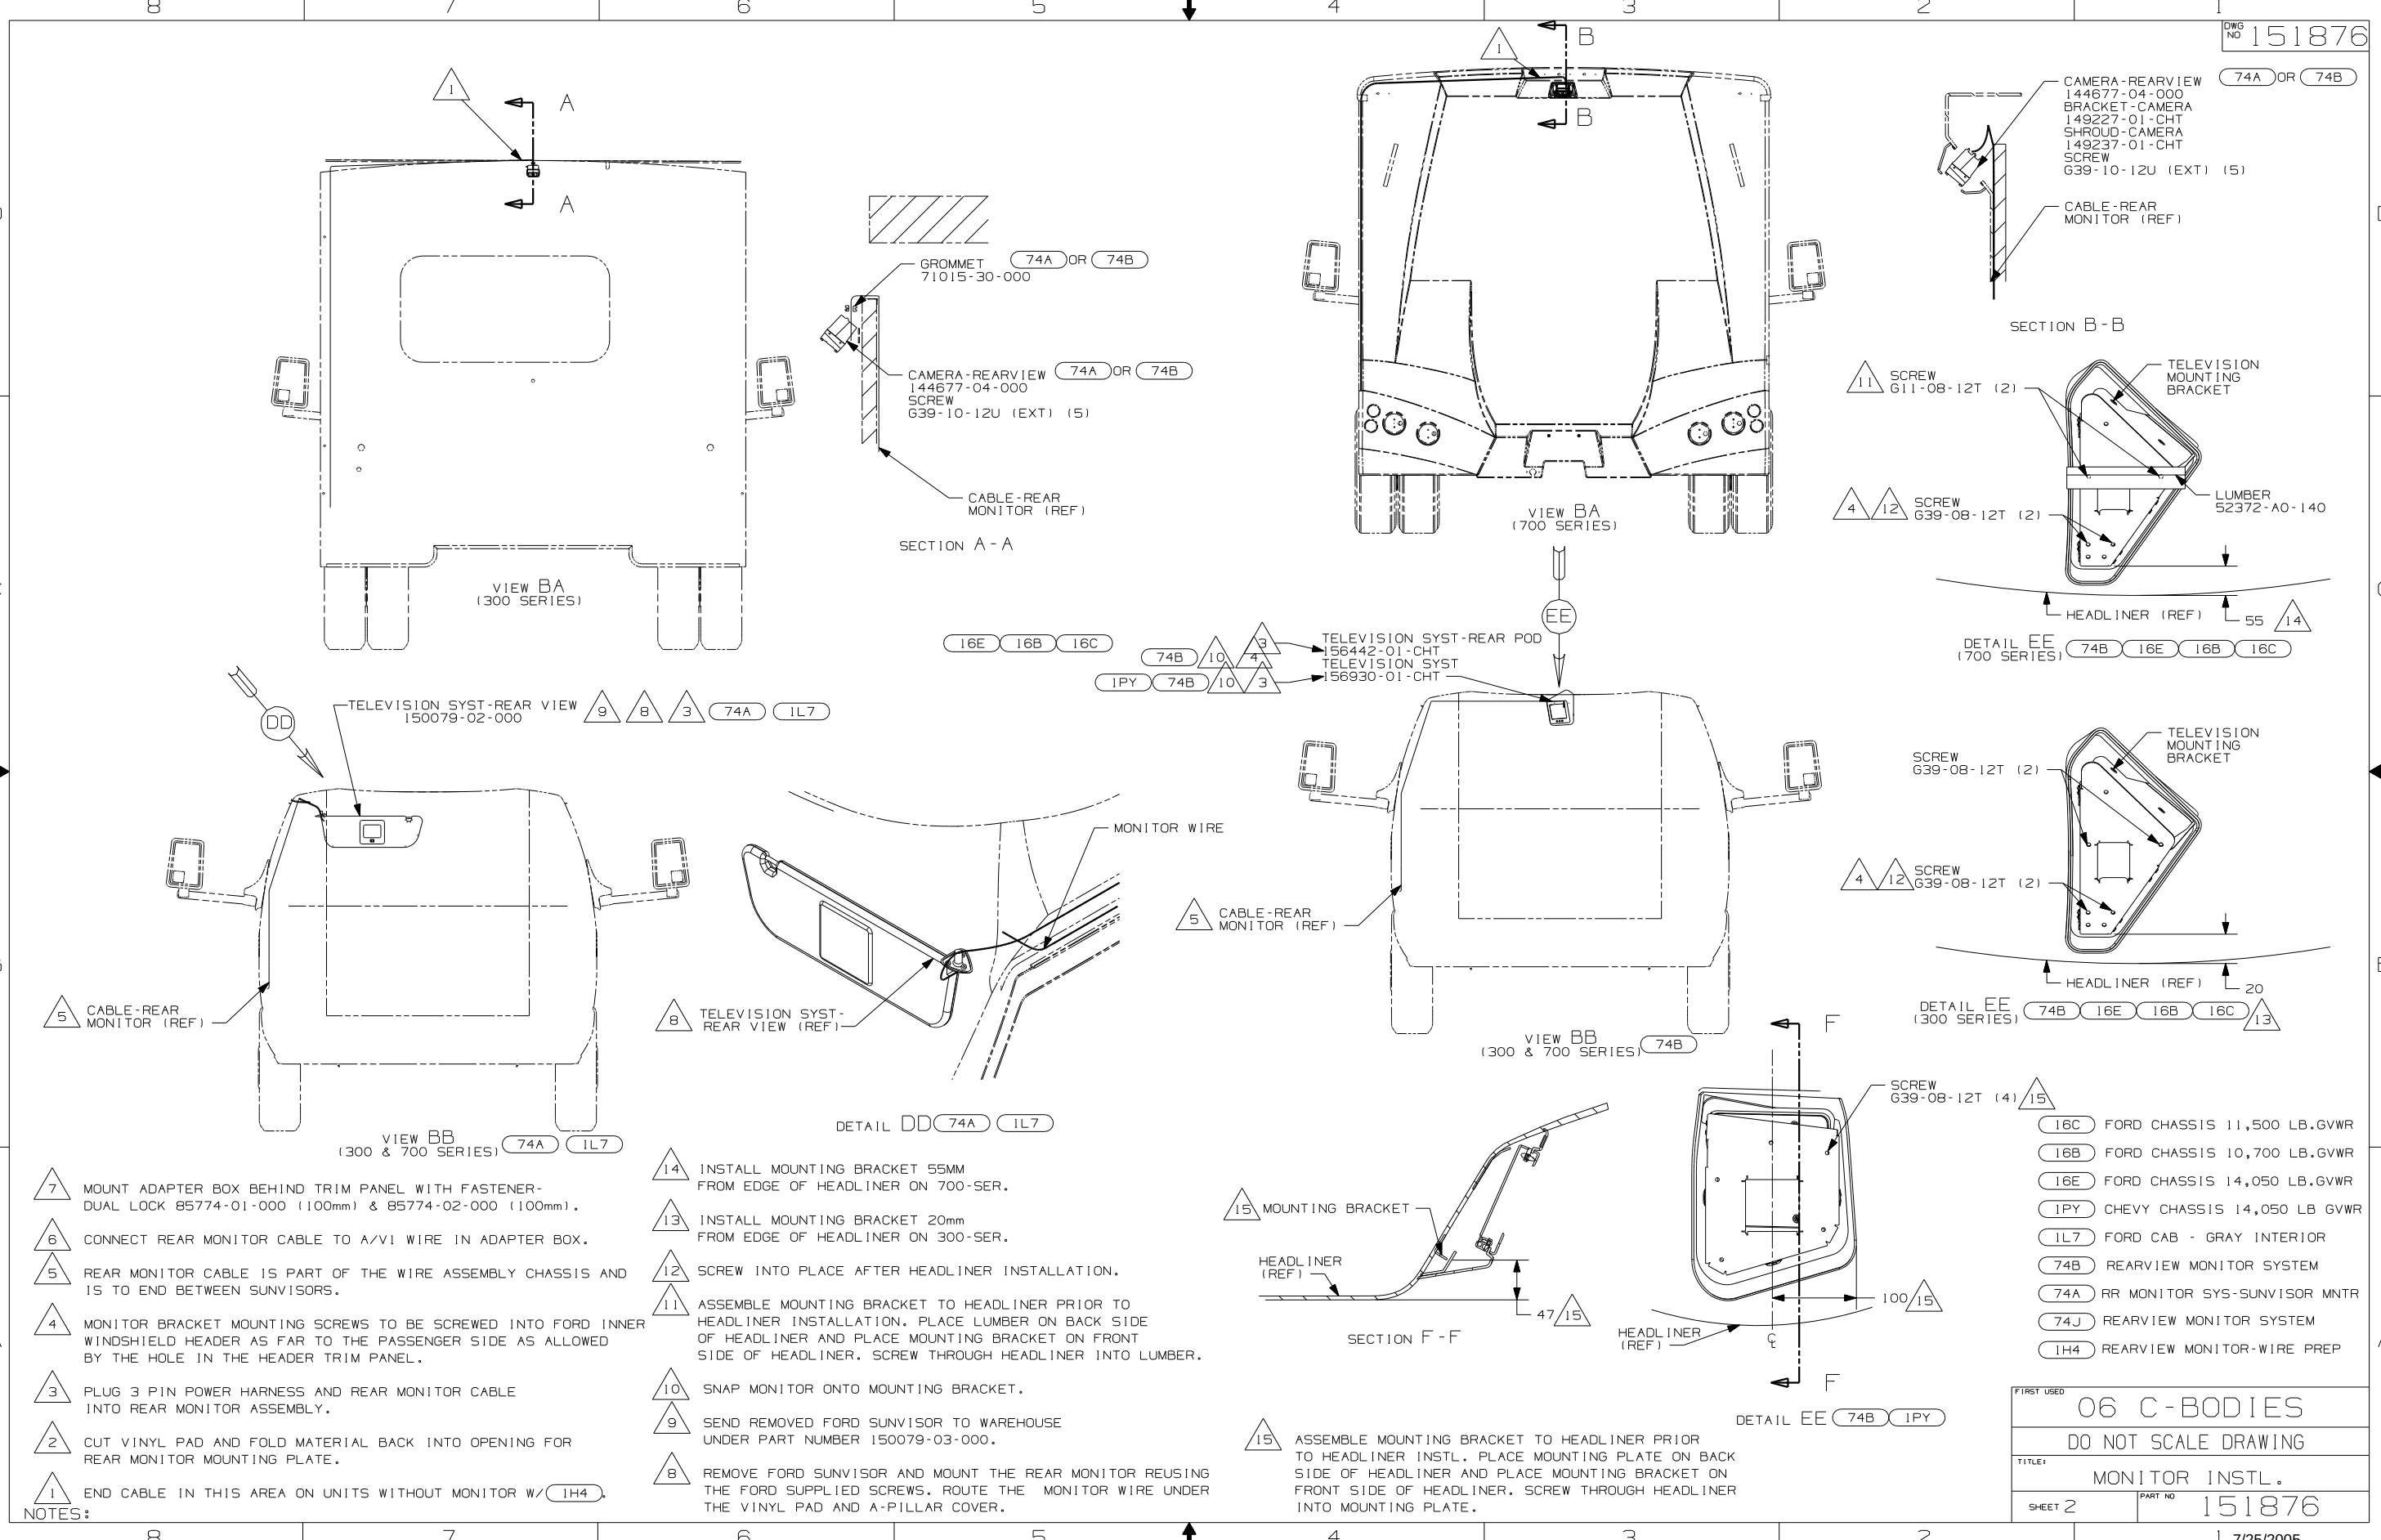

- NOTES:
- 1 END CABLE IN THIS AREA ON UNITS WITHOUT MONITOR W/ (1H4).
 - 2 CUT VINYL PAD AND FOLD MATERIAL BACK INTO OPENING FOR REAR MONITOR MOUNTING PLATE.
 - 3 PLUG 3 PIN POWER HARNESS AND REAR MONITOR CABLE INTO REAR MONITOR ASSEMBLY.
 - 4 MONITOR BRACKET MOUNTING SCREWS TO BE SCREWED INTO FORD INNER WINDSHIELD HEADER AS FAR TO THE PASSENGER SIDE AS ALLOWED BY THE HOLE IN THE HEADER TRIM PANEL.
 - 5 REAR MONITOR CABLE IS PART OF THE WIRE ASSEMBLY CHASSIS AND IS TO END BETWEEN SUNVISORS.
 - 6 CONNECT REAR MONITOR CABLE TO A/V1 WIRE IN ADAPTER BOX.
 - 7 MOUNT ADAPTER BOX BEHIND TRIM PANEL WITH FASTENER-DUAL LOCK 85774-01-000 (100mm) & 85774-02-000 (100mm).

- 8 REMOVE FORD SUNVISOR AND MOUNT THE REAR MONITOR REUSING THE FORD SUPPLIED SCREWS. ROUTE THE MONITOR WIRE UNDER THE VINYL PAD AND A-PILLAR COVER.
- 9 SEND REMOVED FORD SUNVISOR TO WAREHOUSE UNDER PART NUMBER 150079-03-000.
- 10 SNAP MONITOR ONTO MOUNTING BRACKET.
- 11 ASSEMBLE MOUNTING BRACKET TO HEADLINER PRIOR TO HEADLINER INSTALLATION. PLACE LUMBER ON BACK SIDE OF HEADLINER AND PLACE MOUNTING BRACKET ON FRONT SIDE OF HEADLINER. SCREW THROUGH HEADLINER INTO LUMBER.
- 12 SCREW INTO PLACE AFTER HEADLINER INSTALLATION.
- 13 INSTALL MOUNTING BRACKET 20mm FROM EDGE OF HEADLINER ON 300-SER.
- 14 INSTALL MOUNTING BRACKET 55MM FROM EDGE OF HEADLINER ON 700-SER.

- 15 ASSEMBLE MOUNTING BRACKET TO HEADLINER PRIOR TO HEADLINER INSTL. PLACE MOUNTING PLATE ON BACK SIDE OF HEADLINER AND PLACE MOUNTING BRACKET ON FRONT SIDE OF HEADLINER. SCREW THROUGH HEADLINER INTO MOUNTING PLATE.

CAMERA-REARVIEW
144677-04-000
BRACKET-CAMERA
149227-01-CHT
SHROUD-CAMERA
149237-01-CHT
SCREW
G39-10-12U (EXT) (5)

CABLE-REAR
MONITOR (REF)

TELEVISION MOUNTING
BRACKET

LUMBER
52372-A0-140

HEADLINER (REF)

DETAIL EE
(700 SERIES)

SCREW
G11-08-12T (2)

SCREW
G39-08-12T (2)

74B 16E 16B 16C

TELEVISION MOUNTING
BRACKET

HEADLINER (REF)


DETAIL EE
(300 SERIES)

SCREW
G39-08-12T (2)


SCREW
G39-08-12T (2)

74B 16E 16B 16C


16C FORD CHASSIS 11,500 LB.GVWR
16B FORD CHASSIS 10,700 LB.GVWR
16E FORD CHASSIS 14,050 LB.GVWR
1PY CHEVY CHASSIS 14,050 LB GVWR
1L7 FORD CAB - GRAY INTERIOR
74B REARVIEW MONITOR SYSTEM
74A RR MONITOR SYS-SUNVISOR MNTR
74J REARVIEW MONITOR SYSTEM
1H4 REARVIEW MONITOR-WIRE PREP

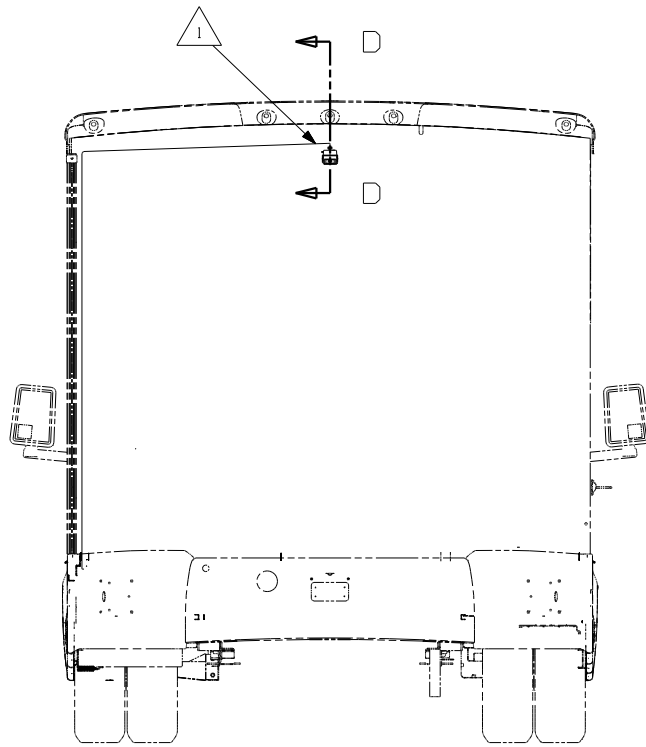

VIEW BA
(400 SERIES)

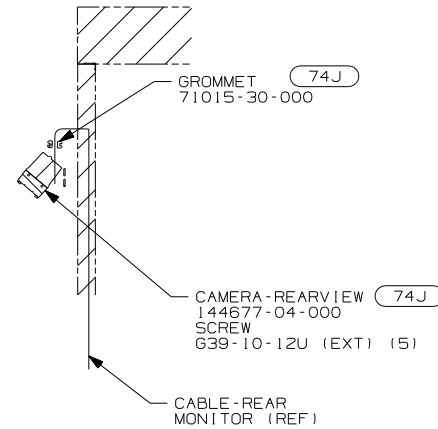

SECTION D-D

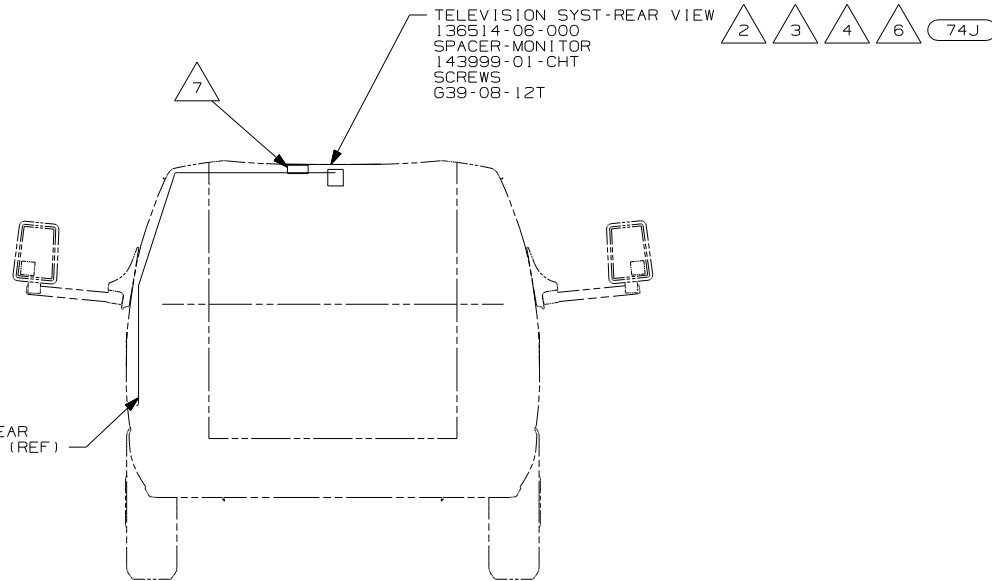

VIEW BB
(400 SERIES) 74J

- NOTES:
- 7 MOUNT ADAPTER BOX BEHIND TRIM PANEL WITH FASTENER-DUAL LOCK 85774-01-000 (100mm) & 85774-02-000 (100mm).
 - 6 CONNECT REAR MONITOR CABLE TO A/VI WIRE IN ADAPTER
 - 5 REAR MONITOR CABLE IS PART OF THE WIRE ASSEMBLY CHASSIS AND IS TO END BETWEEN SUNVISORS.
 - 4 MONITOR BRACKET MOUNTING SCREWS TO BE SCREWED INTO FORD INNER WINDSHIELD HEADER AS FAR TO THE PASSENGER SIDE AS ALLOWED BY THE HOLE IN THE HEADER TRIM PANEL.
 - 3 PLUG 3 PIN POWER HARNESS AND REAR MONITOR CABLE INTO REAR MONITOR ASSEMBLY.
 - 2 CUT VINYL PAD AND FOLD MATERIAL BACK INTO OPENING FOR REAR MONITOR MOUNTING PLATE.
 - 1 END CABLE IN THIS AREA ON UNITS WITHOUT MONITOR W/ 1H4.

- 74J REARVIEW MONITOR SYS W/AUDIO
- 1H4 REARVIEW MONITOR-WIRE PREP

FIRST USED		06 C-BODIES
TITLE:		DO NOT SCALE DRAWING
SHEET 3		PART NO 151876
		1 7/25/2005