





DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.


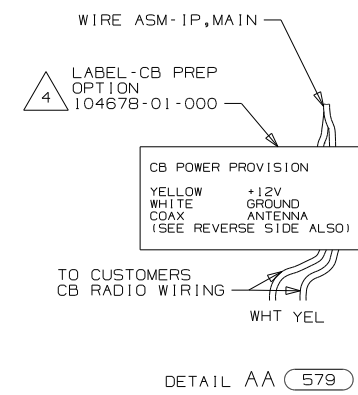
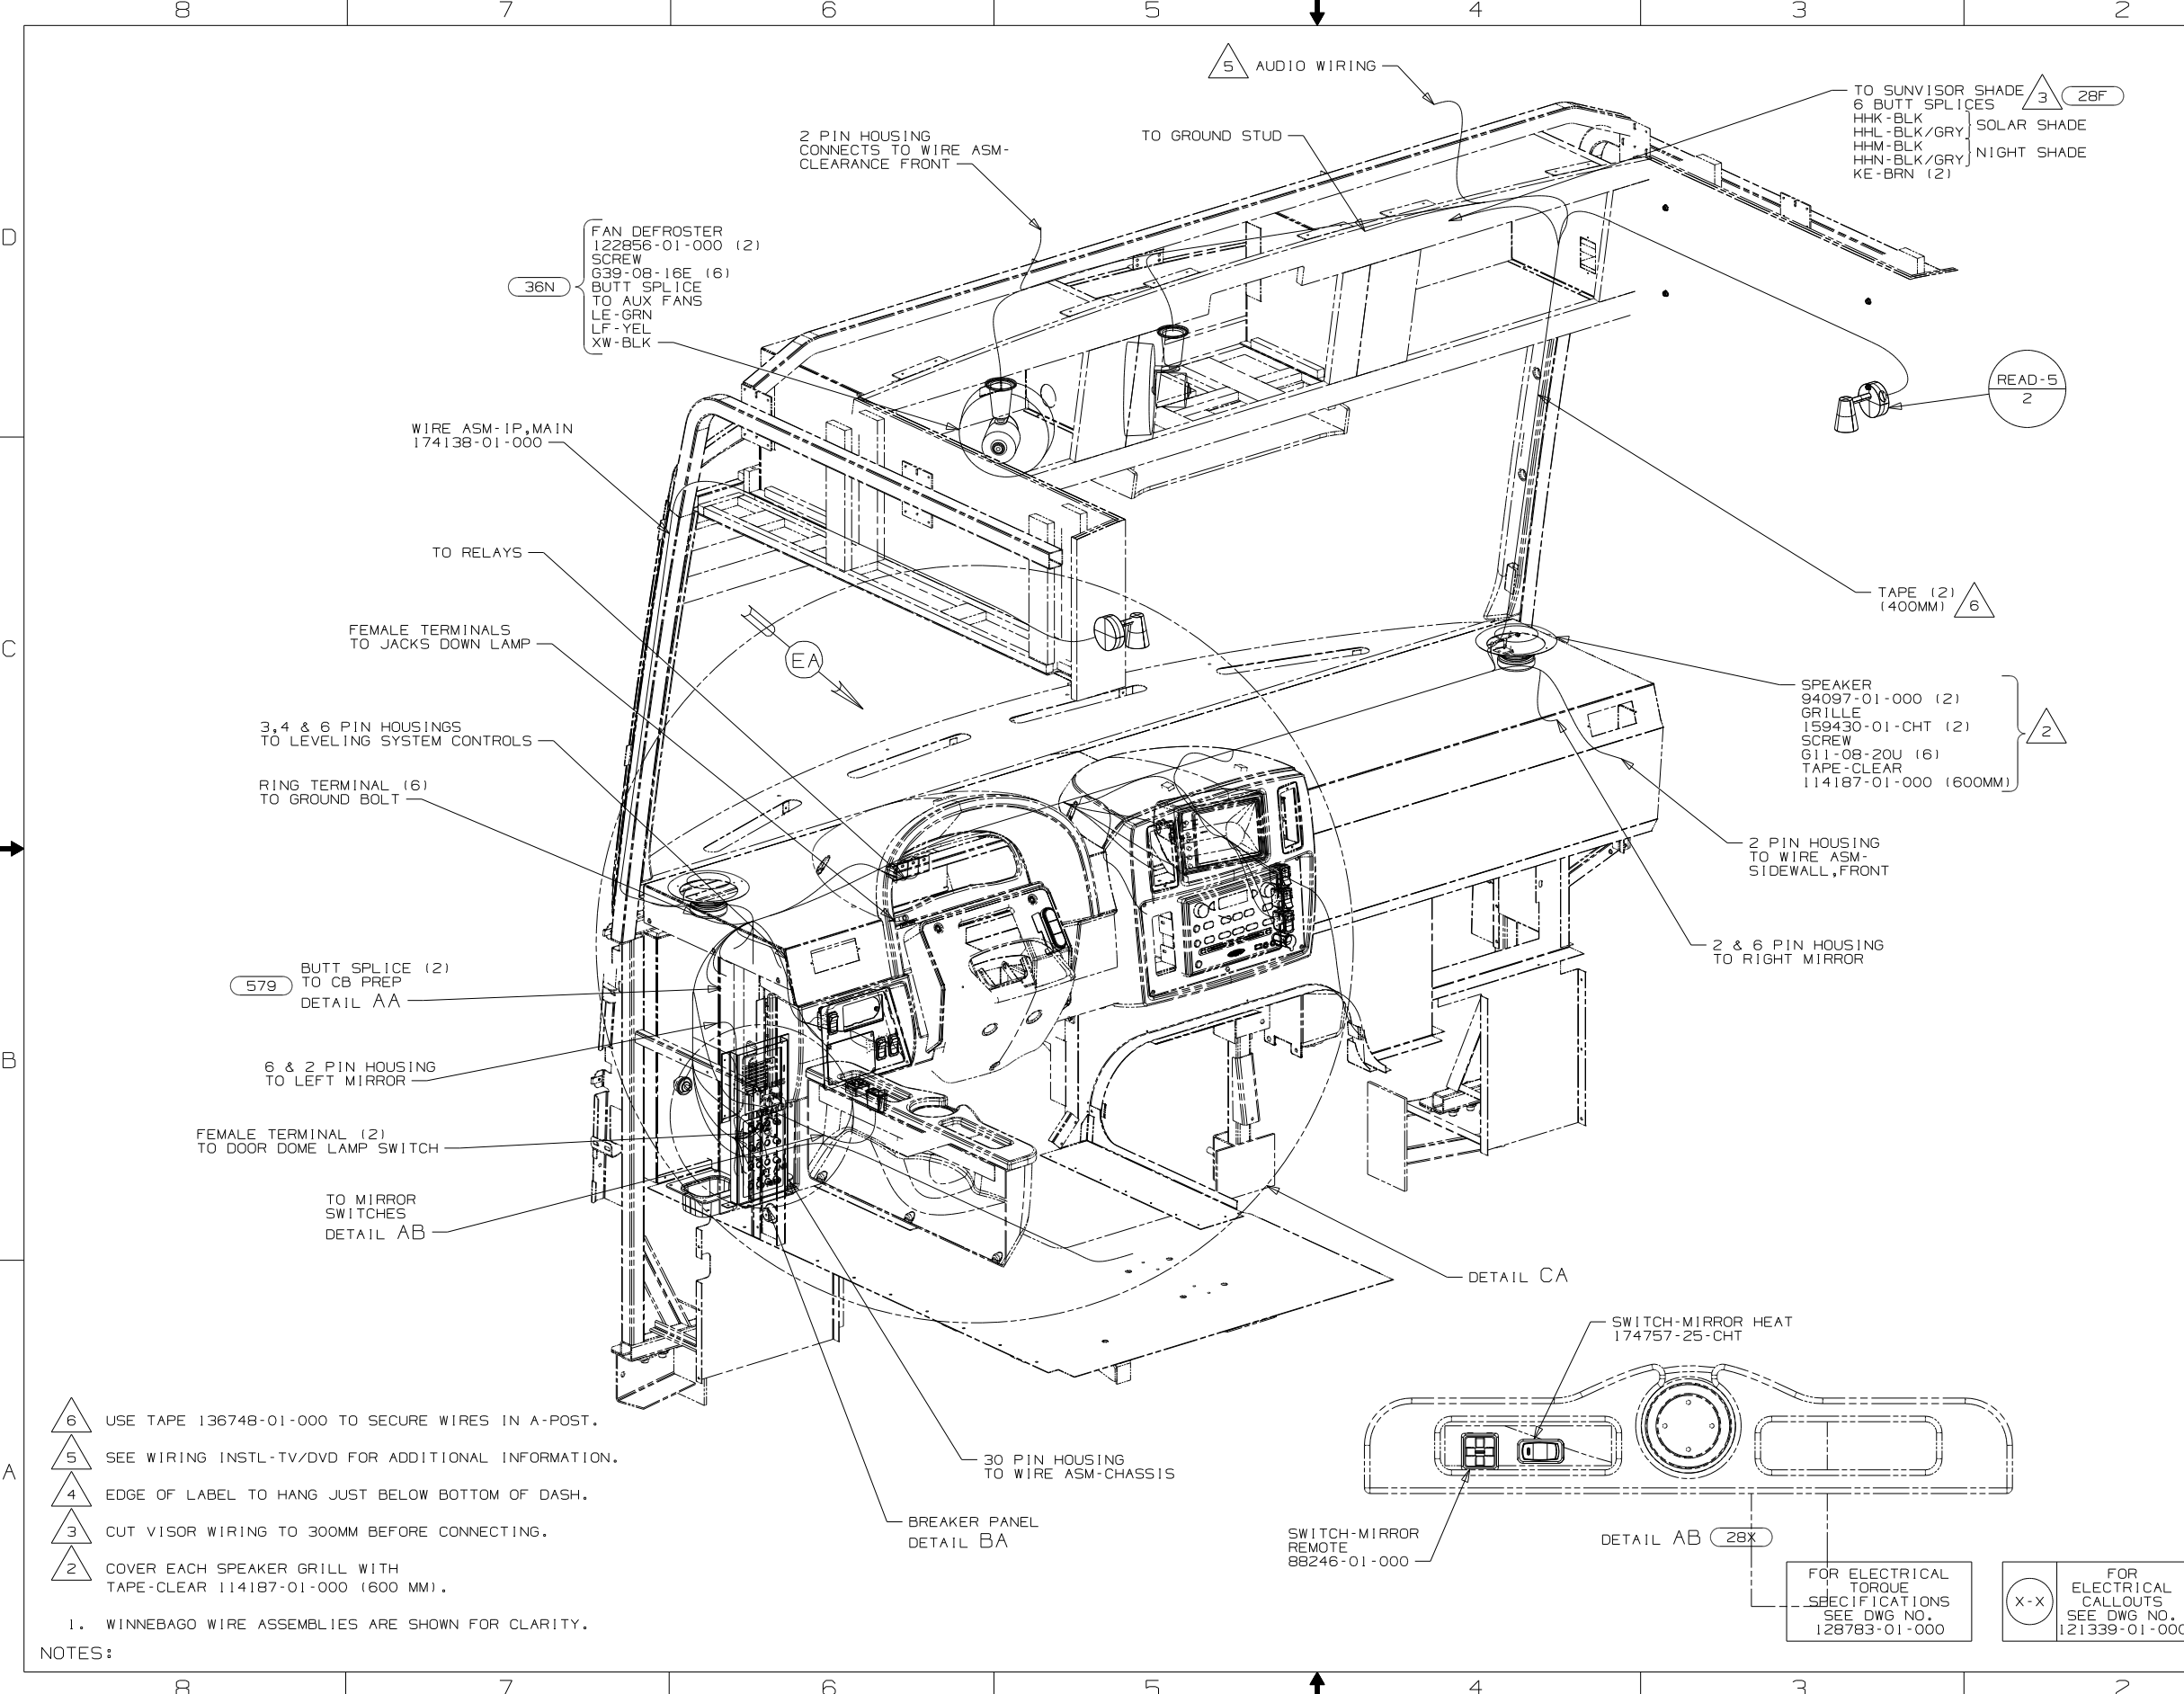


- 579 RADIO - CB WIRE PREP
- 36N FANS-DEFROSTER, AUXILIARY
- 28X MIRRORS-EXTERIOR W/DEFROST
- 28F FRONT SHADE-POWERED
- 265 CODES/STANDARDS-CSA/CMVSS
- 1B1 CODES/STANDARDS USA

WINNEBAGO		COPYRIGHT 2010 WINNEBAGO INDUSTRIES, INC.	
DFTR	ORIG. DATE	ALL DIMENSIONS ARE IN MILLIMETERS	
CHKR		FIRST USED	
P.E.		11 D-SERIES	
M.E.			
DSNR			
UNSPECIFIED TOLERANCES ARE:		MATERIAL:	
WHOLE DIM (X) ± 3			
ONE-PLACE (X,X) ± 1.5			
TWO-PLACE (X,XX) ± 0.50			
ANGLE ± 1°			
THIRD ANGLE PROJECTION			
DO NOT SCALE DRAWING			
TITLE: WIRING INSTL-FRONT END			
SHEET 1 of 5		PART NO 174135 REV	
REF:		17/16/2010	

- 6 USE TAPE 136748-01-000 TO SECURE WIRES IN A-POST.
- 5 SEE WIRING INSTL-TV/DVD FOR ADDITIONAL INFORMATION.
- 4 EDGE OF LABEL TO HANG JUST BELOW BOTTOM OF DASH.
- 3 CUT VISOR WIRING TO 300MM BEFORE CONNECTING.
- 2 COVER EACH SPEAKER GRILLE WITH TAPE-CLEAR 114187-01-000 (600 MM).

NOTES:
1. WINNEBAGO WIRE ASSEMBLIES ARE SHOWN FOR CLARITY.

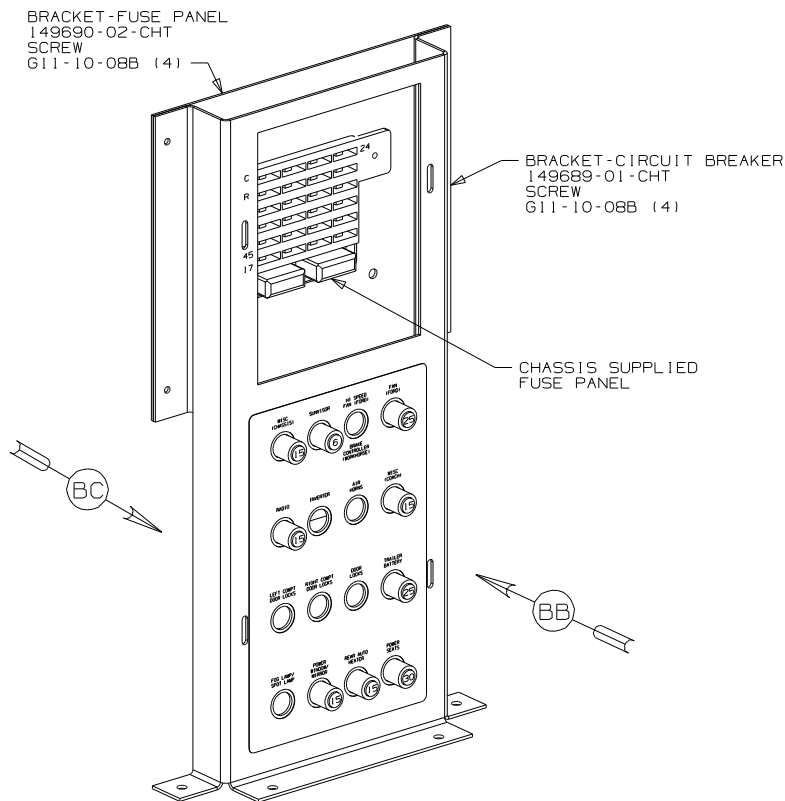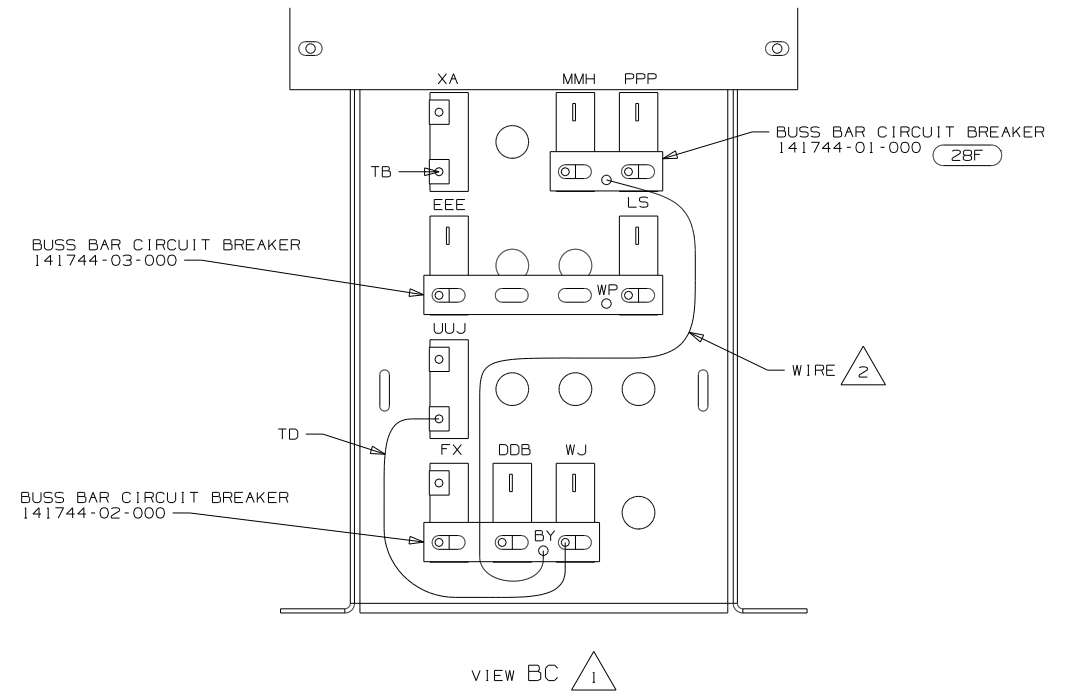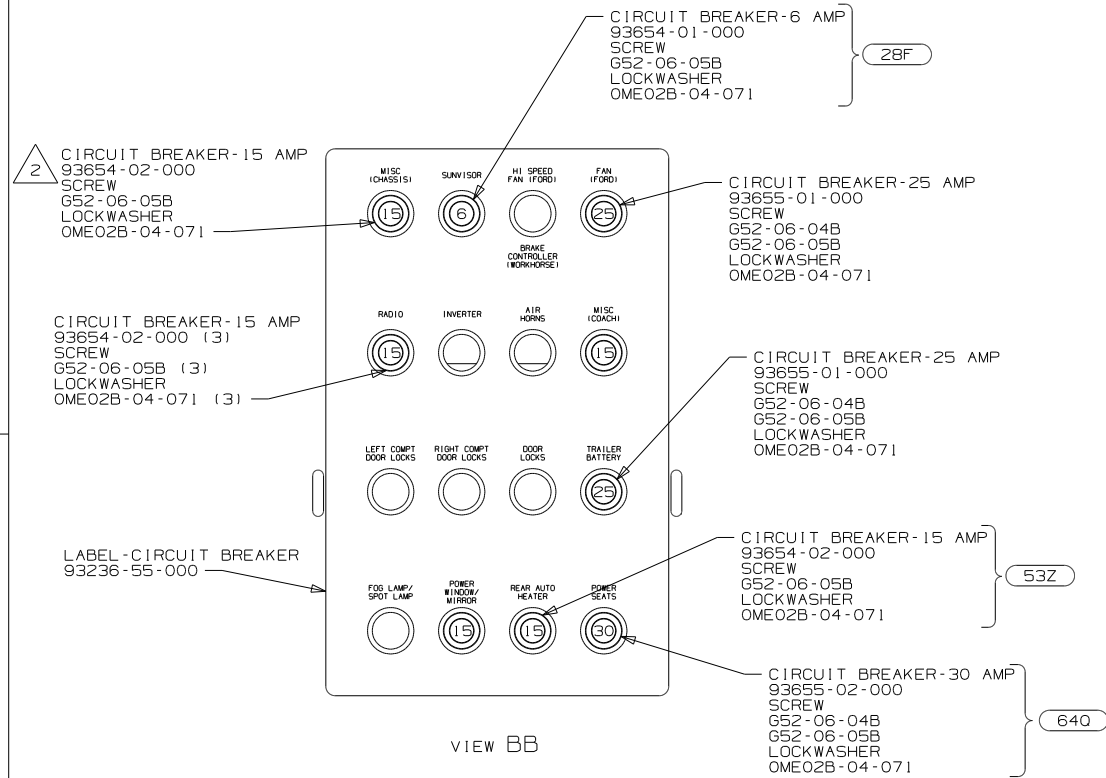

2 USED ON D33C,D36V & D37L ONLY.
1 ALL CIRCUITS ARE IN WIRE ASM-IP,MAIN.

NOTES:

FOR ELECTRICAL
TORQUE
SPECIFICATIONS
SEE DWG NO.
128783-01-000

FOR ELECTRICAL
CALLOUTS
SEE DWG NO.
121339-01-000

28F FRONT SHADE-POWERED
64Q SEAT PED-6-WAY POWER DRIVER
53Z WTR HTR-6GAL/110/LP/MTR/AUTO
265 CODES/STANDARDS-CSA/CMVSS
1B1 CODES/STANDARDS USA


11 D-SERIES	
DO NOT SCALE DRAWING	
TITLE: WIRING INSTL-FRONT END	
SHEET 2	PART NO 174135




NOTES:

	FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000
---	---

REV	
-----	--

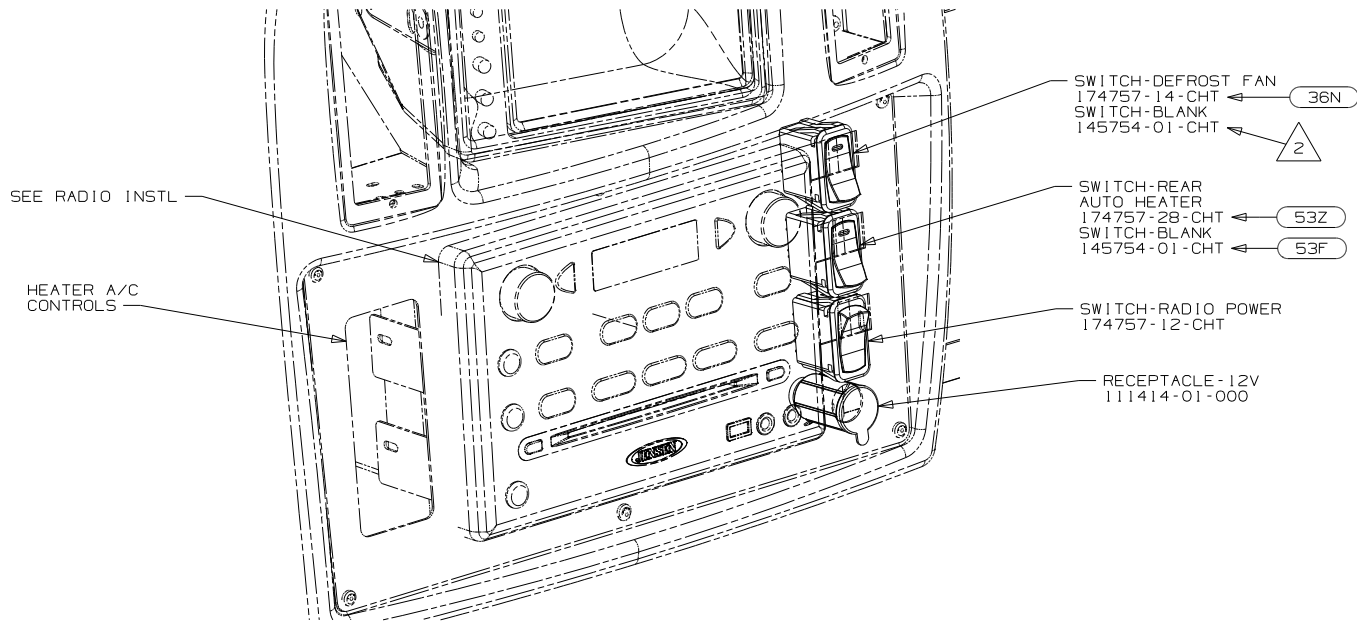

DETAIL DB

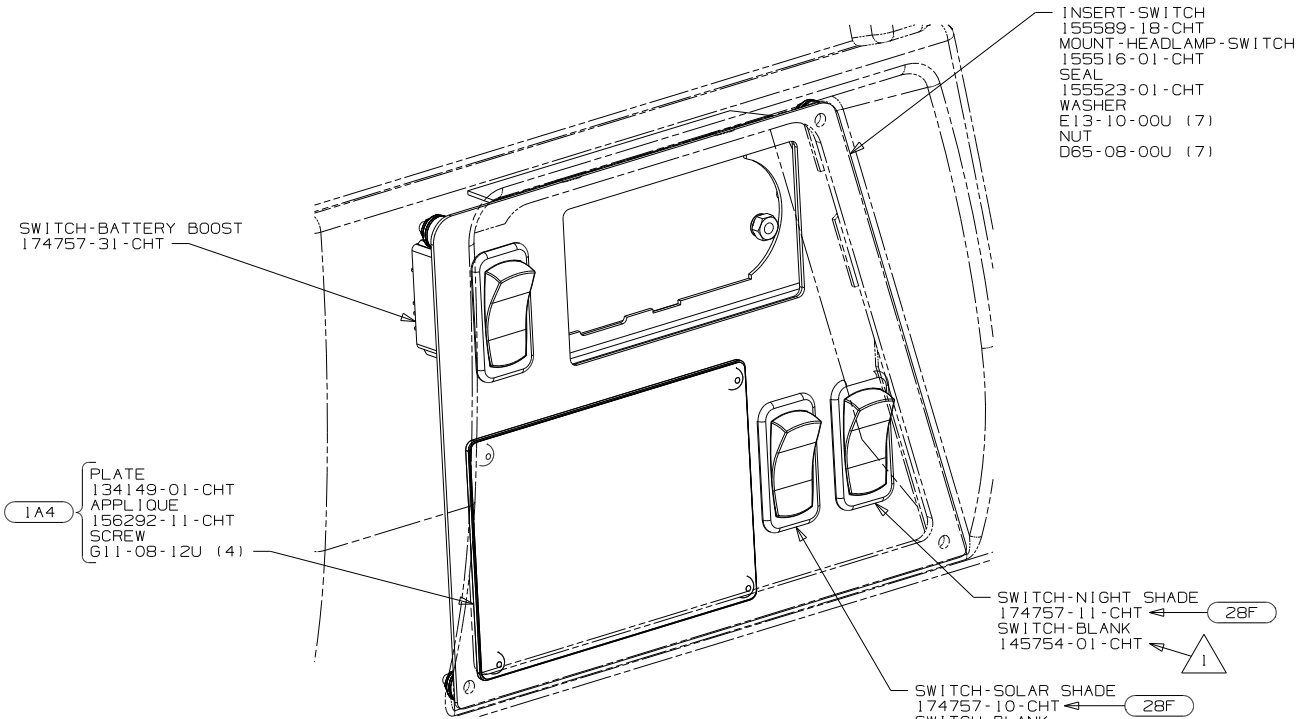

DETAIL DA

2 WITHOUT 36N
1 WITHOUT 28F

NOTES:


FOR ELECTRICAL
TORQUE
SPECIFICATIONS
SEE DWG NO.
128783-01-000

FOR ELECTRICAL
CALLOUTS
SEE DWG NO.
121339-01-000


28F FRONT SHADE-POWERED
53Z WTR HTR-6GAL/110/LP/MTR/AUTO
53F WATER HEATER-ELEC. IGNITION
36N FANS-DEFROSTER, AUXILIARY
1A4 LEVELING JACK WITHOUT
265 CODES/STANDARDS-CSA/CMVSS
1B1 CODES/STANDARDS USA

1B1 265

FIRST USED			11 D-SERIES	
			DO NOT SCALE DRAWING	
TITLE:			WIRING INSTL-FRONT END	
SHEET 4		PART NO	174135	REV

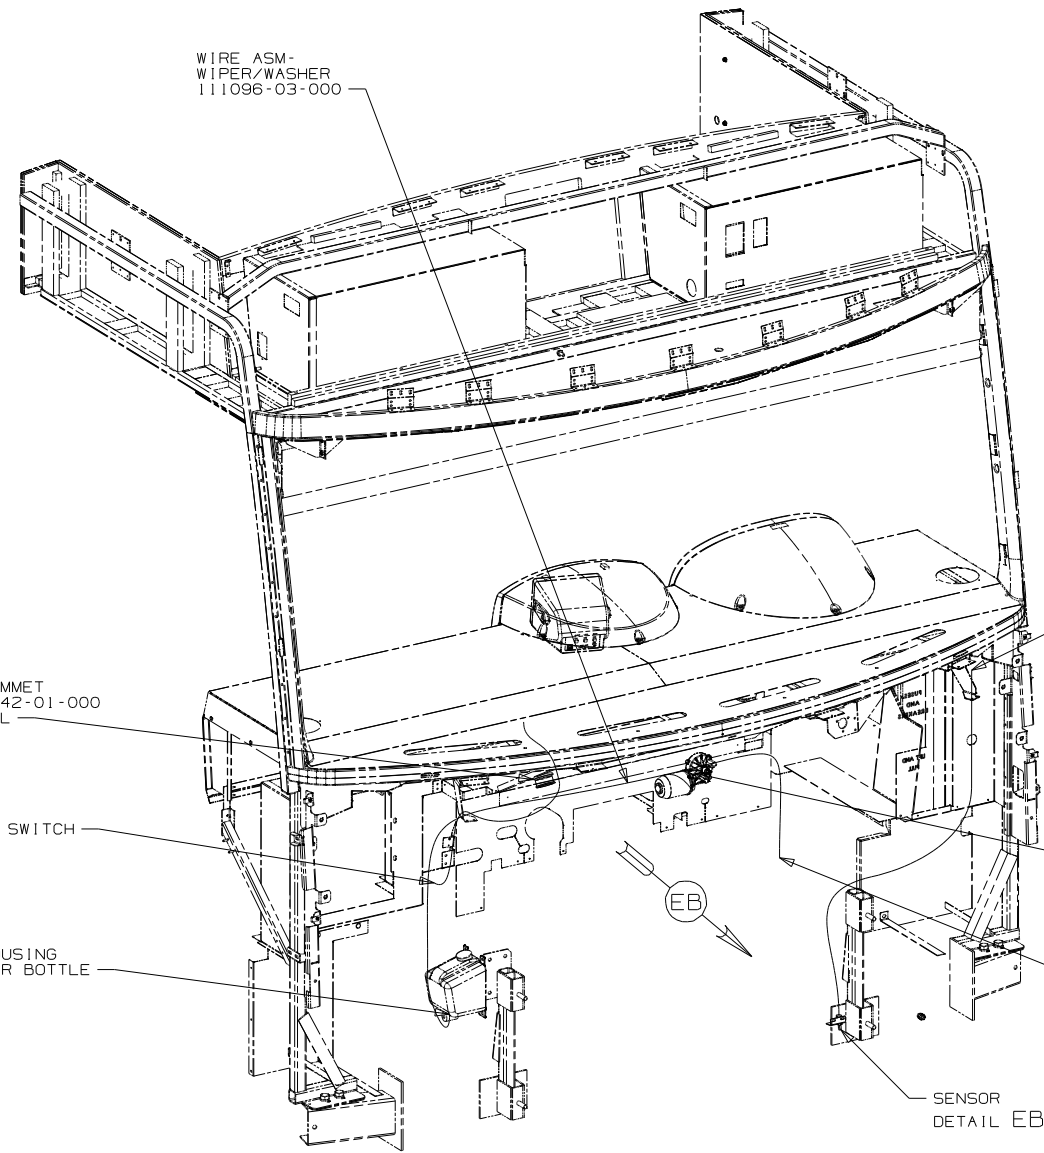

DETAIL EA

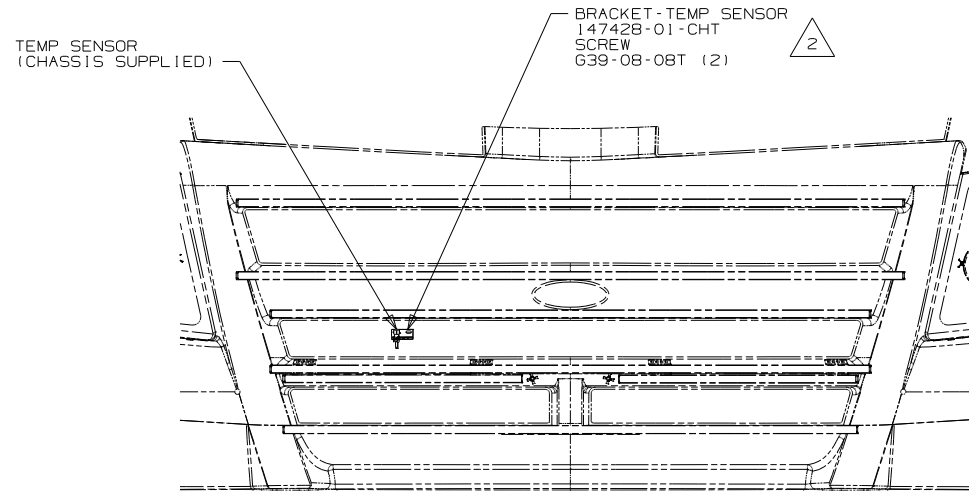

DETAIL EB

- 3 ROUTE WIRES THROUGH HOLE IN STEEL.
- 2 MOUNT SENSOR OR SENSOR BRACKET TO HORIZONTAL TUBE ON FIBERGLASS AS SHOWN.

1. GATHER ALL EXCESS WIRE AFTER MAKING ALL CONNECTIONS. BUNDLE AND SECURE WITH WIRE TIE 8343-01-000 OR 93147-01-000.

NOTES:

265 CODES/STANDARDS-CSA/CMVSS

1B1 CODES/STANDARDS USA

1B1 265

11 D-SERIES

DO NOT SCALE DRAWING

TITLE: WIRING INSTL-FRONT END

SHEET 5

PART NO 174135

REV

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000

FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000