
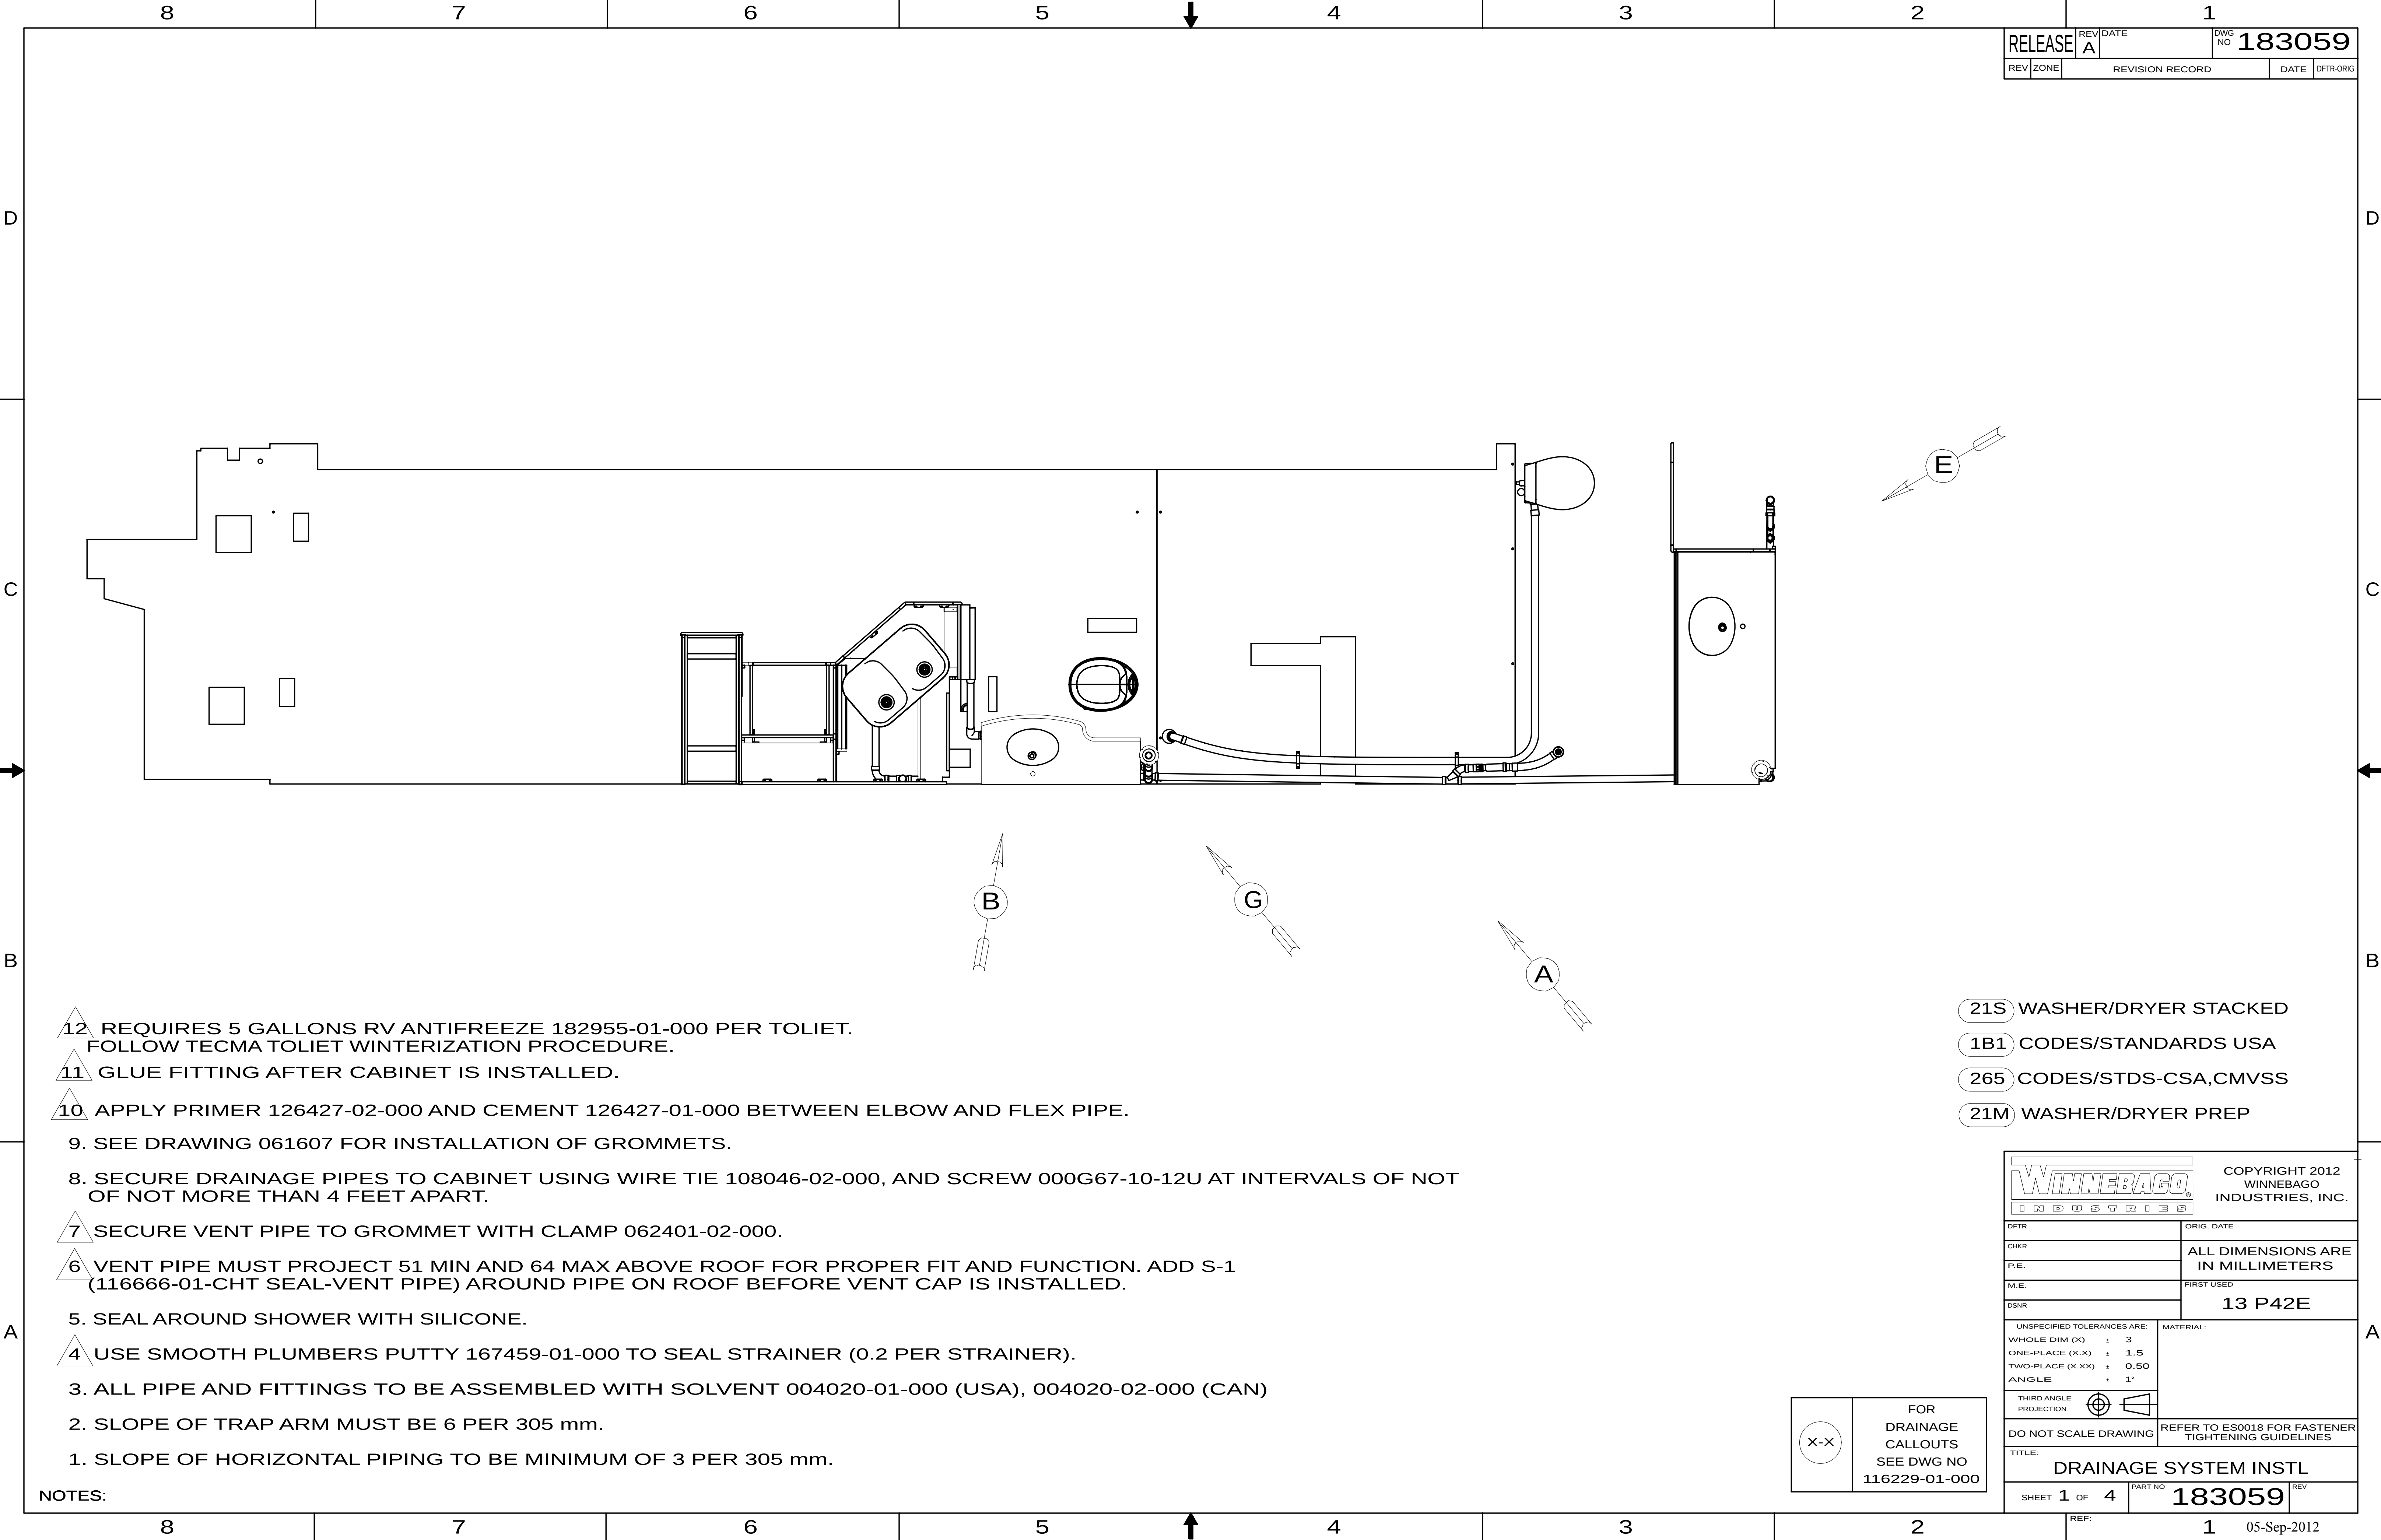




RELEASE		REV	DATE	DWG NO	183059
REV	ZONE	REVISION RECORD			DATE
					0FTR-ORIG

12. REQUIRES 5 GALLONS RV ANTIFREEZE 182955-01-000 PER TOLIET. FOLLOW TECMA TOLIET WINTERIZATION PROCEDURE.
11. GLUE FITTING AFTER CABINET IS INSTALLED.
10. APPLY PRIMER 126427-02-000 AND CEMENT 126427-01-000 BETWEEN ELBOW AND FLEX PIPE.
9. SEE DRAWING 061607 FOR INSTALLATION OF GROMMETS.
8. SECURE DRAINAGE PIPES TO CABINET USING WIRE TIE 108046-02-000, AND SCREW 000G67-10-12U AT INTERVALS OF NOT OF NOT MORE THAN 4 FEET APART.
7. SECURE VENT PIPE TO GROMMET WITH CLAMP 062401-02-000.
6. VENT PIPE MUST PROJECT 51 MIN AND 64 MAX ABOVE ROOF FOR PROPER FIT AND FUNCTION. ADD S-1 (116666-01-CHT SEAL-VENT PIPE) AROUND PIPE ON ROOF BEFORE VENT CAP IS INSTALLED.
5. SEAL AROUND SHOWER WITH SILICONE.
4. USE SMOOTH PLUMBERS PUTTY 167459-01-000 TO SEAL STRAINER (0.2 PER STRAINER).
3. ALL PIPE AND FITTINGS TO BE ASSEMBLED WITH SOLVENT 004020-01-000 (USA), 004020-02-000 (CAN)
2. SLOPE OF TRAP ARM MUST BE 6 PER 305 mm.
1. SLOPE OF HORIZONTAL PIPING TO BE MINIMUM OF 3 PER 305 mm.

- 21S WASHER/DRYER STACKED
- 1B1 CODES/STANDARDS USA
- 265 CODES/STDS-CSA,CMVSS
- 21M WASHER/DRYER PREP

WINNEBAGO® 1234567890		COPYRIGHT 2012 WINNEBAGO INDUSTRIES, INC.	
DFTD		ORIG. DATE	
CHKD		ALL DIMENSIONS ARE IN MILLIMETERS	
P.E.			
M.E.		FIRST USED	
DSNR		13 P42E	
UNSPECIFIED TOLERANCES ARE:		MATERIAL:	
WHOLE DIM (X) ± 3			
ONE-PLACE (X.X) ± 1.5			
TWO-PLACE (X.XX) ± 0.50			
ANGLE ± 1°			
THIRD ANGLE PROJECTION		REFER TO ES0018 FOR FASTENER TIGHTENING GUIDELINES	
			
DO NOT SCALE DRAWING			
TITLE: DRAINAGE SYSTEM INSTL			
SHEET 1 OF 4		PART NO 183059	REV

FOR DRAINAGE CALLOUTS SEE DWG NO 116229-01-000

NOTES:

SINK-GALLEY
173783-01-CHT
STRAINER
092303-01-000 (2)
NUT
130403-01-000
WASHER-RUBBER
127440-02-CHT
ANGLE-W/SLOTS
140002-01-CHT (10)

STRAP-CONDUIT
008406-01-000(2)
ELBOW
136111-01-000

TOILET-STYLE II
160815-01-CHT

STRAP-CONDUIT,2"
008406-01-000

DETAIL D
(SEE SHT3)

STRAP-CONDUIT,2"
008406-01-000

STRAP-CONDUIT,2"
008406-01-000

WASTE ASM
SUPPLIED W/FAUCET

ELBOW
136111-01-000 (2)

STRAP-CONDUIT
008406-01-000

ELBOW
136111-01-000





VIEW A

DETAIL C
(SHOWN W/OUT CABINETS AND FLOOR)


VIEW B

(SHOWN W/OUT CABINETS AND FLOOR)


FIRST USED		13 P42E	
DO NOT SCALE DRAWING			
TITLE: DRAINAGE SYSTEM INSTL			
SHEET 2	PART NO	183059	REV

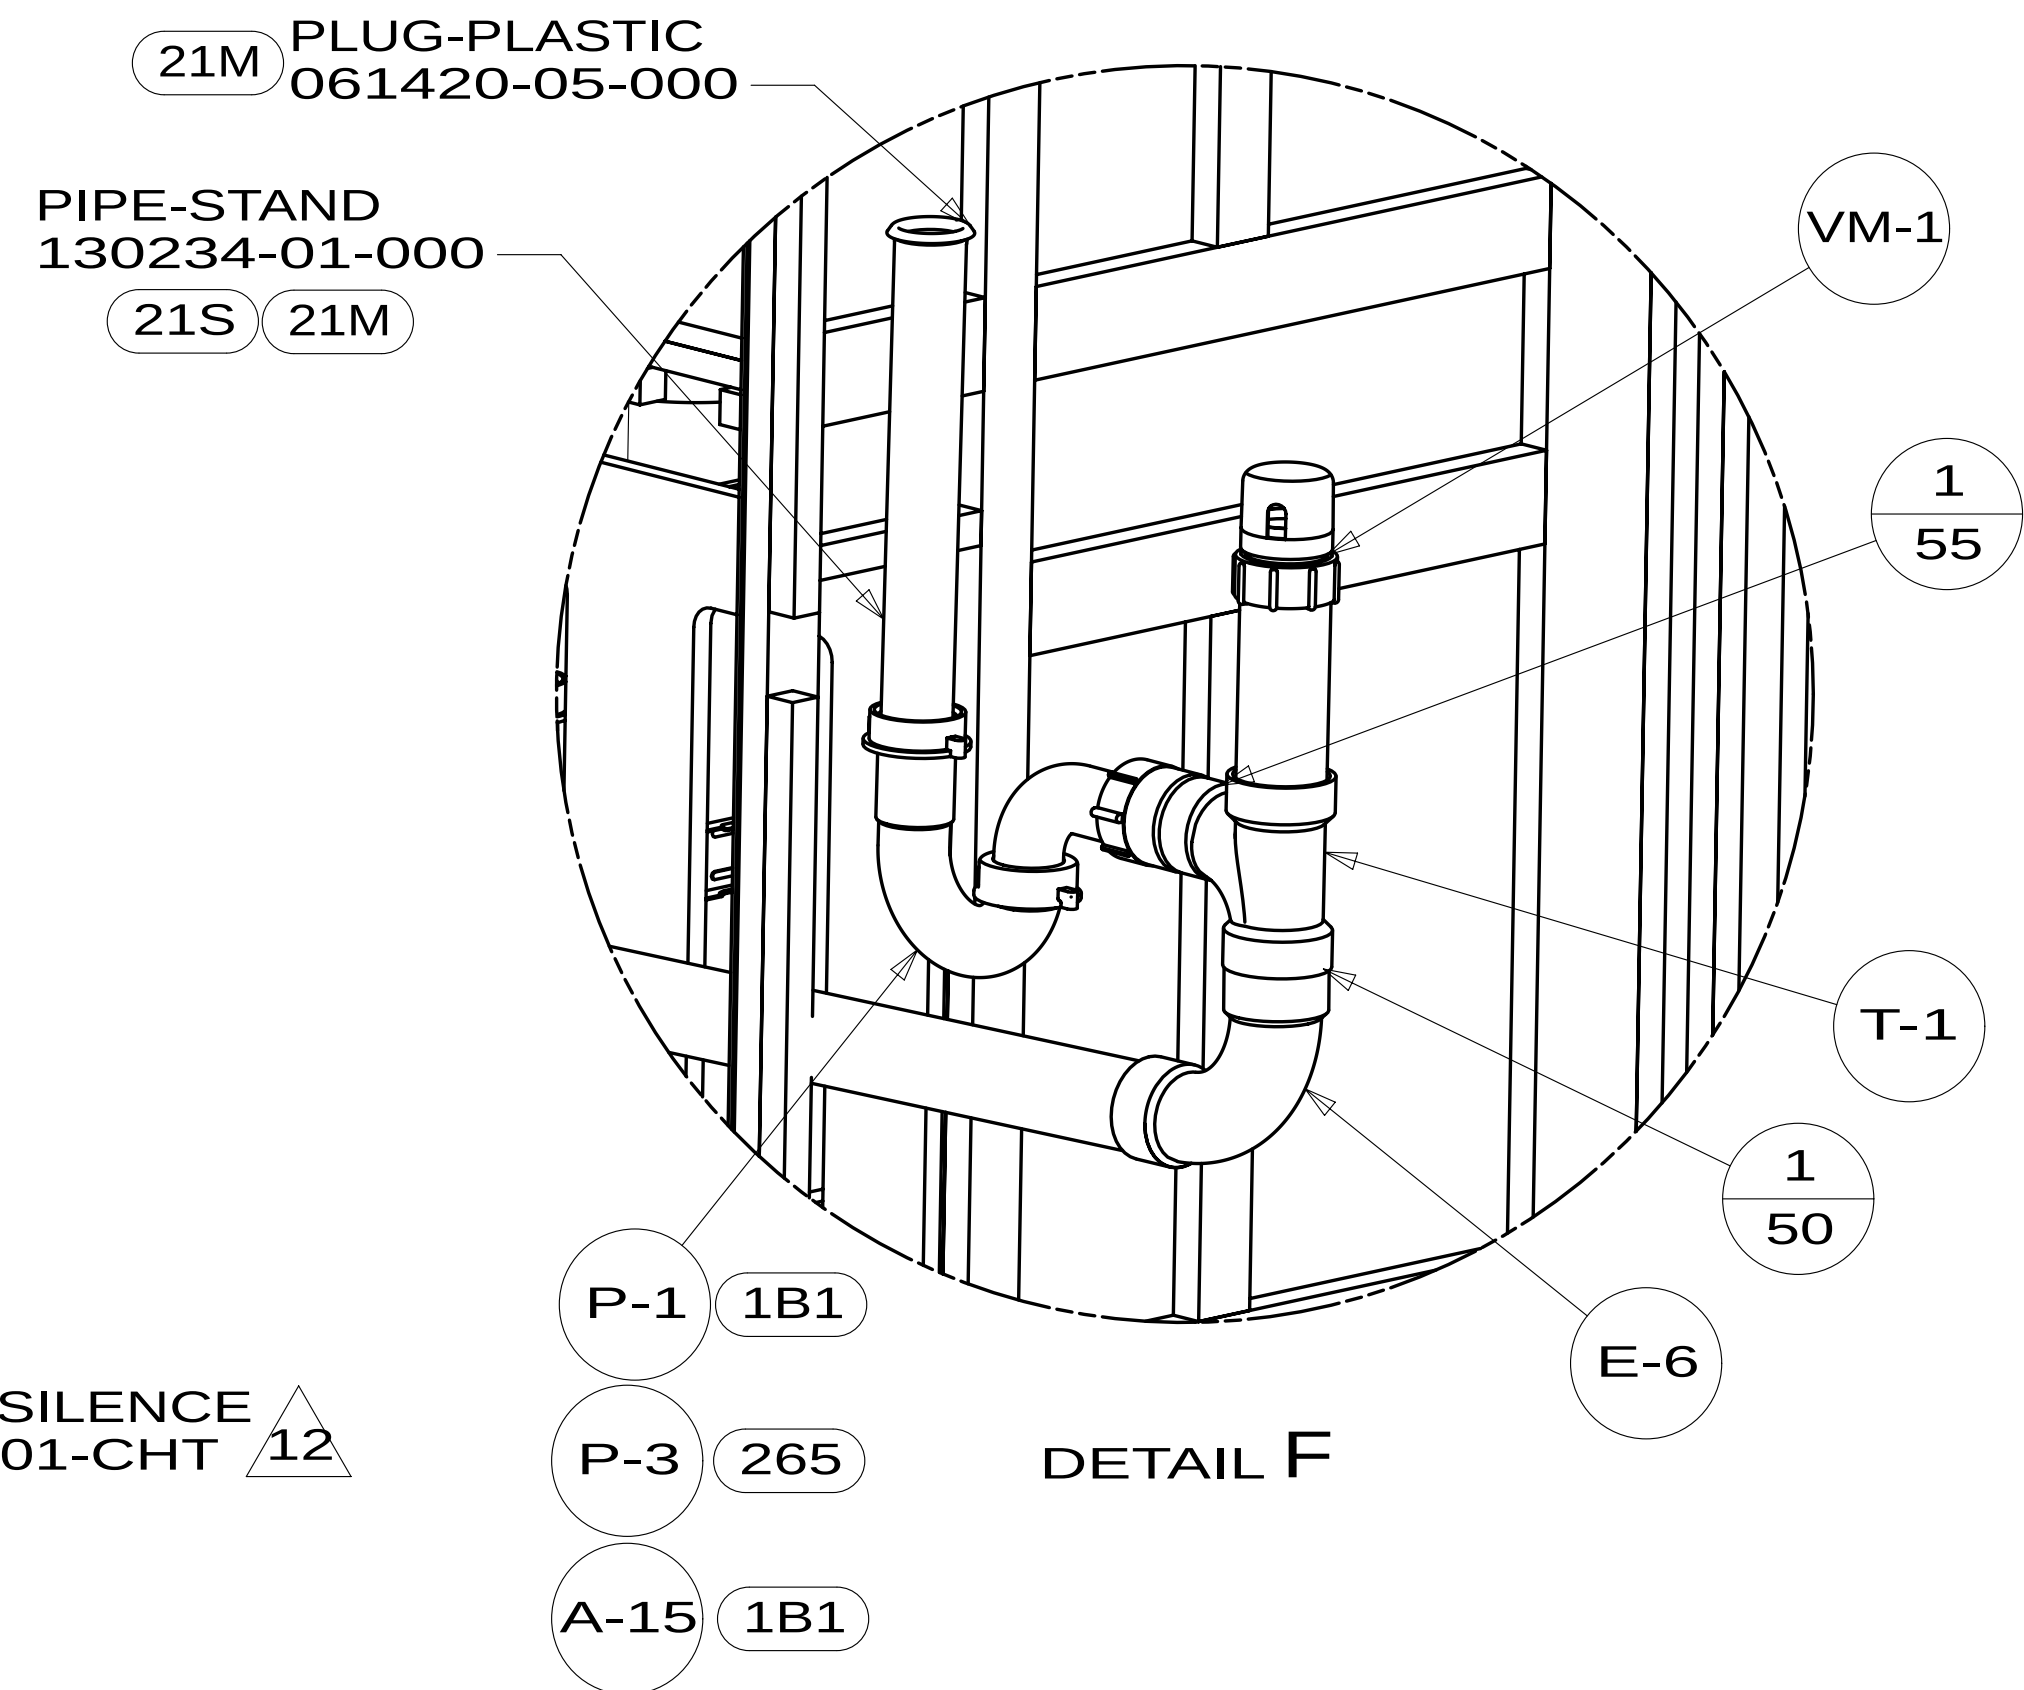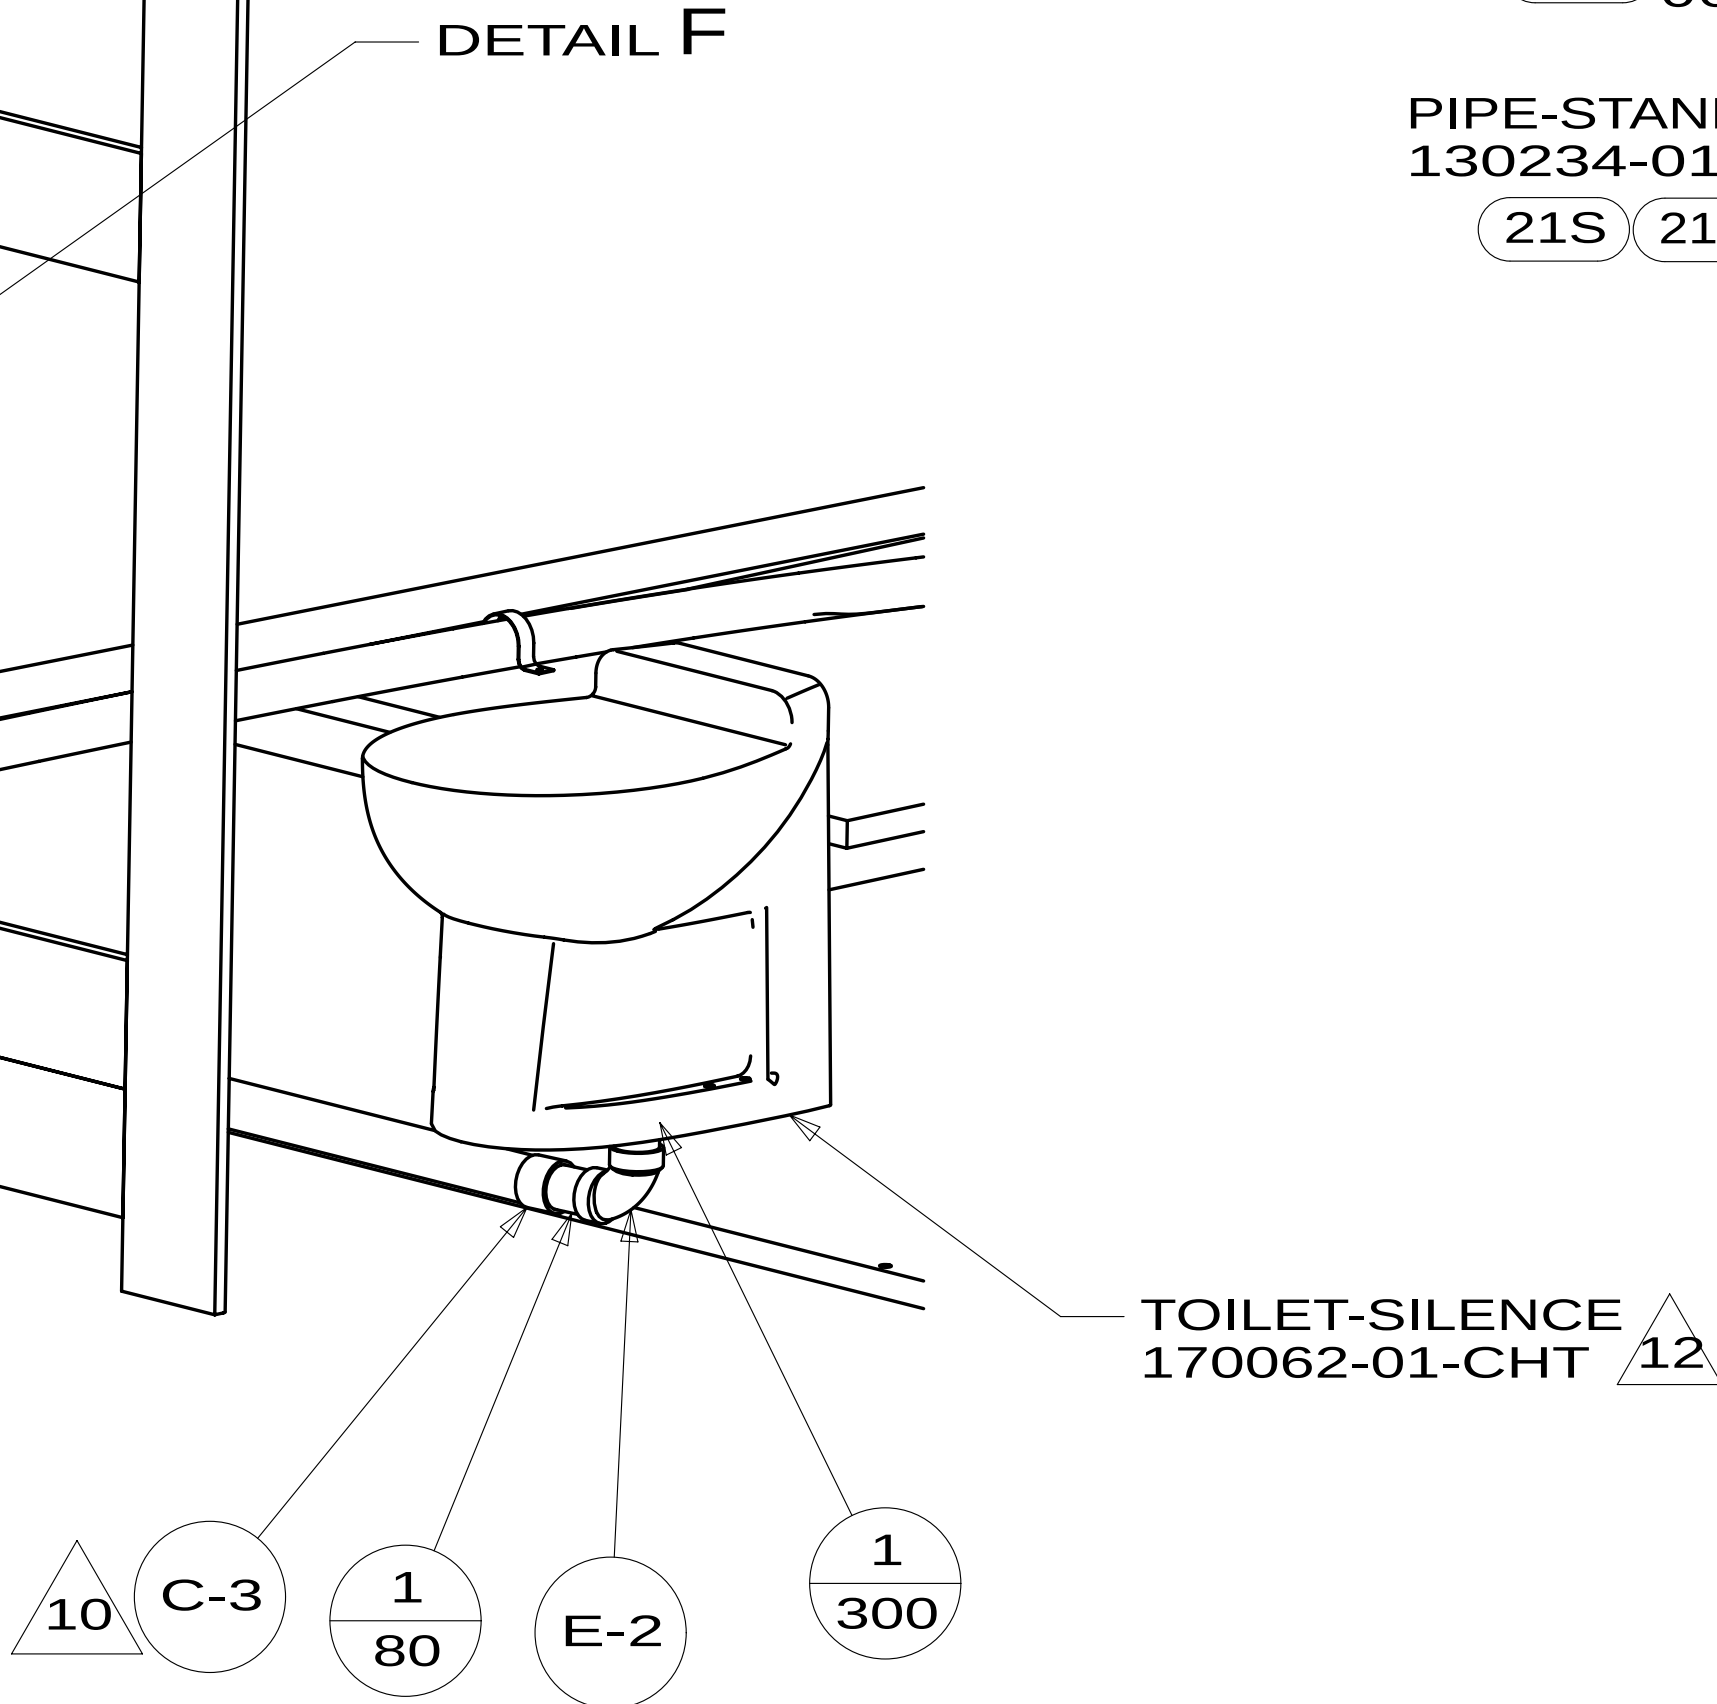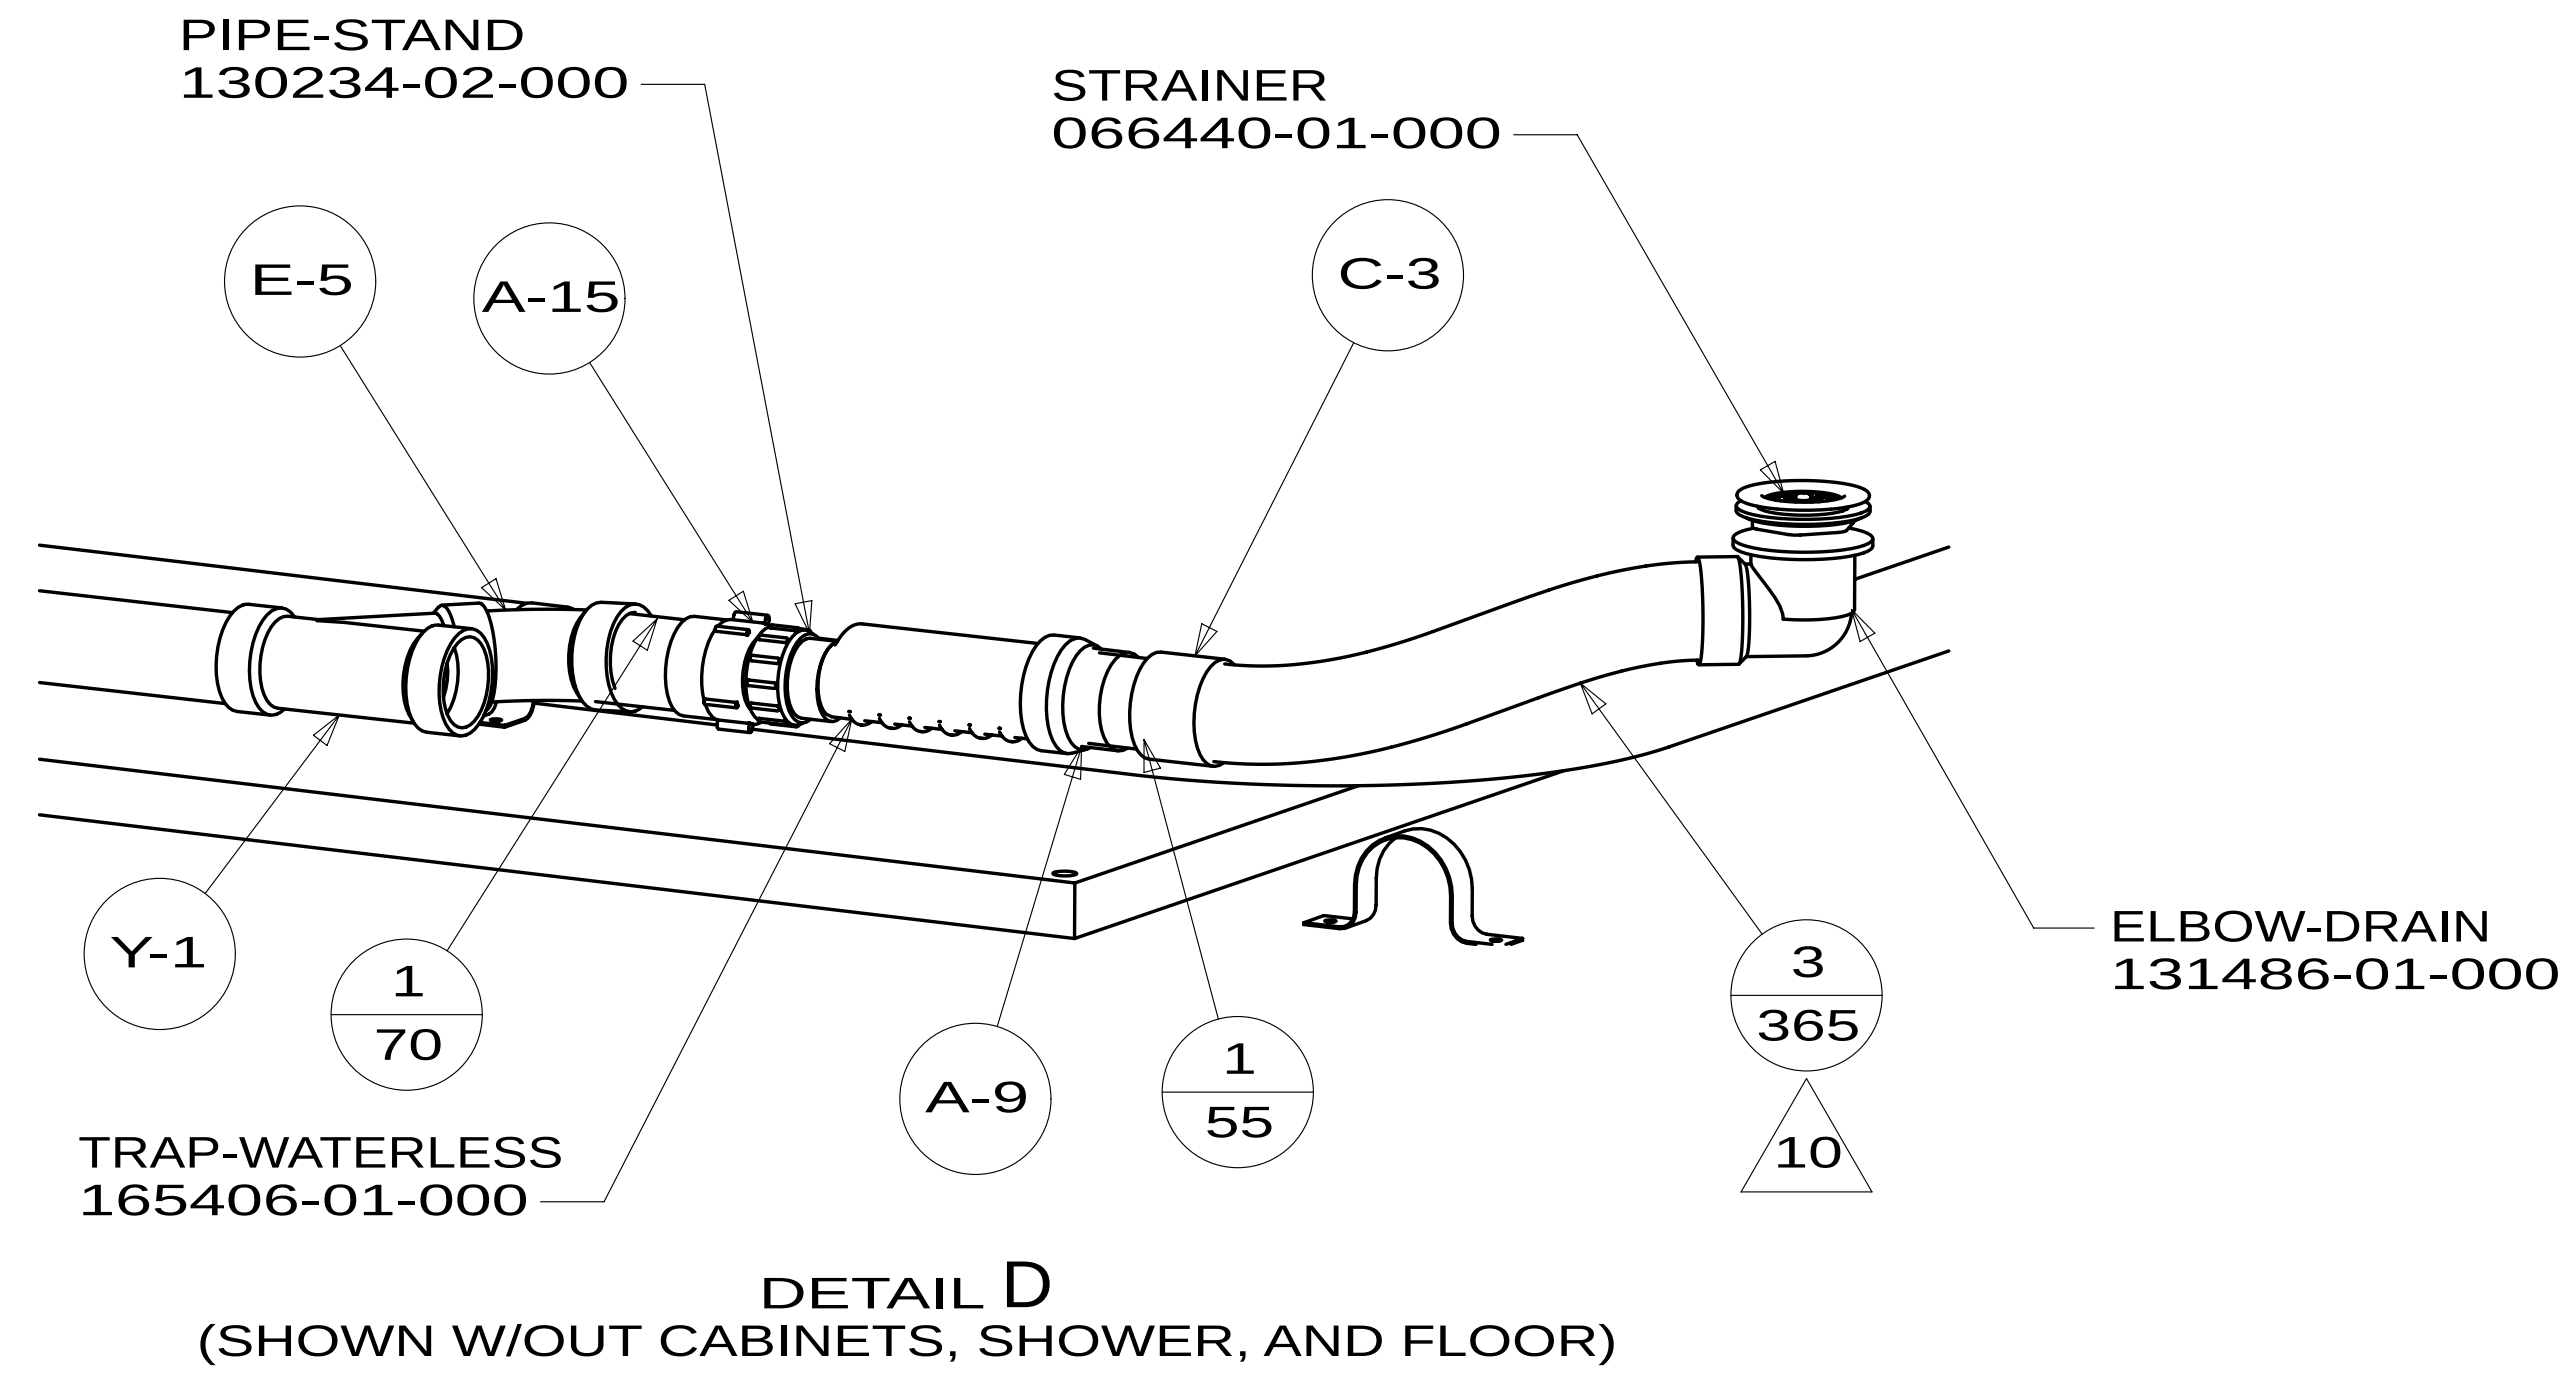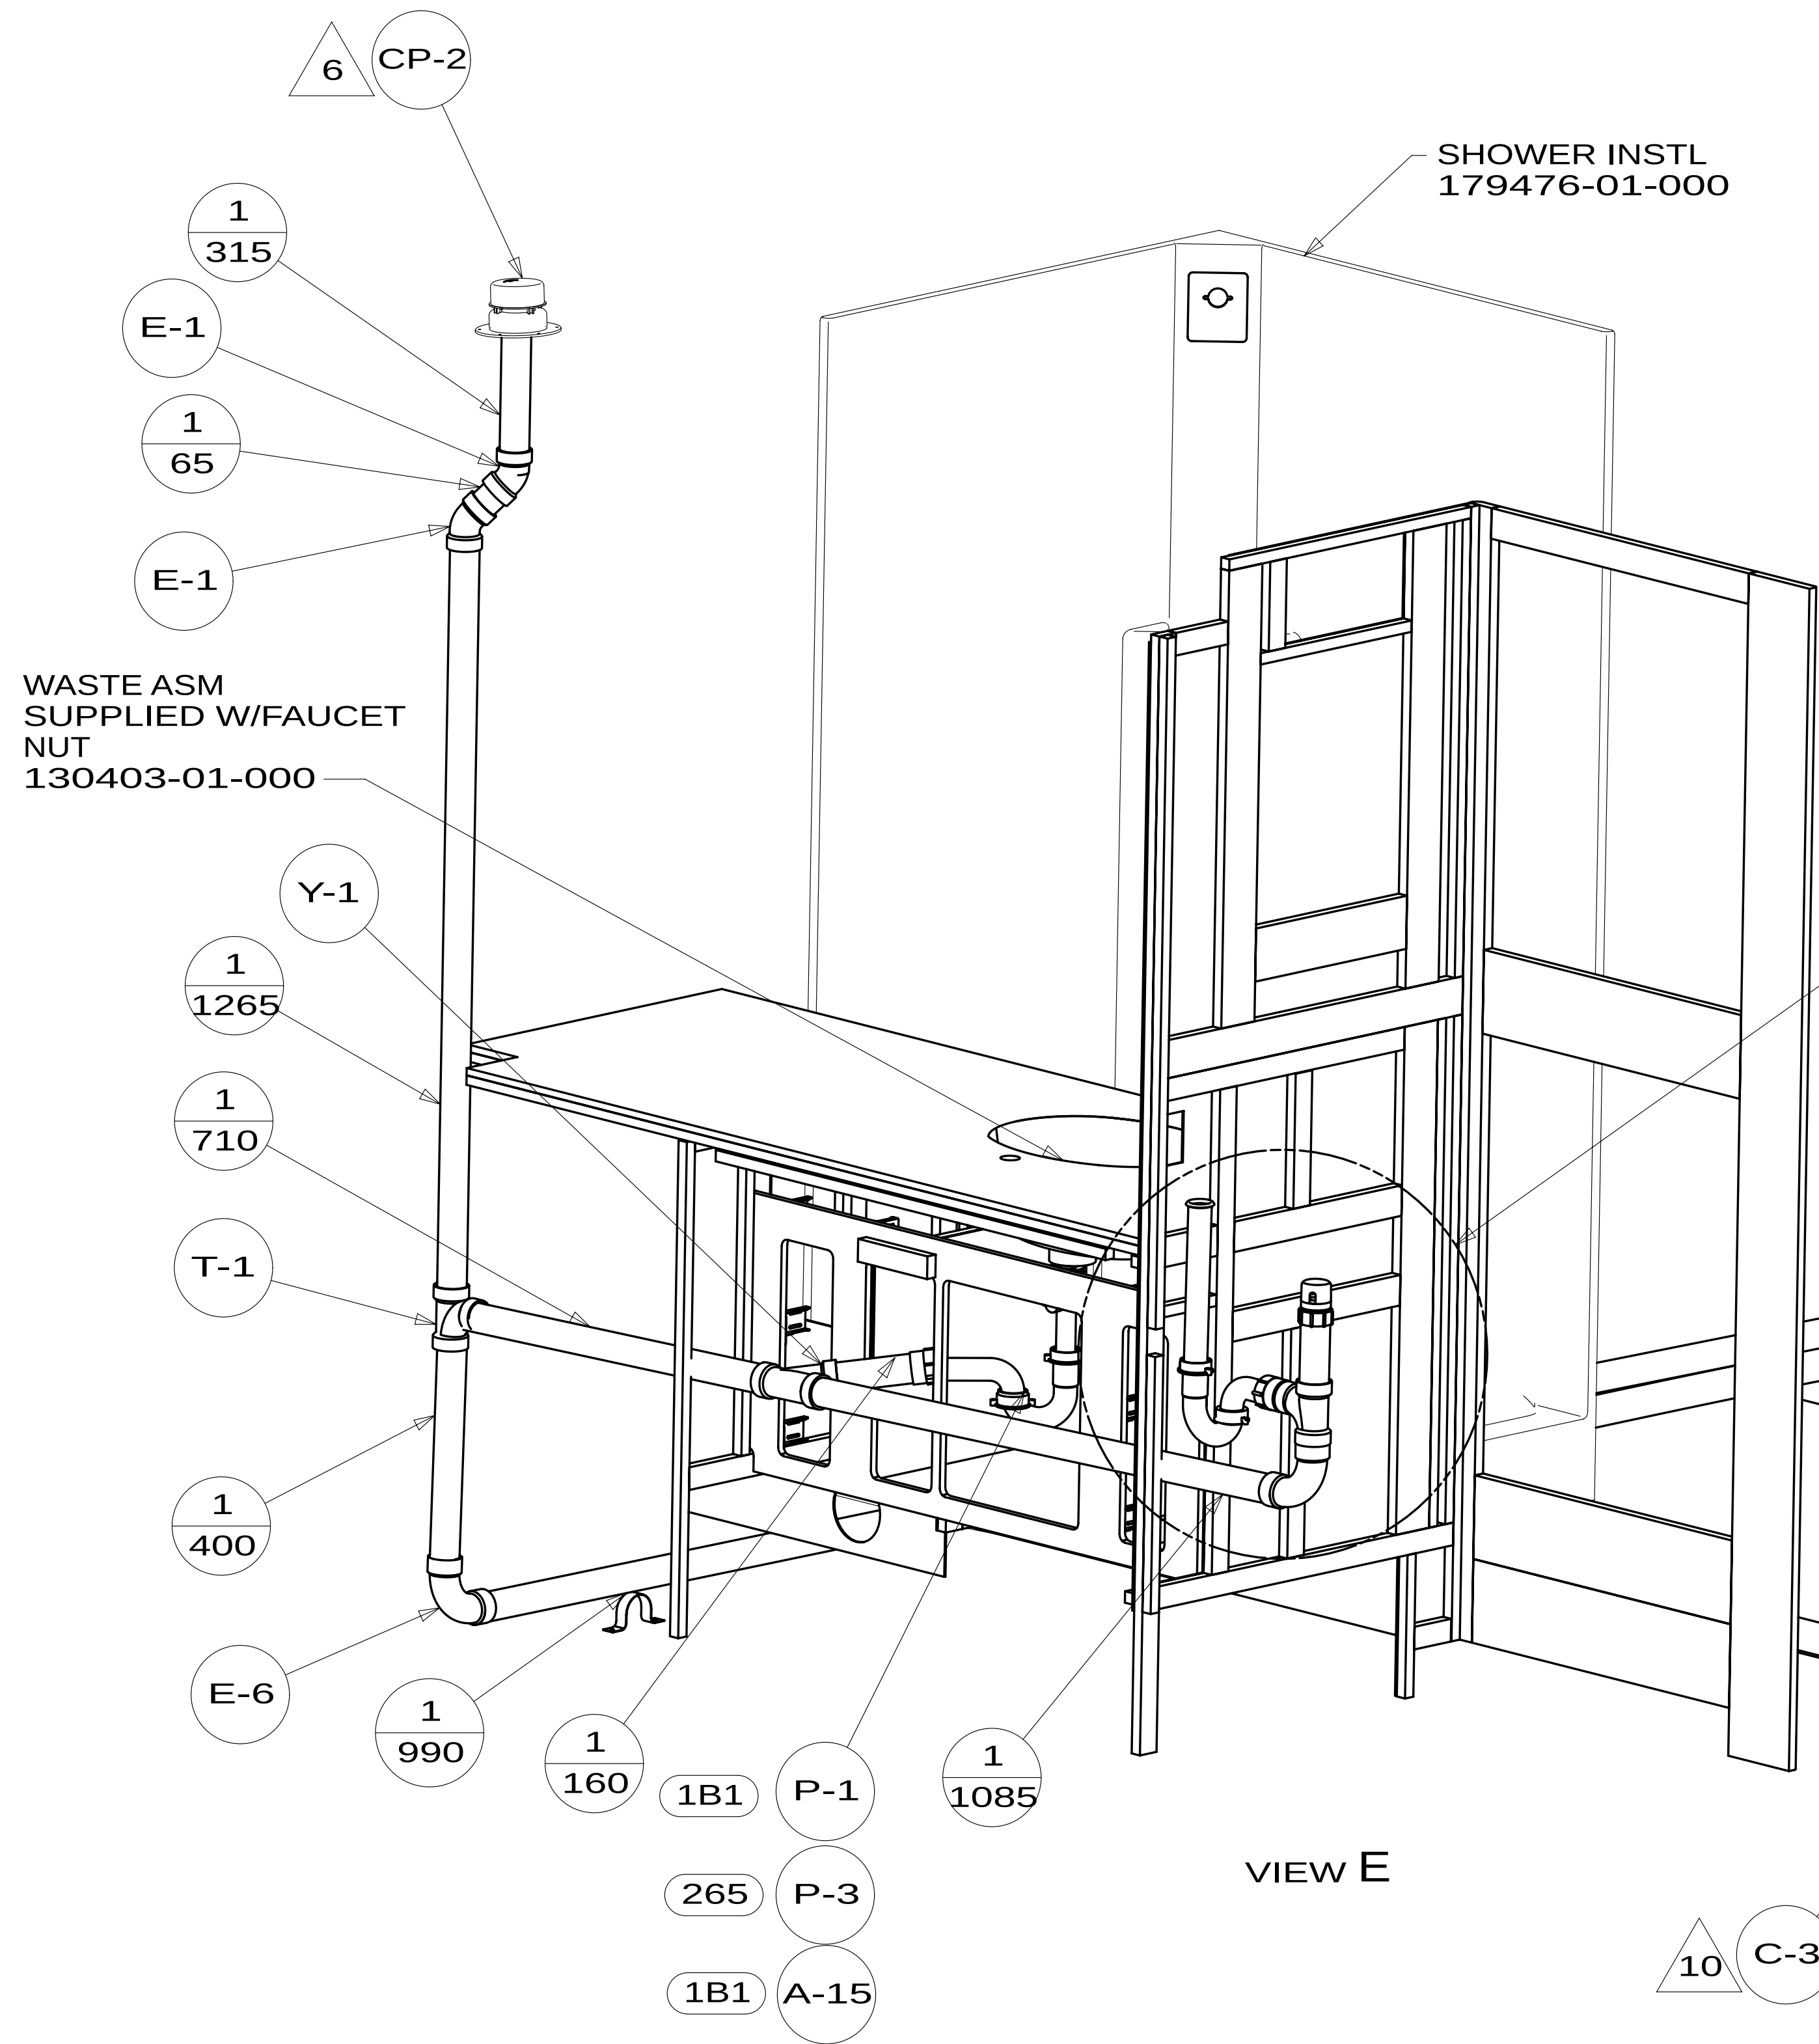


FIRST USED		13 P42E	
DO NOT SCALE DRAWING			
TITLE: DRAINAGE SYSTEM INSTL			
SHEET 3	PART NO	183059	REV
	1		05-Sep-2012

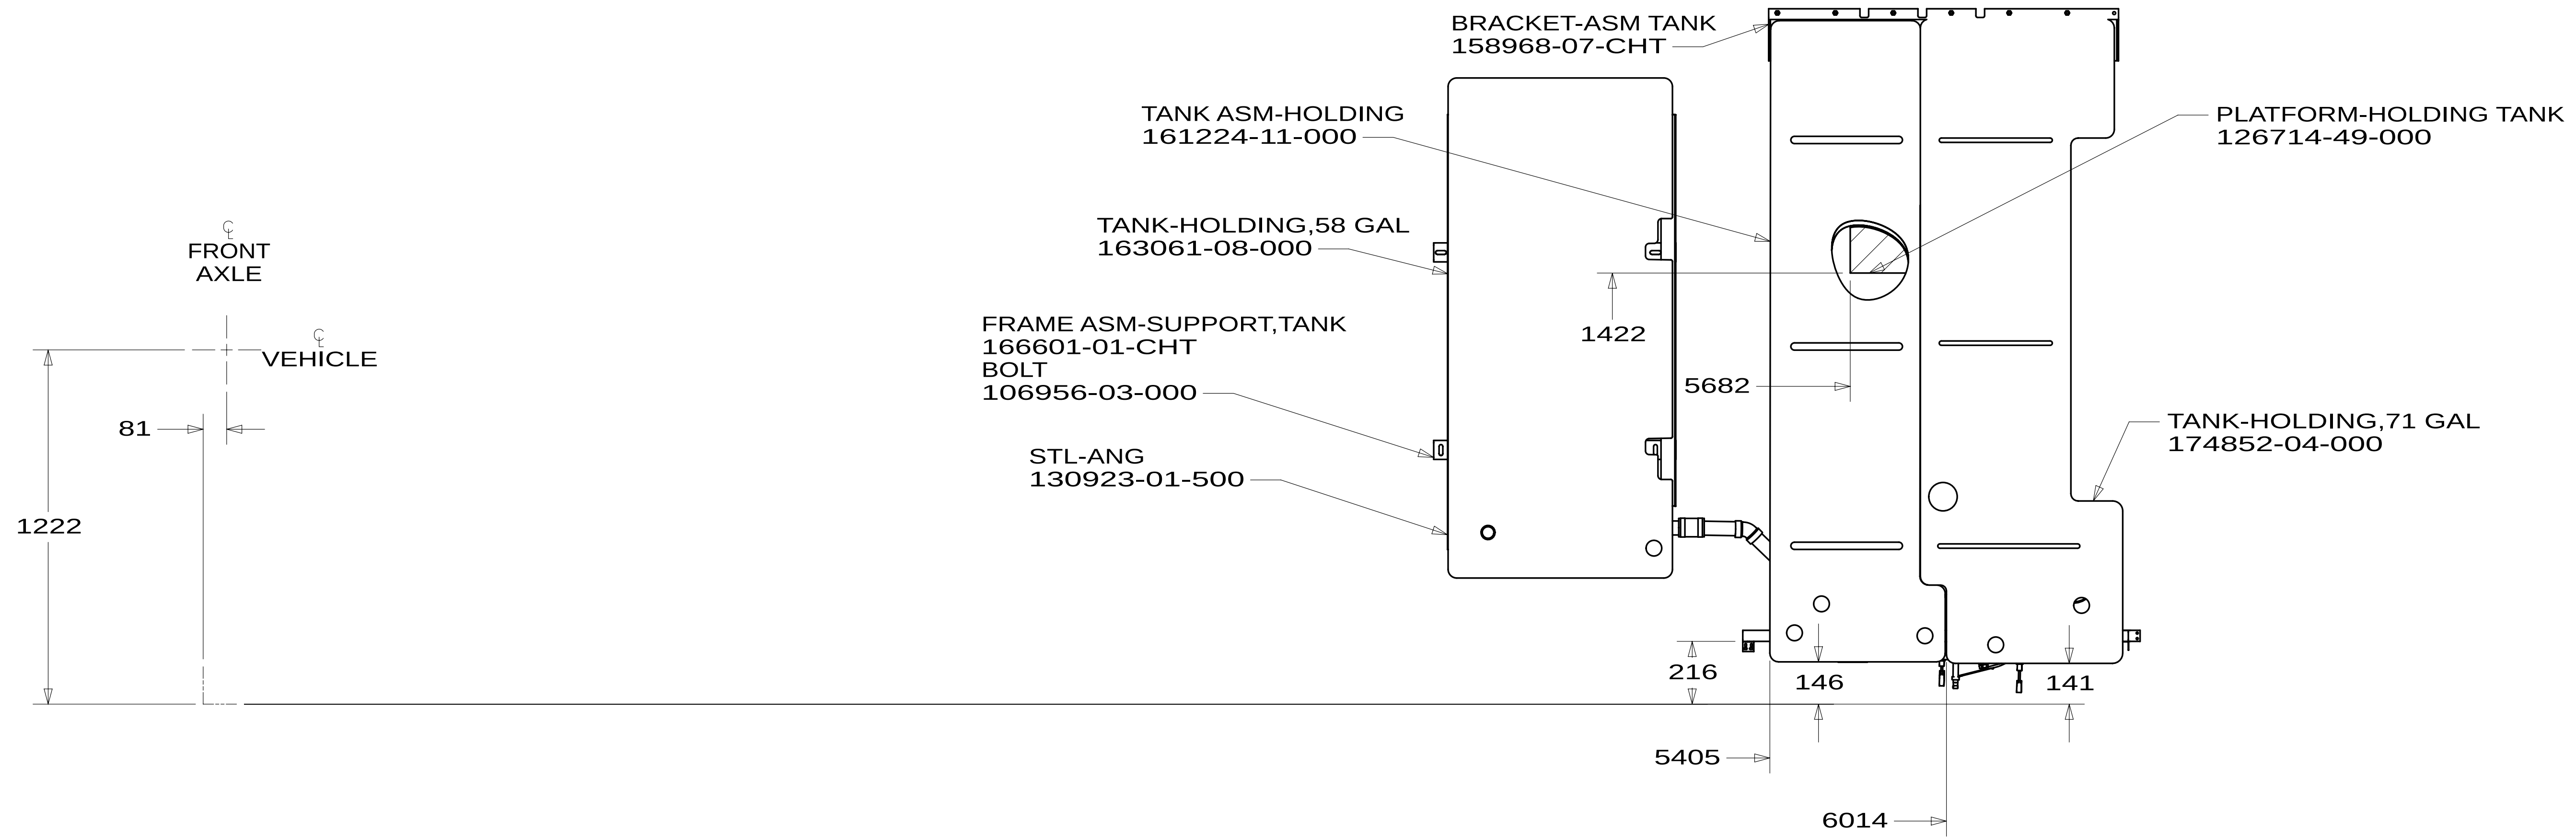

TOP VIEW SHOWING TANKS AND DRAINS

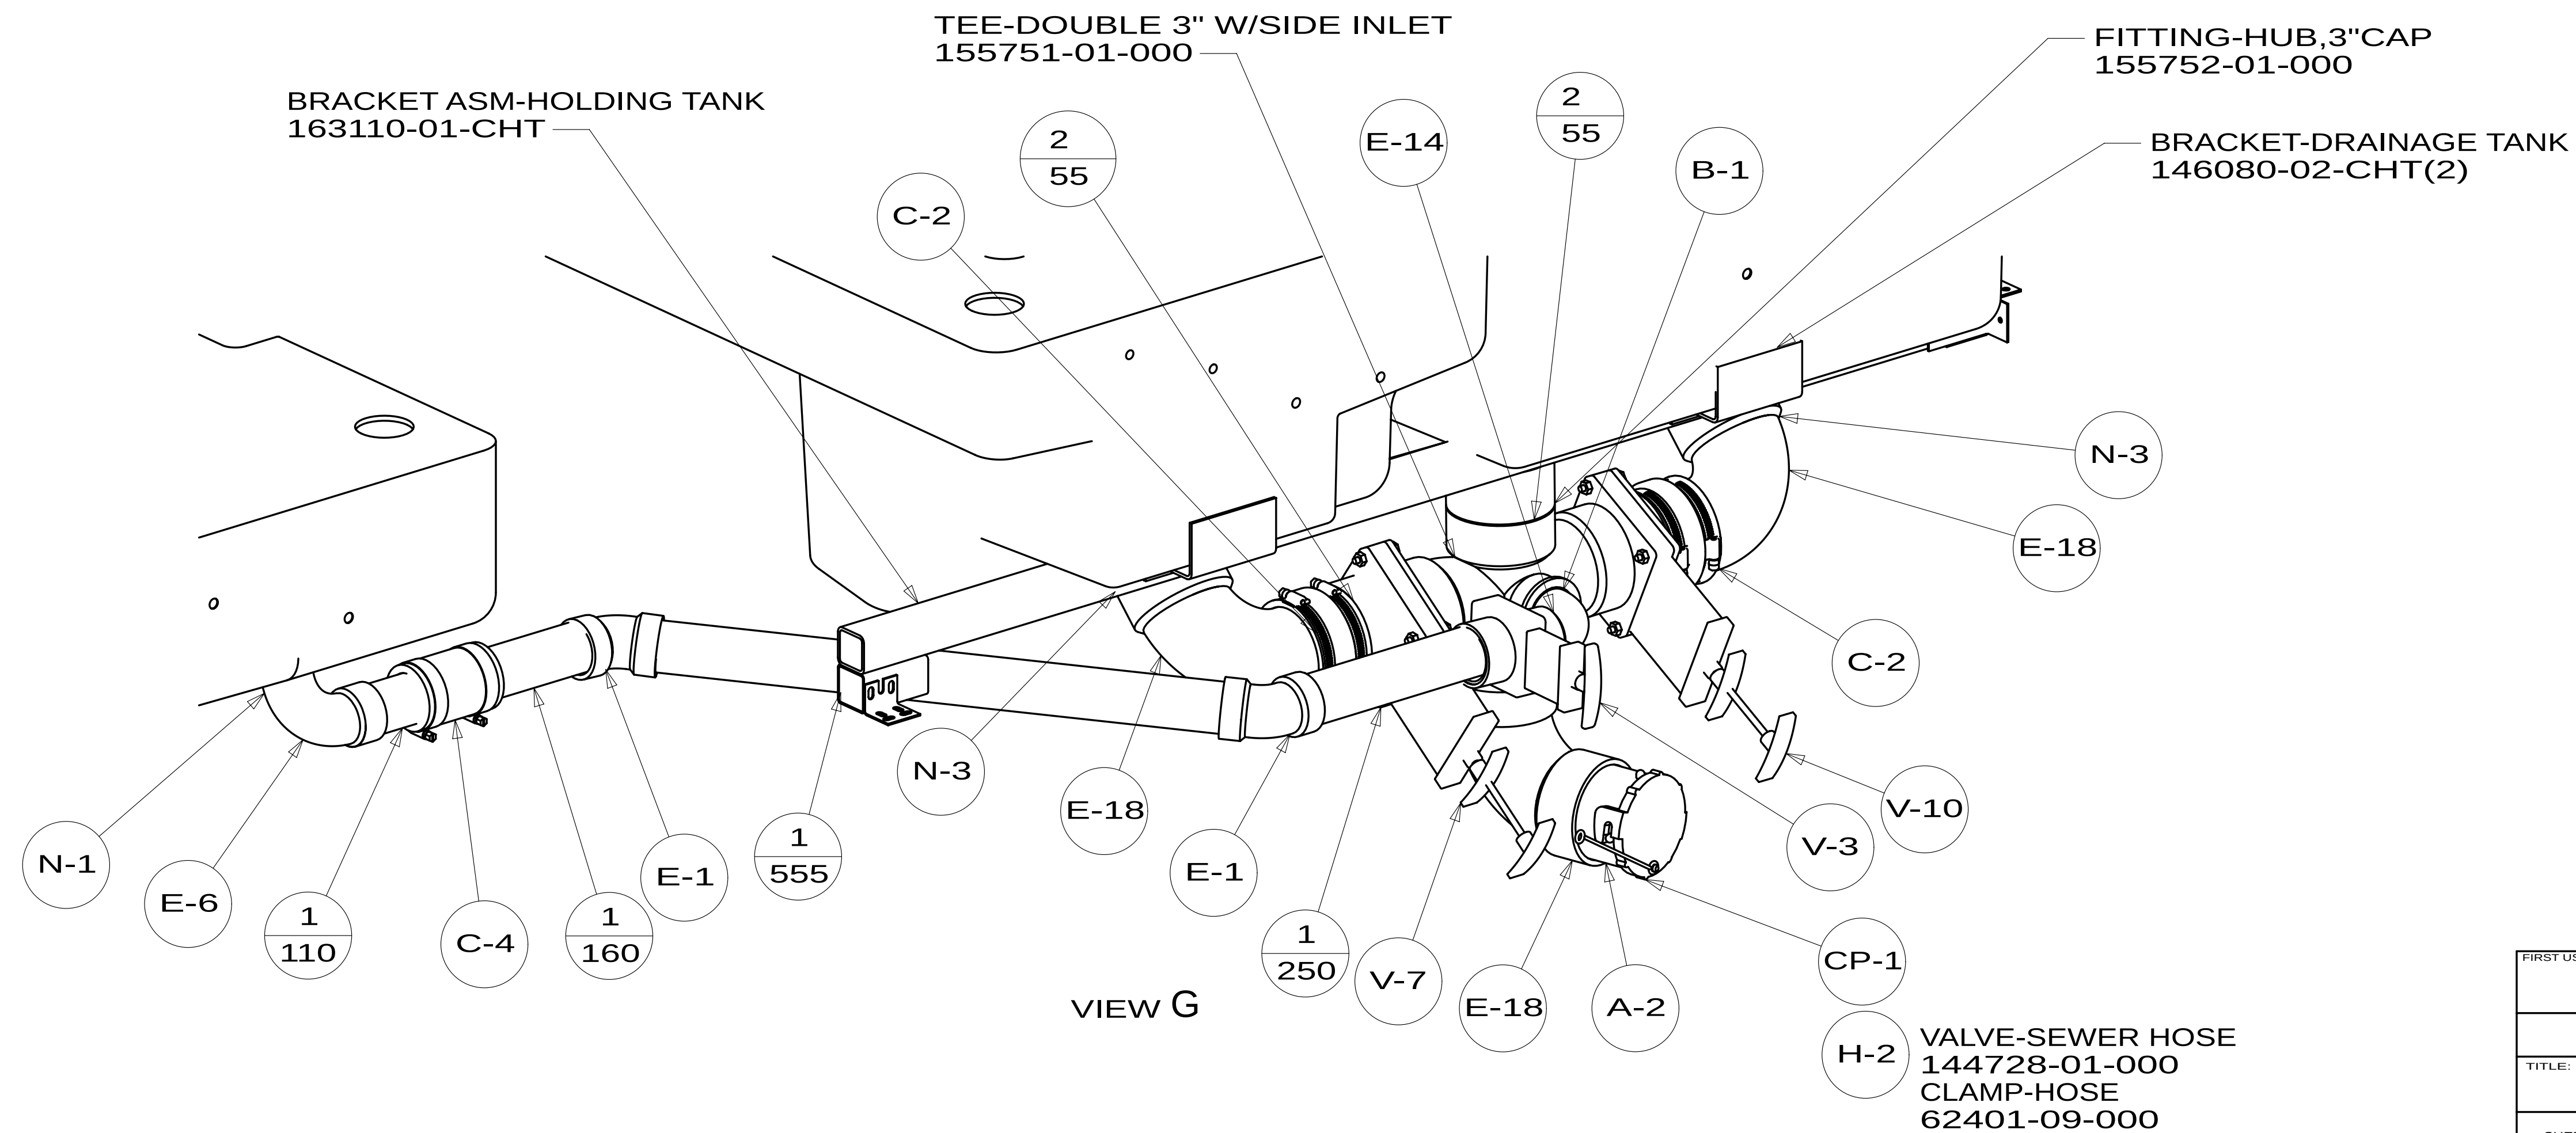


FIRST USED		13 P42E	
DO NOT SCALE DRAWING			
TITLE: DRAINAGE SYSTEM INSTL			
SHEET 4	PART NO	183059	REV

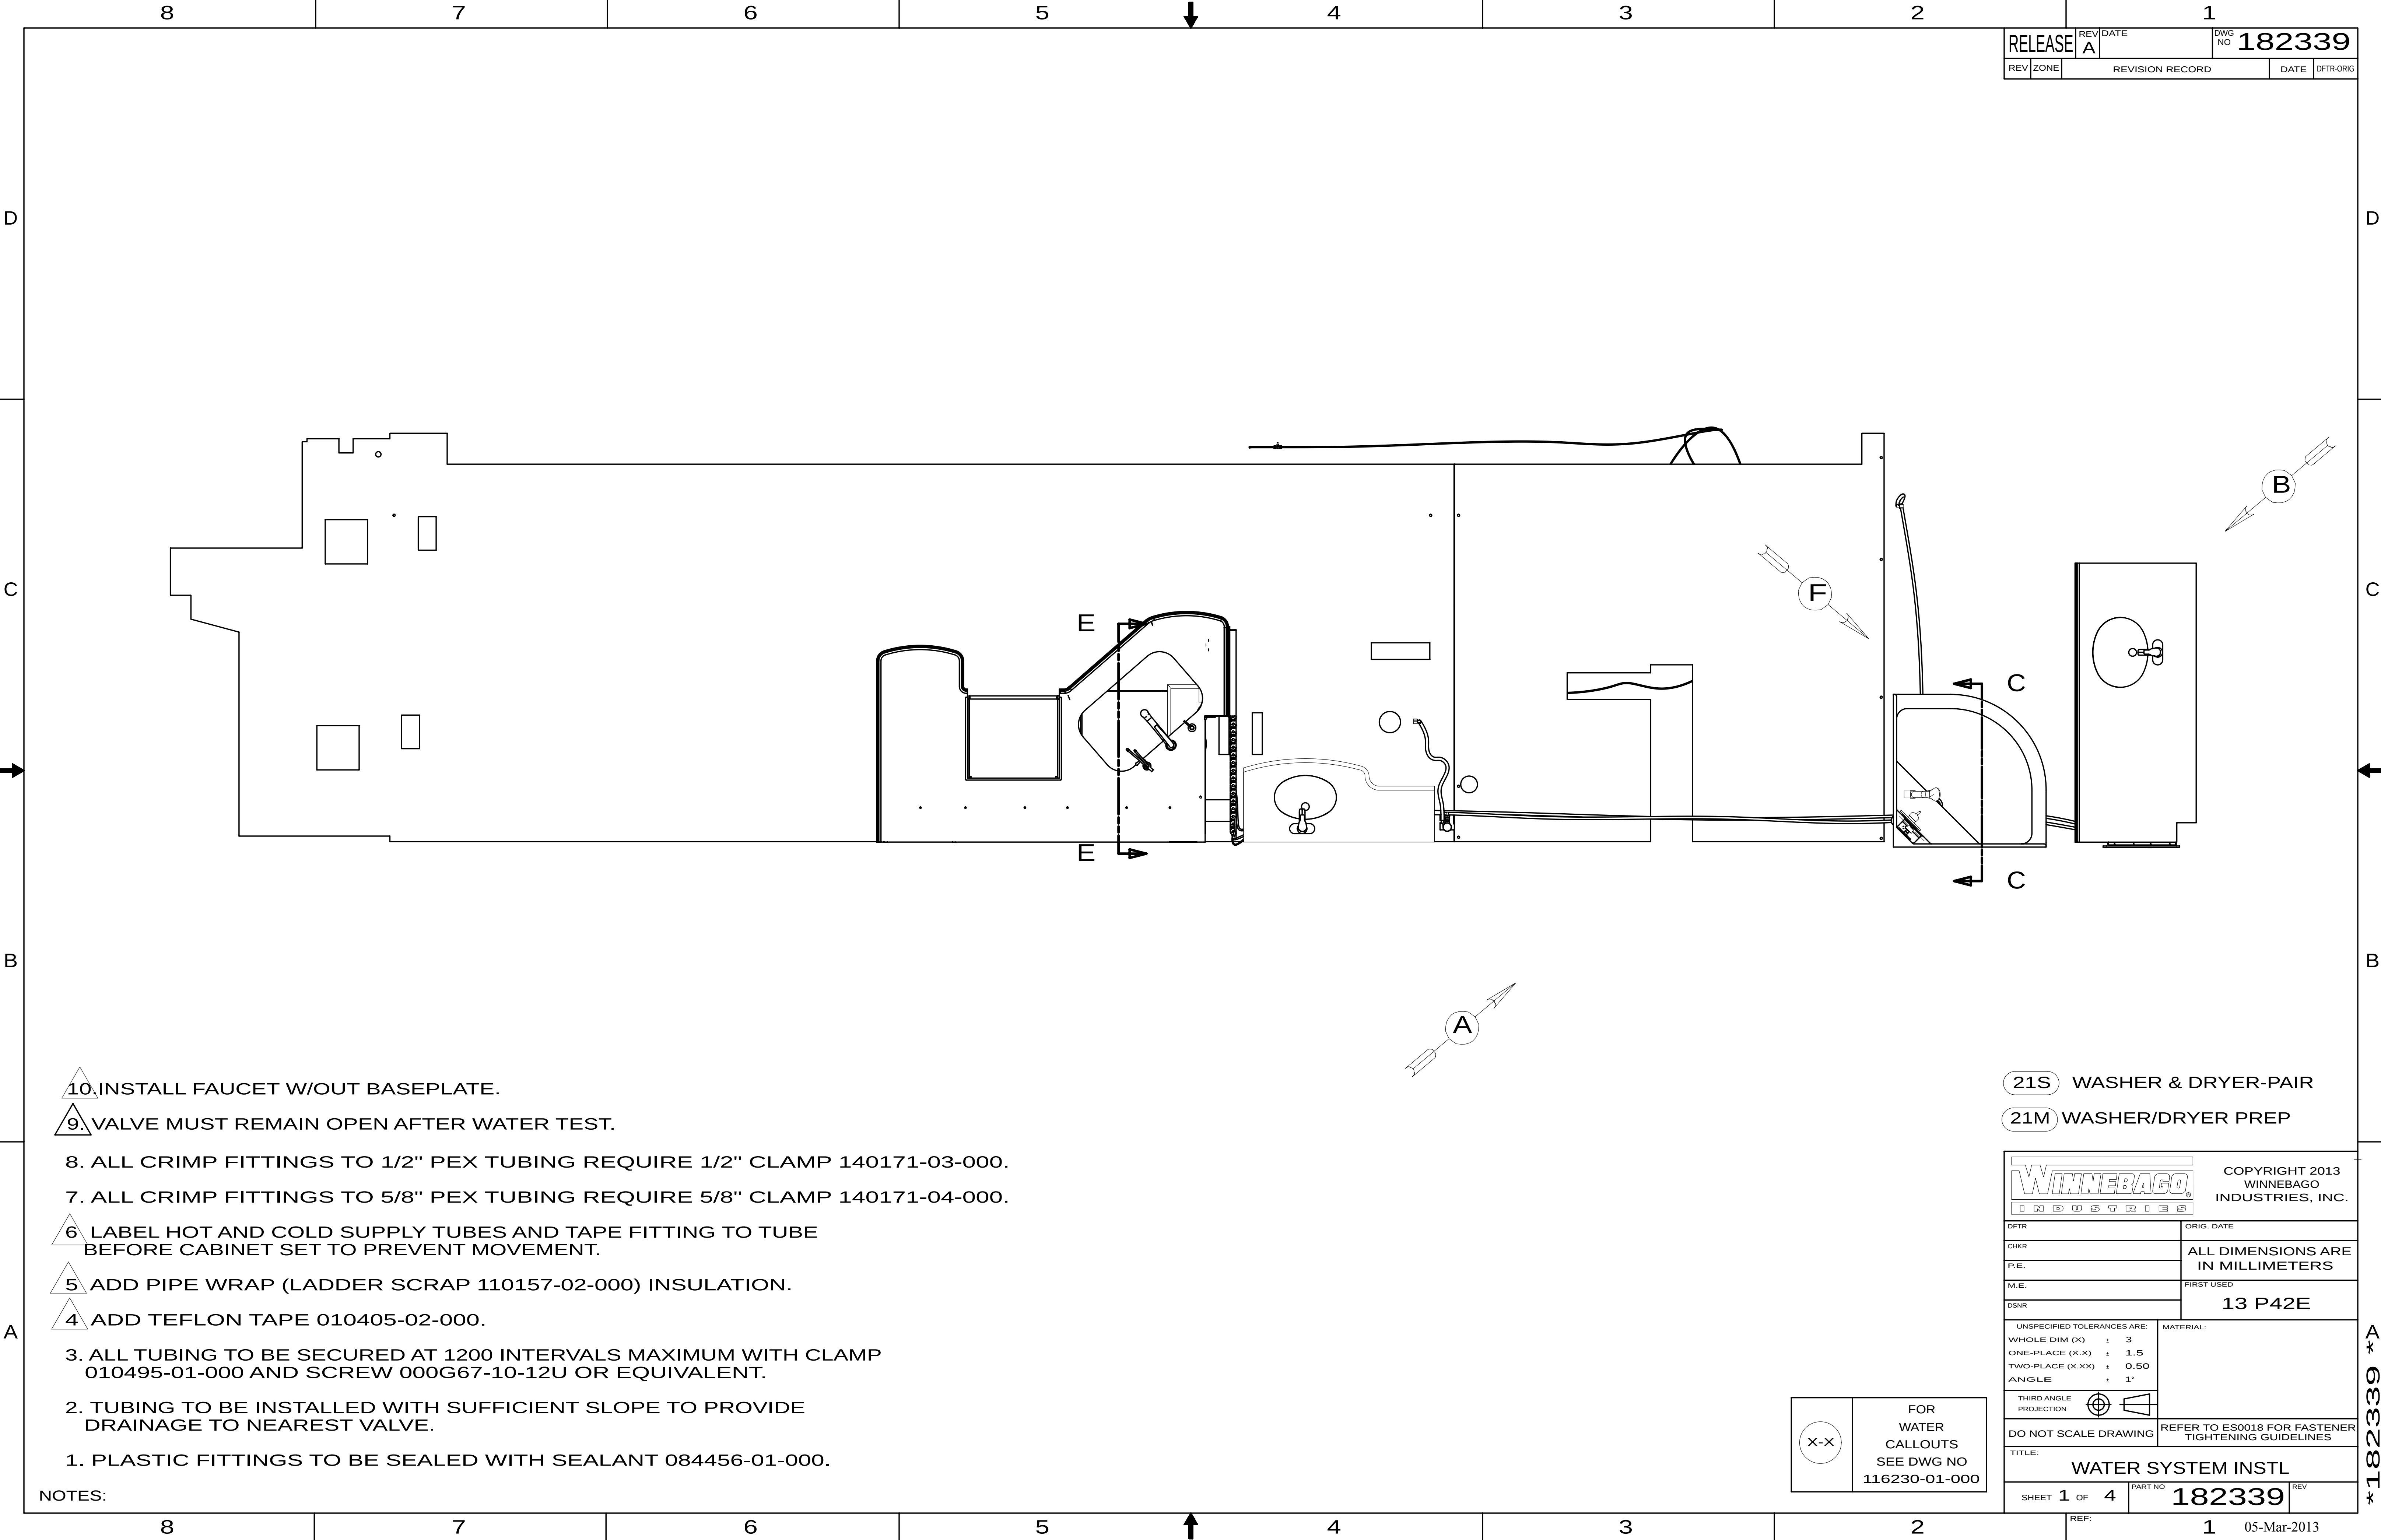

RELEASE		REV	DATE	DWG NO	182339
REV	ZONE	REVISION RECORD			DATE
					0FTR-ORIG

10. INSTALL FAUCET W/OUT BASEPLATE.
9. VALVE MUST REMAIN OPEN AFTER WATER TEST.
8. ALL CRIMP FITTINGS TO 1/2" PEX TUBING REQUIRE 1/2" CLAMP 140171-03-000.
7. ALL CRIMP FITTINGS TO 5/8" PEX TUBING REQUIRE 5/8" CLAMP 140171-04-000.
6. LABEL HOT AND COLD SUPPLY TUBES AND TAPE FITTING TO TUBE BEFORE CABINET SET TO PREVENT MOVEMENT.
5. ADD PIPE WRAP (LADDER SCRAP 110157-02-000) INSULATION.
4. ADD TEFLON TAPE 010405-02-000.
3. ALL TUBING TO BE SECURED AT 1200 INTERVALS MAXIMUM WITH CLAMP 010495-01-000 AND SCREW 000G67-10-12U OR EQUIVALENT.
2. TUBING TO BE INSTALLED WITH SUFFICIENT SLOPE TO PROVIDE DRAINAGE TO NEAREST VALVE.
1. PLASTIC FITTINGS TO BE SEALED WITH SEALANT 084456-01-000.

- 21S WASHER & DRYER-PAIR
- 21M WASHER/DRYER PREP

WINNEBAGO® I N D U S T R I E S		COPYRIGHT 2013 WINNEBAGO INDUSTRIES, INC.	
DFTR		ORIG. DATE	
CHKR		ALL DIMENSIONS ARE IN MILLIMETERS	
P.E.			
M.E.		FIRST USED	
DSNR		13 P42E	
UNSPECIFIED TOLERANCES ARE:		MATERIAL:	
WHOLE DIM (X) ± 3			
ONE-PLACE (X.X) ± 1.5			
TWO-PLACE (X.XX) ± 0.50			
ANGLE ± 1°			
THIRD ANGLE PROJECTION			
DO NOT SCALE DRAWING		REFER TO ES0018 FOR FASTENER TIGHTENING GUIDELINES	
TITLE:			
WATER SYSTEM INSTL			
SHEET 1 OF 4		PART NO	182339
		REV	

X-X

FOR WATER CALLOUTS
SEE DWG NO 116230-01-000

*182339**A

DROP ELL
135028-03-CHT
SPACER
130041-01-CHT
PLATE-COVER
143218-01-CHT

VACUUM BREAKER
176678-01-CHT

FAUCET-VALVE, SHOWER
180180-01-CHT
FAUCET-TRIM KIT
180180-02-CHT

SHOWER-HAND HELD
176668-01-CHT

CLAMP-CLOSED
010497-10-000(2)

TU10
370

TU-9
120

E-43

E-43

CLAMP-CLOSED
010495-01-000

TU10
550

TU-9
350

DETAIL D
(SHOWN W/OUT CABINETS)

SECTION C-C
(SHOWN W/OUT CABINETS)

FAUCET
178237-01-CHT

BREAKER-VACUUM
125697-04-000
CHECK VALVE
125697-03-000

E-46

A-27

A-27
2

A-28
2

A-26
2

10

CLAMP-CLOSED
010497-10-000(2)

DETAIL D

TU-9
300

TU-9
1070

TU10
300

VIEW A

TU-9
1425

TU-9
3650

TU10
3585

TU10
1145

T-28

TU-9
65

T-28

TU-9
1150

TU-9
2250

TU10
2380

WATER HEATER
145541-01-000
CABLE ASM
076767-03-000
DOOR-WATER HEATER
125420-05-CHT
EXTR-STRAP
100885-51-034 (4)
SCREW
000G39-10-10U (16)

13 P42E


DO NOT SCALE DRAWING


TITLE: WATER SYSTEM INSTL

SHEET 2 PART NO 182339 REV

05-Mar-2013

*182339 *

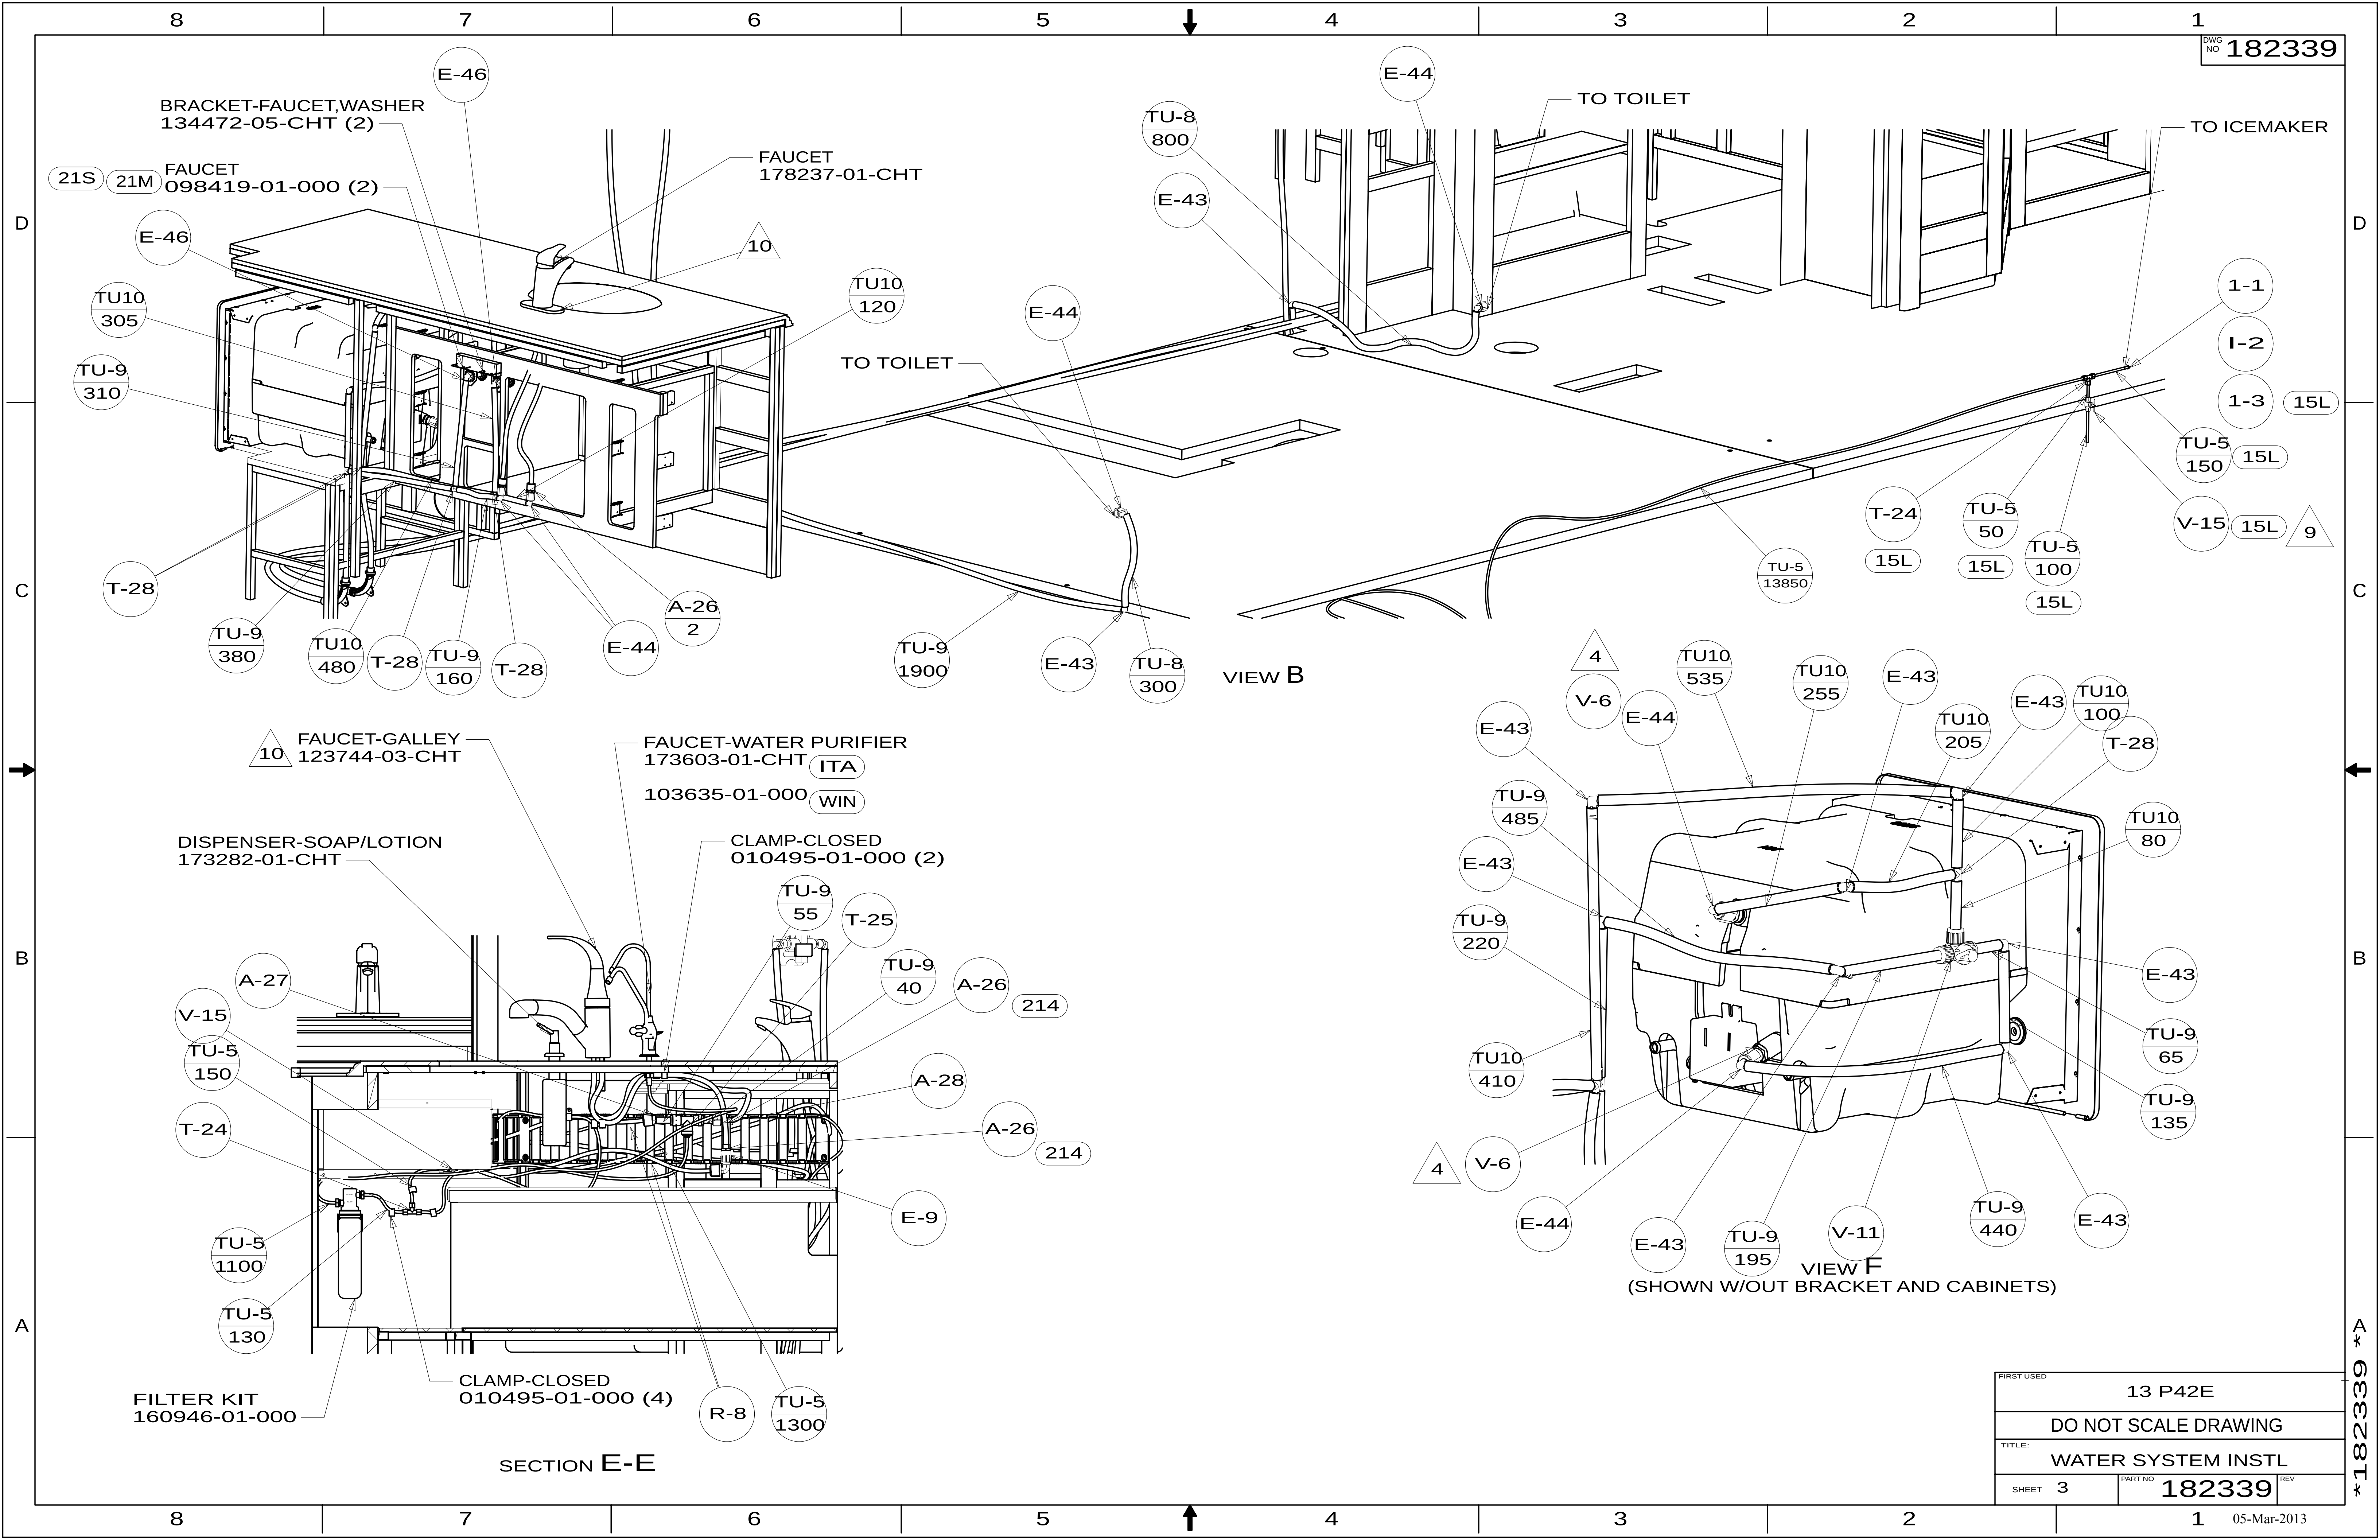

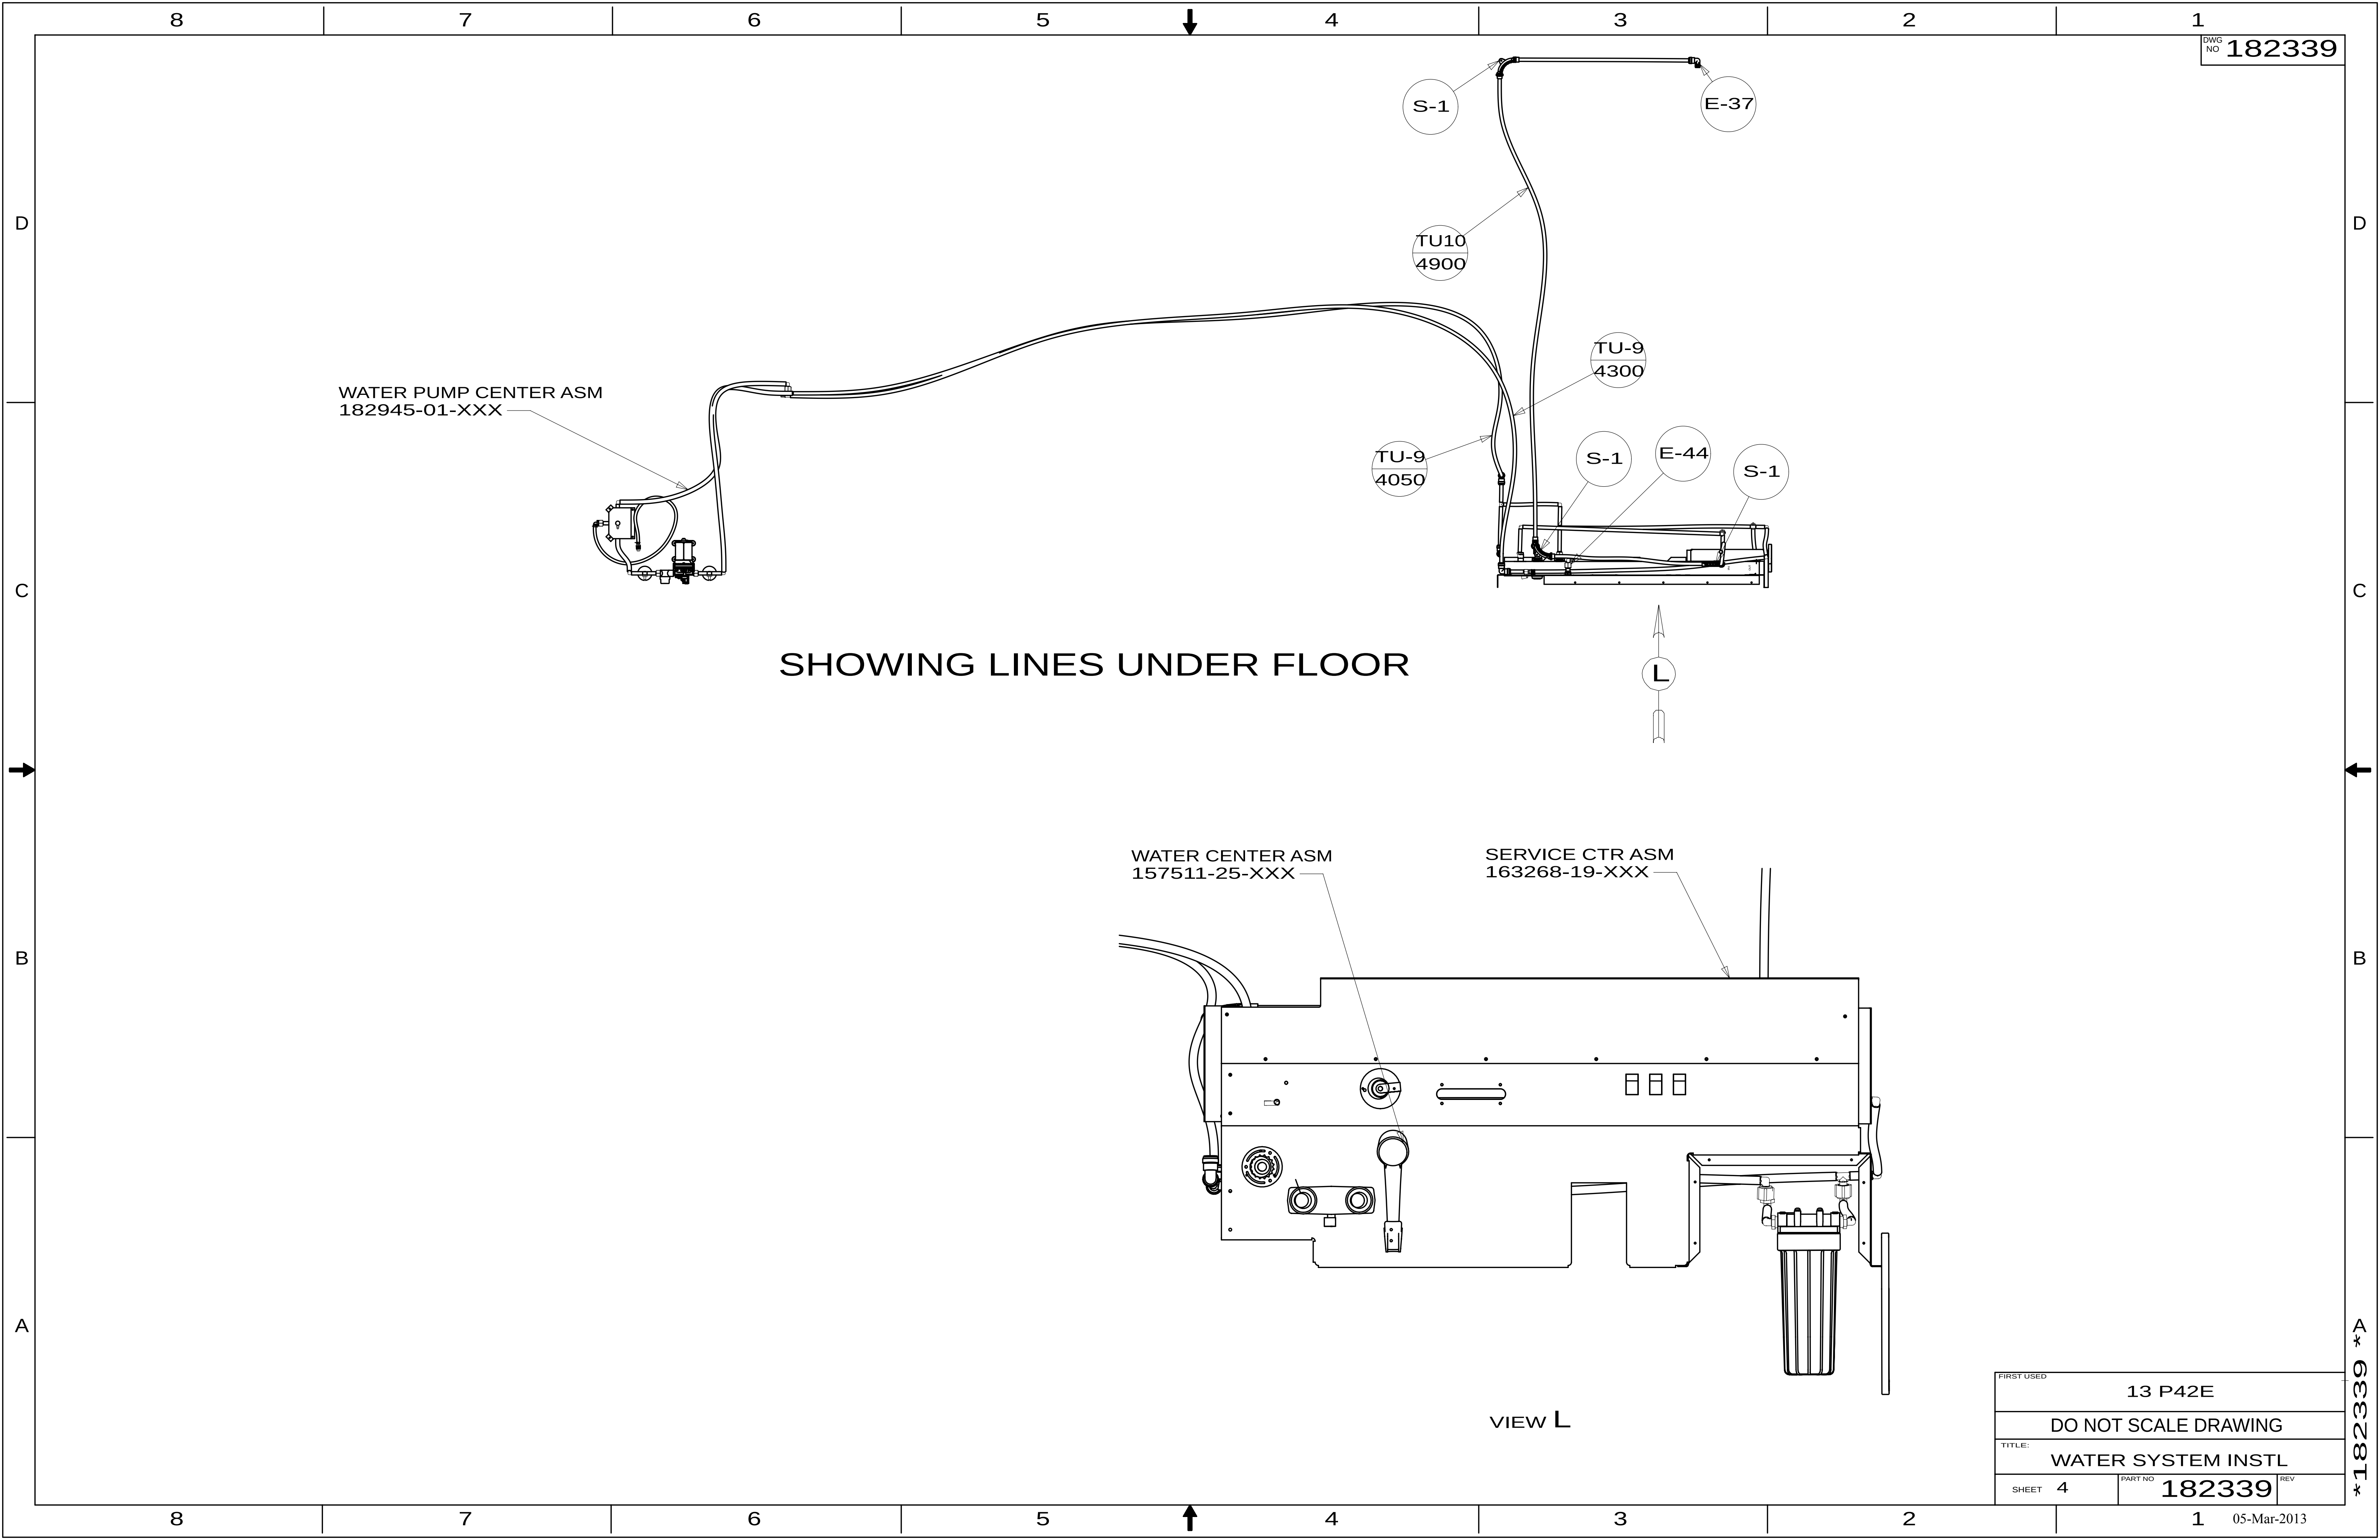

SHOWING LINES UNDER FLOOR

VIEW L

FIRST USED		13 P42E	
DO NOT SCALE DRAWING			
TITLE:		WATER SYSTEM INSTL	
SHEET	4	PART NO	182339
		REV	