


8 7 6 5 4 3 2 1



B

L

L

K

D

A

E

C

D

C

B

A

D


C

B

A

13. PART LISTED ON WATER SYSTEM PART LIST DRAWING #116230.
12. MODIFY PART TO FIT AROUND OPENING.
11. USE CLEAR SILICONE TO SEAL SINK TO THE SHOWER SURROUND.
10. USE SUPPLIED HANDLE FROM VALVE.
9. USE SMOOTH PLUMBERS PUTTY 167459-01-000 TO SEAL STRAINER (0.2 PER STRAINER).
8. USE LOCTITE 062917-06-000 ON ALL THREADS WHEN INSTALLING BRACKET
7. TRIM TO FIT.
6. VENT PIPE MUST PROJECT 51 MIN AND 64 MAX ABOVE ROOF FOR PROPER FIT AND FUNCTION.
5. SEAL AROUND SHOWER WITH SILICONE.
4. SECURE DRAINAGE PIPES TO CABINET USING WIRE TIE 108046-02-000, AND SCREW 000G67-10-12U AT INTERVALS OF NOT MORE THAN 4 FEET APART.
3. ALL PIPE AND FITTINGS TO BE ASSEMBLED WITH SOLVENT 004020-01-000 (USA), 004020-02-000 (CAN)
2. SLOPE OF TRAP ARM MUST BE 6 PER 305 mm.
1. SLOPE OF HORIZONTAL PIPING TO BE MINIMUM OF 3 PER 305 mm.

NOTES:

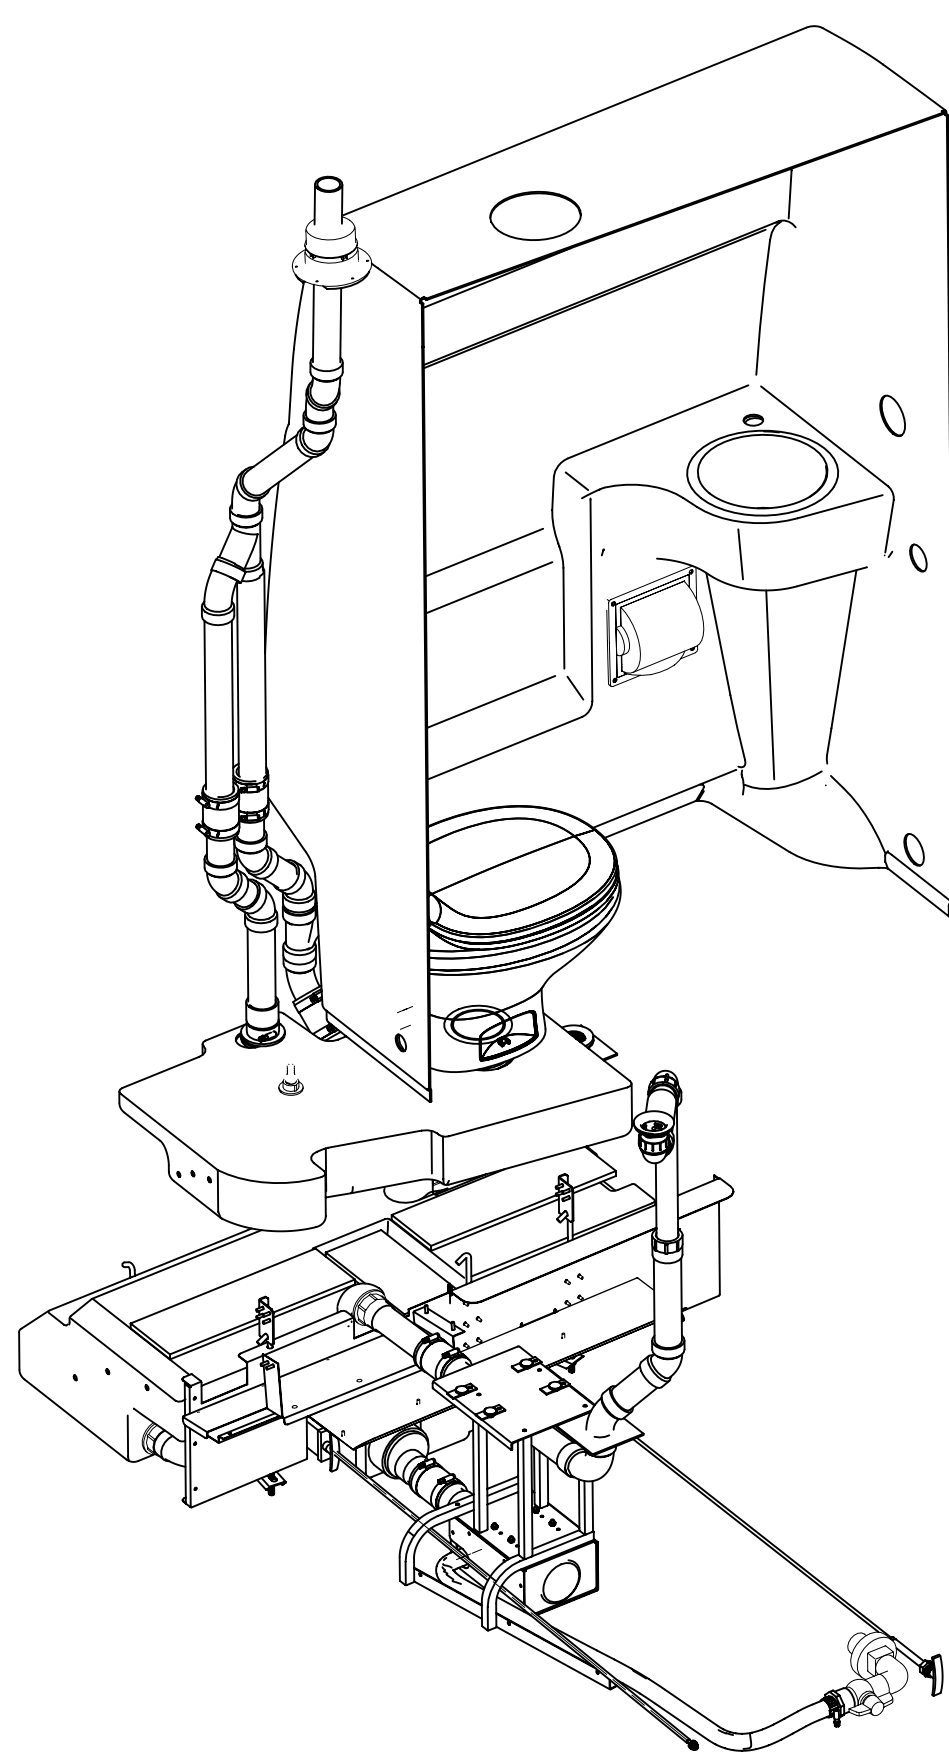

X-X


FOR
DRAINAGE
CALLOUTS
SEE DWG NO.
000211962 /
303370-01-000

WINNEBAGO [®]			
COPYRIGHT 2018 WINNEBAGO INDUSTRIES, INC.			
DSNR:		ALL DIMENSIONS ARE IN MILLIMETERS	
DFTR:			
UNSPECIFIED TOLERANCES:		MATERIAL:	
WHOLE DIM (X)	± 3		
ONE-PLACE (X.X)	± 1.5		
TWO-PLACE (X.XX)	± 0.50		
ANGLE	± 1°		
REFER TO ES0018 FOR FASTENER TIGHTENING GUIDELINES		WEIGHT: (LBS)	FIRST USED: (REF)
			17 170X
DESCRIPTION:			
DRAINAGE SYSTEM INSTL			
SHEET:	ITEM/PART NO:	REV	
1 OF 5	000030479 / 31674001000		

REF: 1 19-Mar-2018

8 7 6 5 4 3 2 1



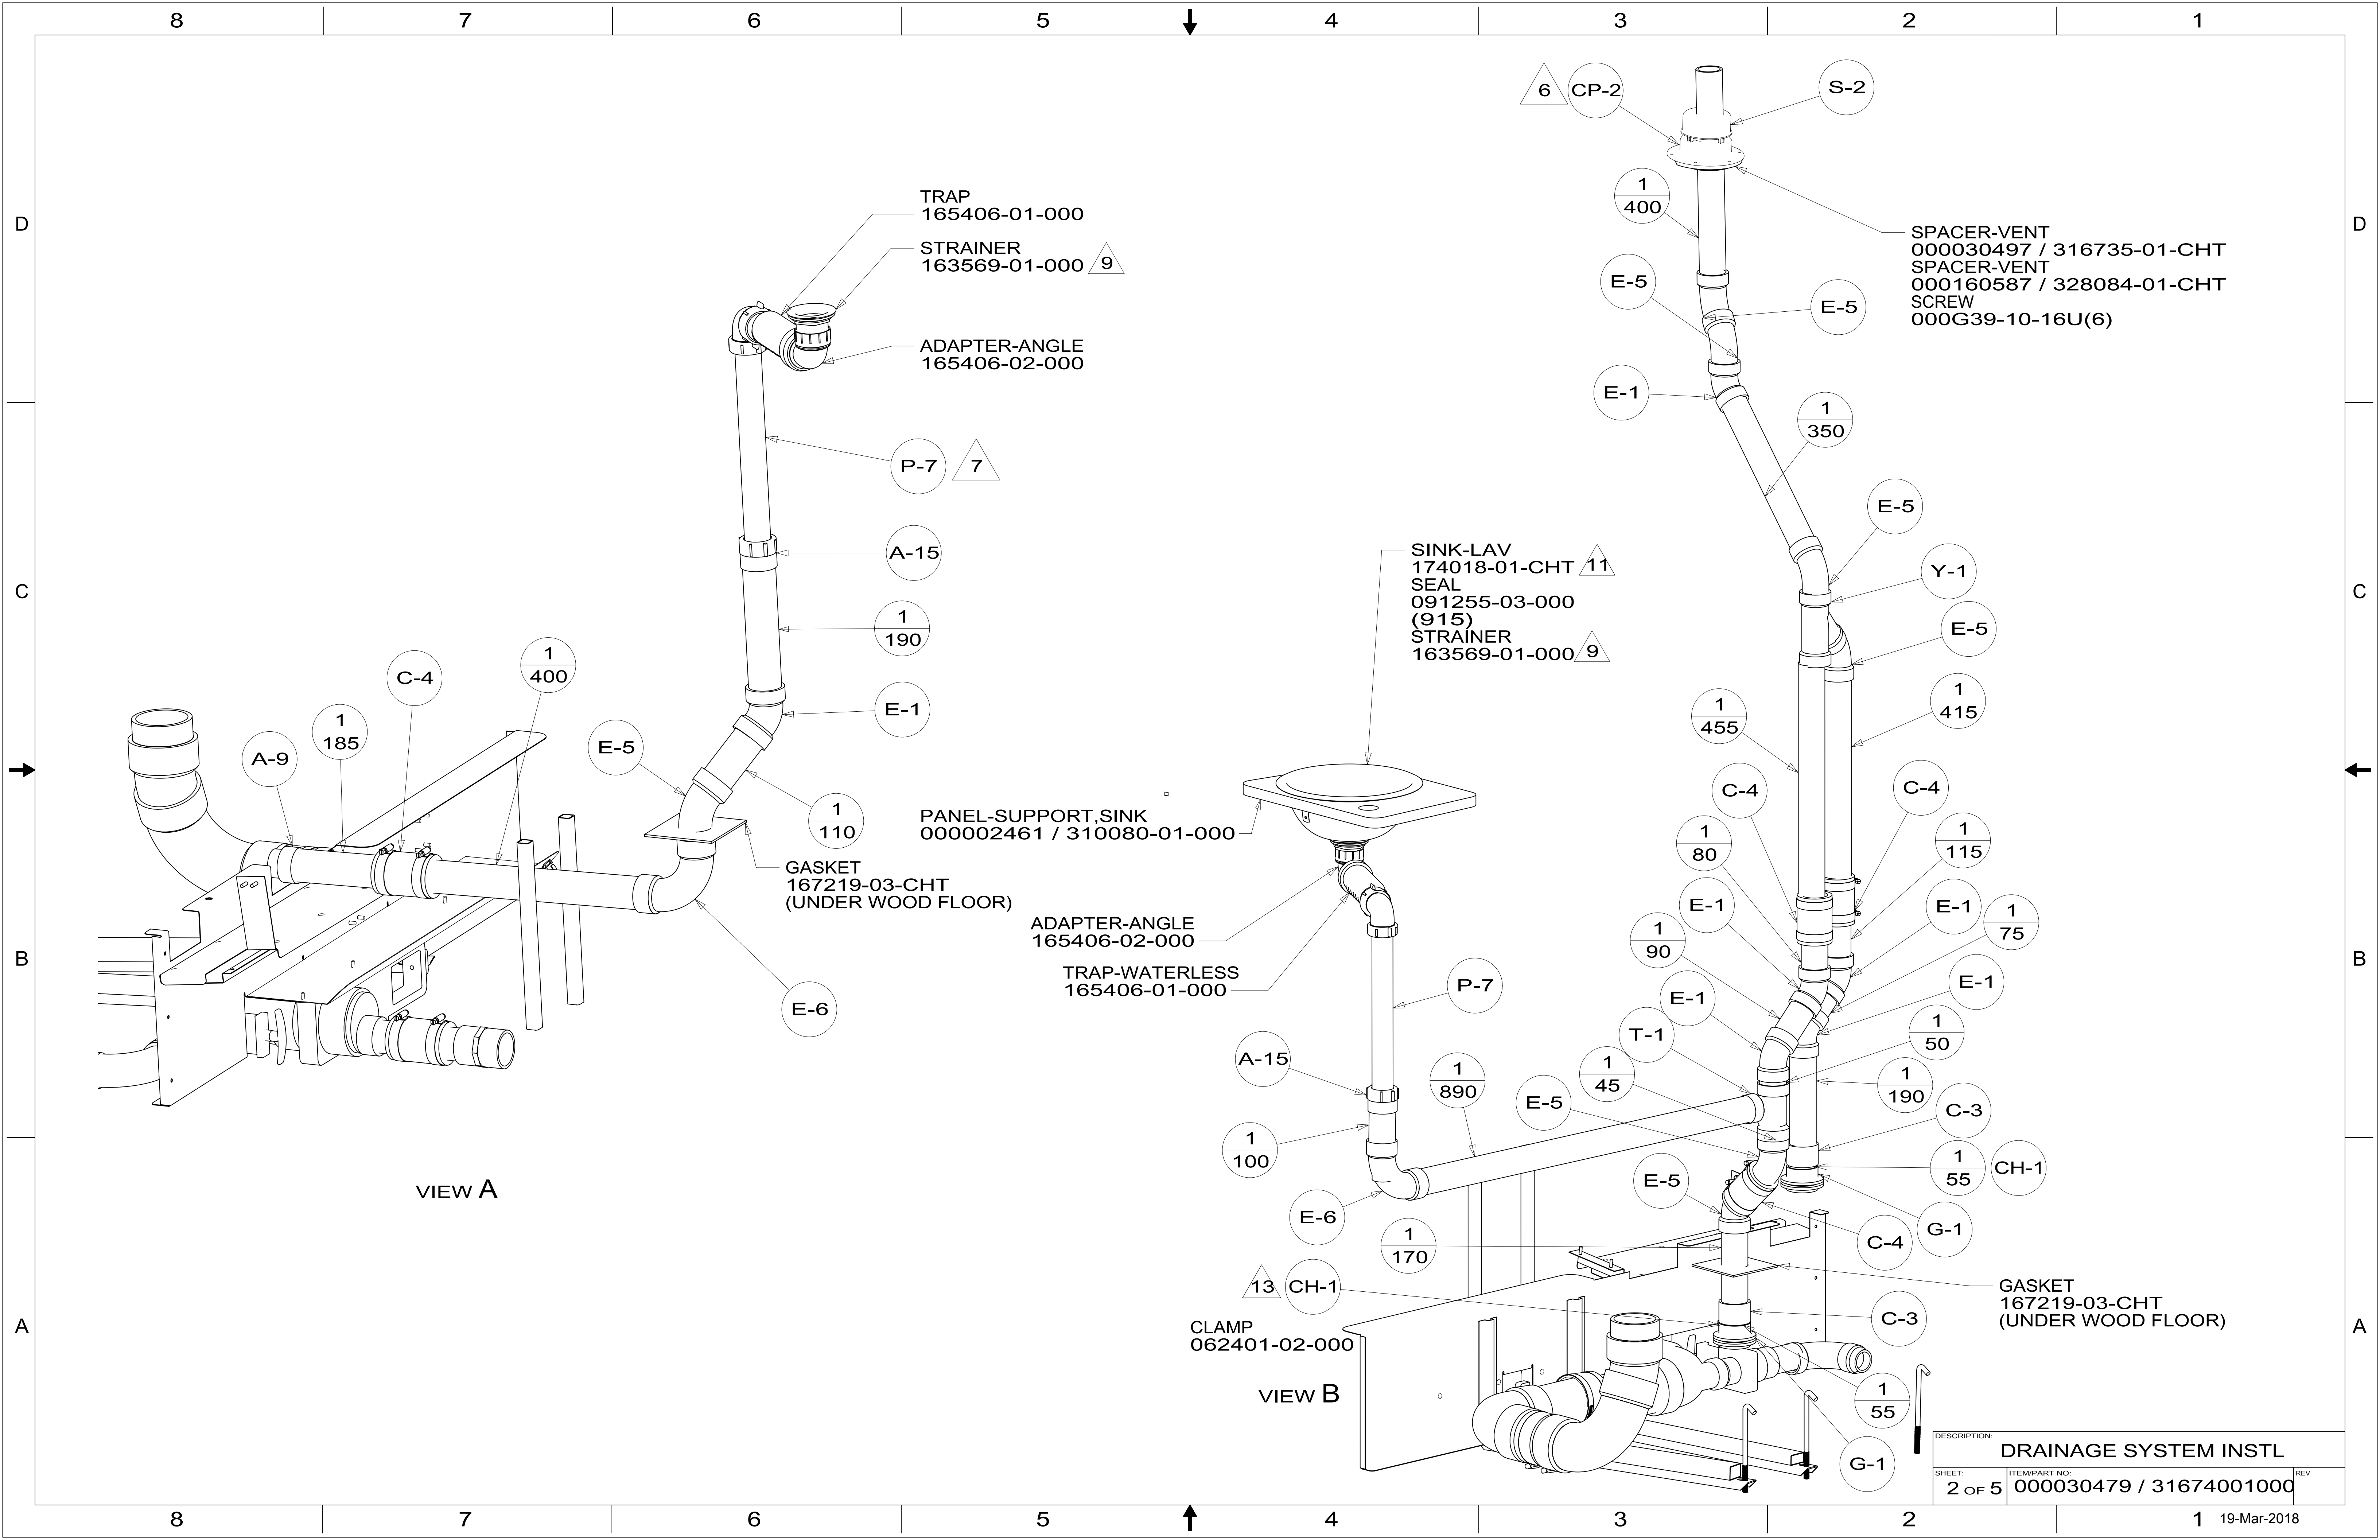

TRAP
165406-01-000

STRAINER
163569-01-000 

ADAPTER-ANGLE
165406-02-000

P-7 

A-15

1
190

E-1

1
110

GASKET
167219-03-CHT
(UNDER WOOD FLOOR)

E-6

PANEL-SUPPORT,SINK
000002461 / 310080-01-000

ADAPTER-ANGLE
165406-02-000

TRAP-WATERLESS
165406-01-000

SINK-LAV
174018-01-CHT 
SEAL
091255-03-000
(915)
STRAINER
163569-01-000 

SPACER-VENT
000030497 / 316735-01-CHT
SPACER-VENT
000160587 / 328084-01-CHT
SCREW
000G39-10-16U(6)

6

CP-2

S-2

1
400

E-5

E-5

E-1

1
350

E-5

Y-1

E-5

1
455

C-4

C-4

1
115

E-1

1
75

E-1

1
50

1
190

C-3

1
55

CH-1

C-4

G-1

GASKET
167219-03-CHT
(UNDER WOOD FLOOR)

C-3

1
55

G-1

A-15

P-7

1
890

E-5

1
45

T-1

1
90

E-1

1
80

1
185

A-9

C-4

E-5

1
400

VIEW A

VIEW B

CLAMP
062401-02-000

13 CH-1 


1
170


E-6


1
100

DESCRIPTION: DRAINAGE SYSTEM INSTL		
SHEET: 2 OF 5	ITEM/PART NO: 000030479 / 31674001000	REV

19-Mar-2018

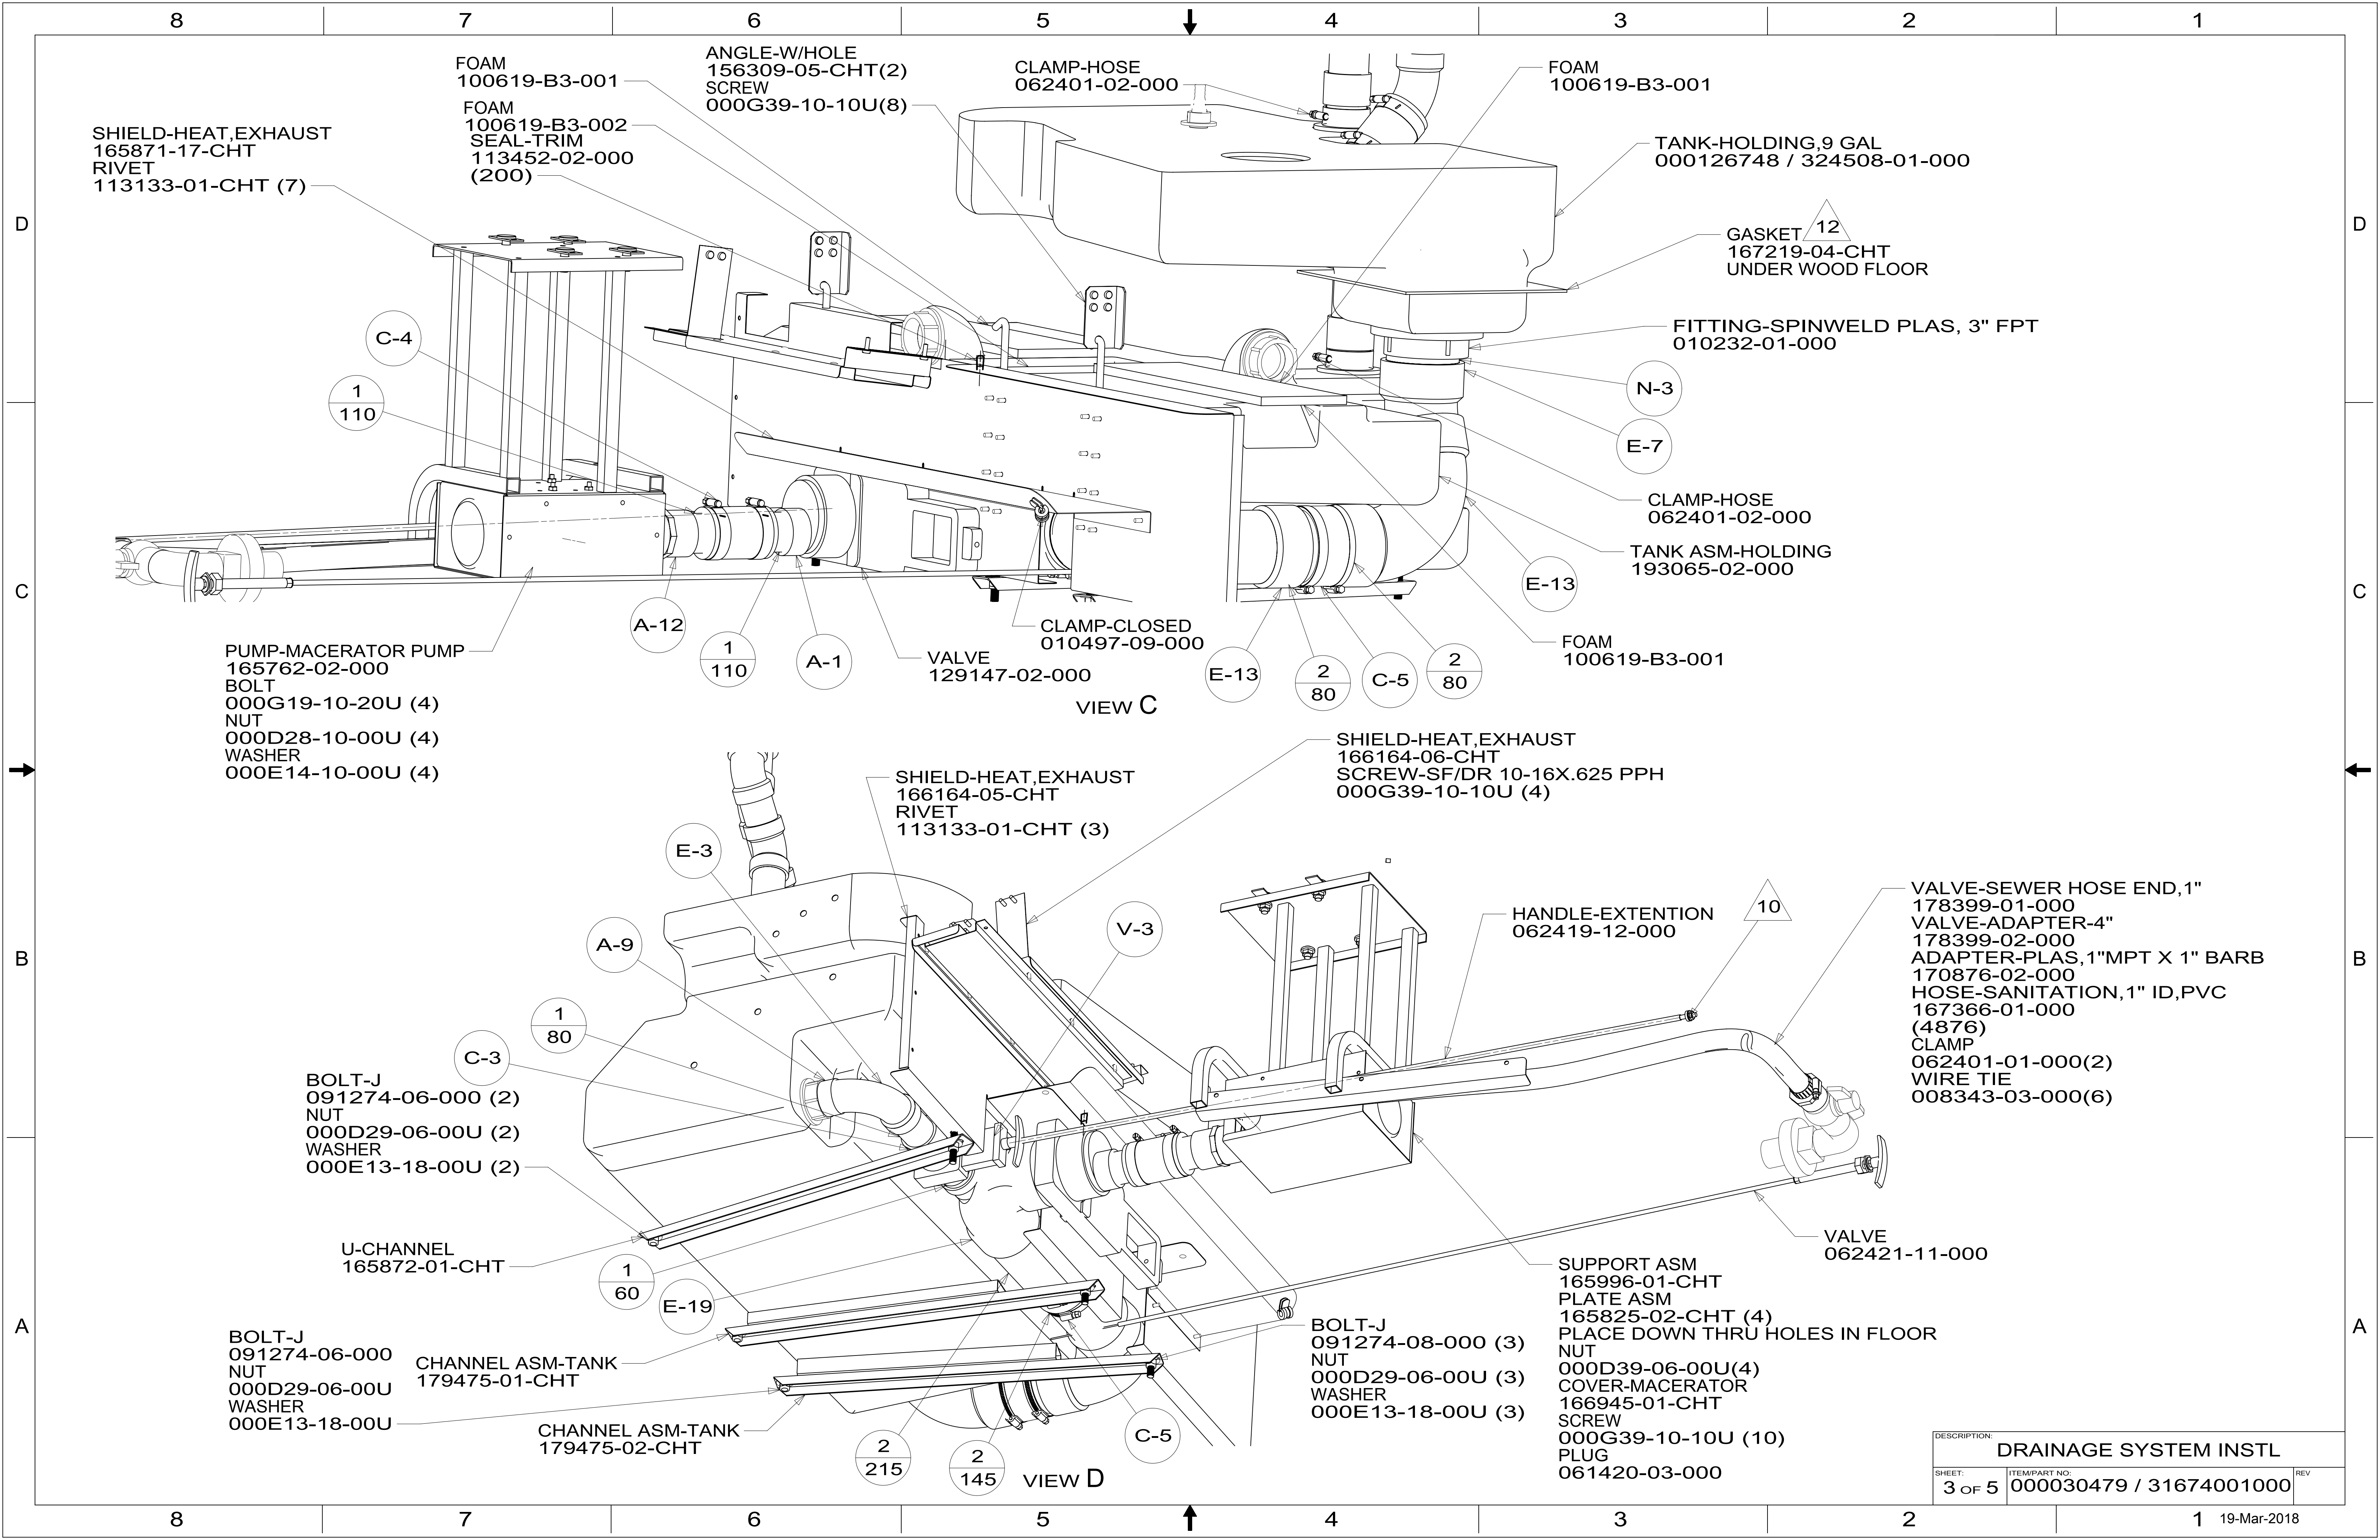

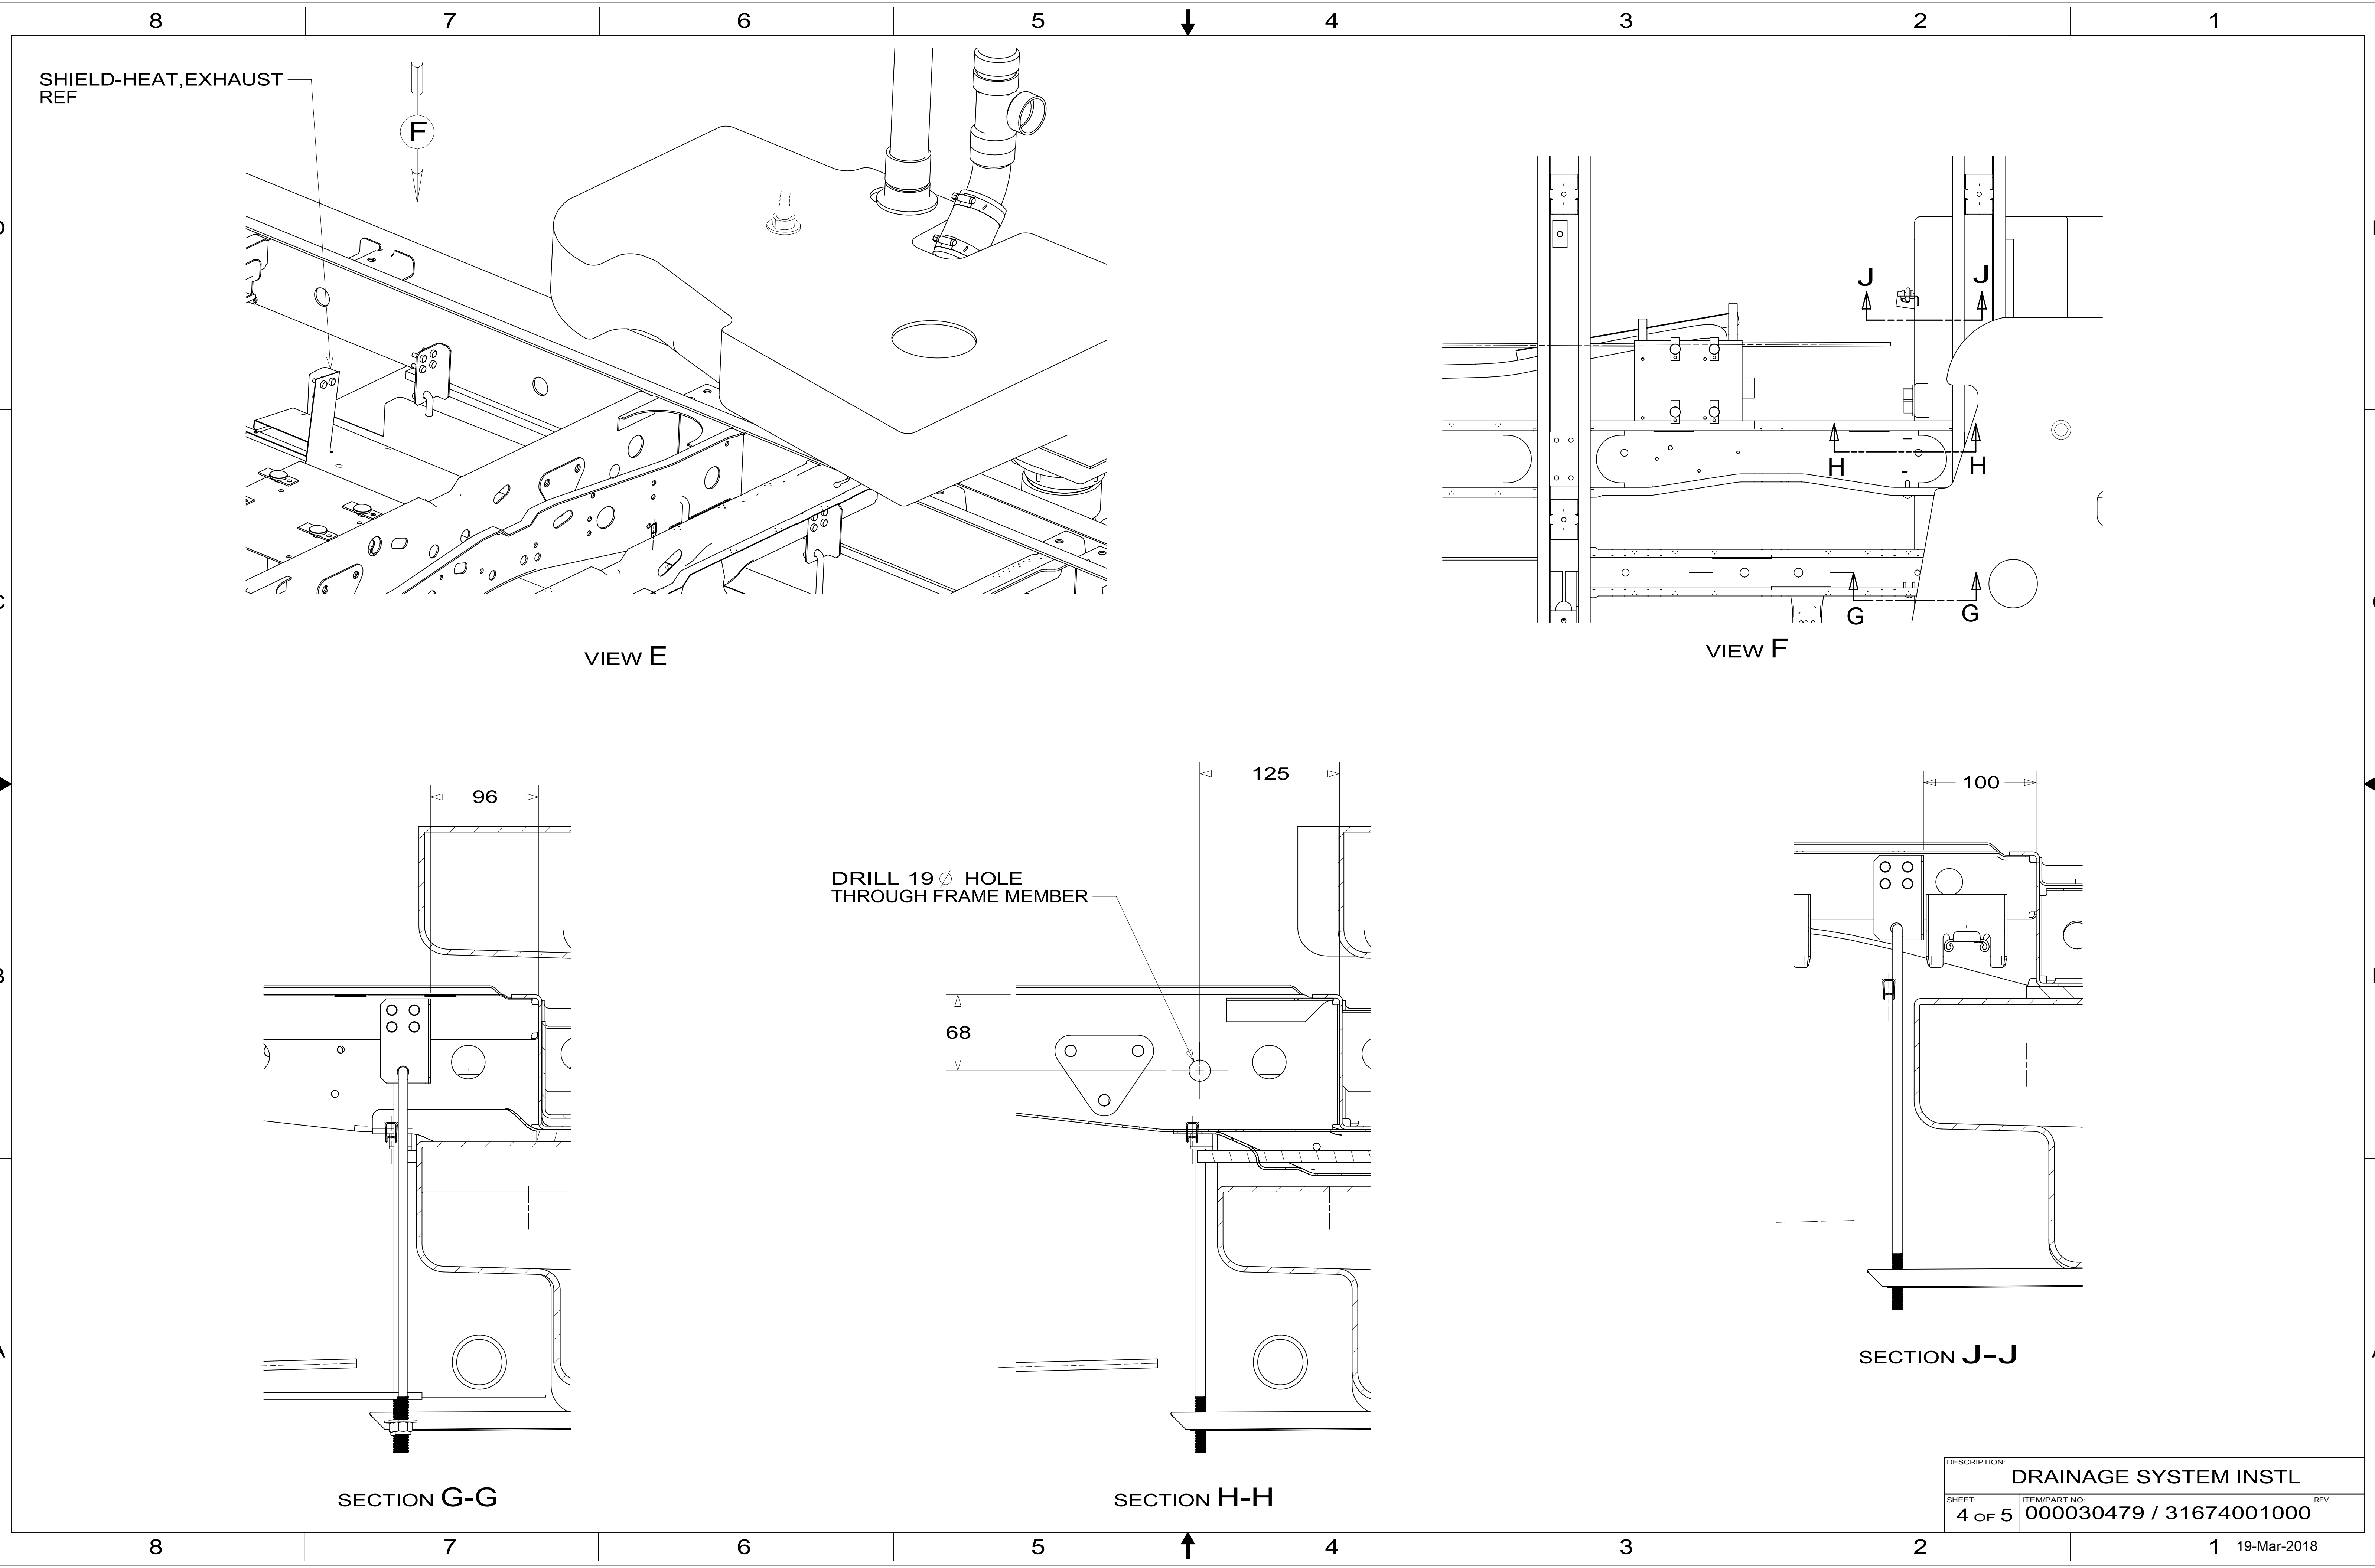

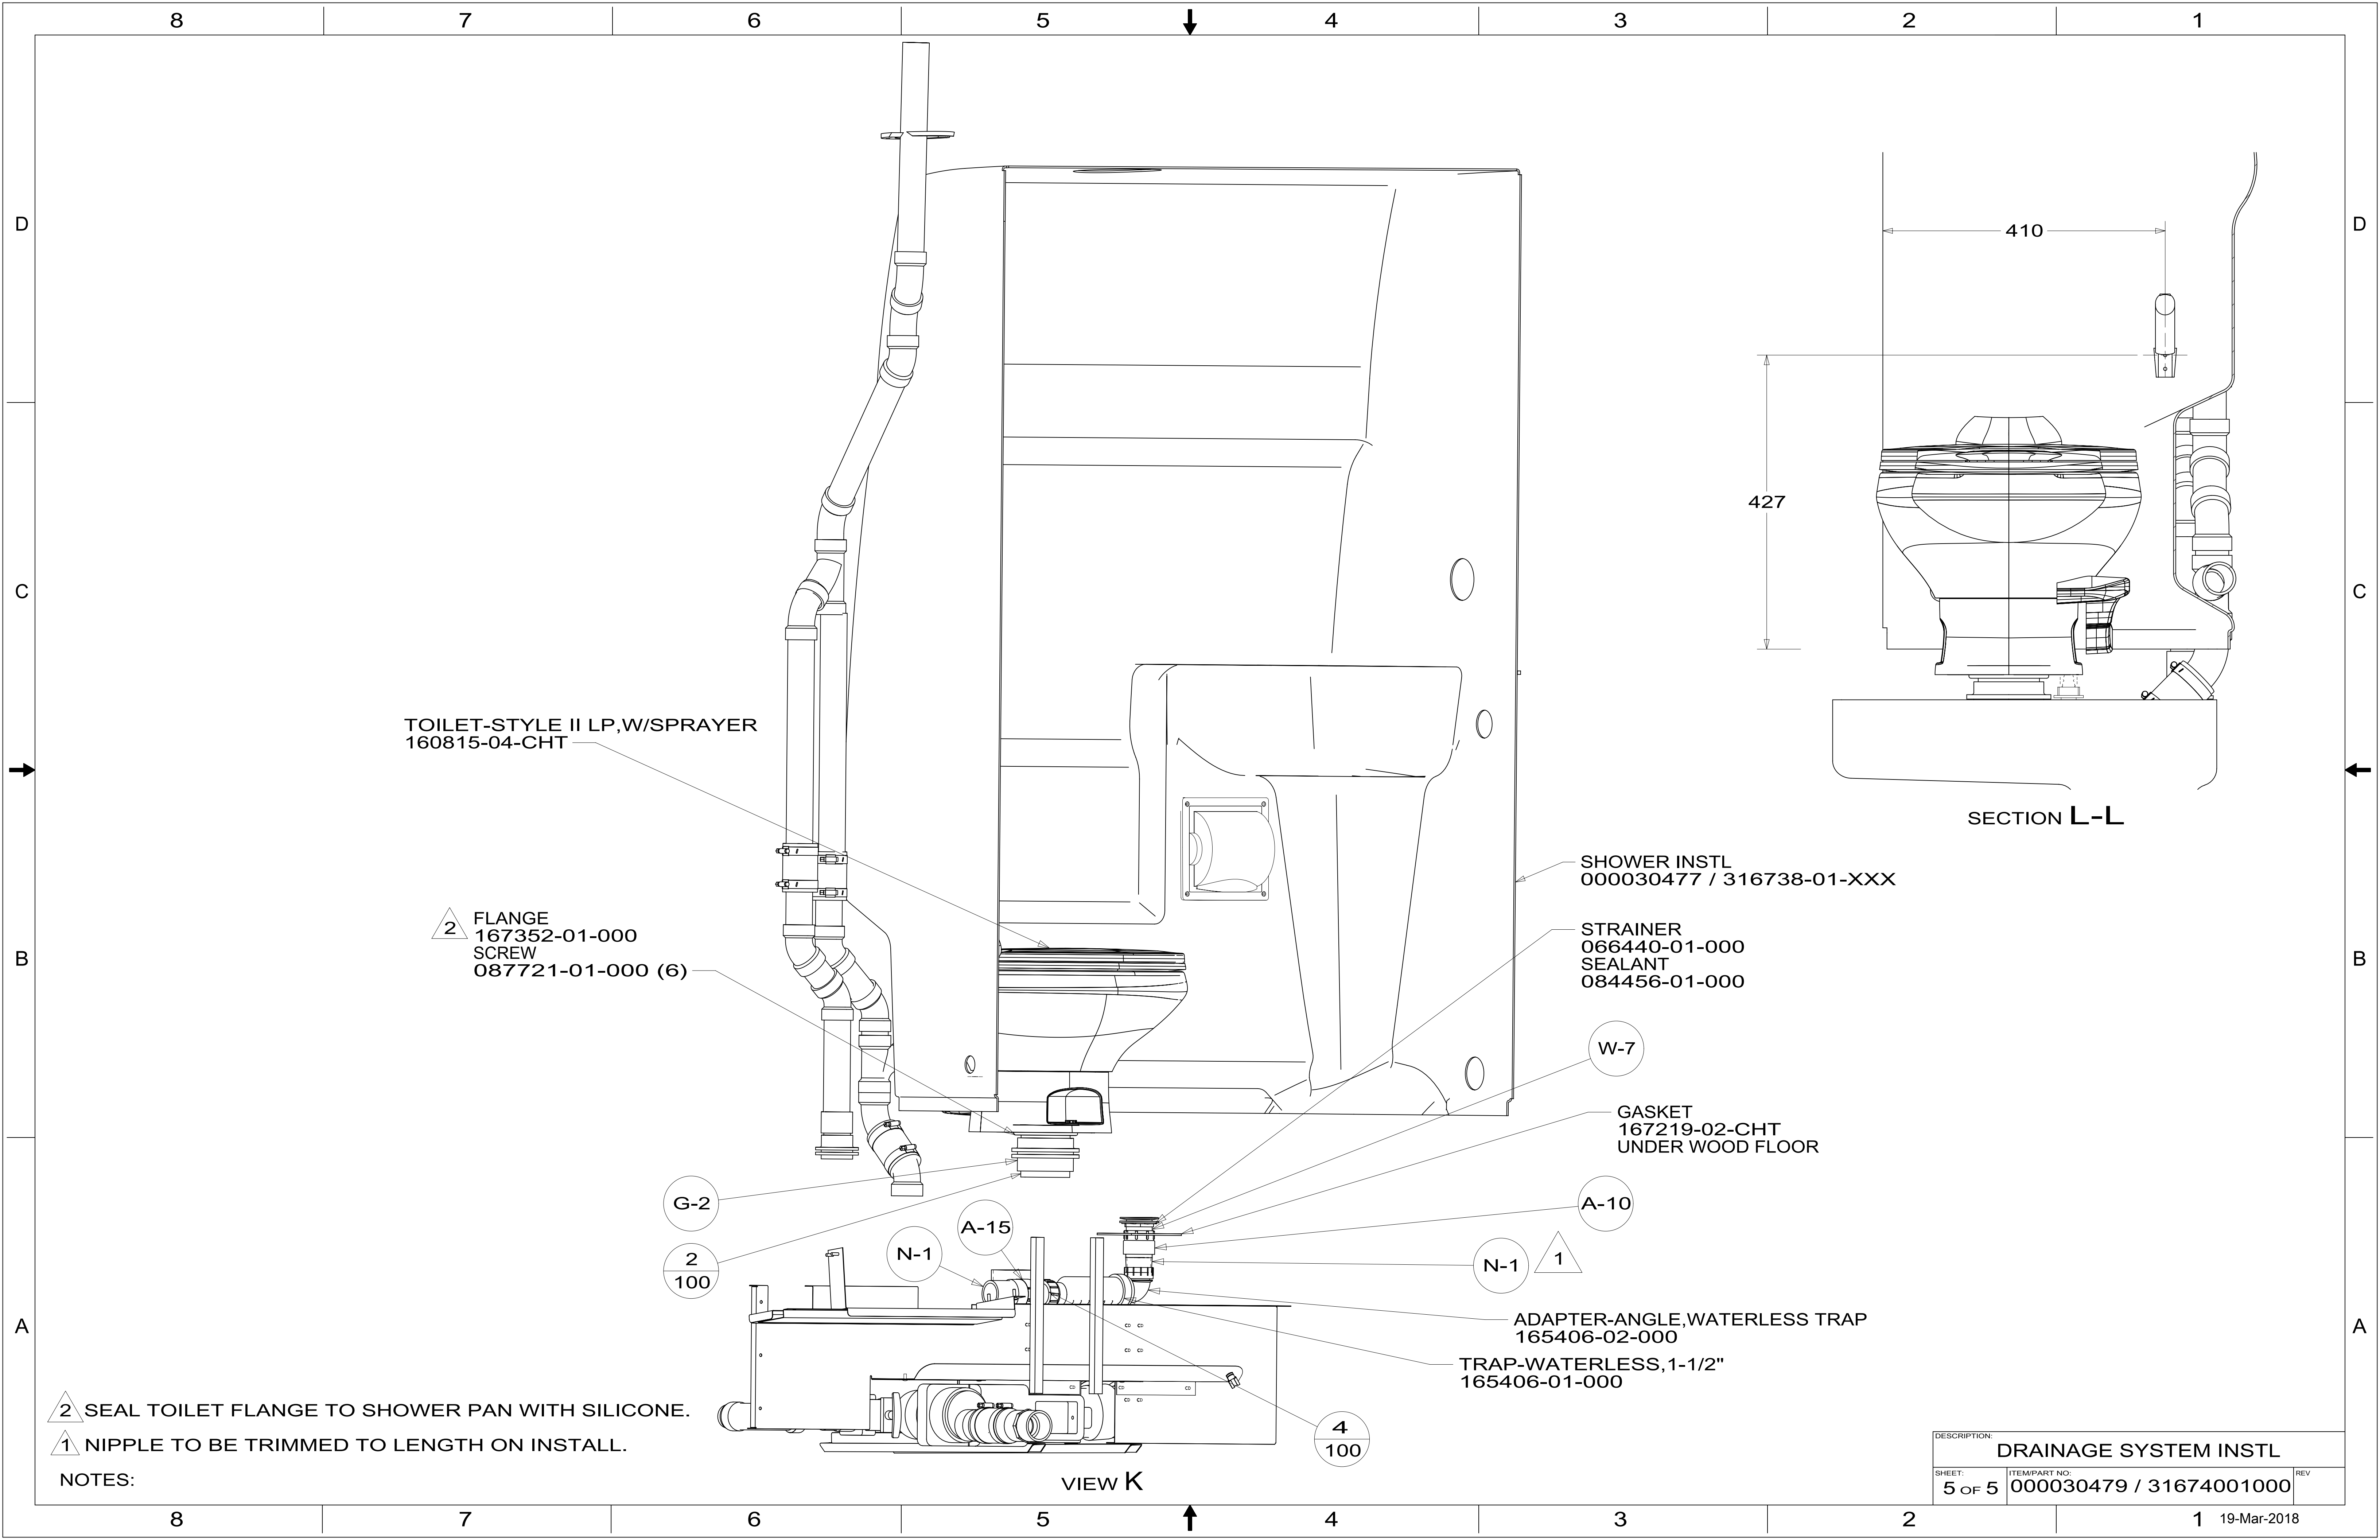

TOILET-STYLE II LP,W/SPRAYER
160815-04-CHT

2 FLANGE
167352-01-000
SCREW
087721-01-000 (6)

SHOWER INSTL
000030477 / 316738-01-XXX

STRAINER
066440-01-000
SEALANT
084456-01-000

GASKET
167219-02-CHT
UNDER WOOD FLOOR

ADAPTER-ANGLE,WATERLESS TRAP
165406-02-000

TRAP-WATERLESS,1-1/2"
165406-01-000

2 SEAL TOILET FLANGE TO SHOWER PAN WITH SILICONE.

1 NIPPLE TO BE TRIMMED TO LENGTH ON INSTALL.

NOTES:

DESCRIPTION:		
DRAINAGE SYSTEM INSTL		
SHEET:	ITEM/PART NO:	REV
5 OF 5	000030479 / 31674001000	