


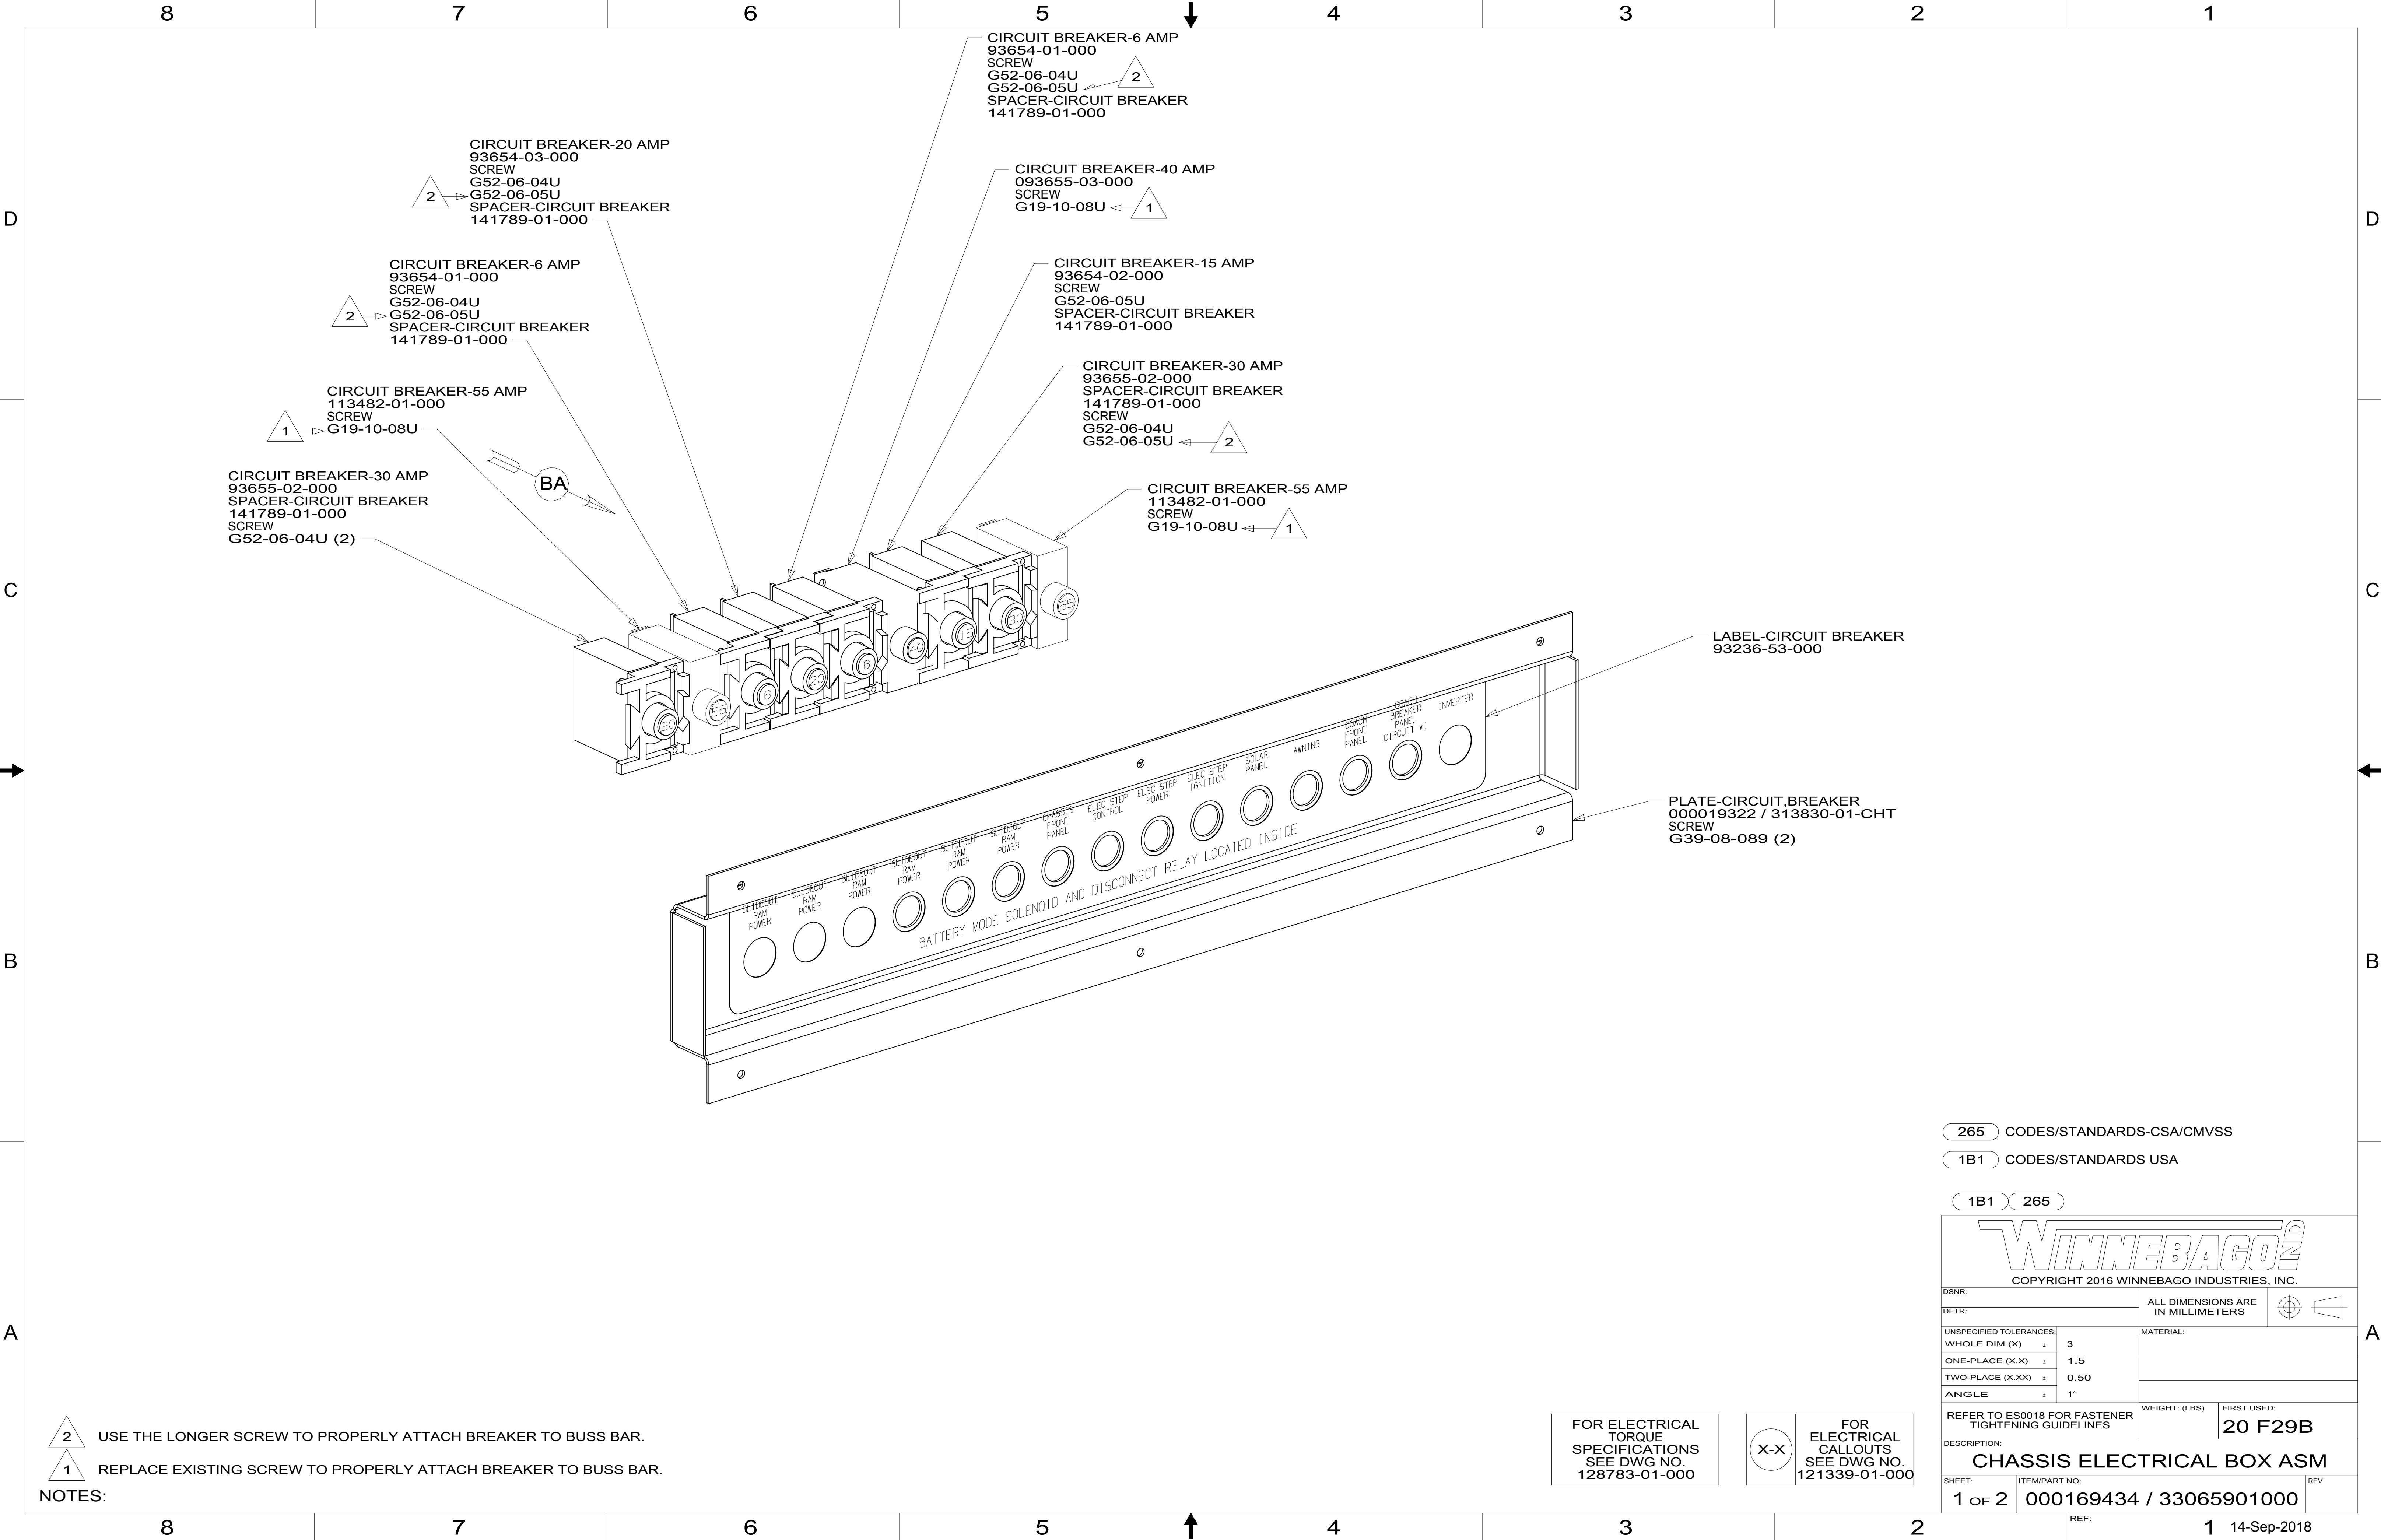

- 2

USE THE LONGER SCREW TO PROPERLY ATTACH BREAKER TO BUSS BAR.
- 1

REPLACE EXISTING SCREW TO PROPERLY ATTACH BREAKER TO BUSS BAR.

NOTES:

FOR ELECTRICAL
TORQUE
SPECIFICATIONS
SEE DWG NO.
128783-01-000

FOR
ELECTRICAL
CALLOUTS
SEE DWG NO.
121339-01-000

- 265
- CODES/STANDARDS-CSA/CMVSS

1B1

1B1

265

WINNEBAGO

COPYRIGHT 2016 WINNEBAGO INDUSTRIES, INC.

DSNR:

DFTR:

UNSPECIFIED TOLERANCES:

WHOLE DIM (X) ± 3

ONE-PLACE (X.X) ± 1.5

TWO-PLACE (X.XX) ± 0.50

ANGLE ± 1°

ALL DIMENSIONS ARE IN MILLIMETERS

MATERIAL:

WEIGHT: (LBS)

FIRST USED:

20 F29B

REFER TO ES0018 FOR FASTENER TIGHTENING GUIDELINES


DESCRIPTION:

CHASSIS ELECTRICAL BOX ASM

SHEET: 1 OF 2

ITEM/PART NO: 000169434 / 33065901000

REV:

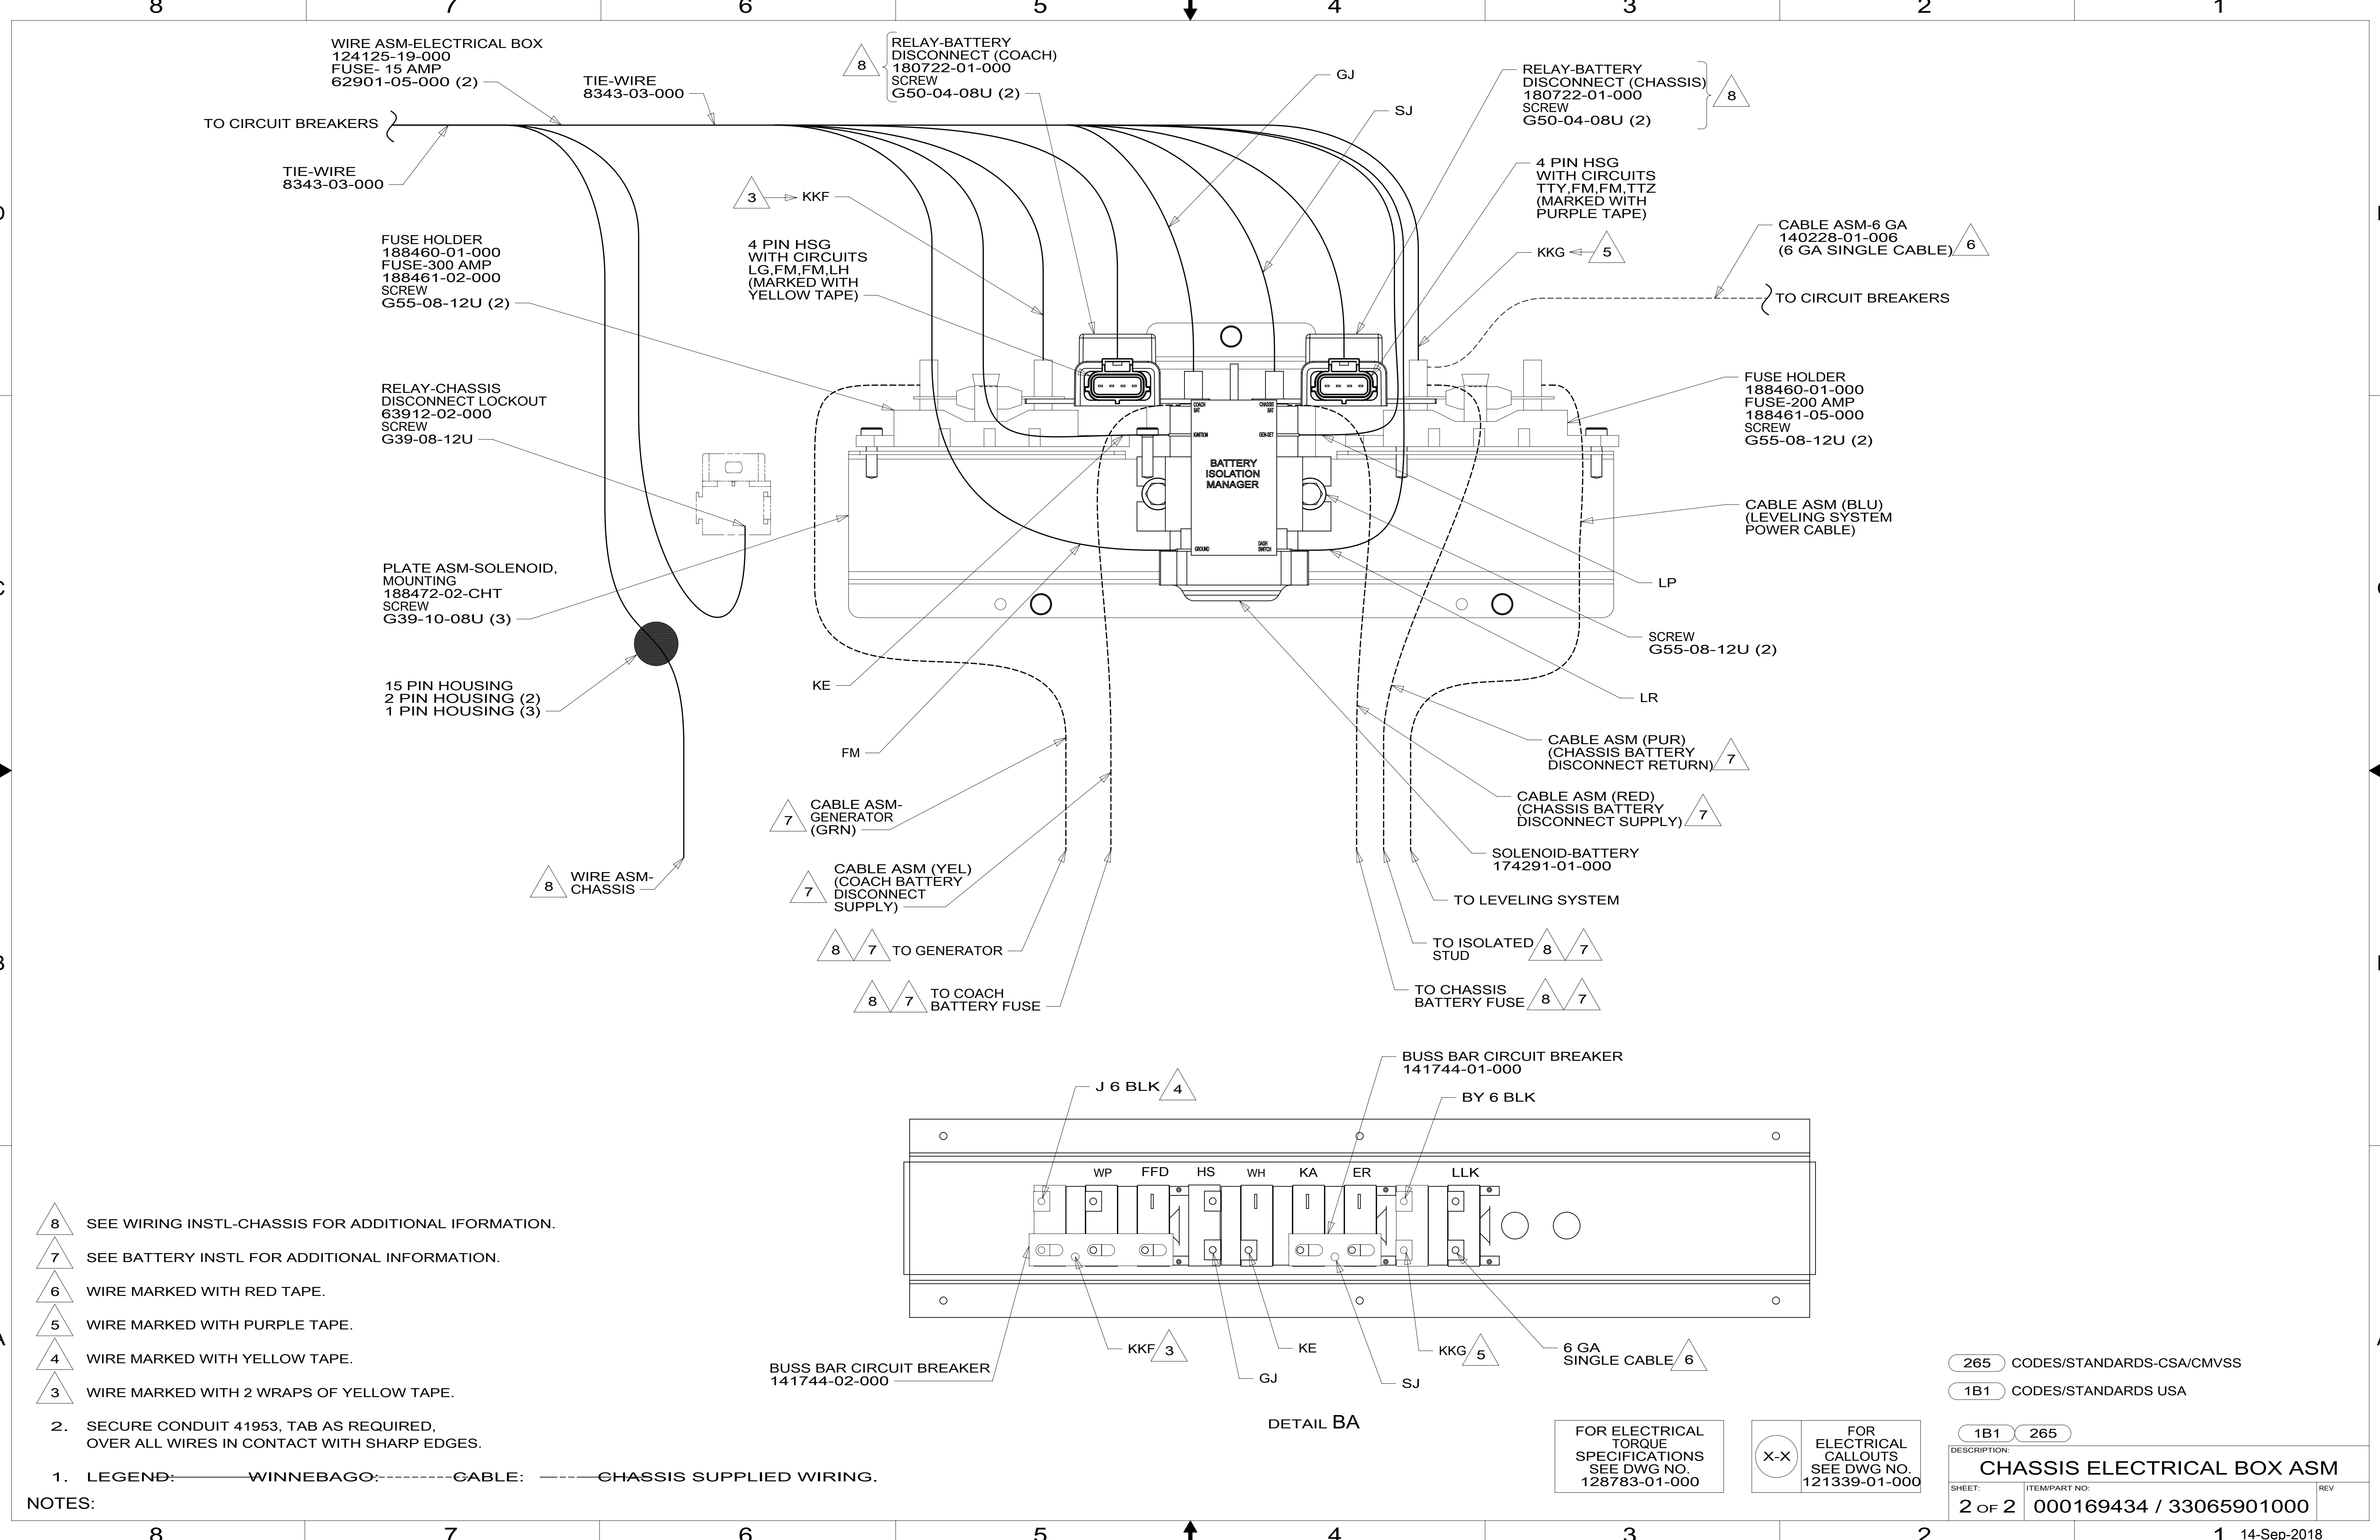


- 8 SEE WIRING INSTL-CHASSIS FOR ADDITIONAL IFORMATION.
- 7 SEE BATTERY INSTL FOR ADDITIONAL INFORMATION.
- 6 WIRE MARKED WITH RED TAPE.
- 5 WIRE MARKED WITH PURPLE TAPE.
- 4 WIRE MARKED WITH YELLOW TAPE.
- 3 WIRE MARKED WITH 2 WRAPS OF YELLOW TAPE.

2. SECURE CONDUIT 41953, TAB AS REQUIRED, OVER ALL WIRES IN CONTACT WITH SHARP EDGES.

1. LEGEND: — WINNEBAGO: - - - - - CABLE: - - - - - CHASSIS SUPPLIED WIRING.

NOTES:

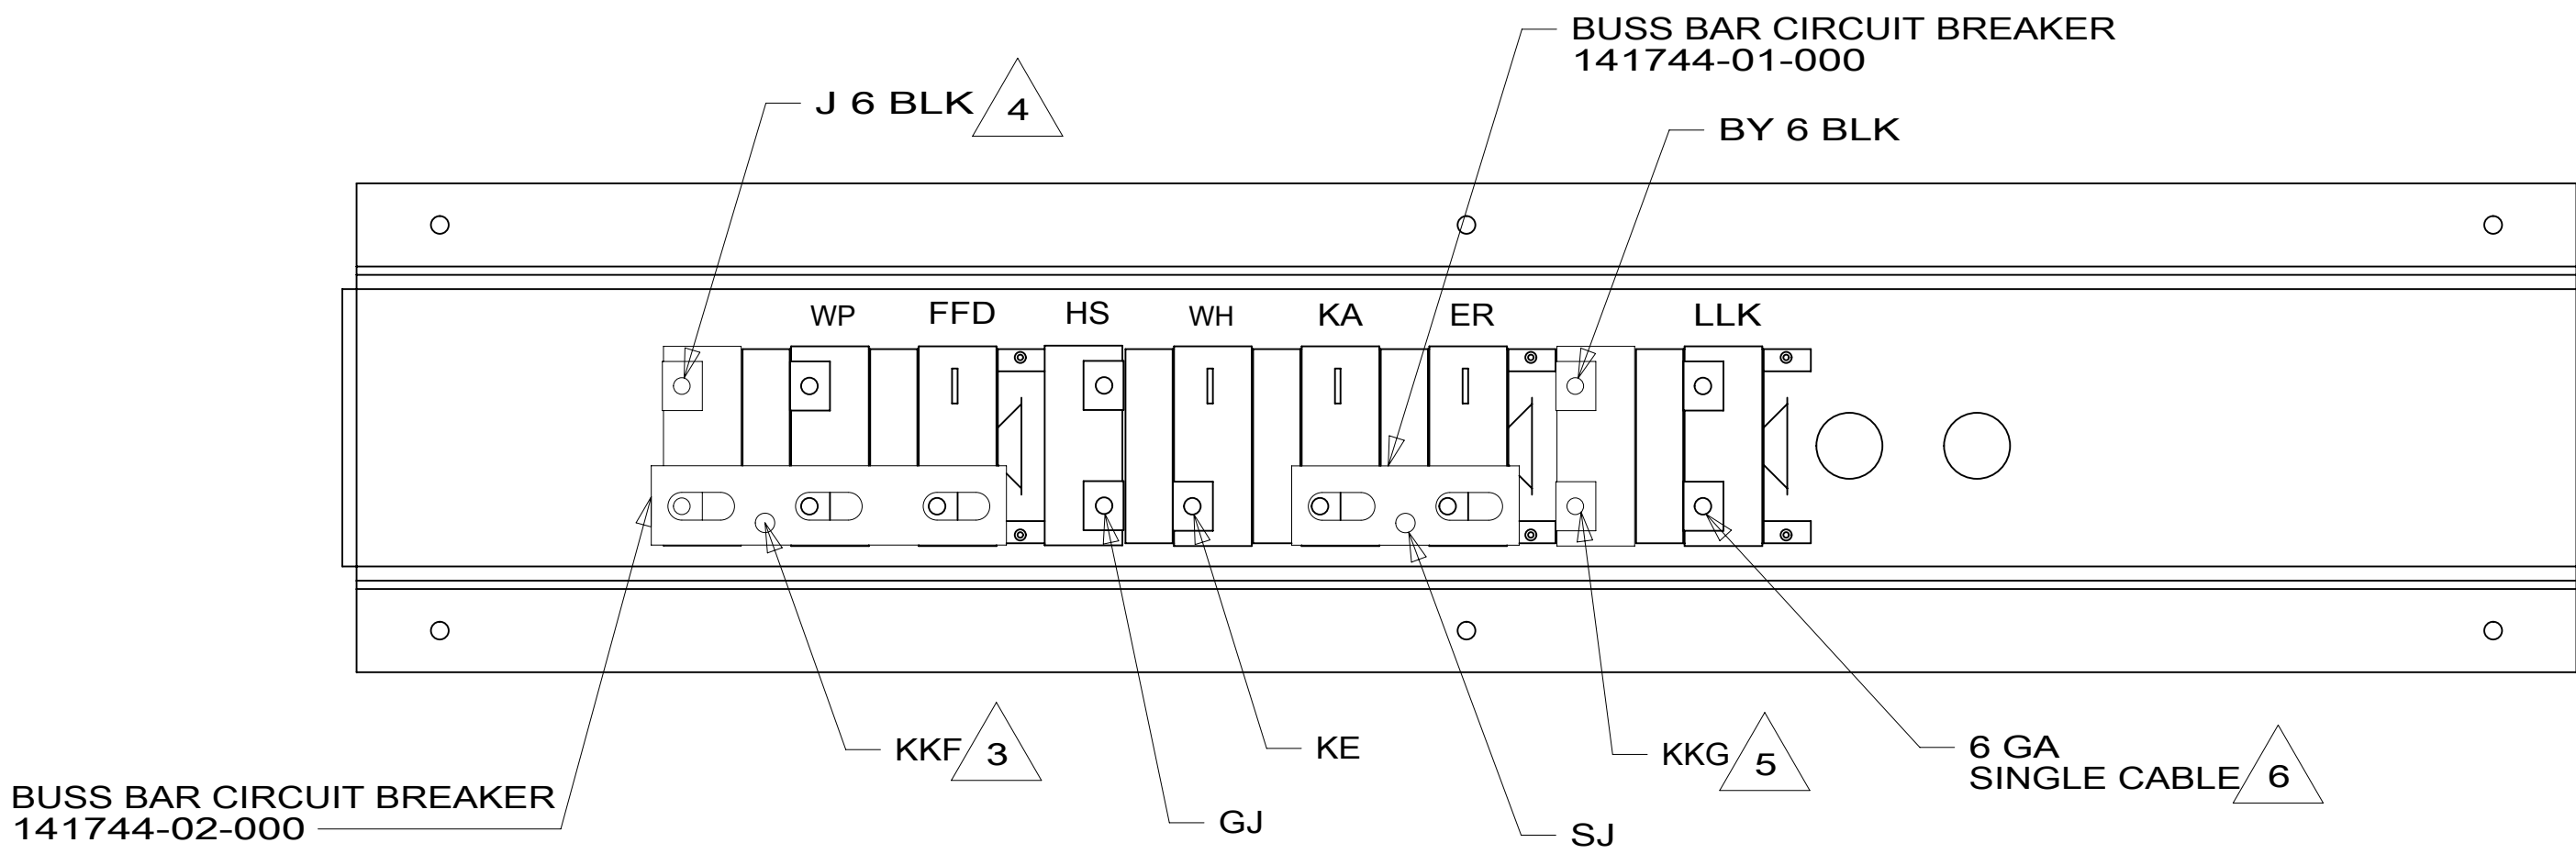

DETAIL BA

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000

FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000

- 265 CODES/STANDARDS-CSA/CMVSS
- 1B1 CODES/STANDARDS USA

DESCRIPTION: CHASSIS ELECTRICAL BOX ASM		
SHEET: 2 OF 2	ITEM/PART NO: 000169434 / 33065901000	REV