


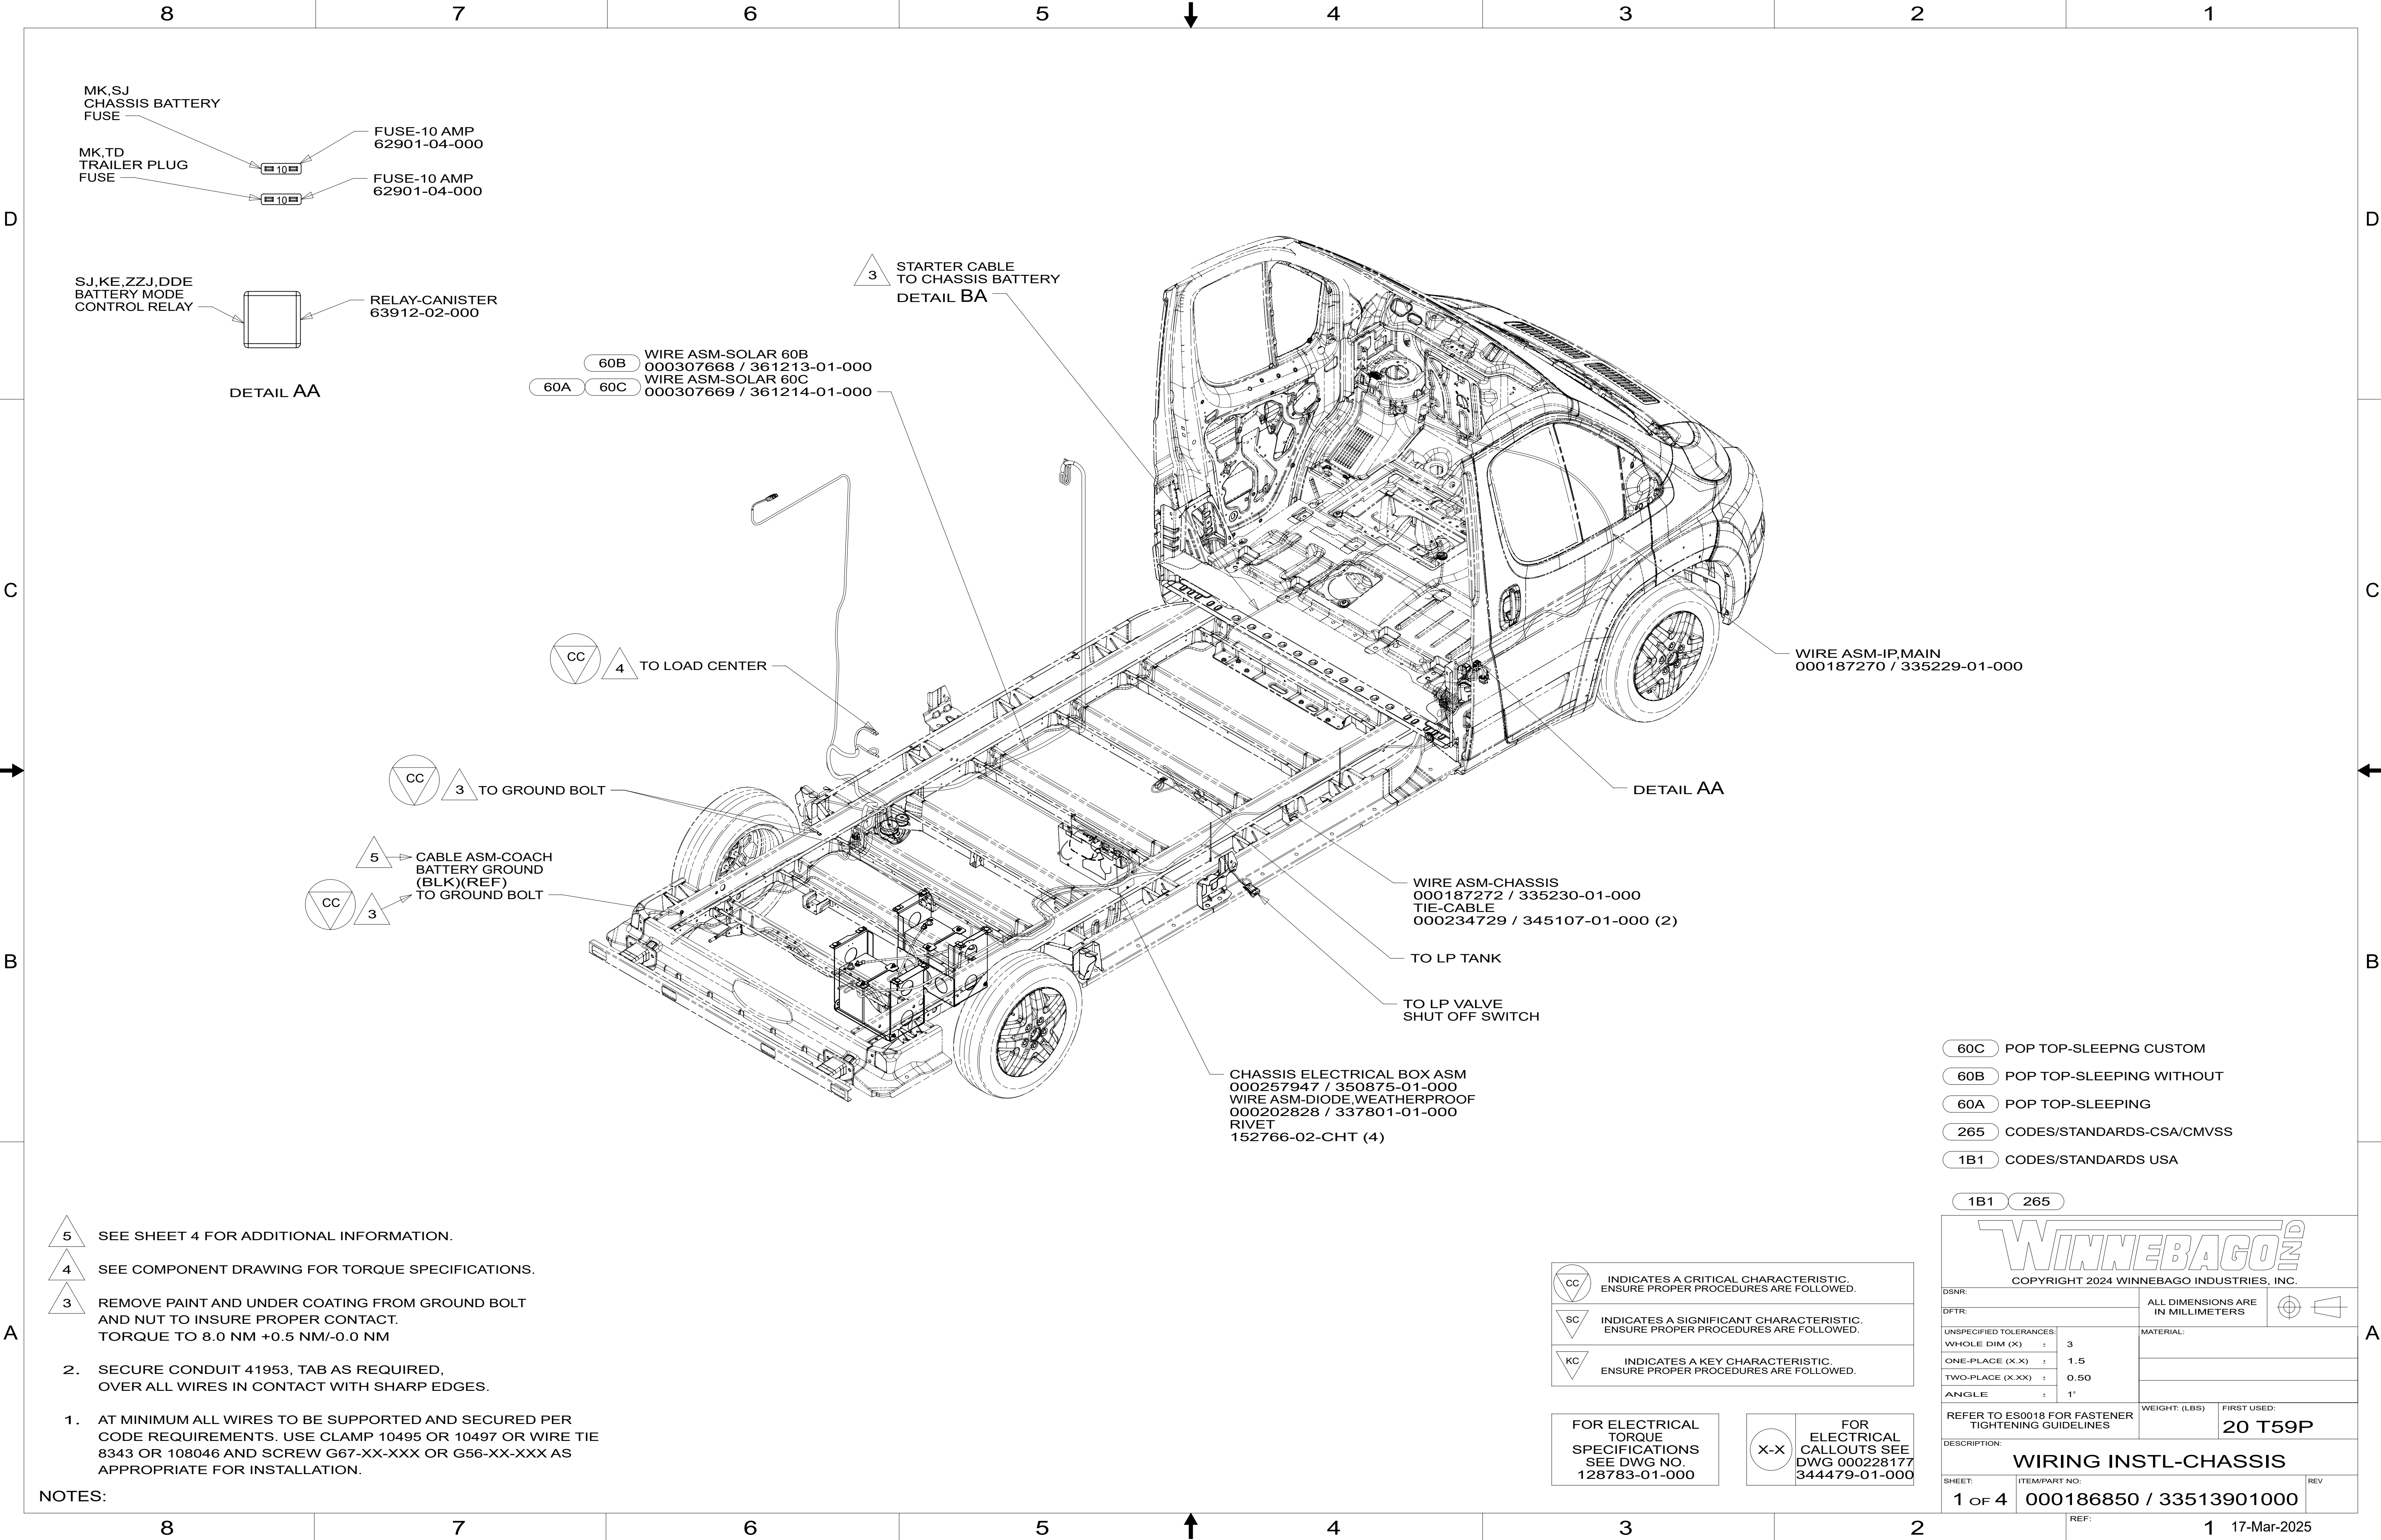

- 5 SEE SHEET 4 FOR ADDITIONAL INFORMATION.
- 4 SEE COMPONENT DRAWING FOR TORQUE SPECIFICATIONS.
- 3 REMOVE PAINT AND UNDER COATING FROM GROUND BOLT AND NUT TO INSURE PROPER CONTACT. TORQUE TO 8.0 NM +0.5 NM/-0.0 NM

2. SECURE CONDUIT 41953, TAB AS REQUIRED, OVER ALL WIRES IN CONTACT WITH SHARP EDGES.
1. AT MINIMUM ALL WIRES TO BE SUPPORTED AND SECURED PER CODE REQUIREMENTS. USE CLAMP 10495 OR 10497 OR WIRE TIE 8343 OR 108046 AND SCREW G67-XX-XXX OR G56-XX-XXX AS APPROPRIATE FOR INSTALLATION.

NOTES:

	INDICATES A CRITICAL CHARACTERISTIC. ENSURE PROPER PROCEDURES ARE FOLLOWED.
	INDICATES A SIGNIFICANT CHARACTERISTIC. ENSURE PROPER PROCEDURES ARE FOLLOWED.
	INDICATES A KEY CHARACTERISTIC. ENSURE PROPER PROCEDURES ARE FOLLOWED.


FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000

FOR ELECTRICAL CALLOUTS SEE DWG 000228177 344479-01-000

- 60C POP TOP-SLEEPNG CUSTOM
- 60B POP TOP-SLEEPING WITHOUT
- 60A POP TOP-SLEEPING
- 265 CODES/STANDARDS-CSA/CMVSS
- 1B1 CODES/STANDARDS USA
- 1B1 265

COPYRIGHT 2024 WINNEBAGO INDUSTRIES, INC.

DSNR:		
DFTR:		
UNSPECIFIED TOLERANCES:		MATERIAL:
WHOLE DIM (X)	± 3	
ONE-PLACE (X.X)	± 1.5	
TWO-PLACE (X.XX)	± 0.50	
ANGLE	± 1°	
REFER TO ES0018 FOR FASTENER TIGHTENING GUIDELINES		WEIGHT: (LBS)
		FIRST USED:
		20 T59P
DESCRIPTION:		
WIRING INSTL-CHASSIS		
SHEET:	ITEM/PART NO:	REV
1 OF 4	000186850 / 33513901000	
REF:		

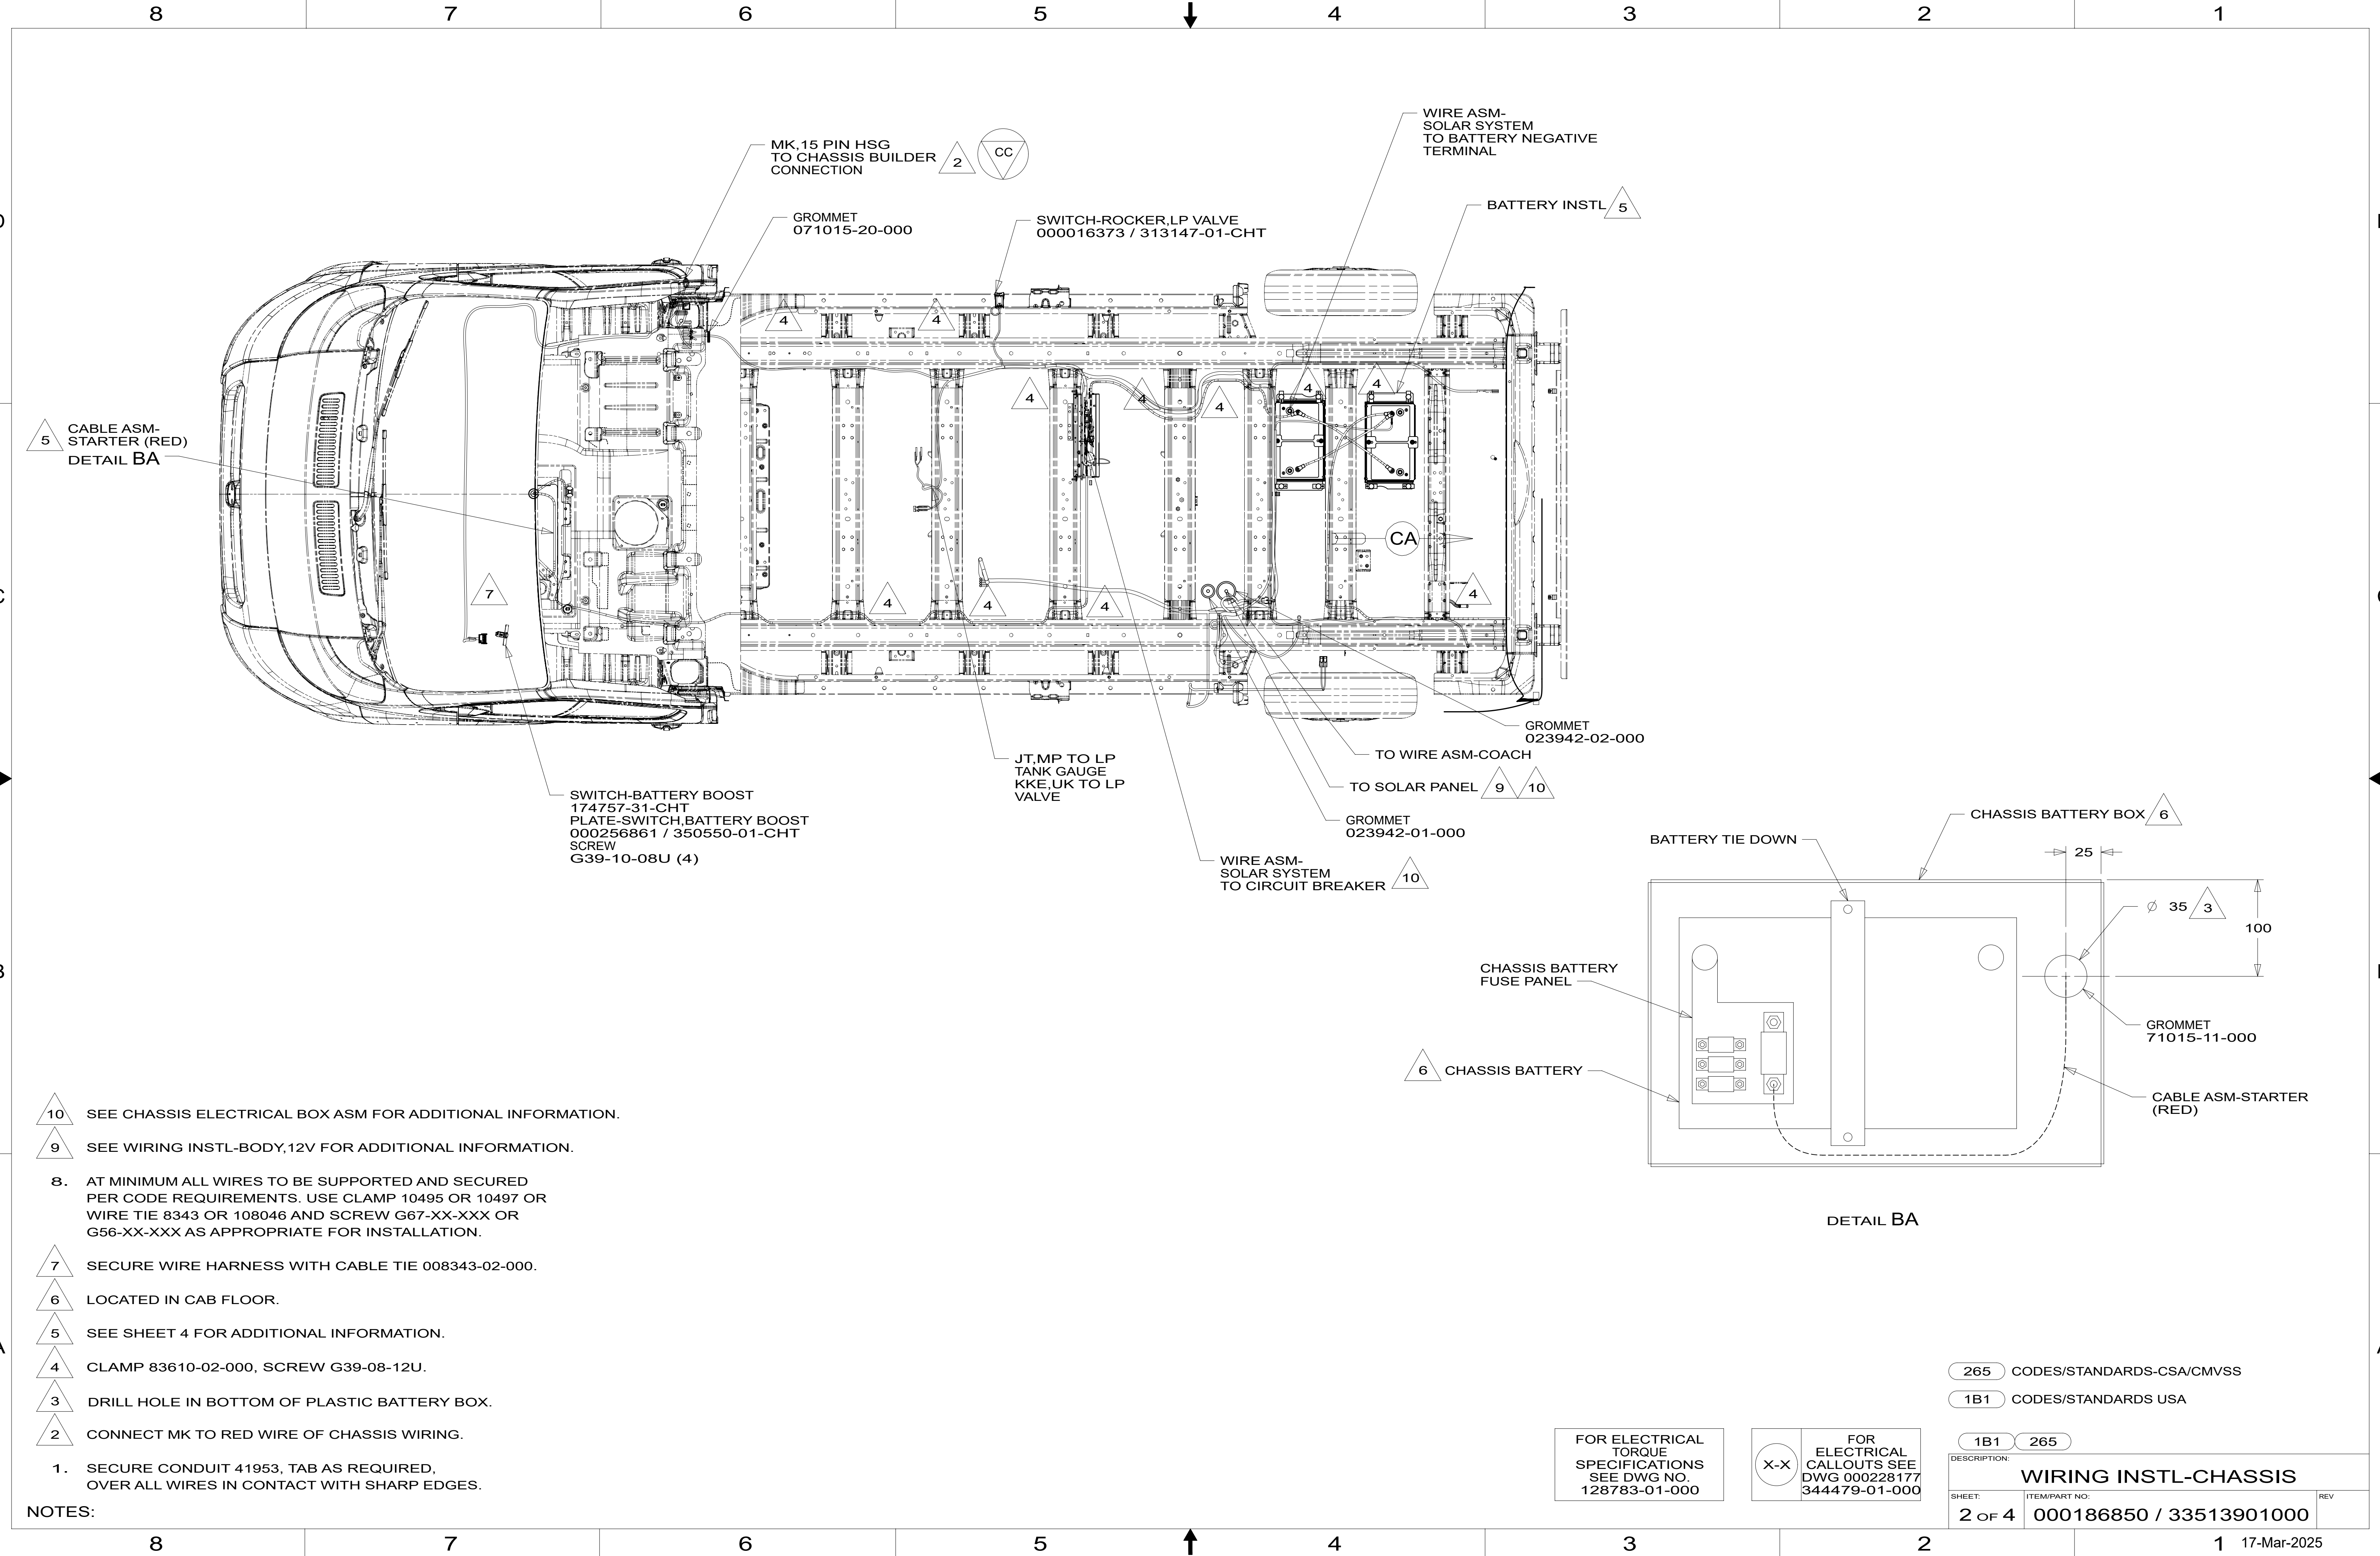

- 10 SEE CHASSIS ELECTRICAL BOX ASM FOR ADDITIONAL INFORMATION.
- 9 SEE WIRING INSTL-BODY, 12V FOR ADDITIONAL INFORMATION.
8. AT MINIMUM ALL WIRES TO BE SUPPORTED AND SECURED PER CODE REQUIREMENTS. USE CLAMP 10495 OR 10497 OR WIRE TIE 8343 OR 108046 AND SCREW G67-XX-XXX OR G56-XX-XXX AS APPROPRIATE FOR INSTALLATION.
- 7 SECURE WIRE HARNESS WITH CABLE TIE 008343-02-000.
- 6 LOCATED IN CAB FLOOR.
- 5 SEE SHEET 4 FOR ADDITIONAL INFORMATION.
- 4 CLAMP 83610-02-000, SCREW G39-08-12U.
- 3 DRILL HOLE IN BOTTOM OF PLASTIC BATTERY BOX.
- 2 CONNECT MK TO RED WIRE OF CHASSIS WIRING.
1. SECURE CONDUIT 41953, TAB AS REQUIRED, OVER ALL WIRES IN CONTACT WITH SHARP EDGES.

NOTES:


FOR ELECTRICAL
TORQUE
SPECIFICATIONS
SEE DWG NO.
128783-01-000


FOR
ELECTRICAL
CALLOUTS SEE
DWG 000228177
344479-01-000

265 CODES/STANDARDS-CSA/CMVSS

1B1 CODES/STANDARDS USA

DESCRIPTION:		
1B1 265		
WIRING INSTL-CHASSIS		
SHEET:	ITEM/PART NO:	REV
2 OF 4	000186850 / 33513901000	

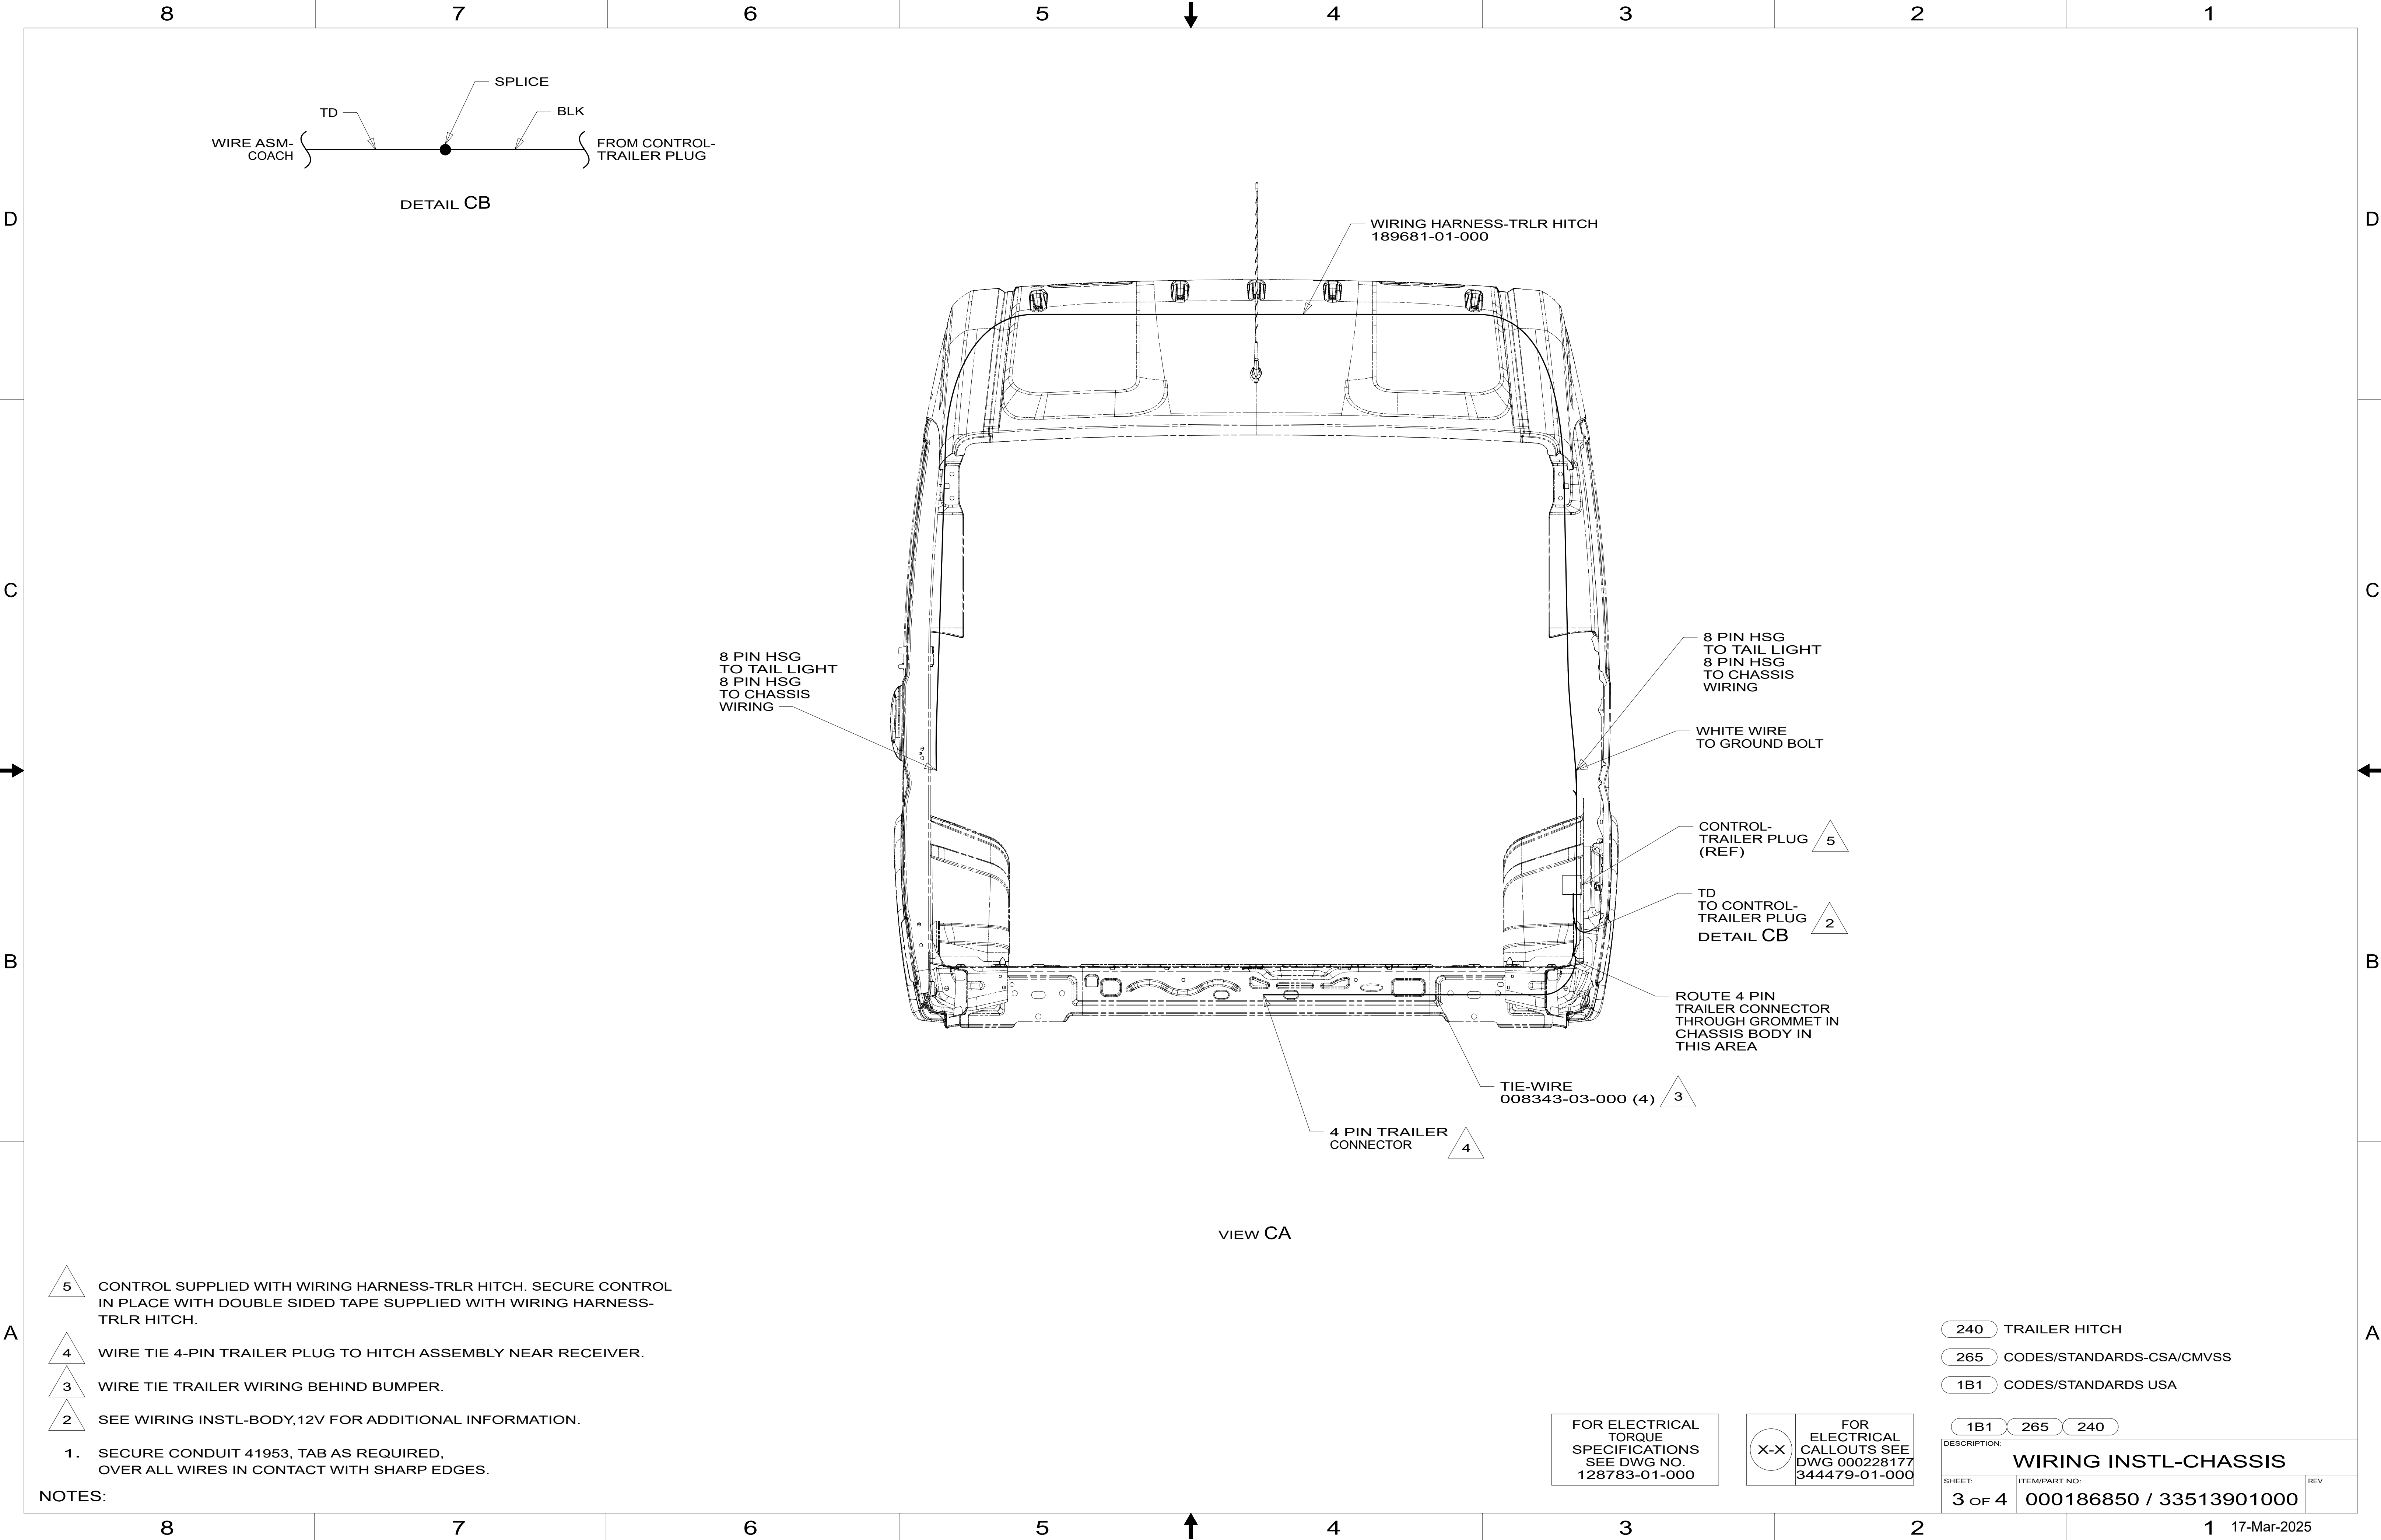

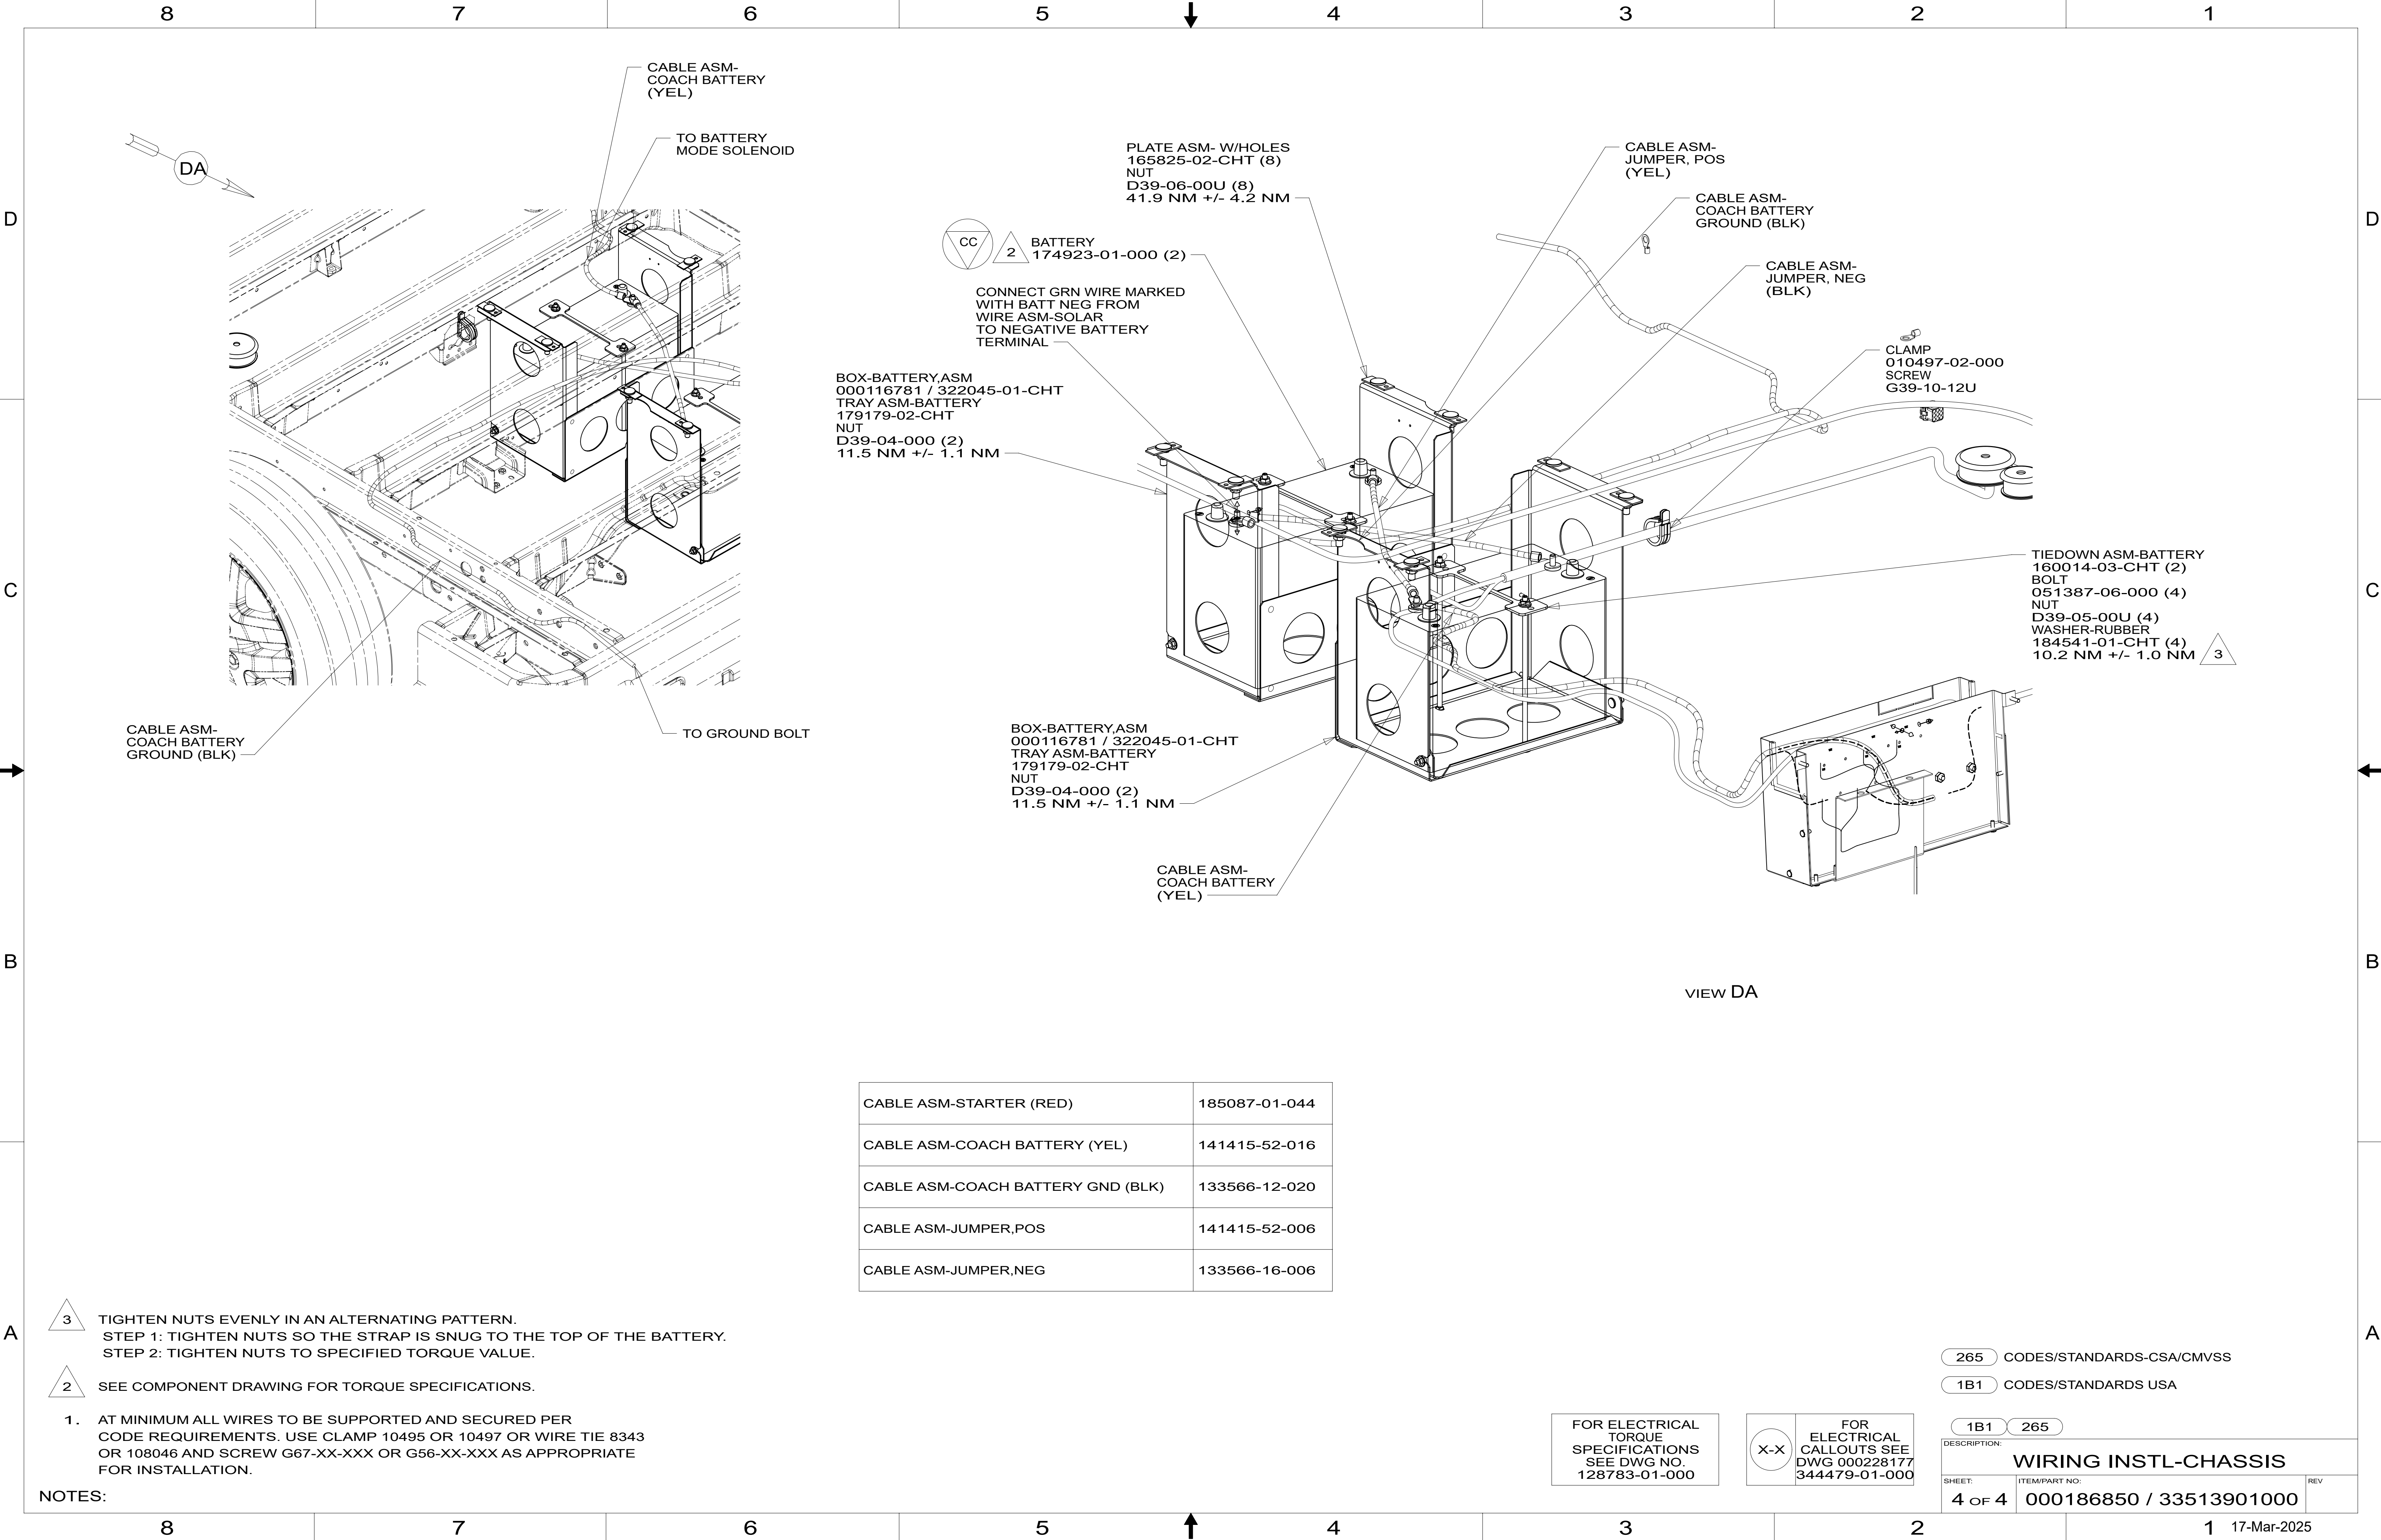

CABLE ASM-STARTER (RED)	185087-01-044
CABLE ASM-COACH BATTERY (YEL)	141415-52-016
CABLE ASM-COACH BATTERY GND (BLK)	133566-12-020
CABLE ASM-JUMPER,POS	141415-52-006
CABLE ASM-JUMPER,NEG	133566-16-006

- 3

TIGHTEN NUTS EVENLY IN AN ALTERNATING PATTERN.
STEP 1: TIGHTEN NUTS SO THE STRAP IS SNUG TO THE TOP OF THE BATTERY.
STEP 2: TIGHTEN NUTS TO SPECIFIED TORQUE VALUE.
- 2

SEE COMPONENT DRAWING FOR TORQUE SPECIFICATIONS.

- NOTES:
1. AT MINIMUM ALL WIRES TO BE SUPPORTED AND SECURED PER CODE REQUIREMENTS. USE CLAMP 10495 OR 10497 OR WIRE TIE 8343 OR 108046 AND SCREW G67-XX-XXX OR G56-XX-XXX AS APPROPRIATE FOR INSTALLATION.

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000

FOR ELECTRICAL CALLOUTS SEE DWG 000228177 344479-01-000

265 CODES/STANDARDS-CSA/CMVSS

1B1 CODES/STANDARDS USA

1B1 265

DESCRIPTION:

WIRING INSTL-CHASSIS

SHEET:

ITEM/PART NO:

REV

4 OF 4

000186850 / 33513901000

1 17-Mar-2025