


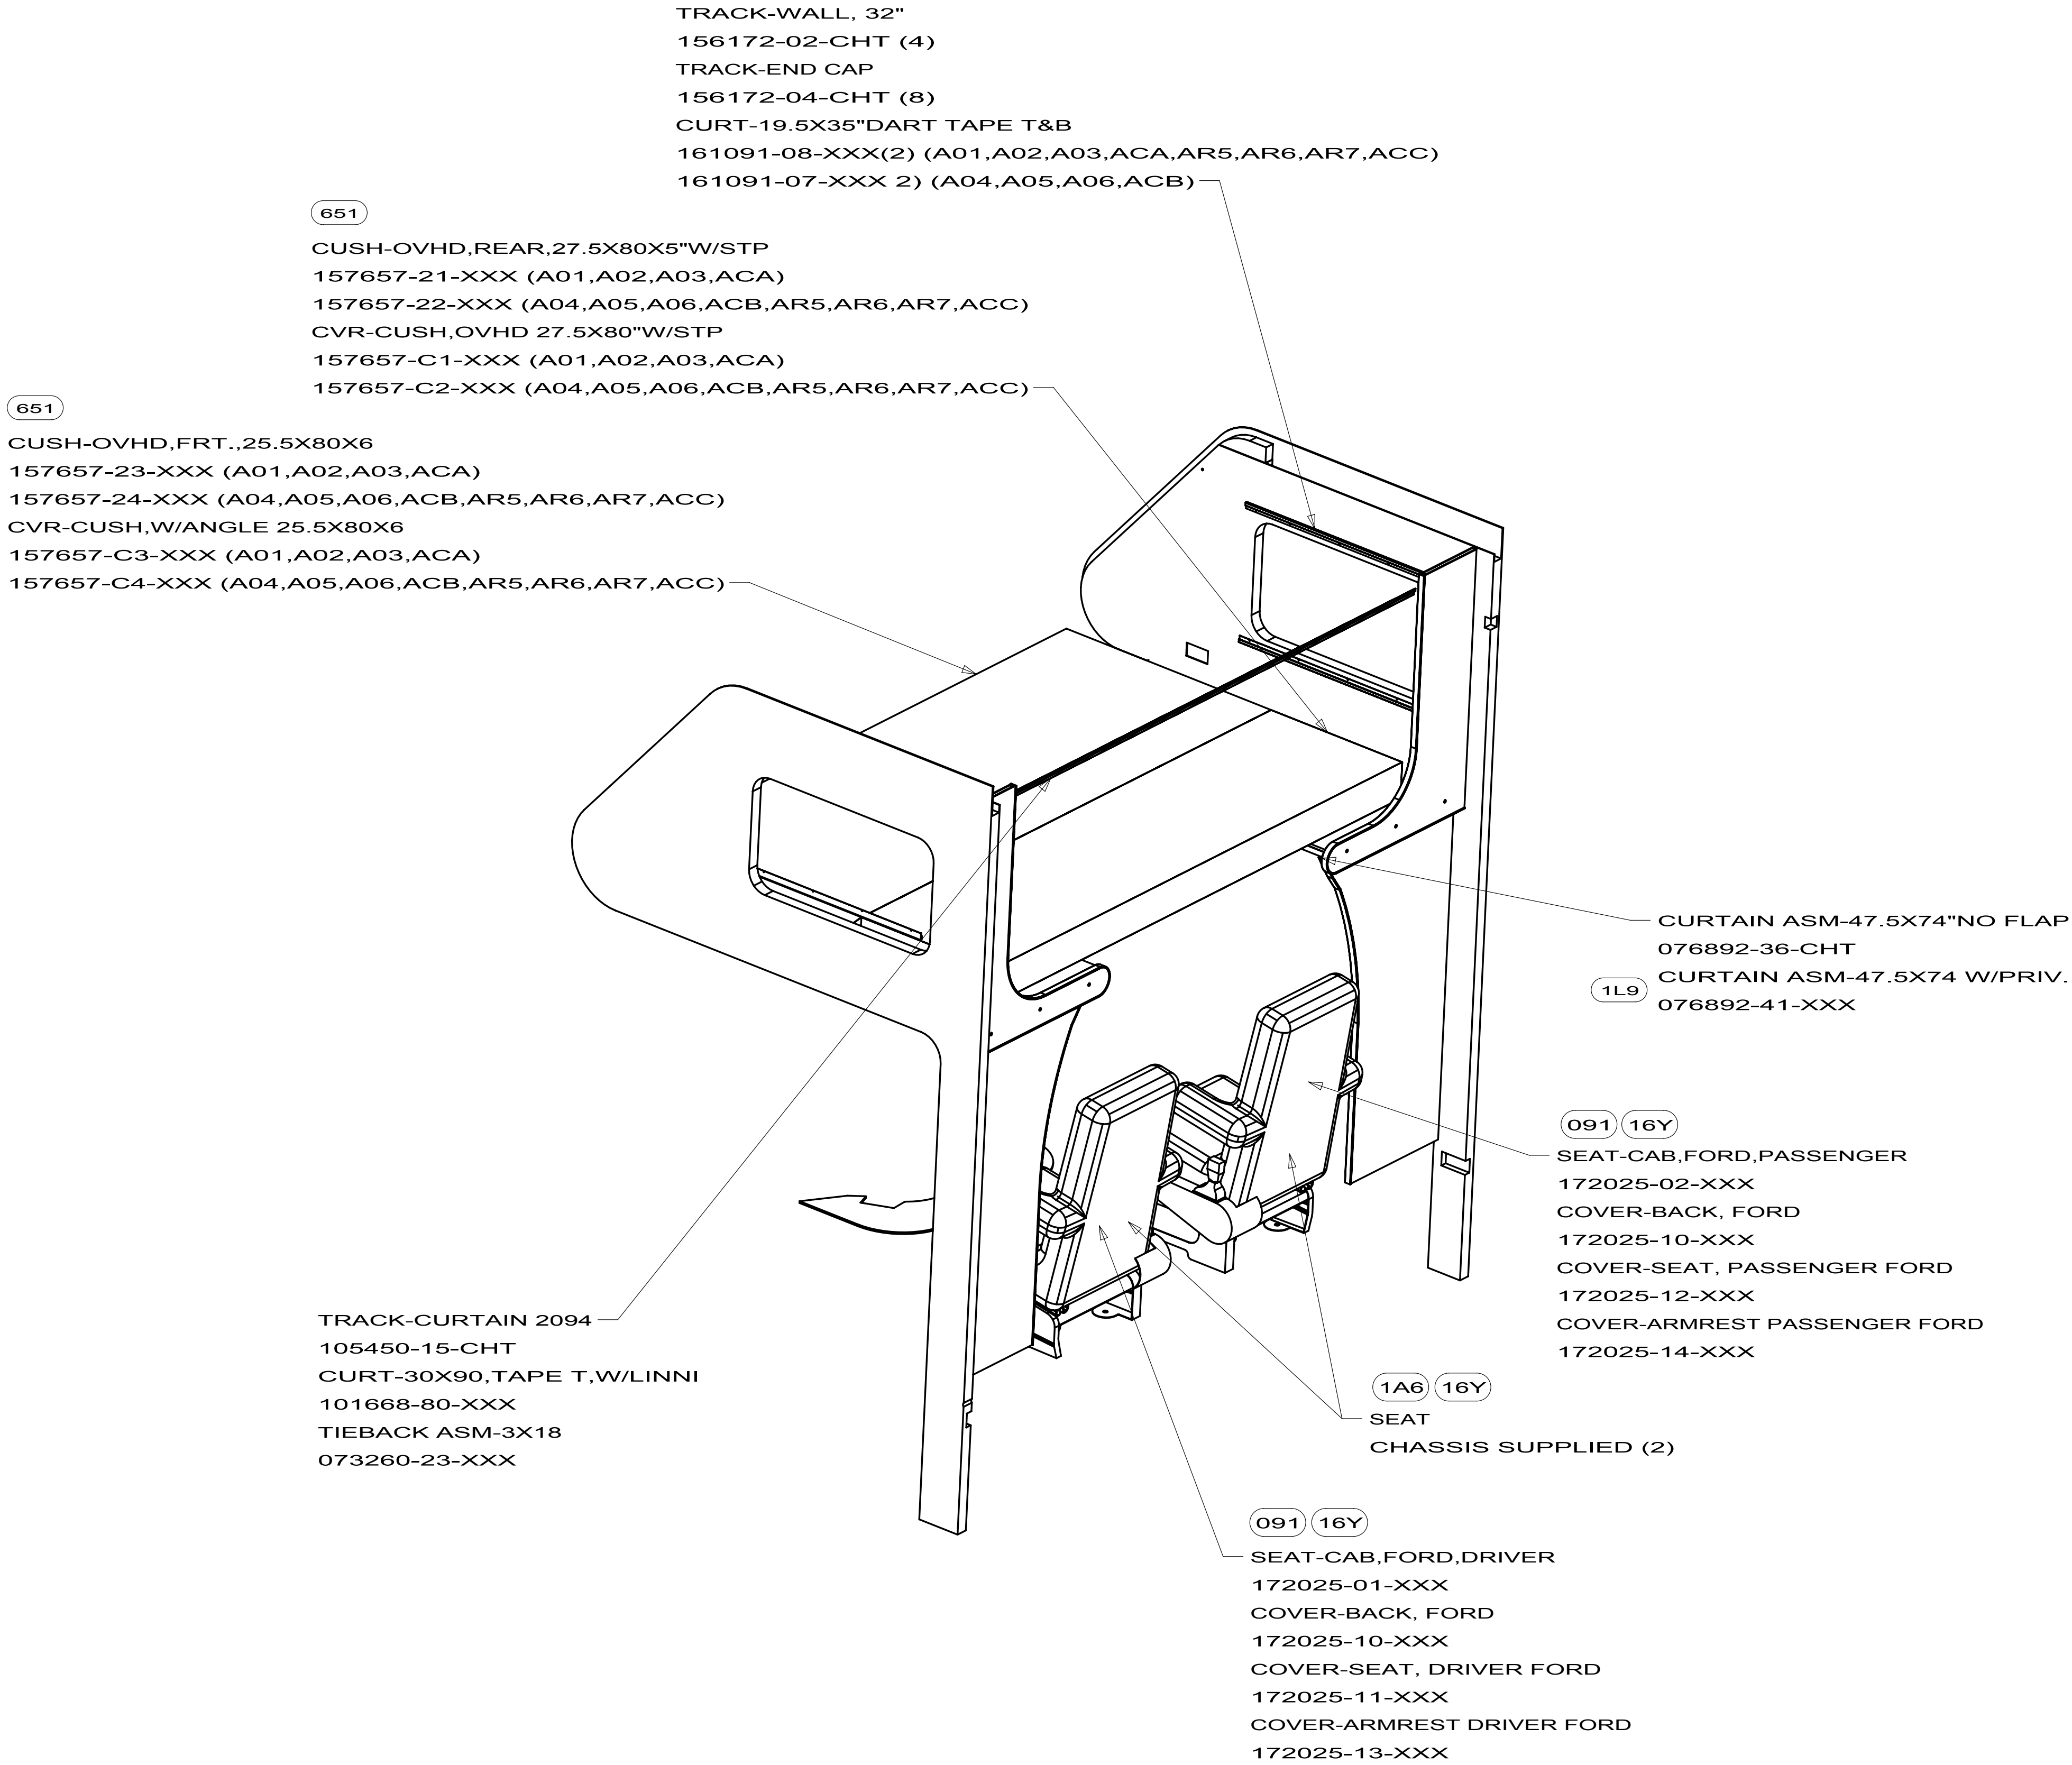



WIN 170583-03
231J



2. WINNEBAGO COLORS:
- A01 BEECHNUT (SIERRA MAPLE)
 - A02 BEECHNUT (BELMONT MAPLE)
 - A03 BEECHNUT (FOREST CHERRY)
 - ACA BEECHNUT (SIERRA MAPLE W/COFFEE GLAZE)
 - A04 AUTUMN MOSS (SIERRA MAPLE)
 - A05 AUTUMN MOSS (BELMONT MAPLE)
 - A06 AUTUMN MOSS (FOREST CHERRY)
 - ACB AUTUMN MOSS (SIERRA MAPLE W/COFFEE GLAZE)
 - AR5 SILVER ICE (SIERRA MAPLE)
 - AR6 SILVER ICE (BELMONT MAPLE)
 - AR7 SILVER ICE (FOREST CHERRY)
 - ACC SILVER ICE (SIERRA MAPLE W/COFFEE GLAZE)

- 091 CAB SEATS-ULTRALEATHER
- 16Y FORD CHASSIS 14,500 LB.GVWR
- 1L9 ENTERTAINMENT CENTER-CABOVER
- 651 BUNK FRONT OVERHEAD-SINGLE
- 1A6 SEATS-DRIVER/PASSENGER
- WIN WINNEBAGO ONLY

09 231J

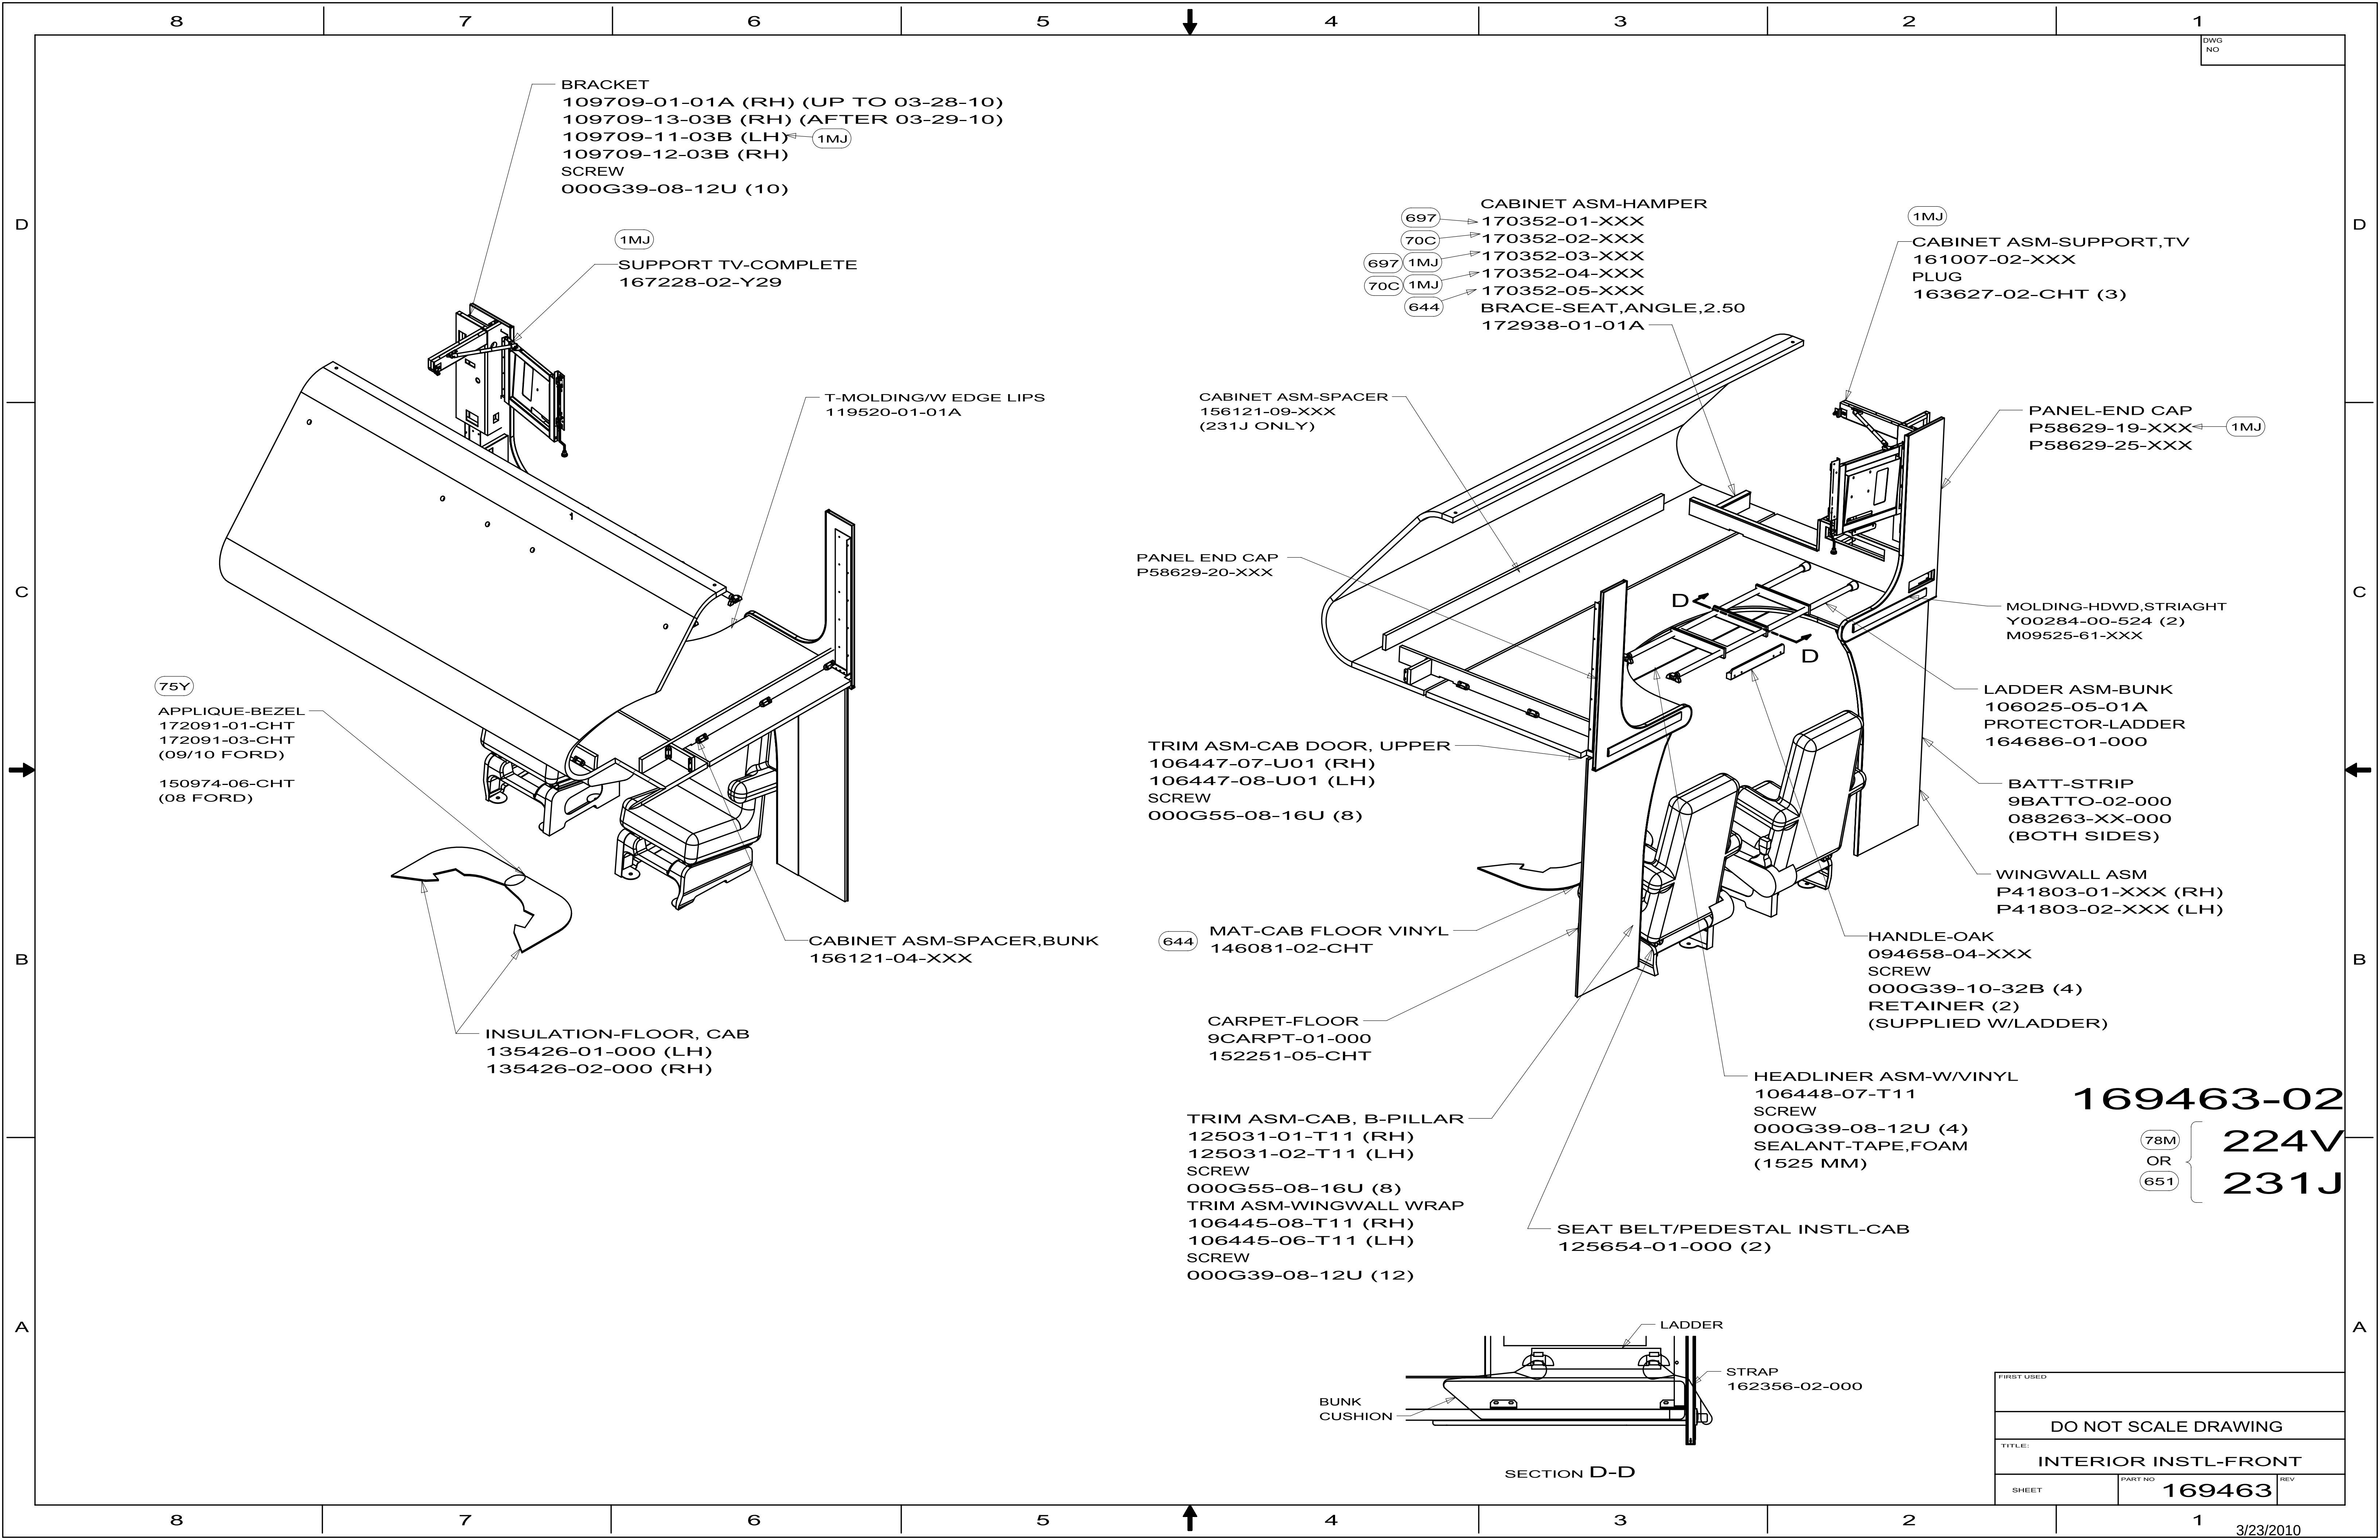


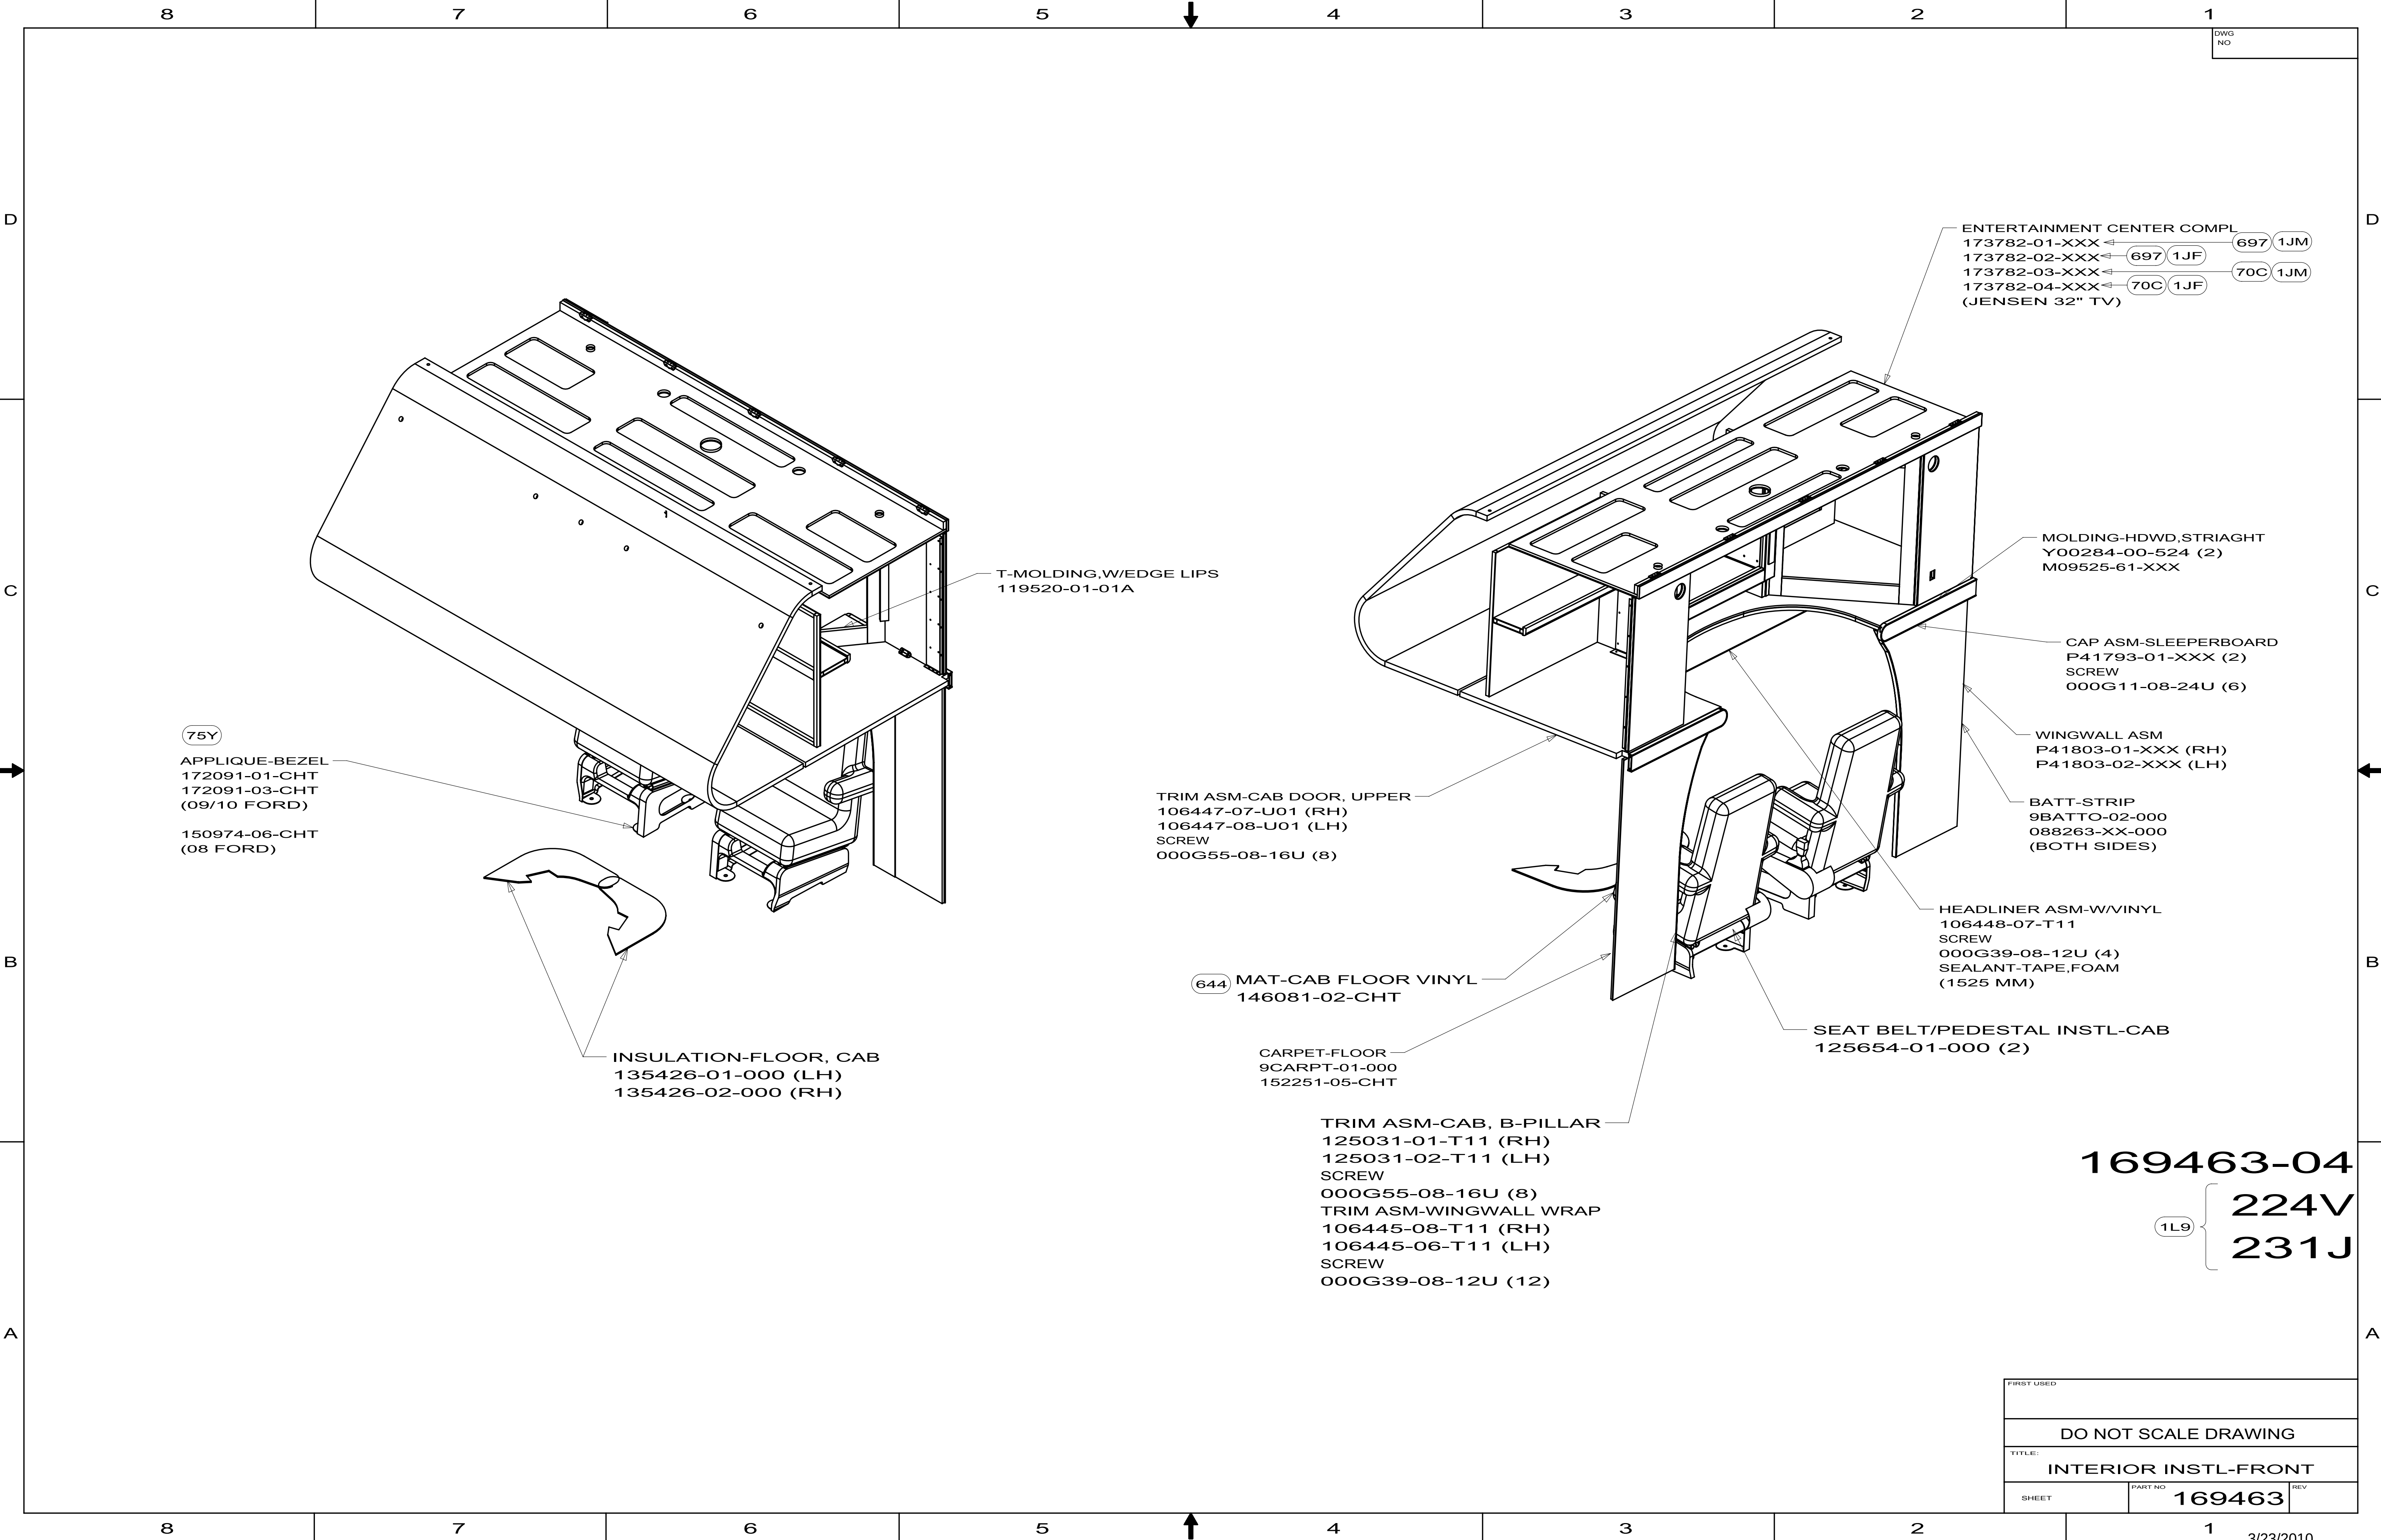

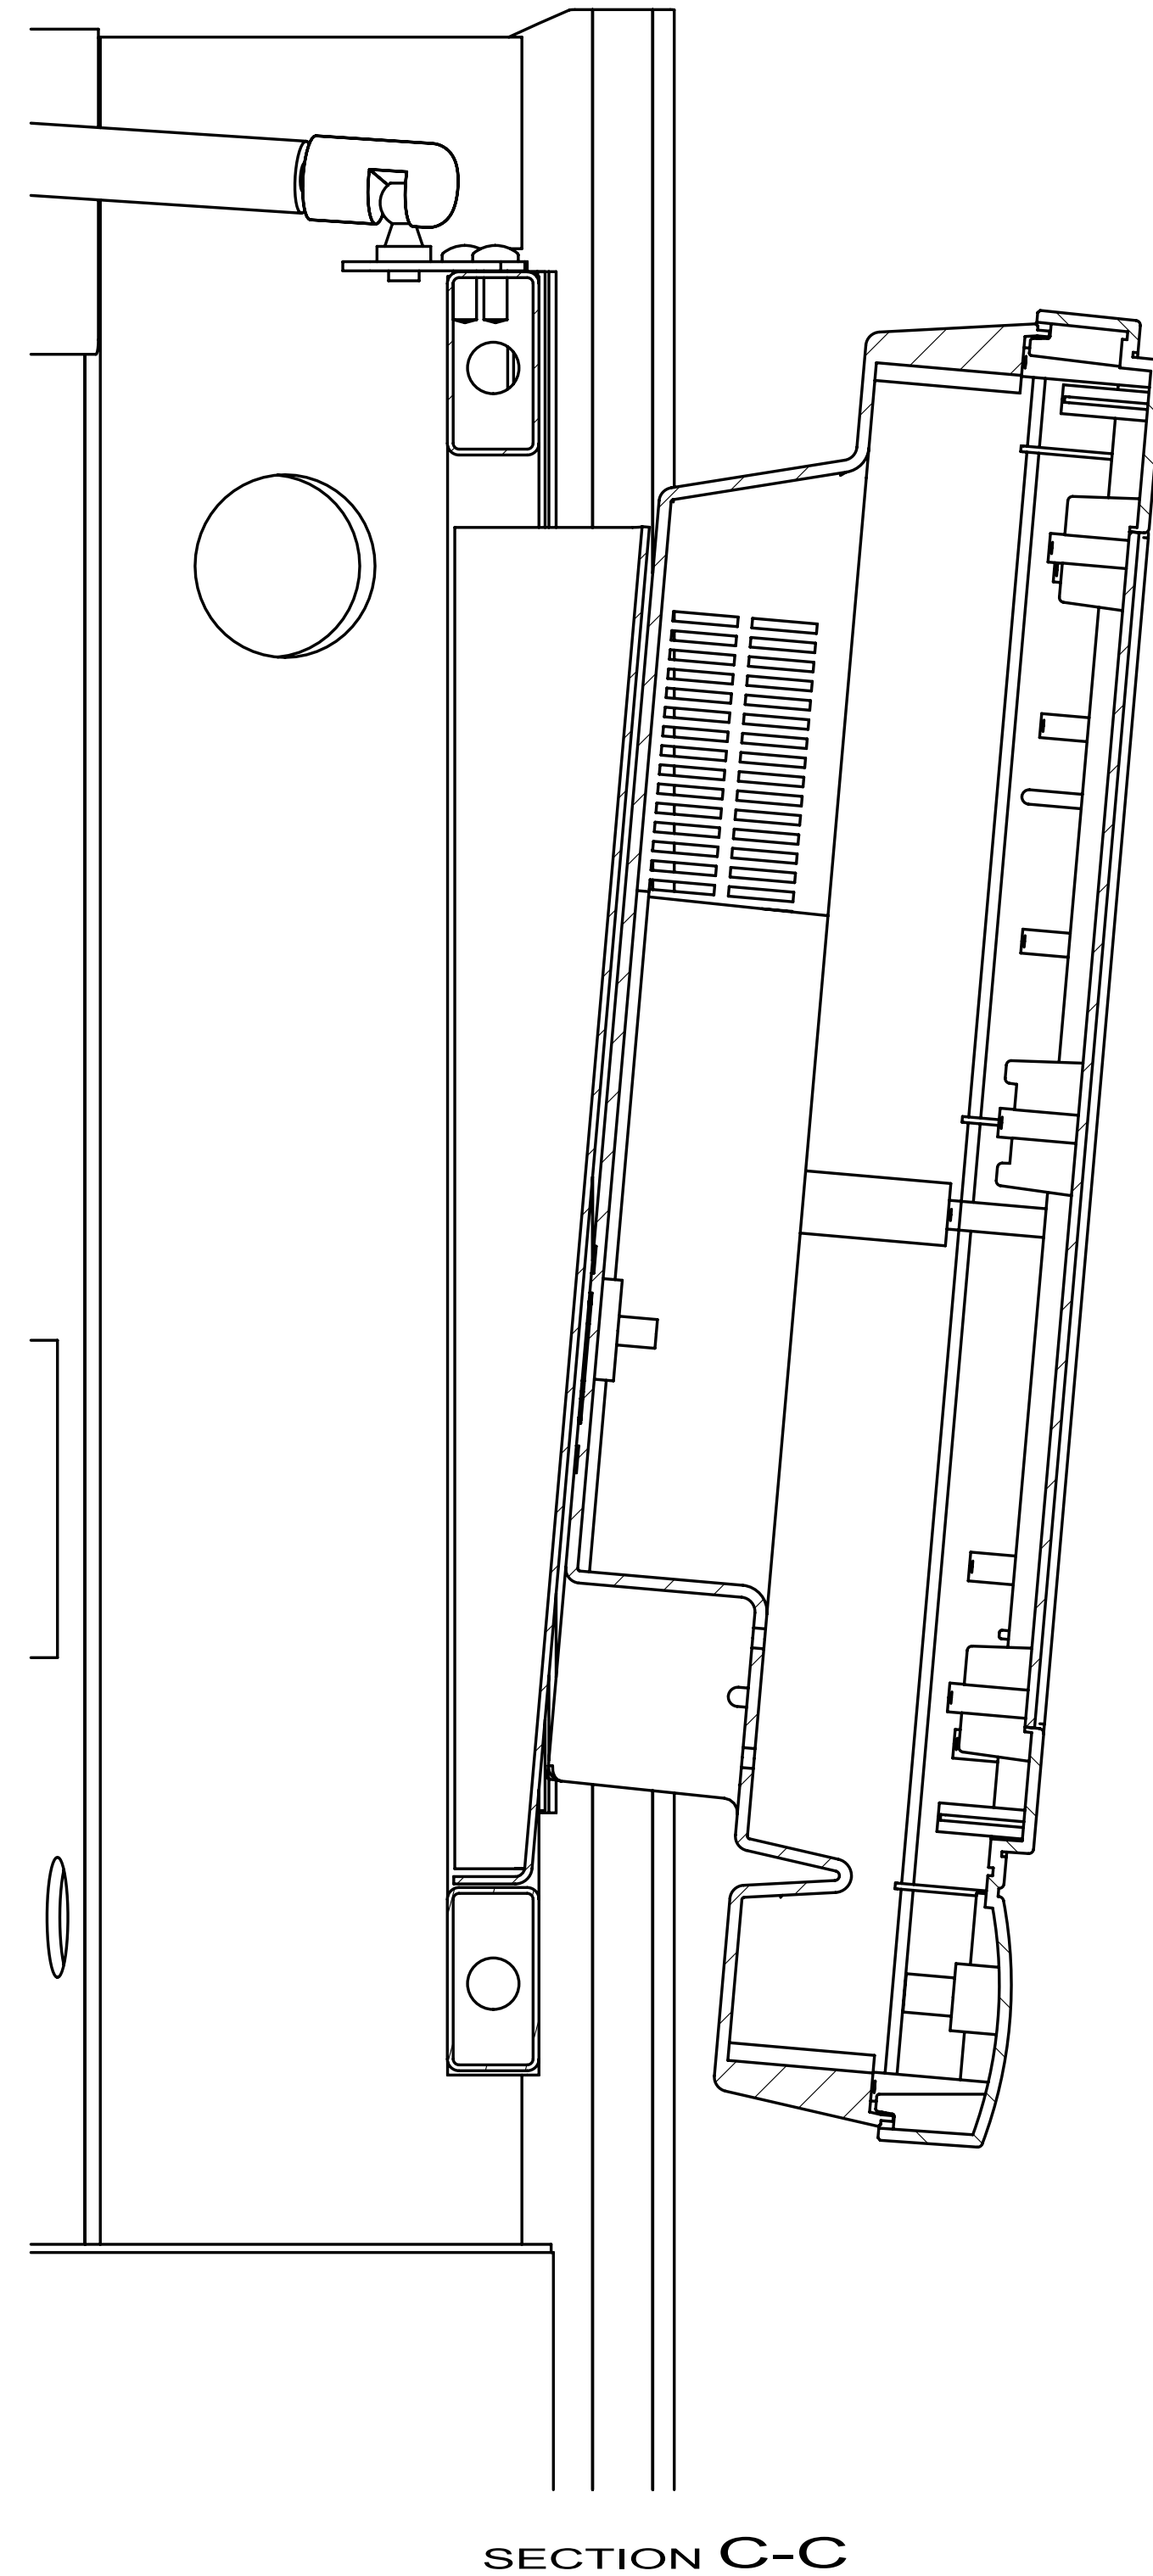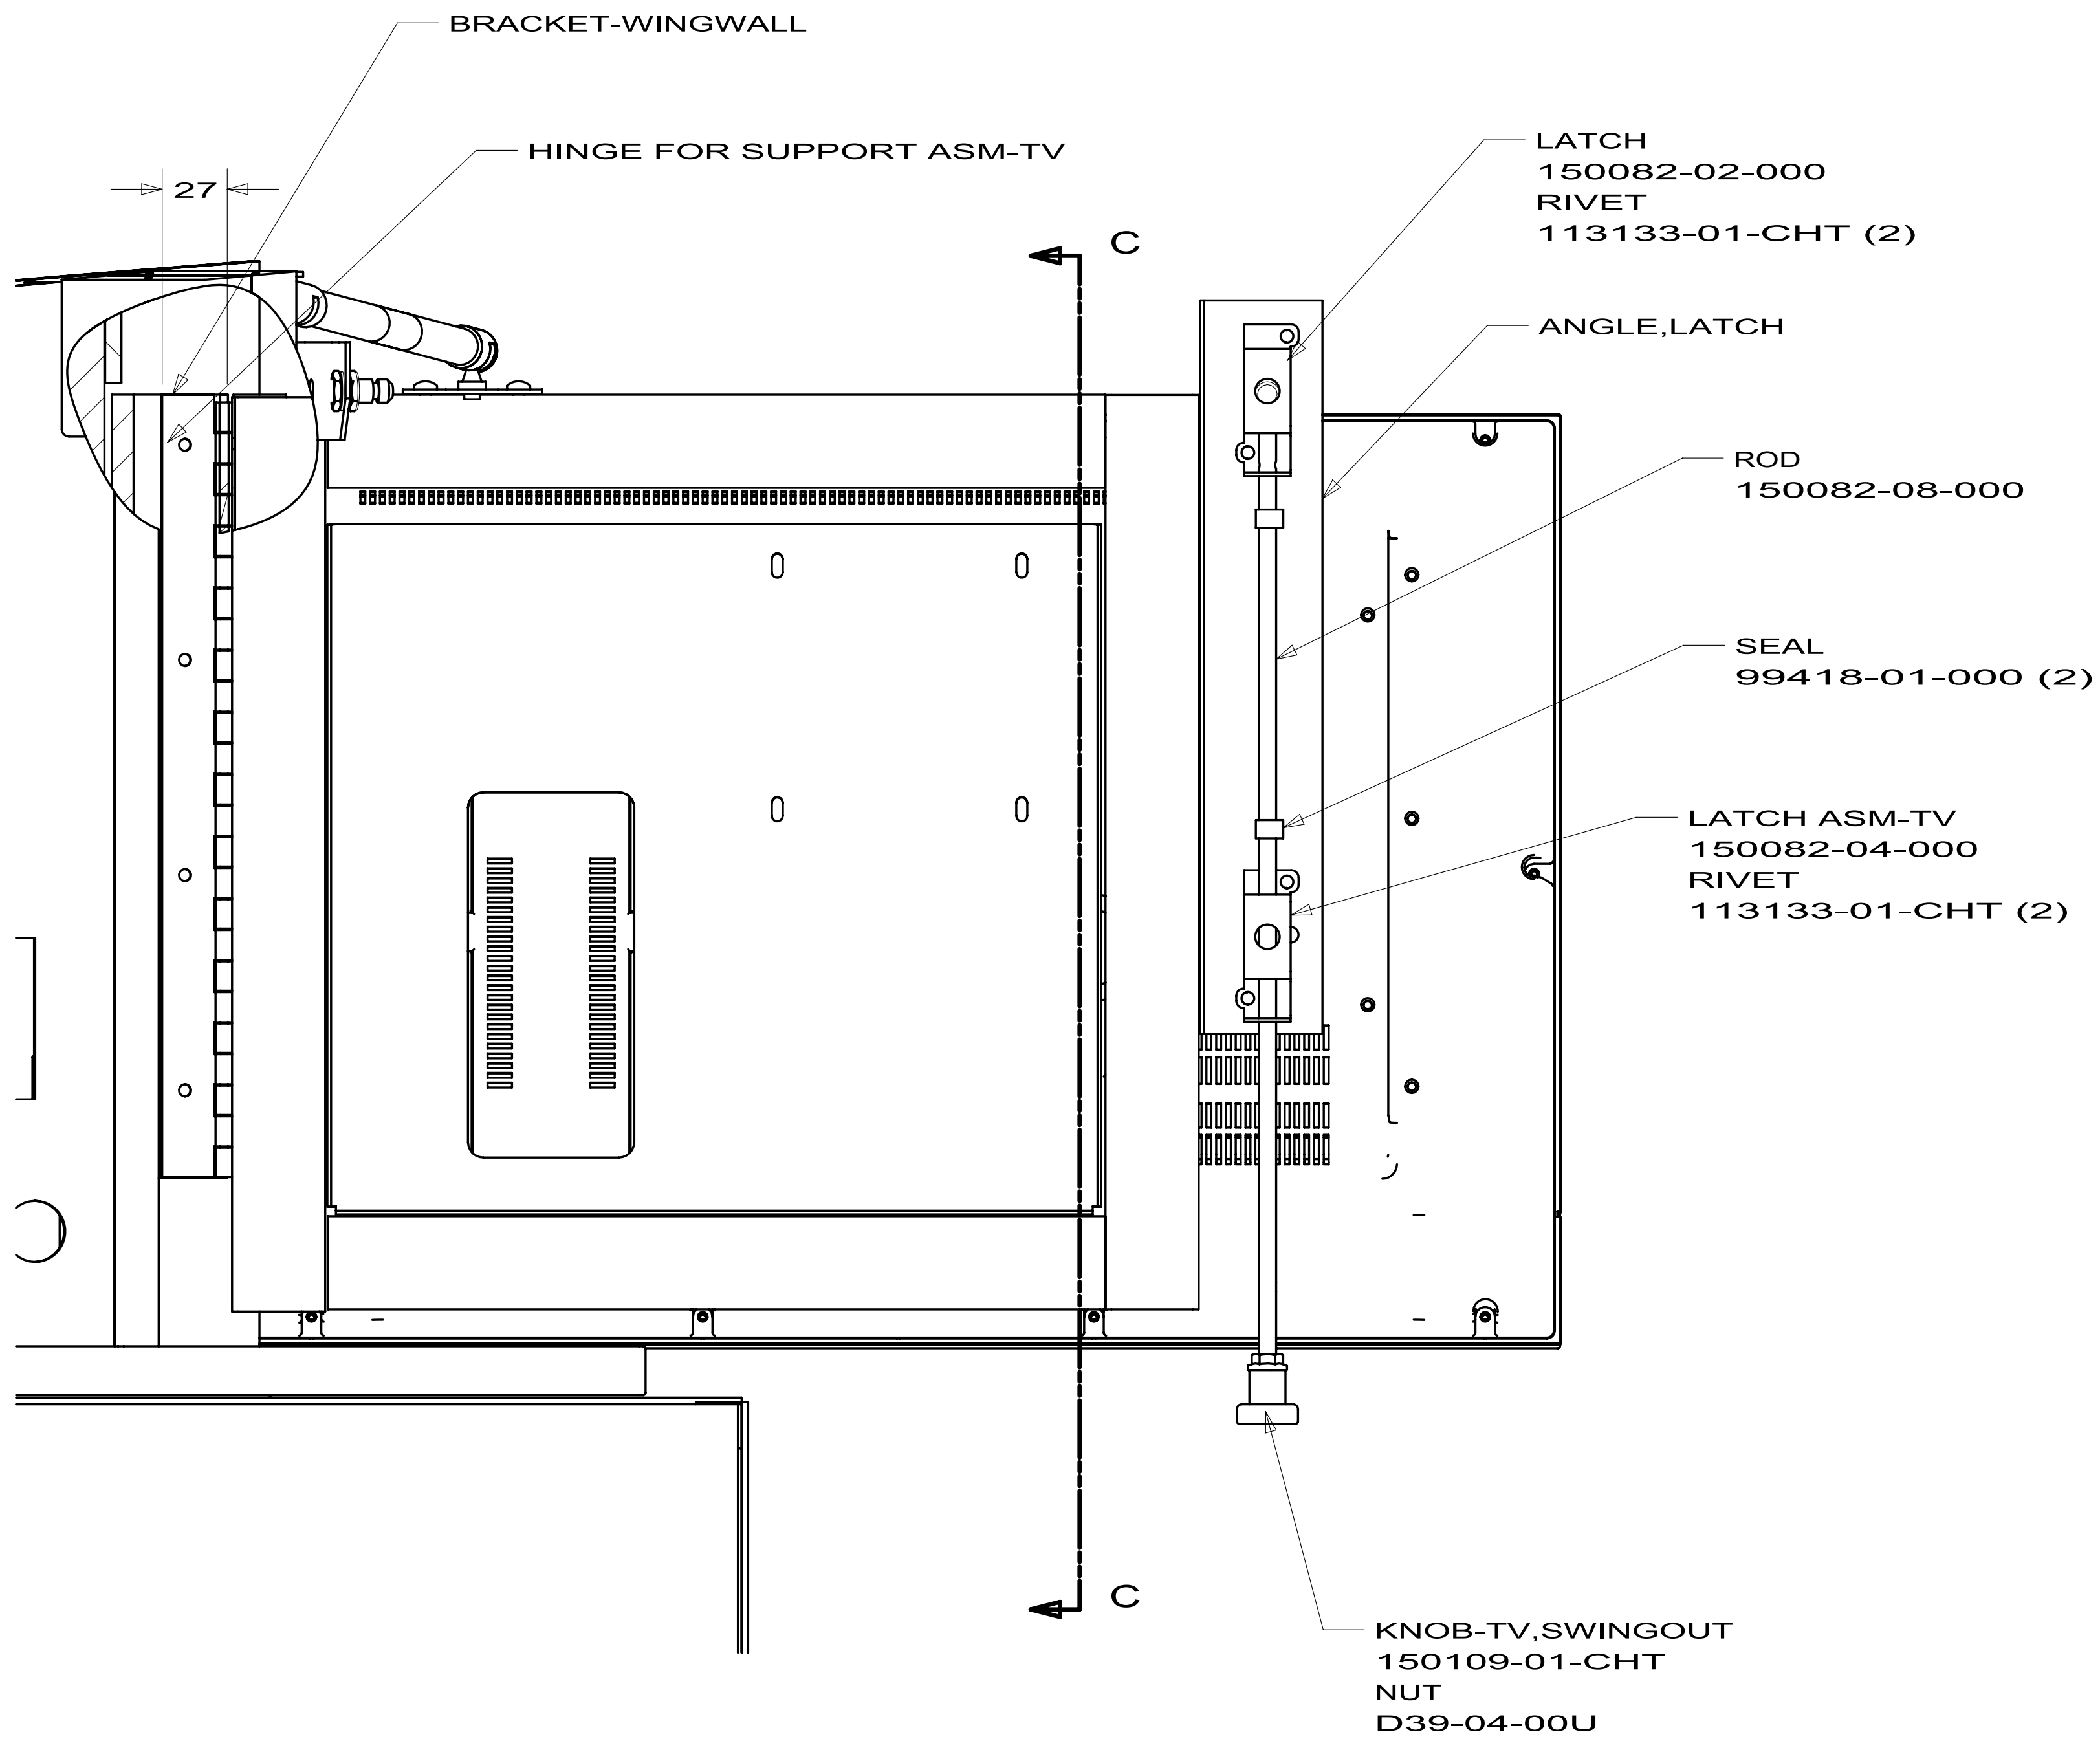

FIRST USED		
09 300-SERIES		
DO NOT SCALE DRAWING		
TITLE:		
SUPPORT-COMPL,TV		
SHEET 1	PART NO	REV
	167228	



BRACKET-GAS SPRING
126263-08-CHT
SCREW
G39-10-08U (3)

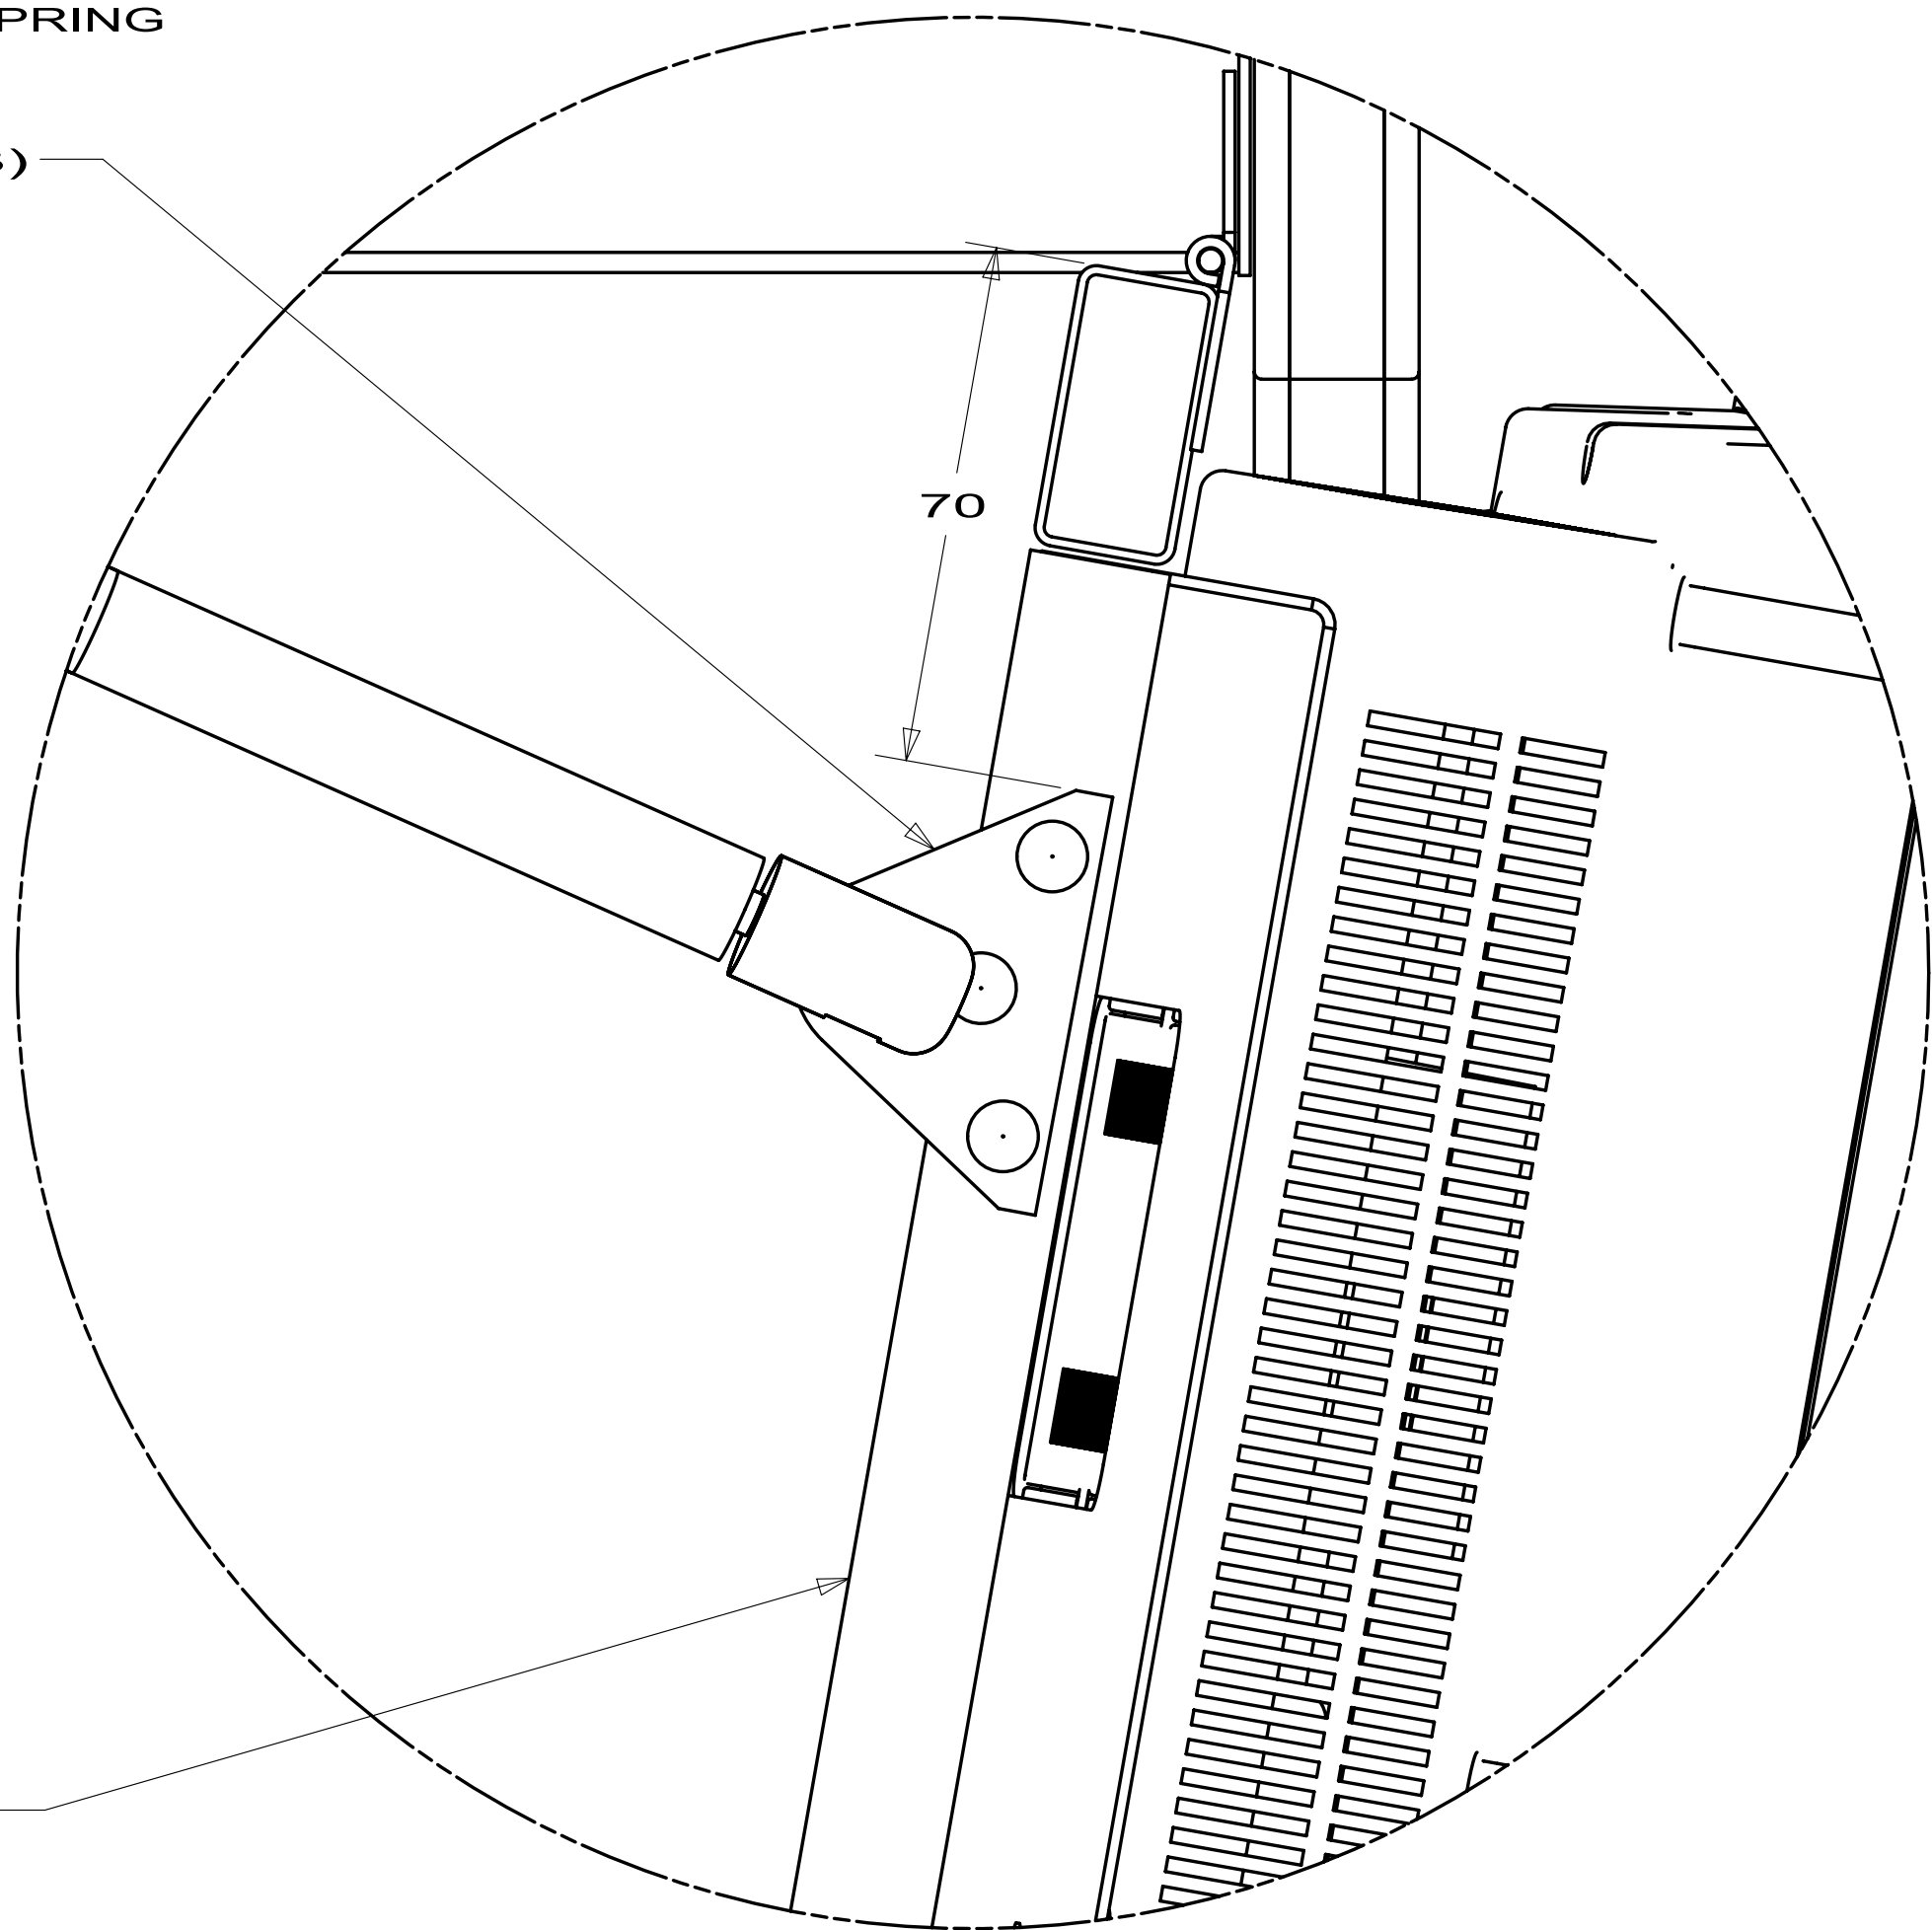

DETAIL D

SUPPORT ASM


FIRST USED		
09 300-SERIES		
DO NOT SCALE DRAWING		
TITLE:		
SUPPORT-COMPL,TV		
SHEET 2	PART NO 167228	REV

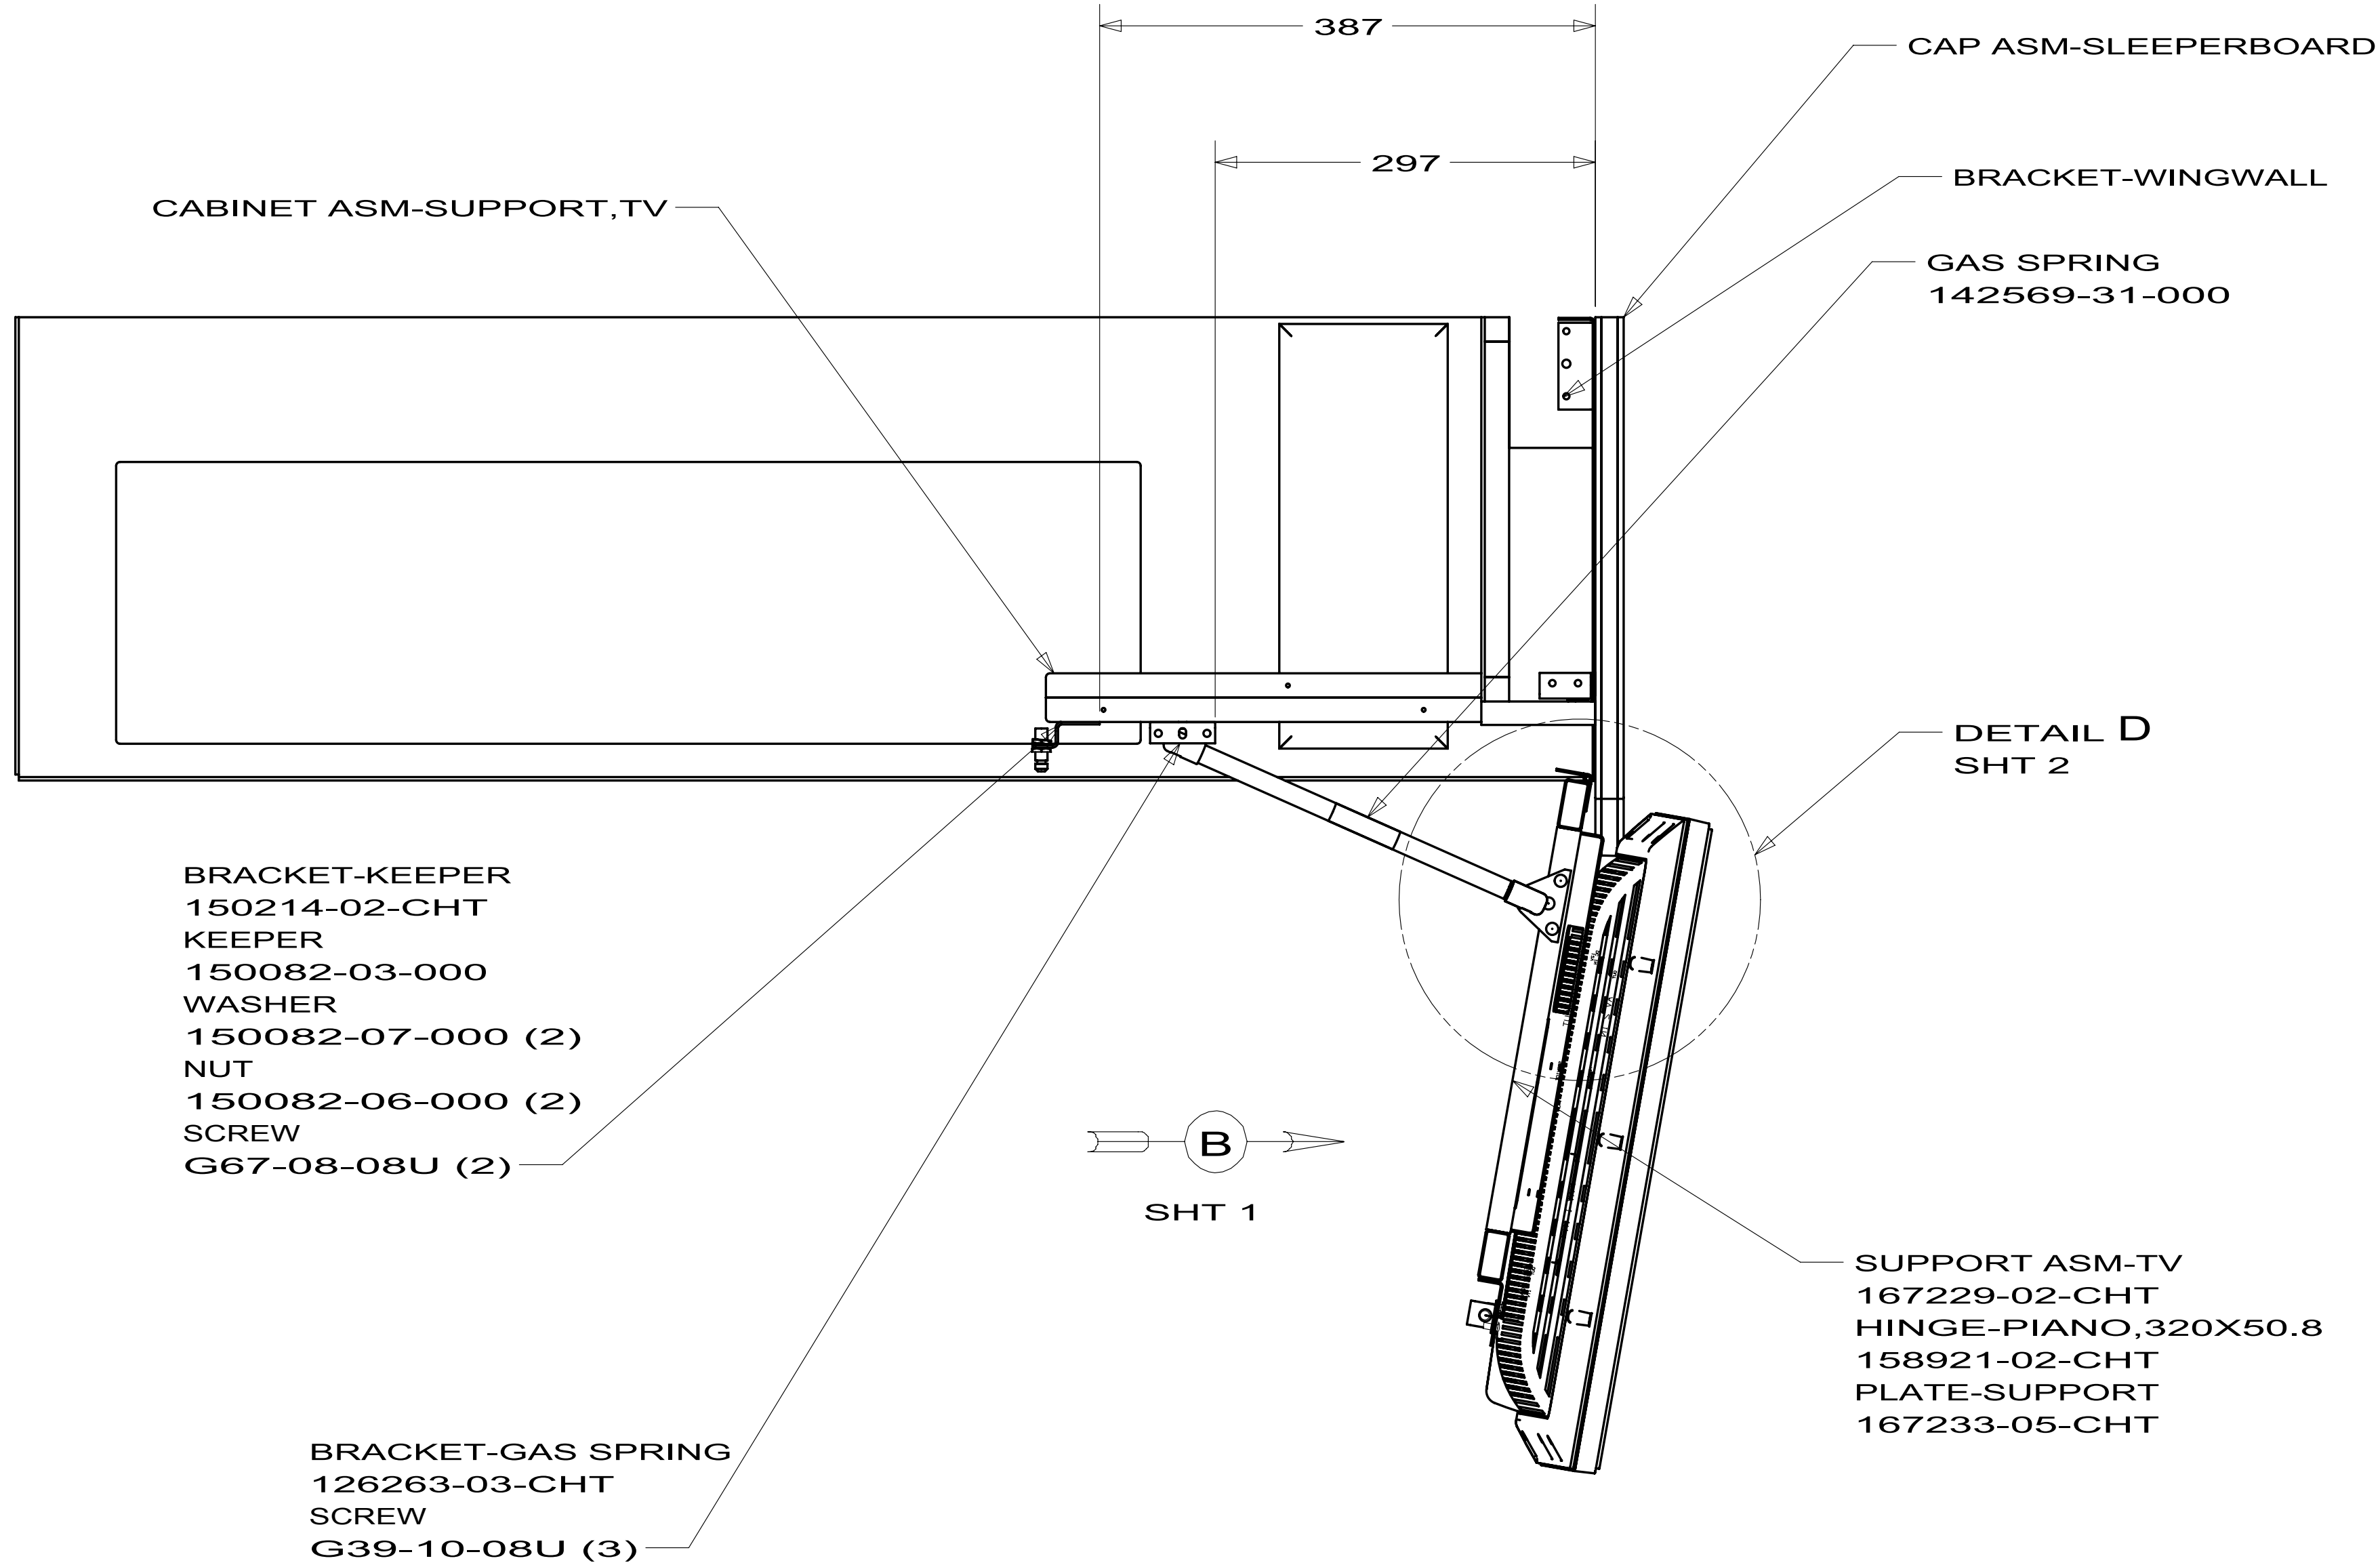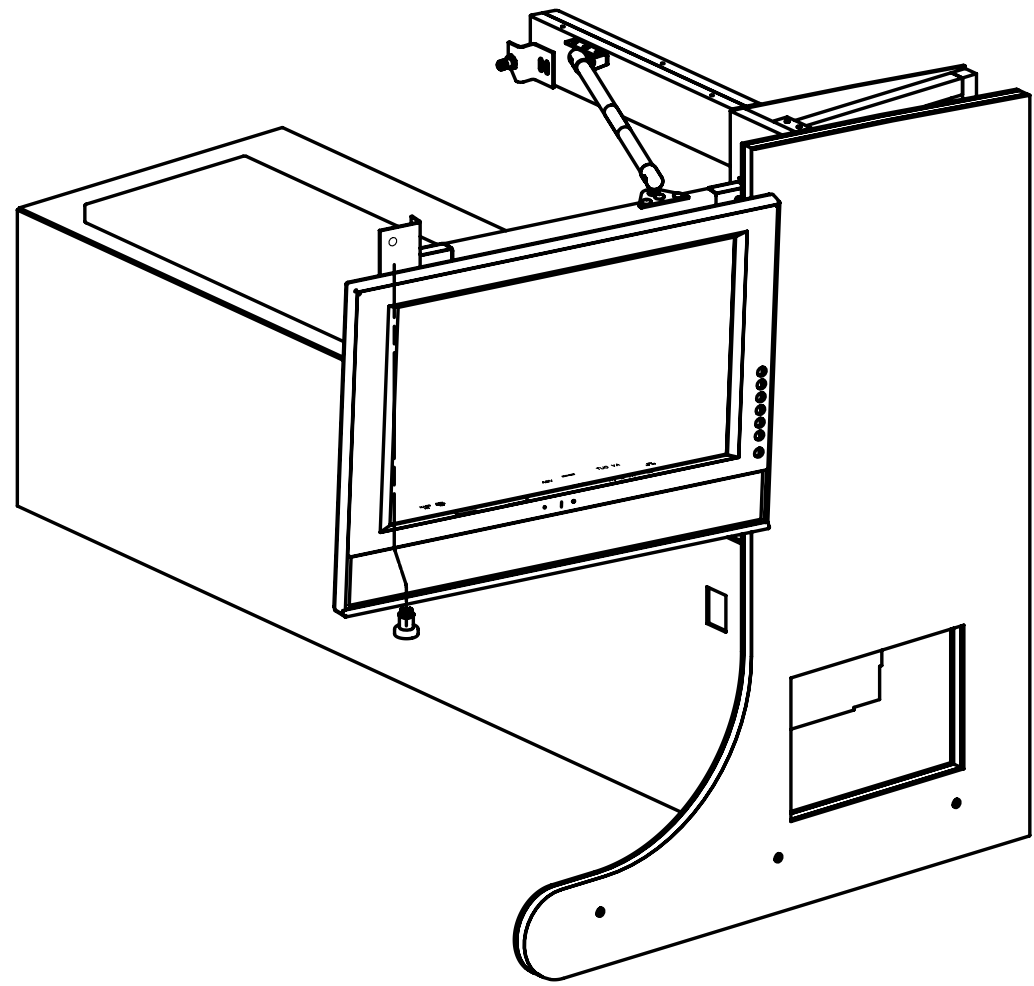

FIRST USED		
09 300-SERIES		
DO NOT SCALE DRAWING		
TITLE:		
SUPPORT-COMPL,TV		
SHEET 3	PART NO	REV
	167228	

8			7		
DWG NO	DETAIL	SHT	DETAIL	DETAIL	STICK
168241-01	B	1	----	----	NO
168241-02	L	3	----	----	NO
168241-03	AC	1	----	----	NO
168241-04	AD	3	----	----	NO
168241-05	AG	3	AE	AF	YES
168241-06	AH	3	AE	AF	YES

RELEASE		REV	DATE	DWG NO		168241	
REV	ZONE	REVISION RECORD		DATE	DFT-ORIG		

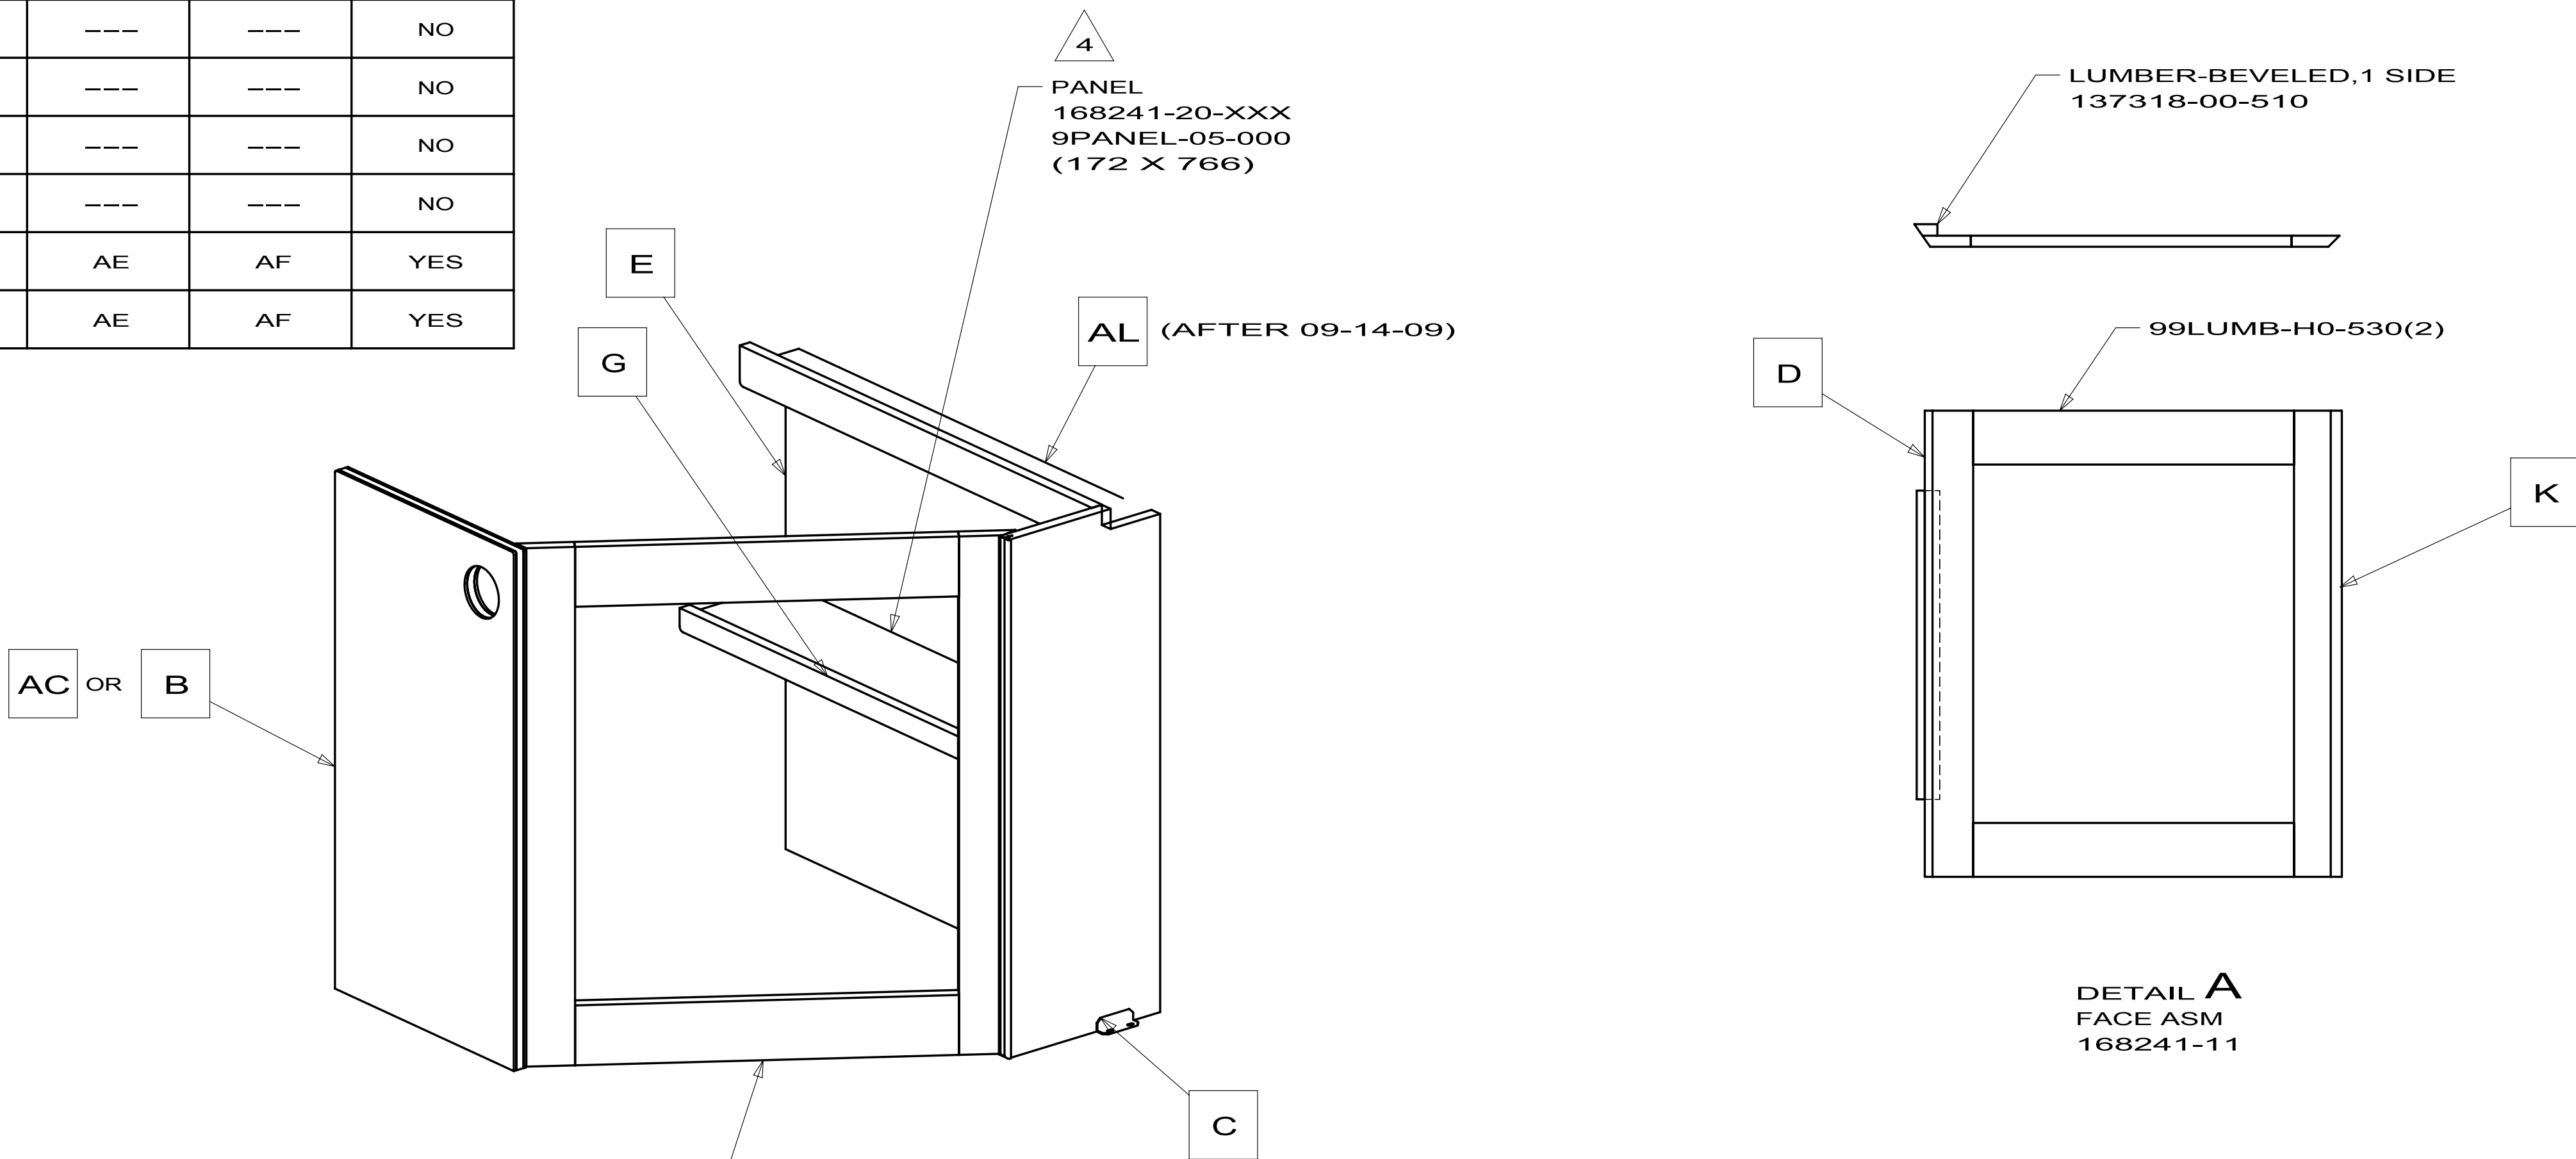

DETAIL AC
PANEL ASM
168241-49

DETAIL B
PANEL ASM
168241-12

DETAIL C
PANEL ASM-END CAP
P68241-13-XXX


DETAIL D
LUMBER
168241-16


7. INSTALL DURING INSTALLATION OF CABINET.
6. STAIN AND FINISH PER ES0022.
5. TO BE REMOVABLE.
4. FASTEN BY TACK NAILING CORNERS DURNING ASM.

3. FOR LAMINATION AND FASTENING SEE ES0006.
2. LUMBER 52371 MAY BE USED IN PLACE OF 52372.

1. OVERALL CABINET DIMENSIONS INCLUDE PANELING (DO NOT INCLUDE MOLDING).









NOTES:

WINNEBAGO® INDUSTRIES		COPYRIGHT 2009 WINNEBAGO INDUSTRIES, INC.			
DFT-ORIG		ORIG. DATE			
CHK-OR		ALL DIMENSIONS ARE IN MILLIMETERS			
P.E.		FIRST USED			
M.E.		09 200-SERIES			
DSNR		UNSPECIFIED TOLERANCES ARE:			
WHOLE DIM (X) ± 1.5		MATERIAL:			
ONE-PLACE (X.X) ± 0.8					
TWO-PLACE (X.XX) ±					
ANGLE ±					
THIRD ANGLE PROJECTION					
DO NOT SCALE DRAWING					
TITLE:					
CABINET ASM-ENT CTR					
SHEET 1 OF 5		PART NO	REV		
		168241			
REF:		1			

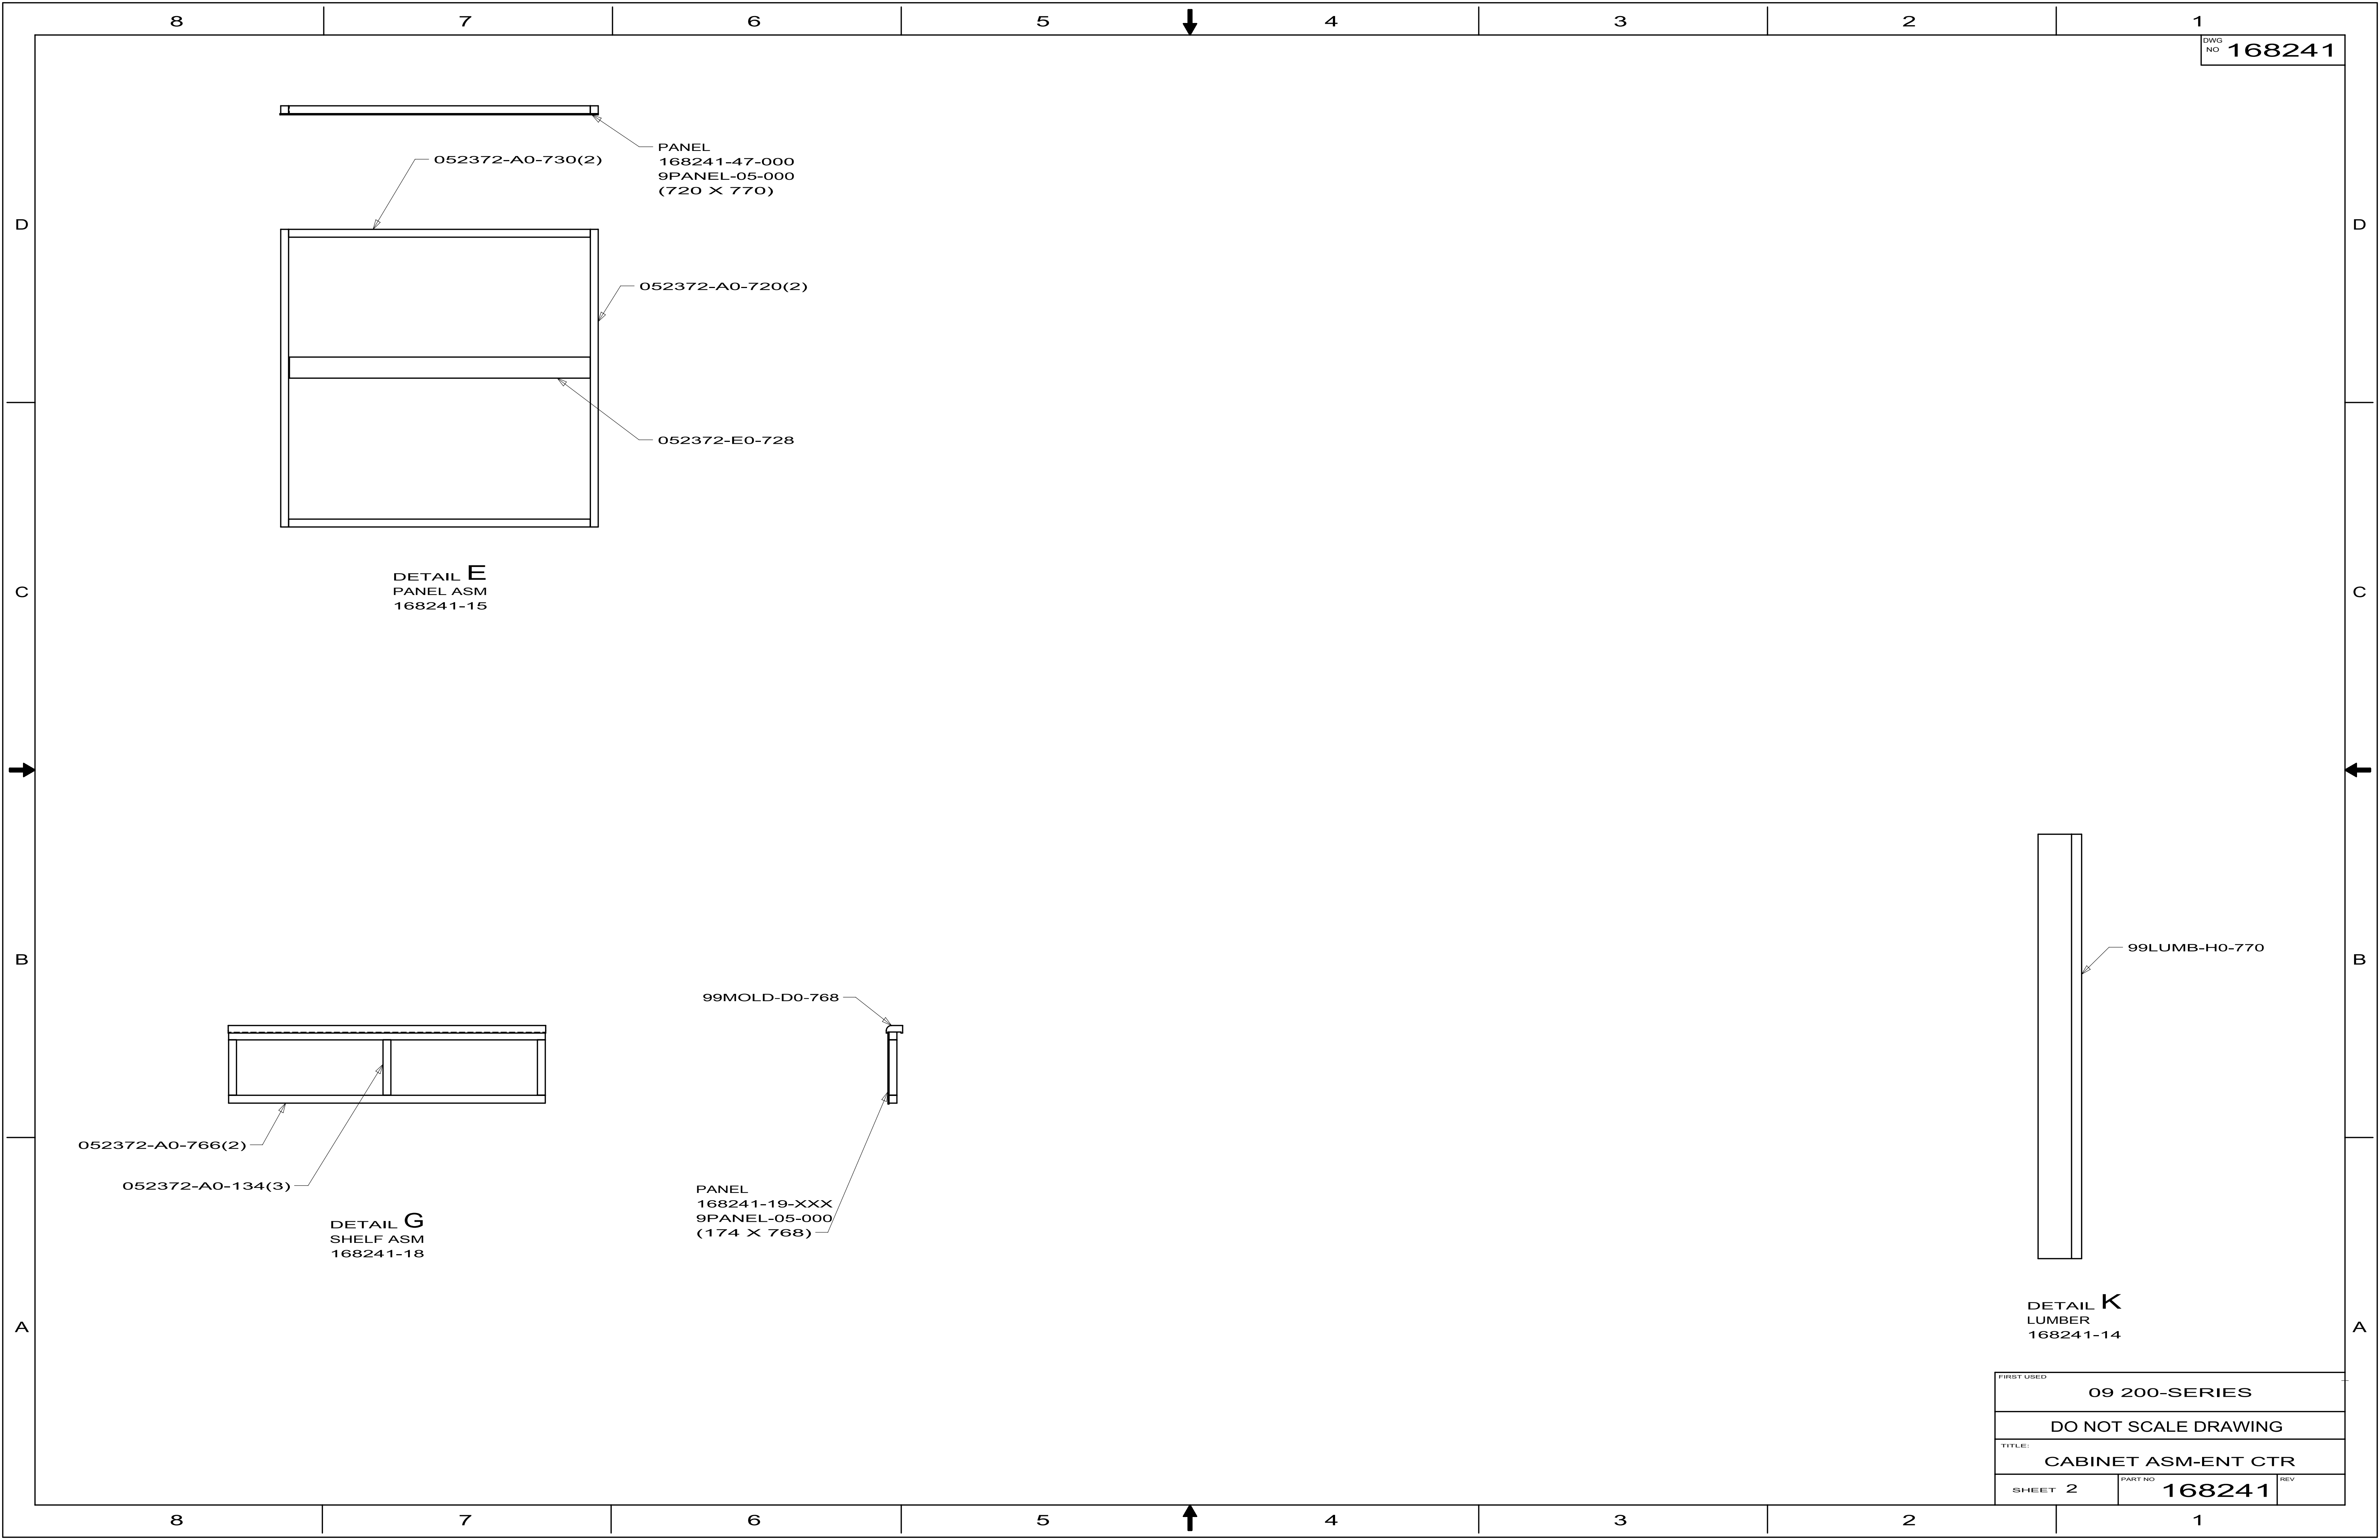


DETAIL K
LUMBER
168241-14


FIRST USED		
09 200-SERIES		
DO NOT SCALE DRAWING		
TITLE: CABINET ASM-ENT CTR		
SHEET 2	PART NO 168241	REV

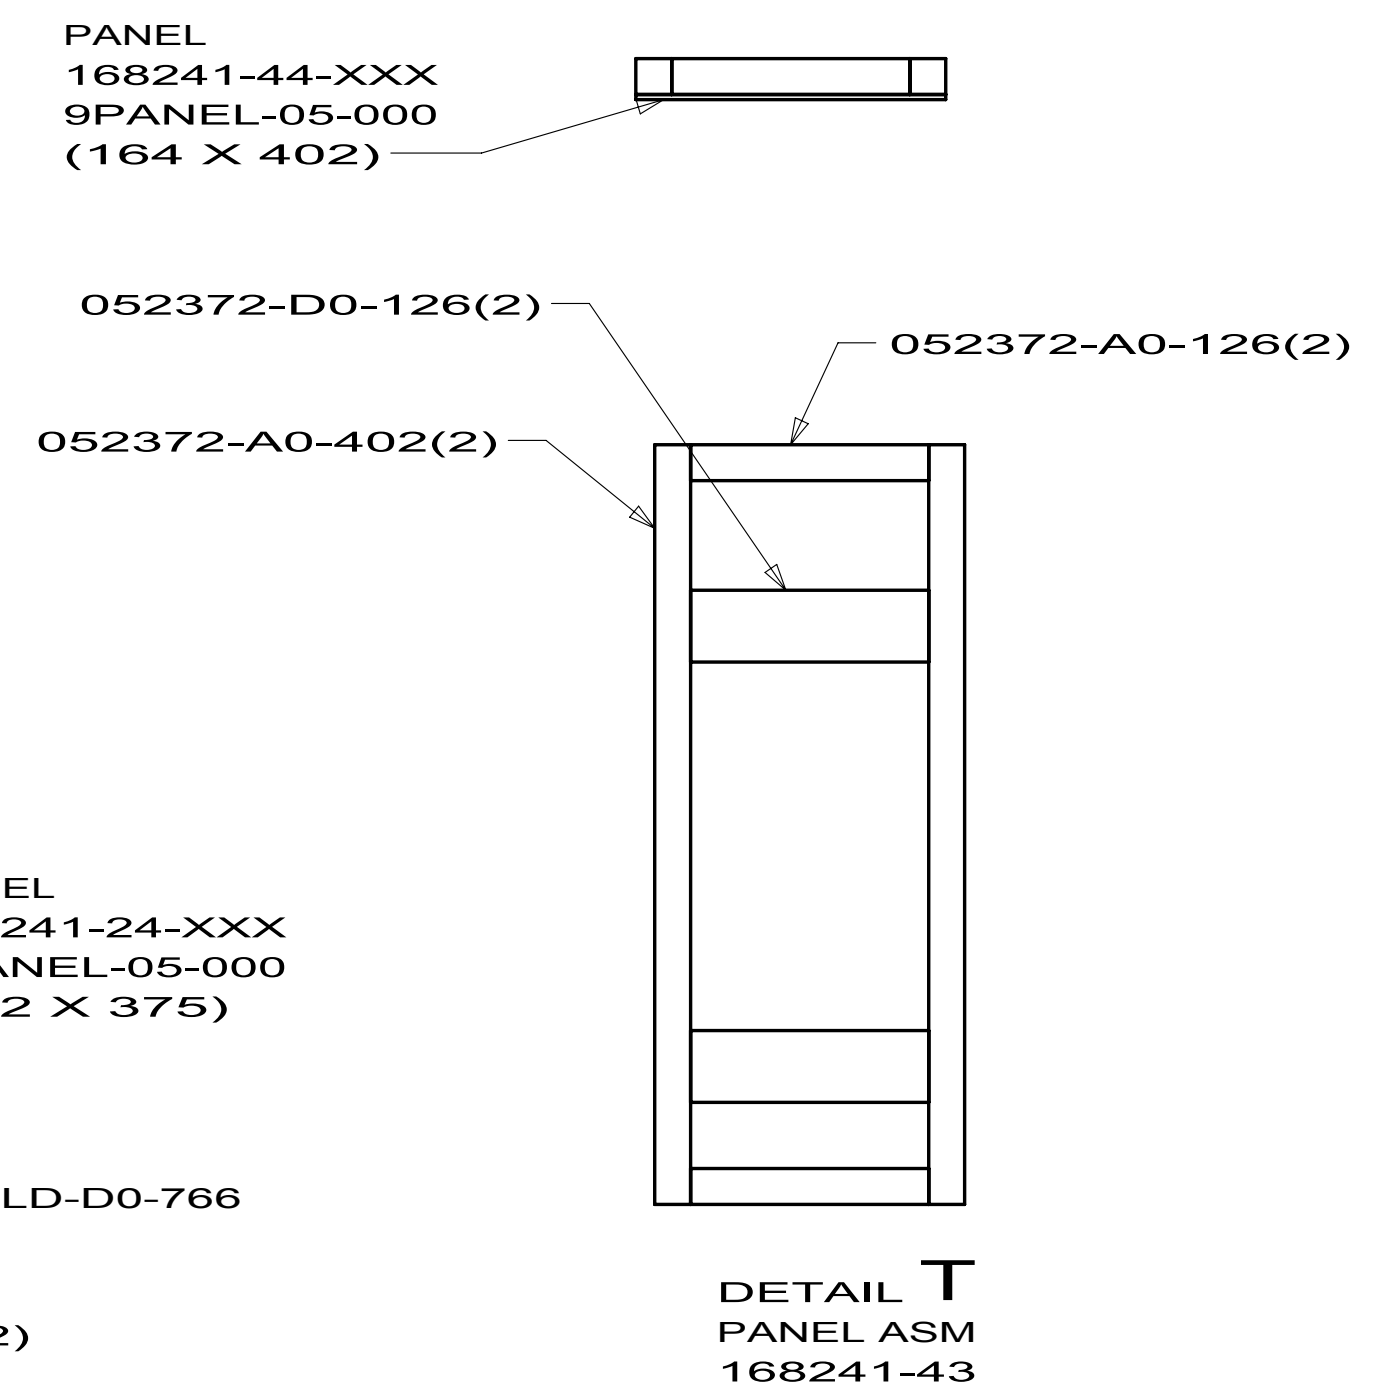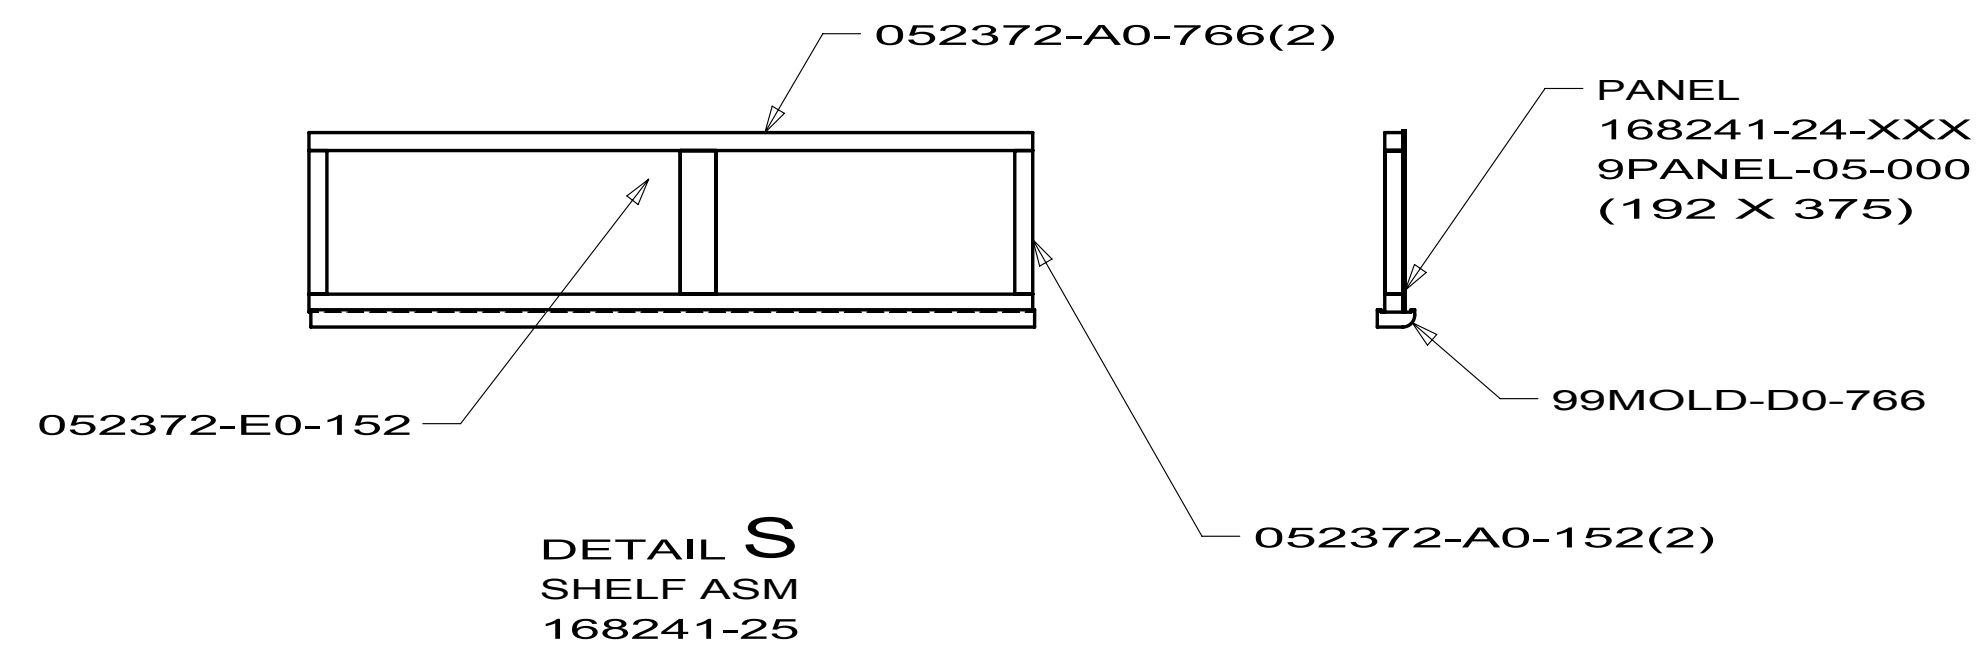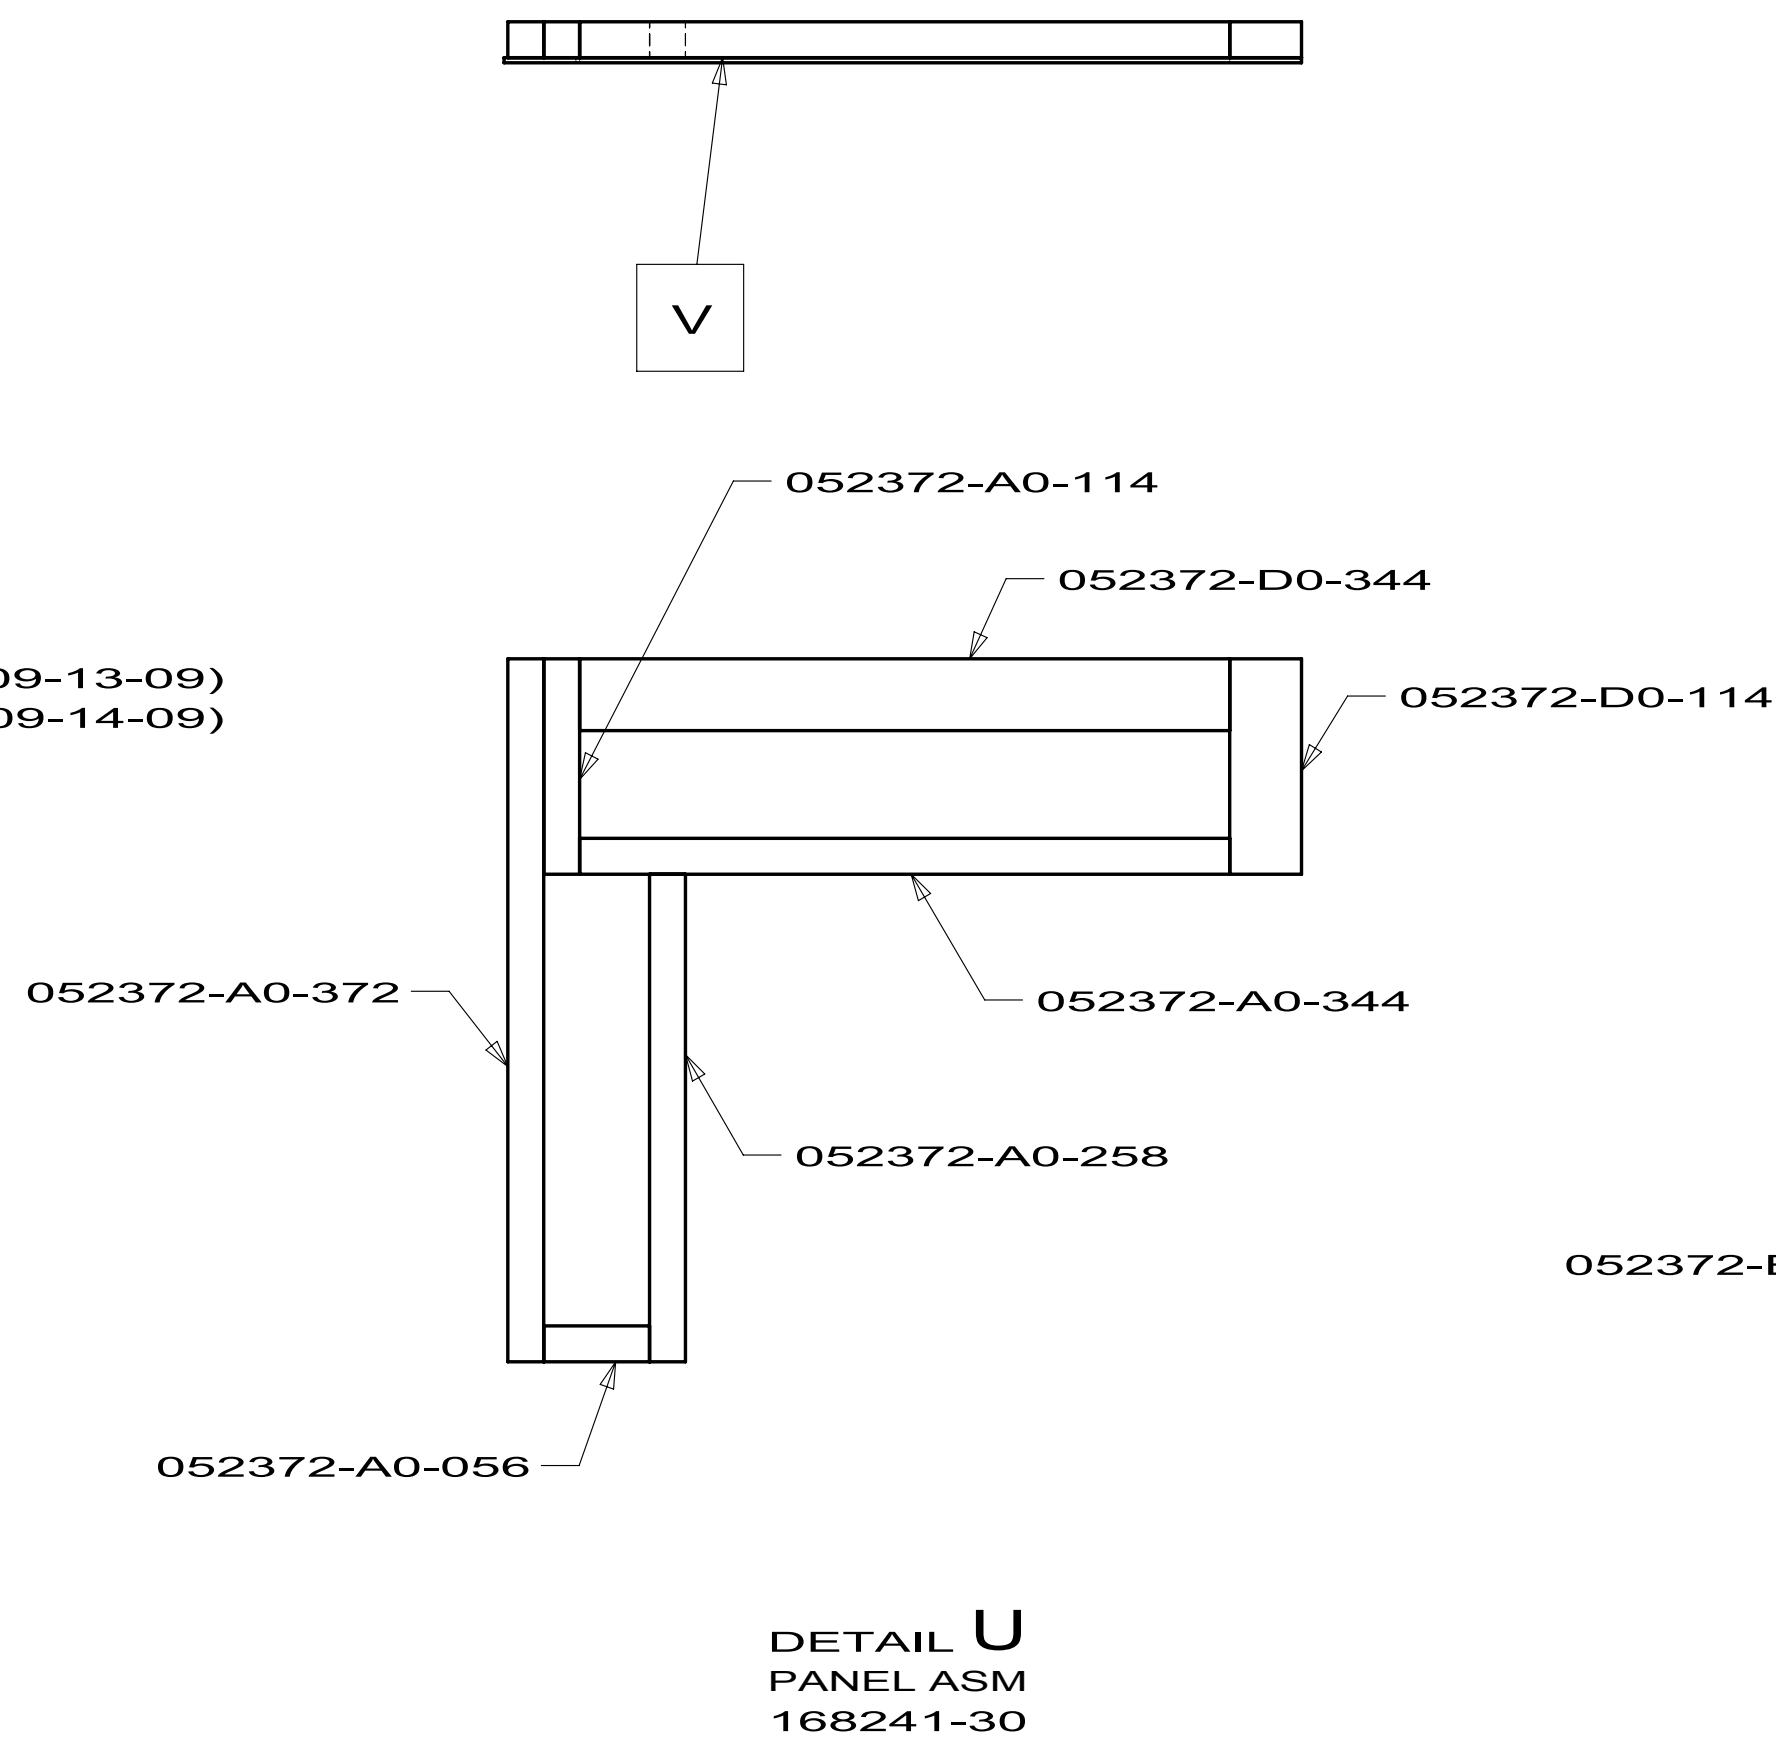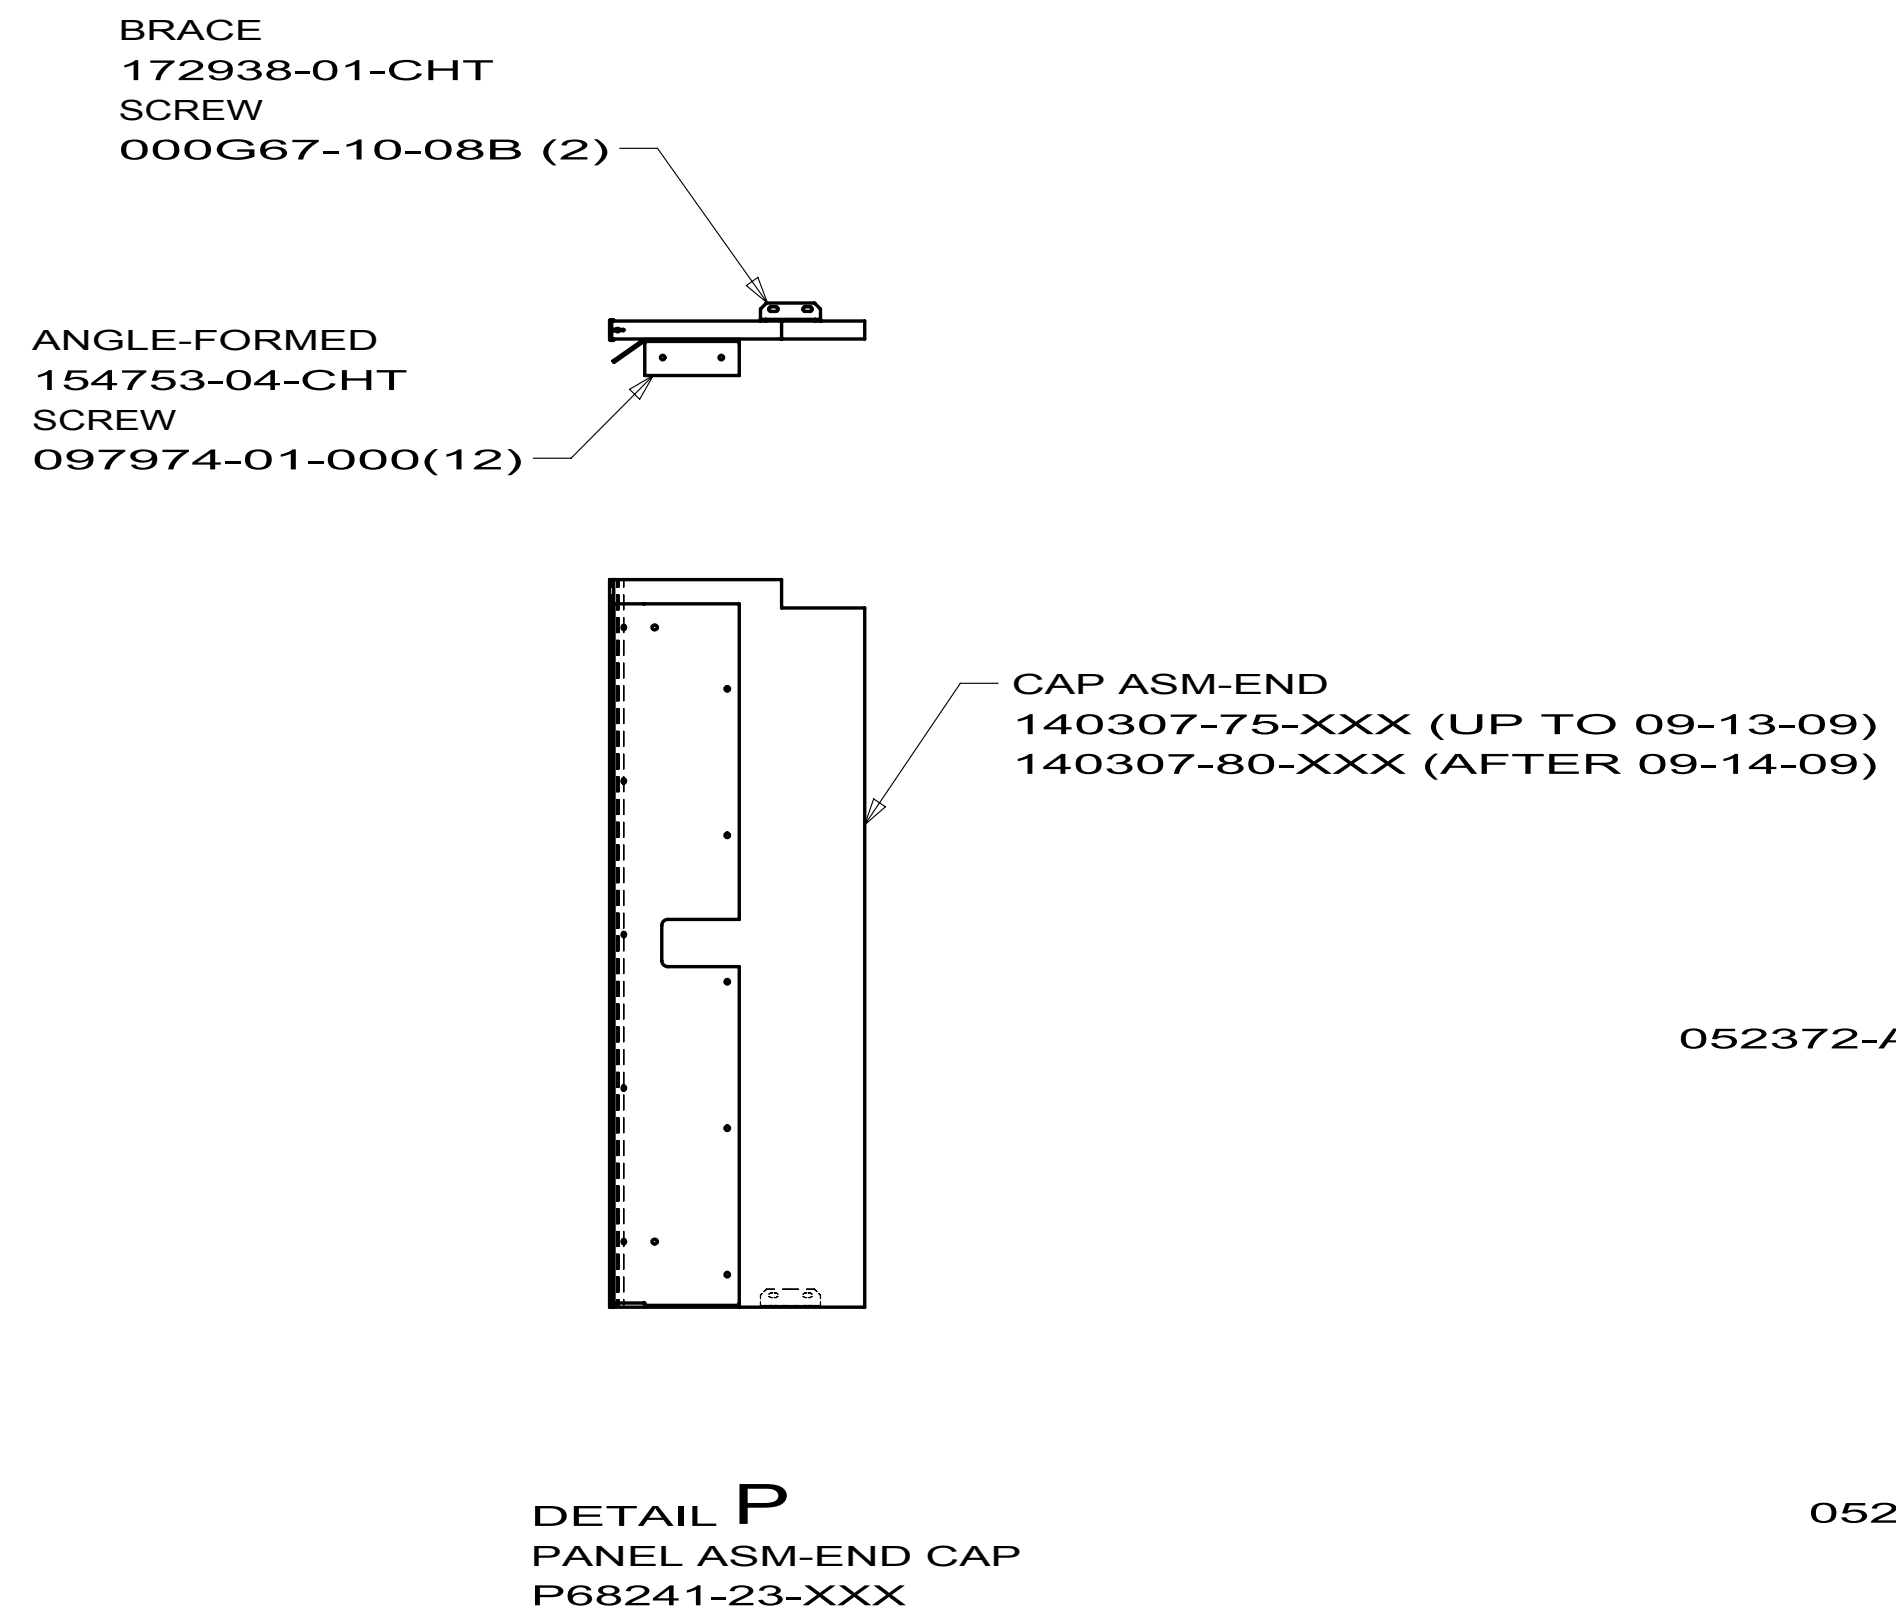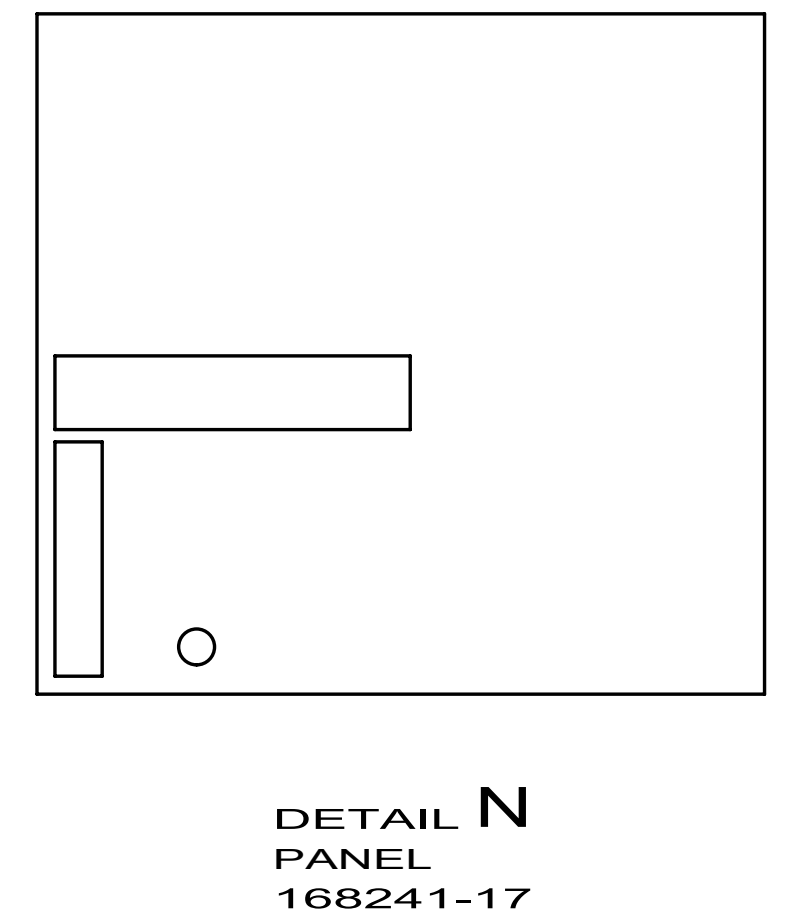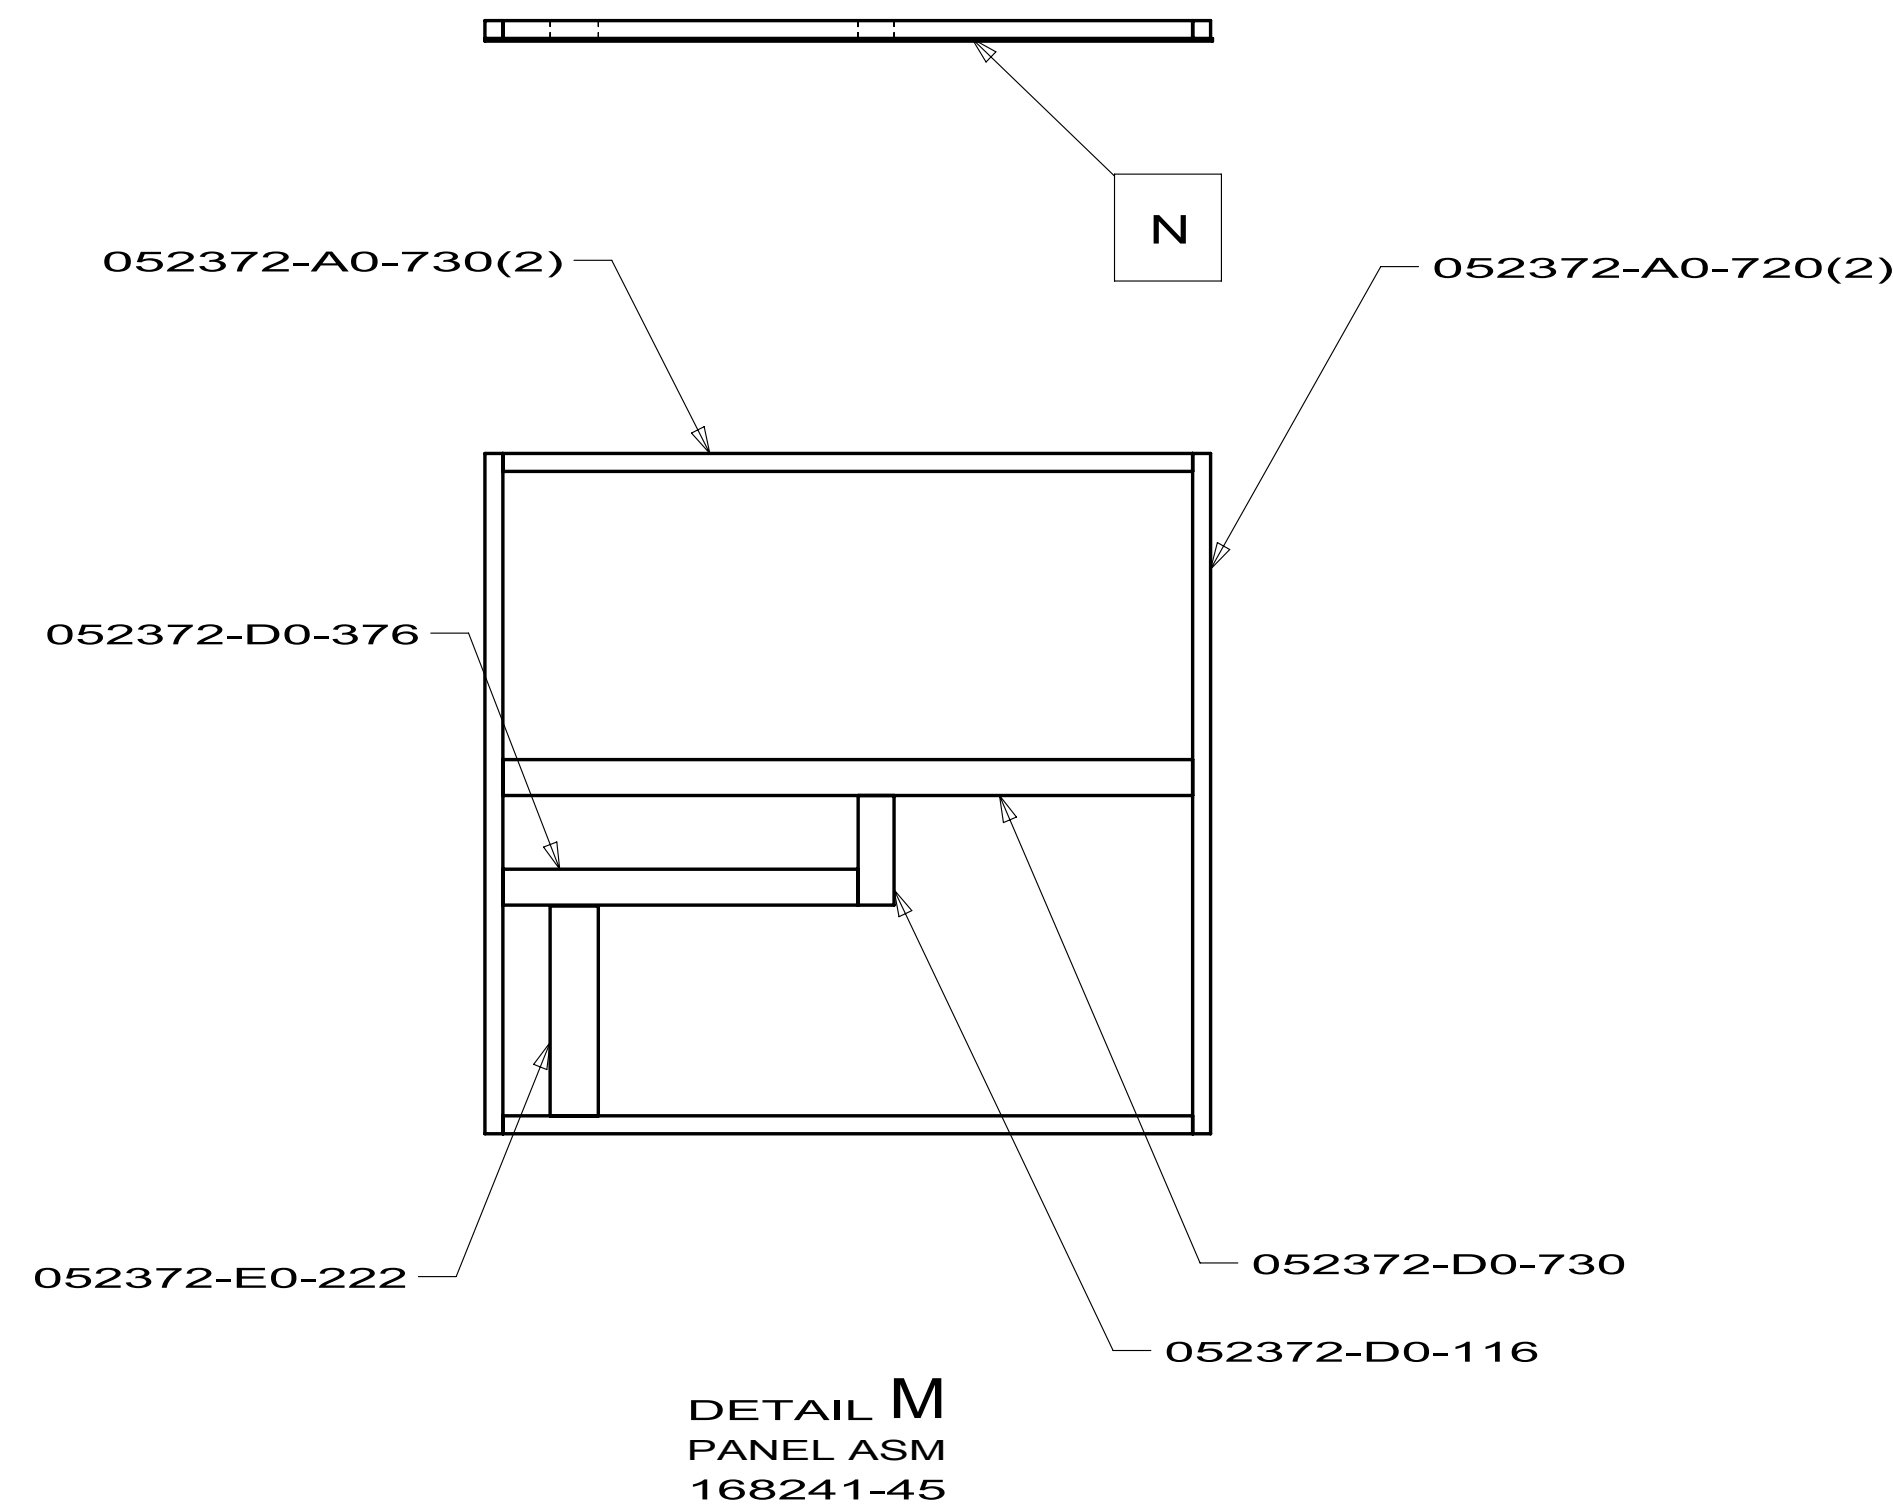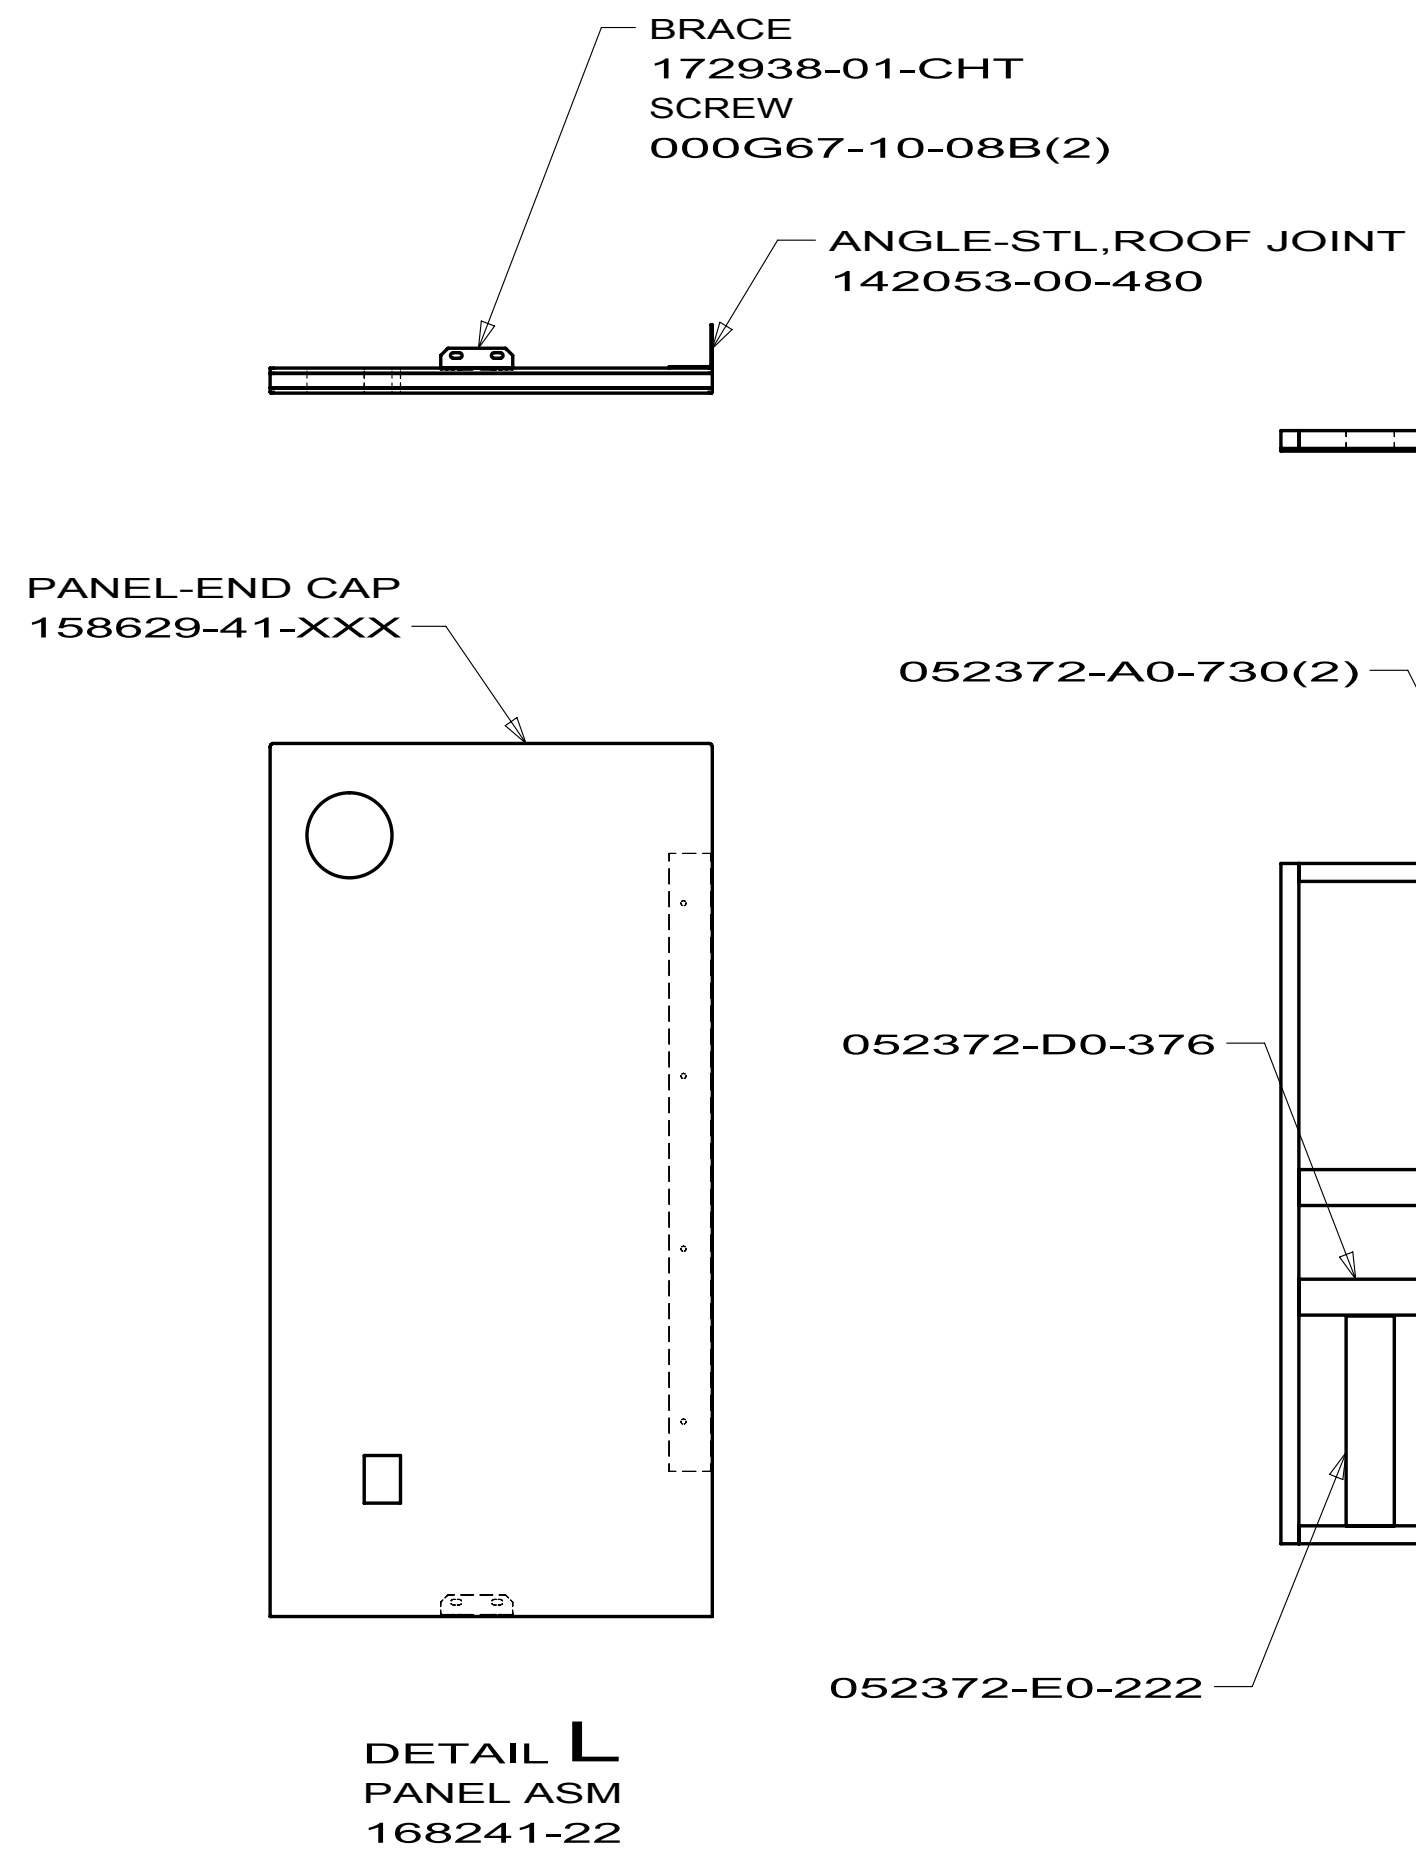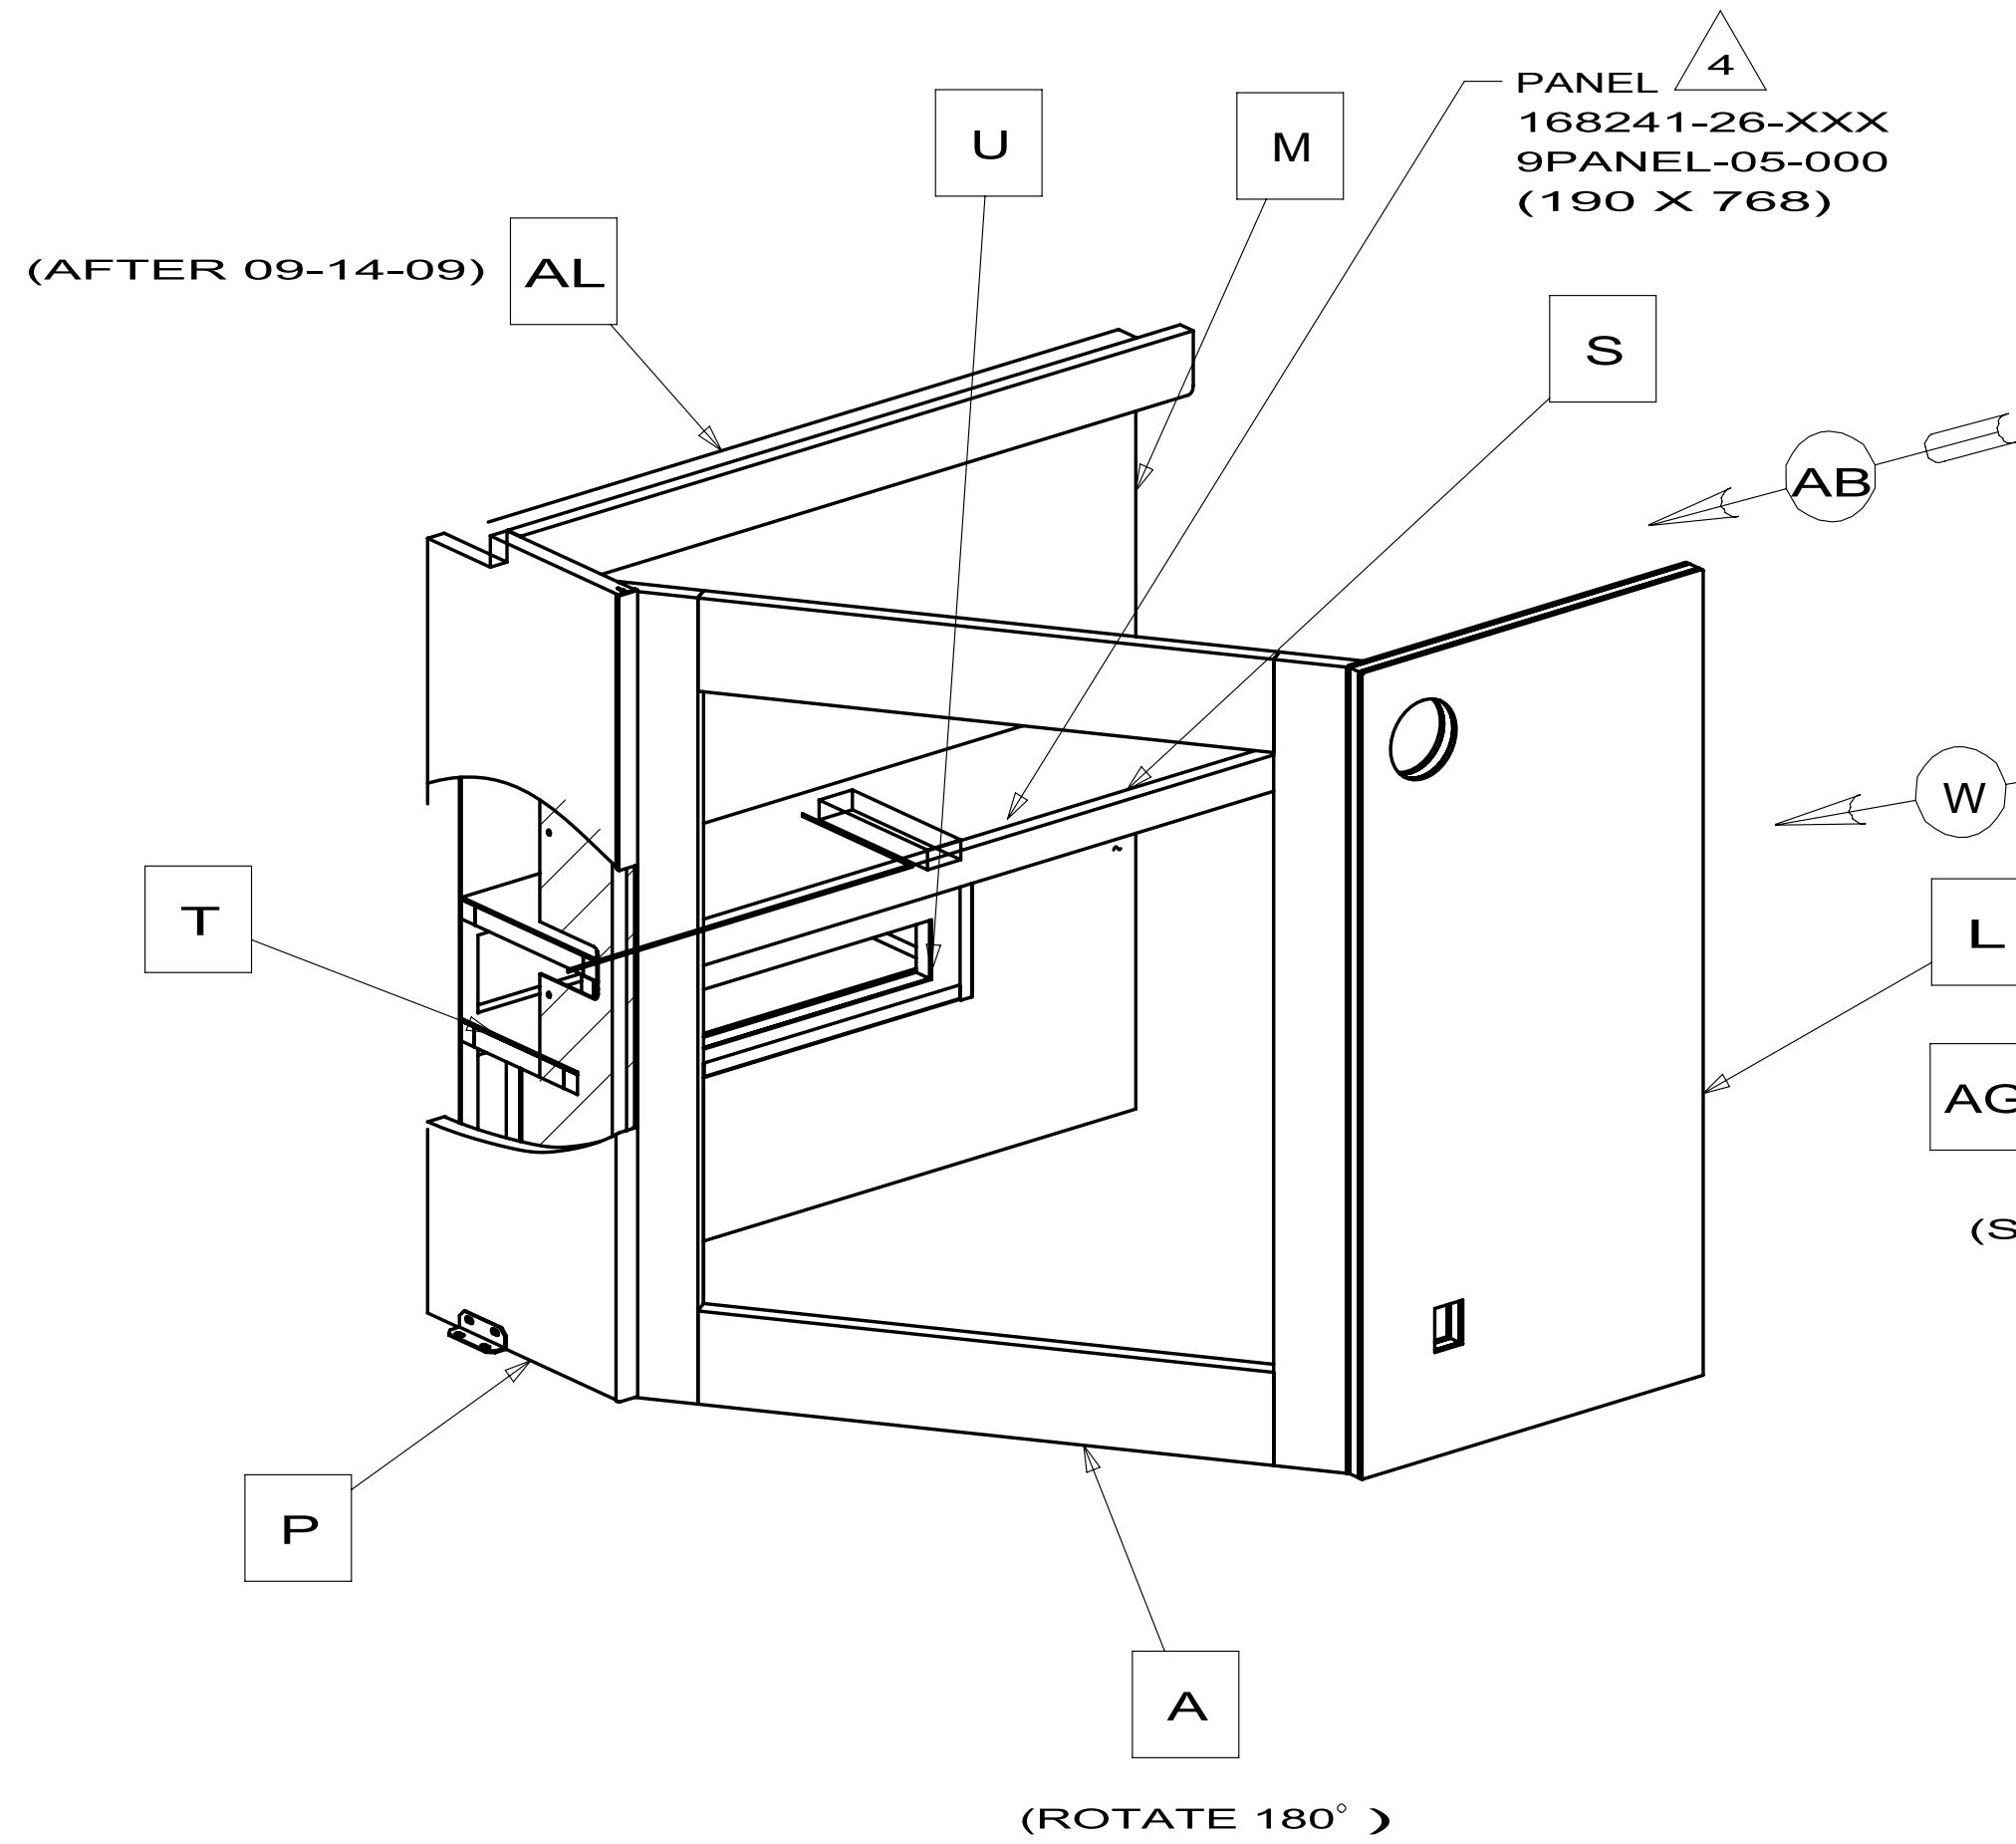


FIRST USED		
09 200-SERIES		
DO NOT SCALE DRAWING		
TITLE:		
CABINET ASM-ENT CTR		
SHEET 3	PART NO 168241	REV

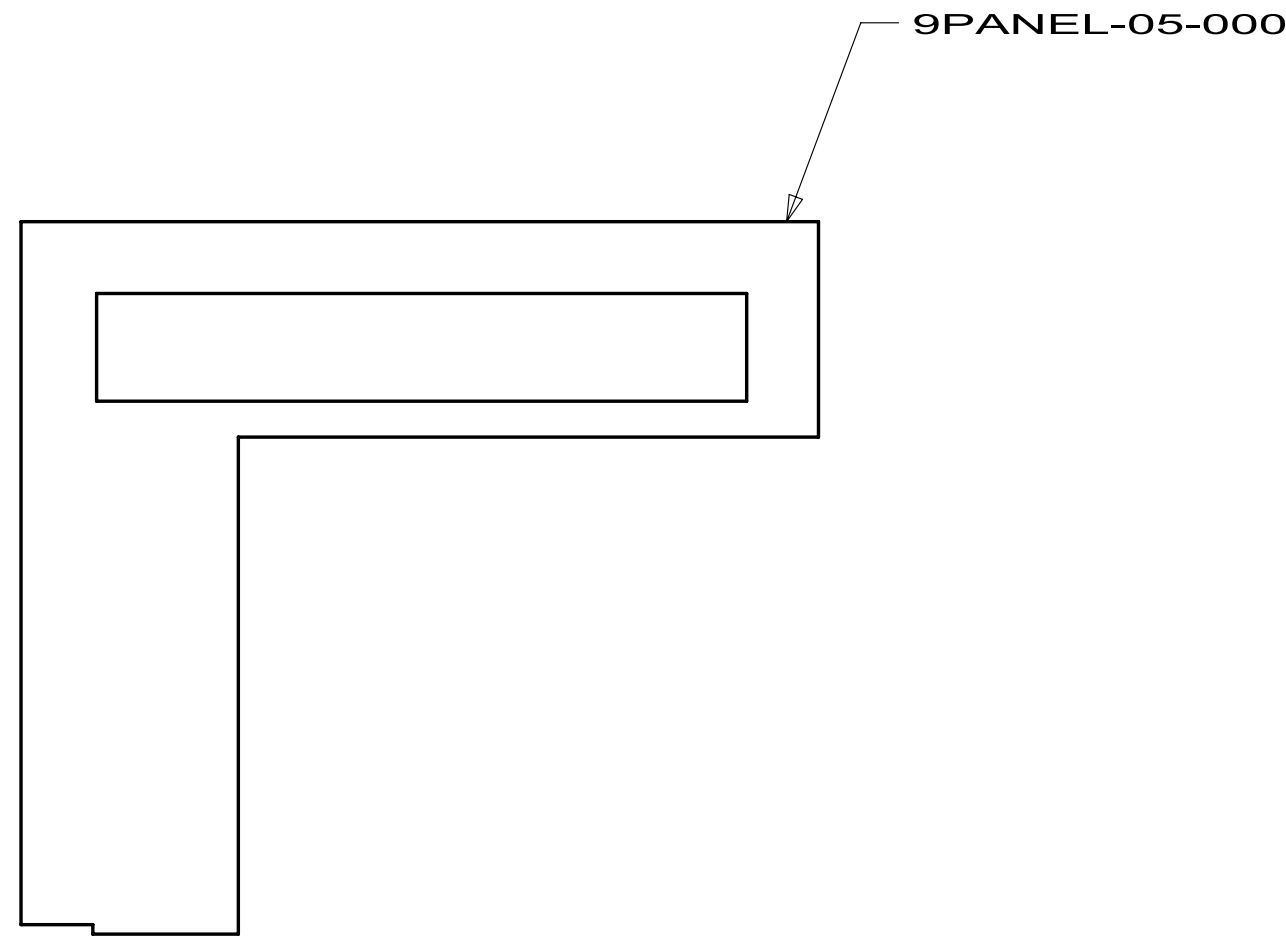


DETAIL V
PANEL ASM
168241-33

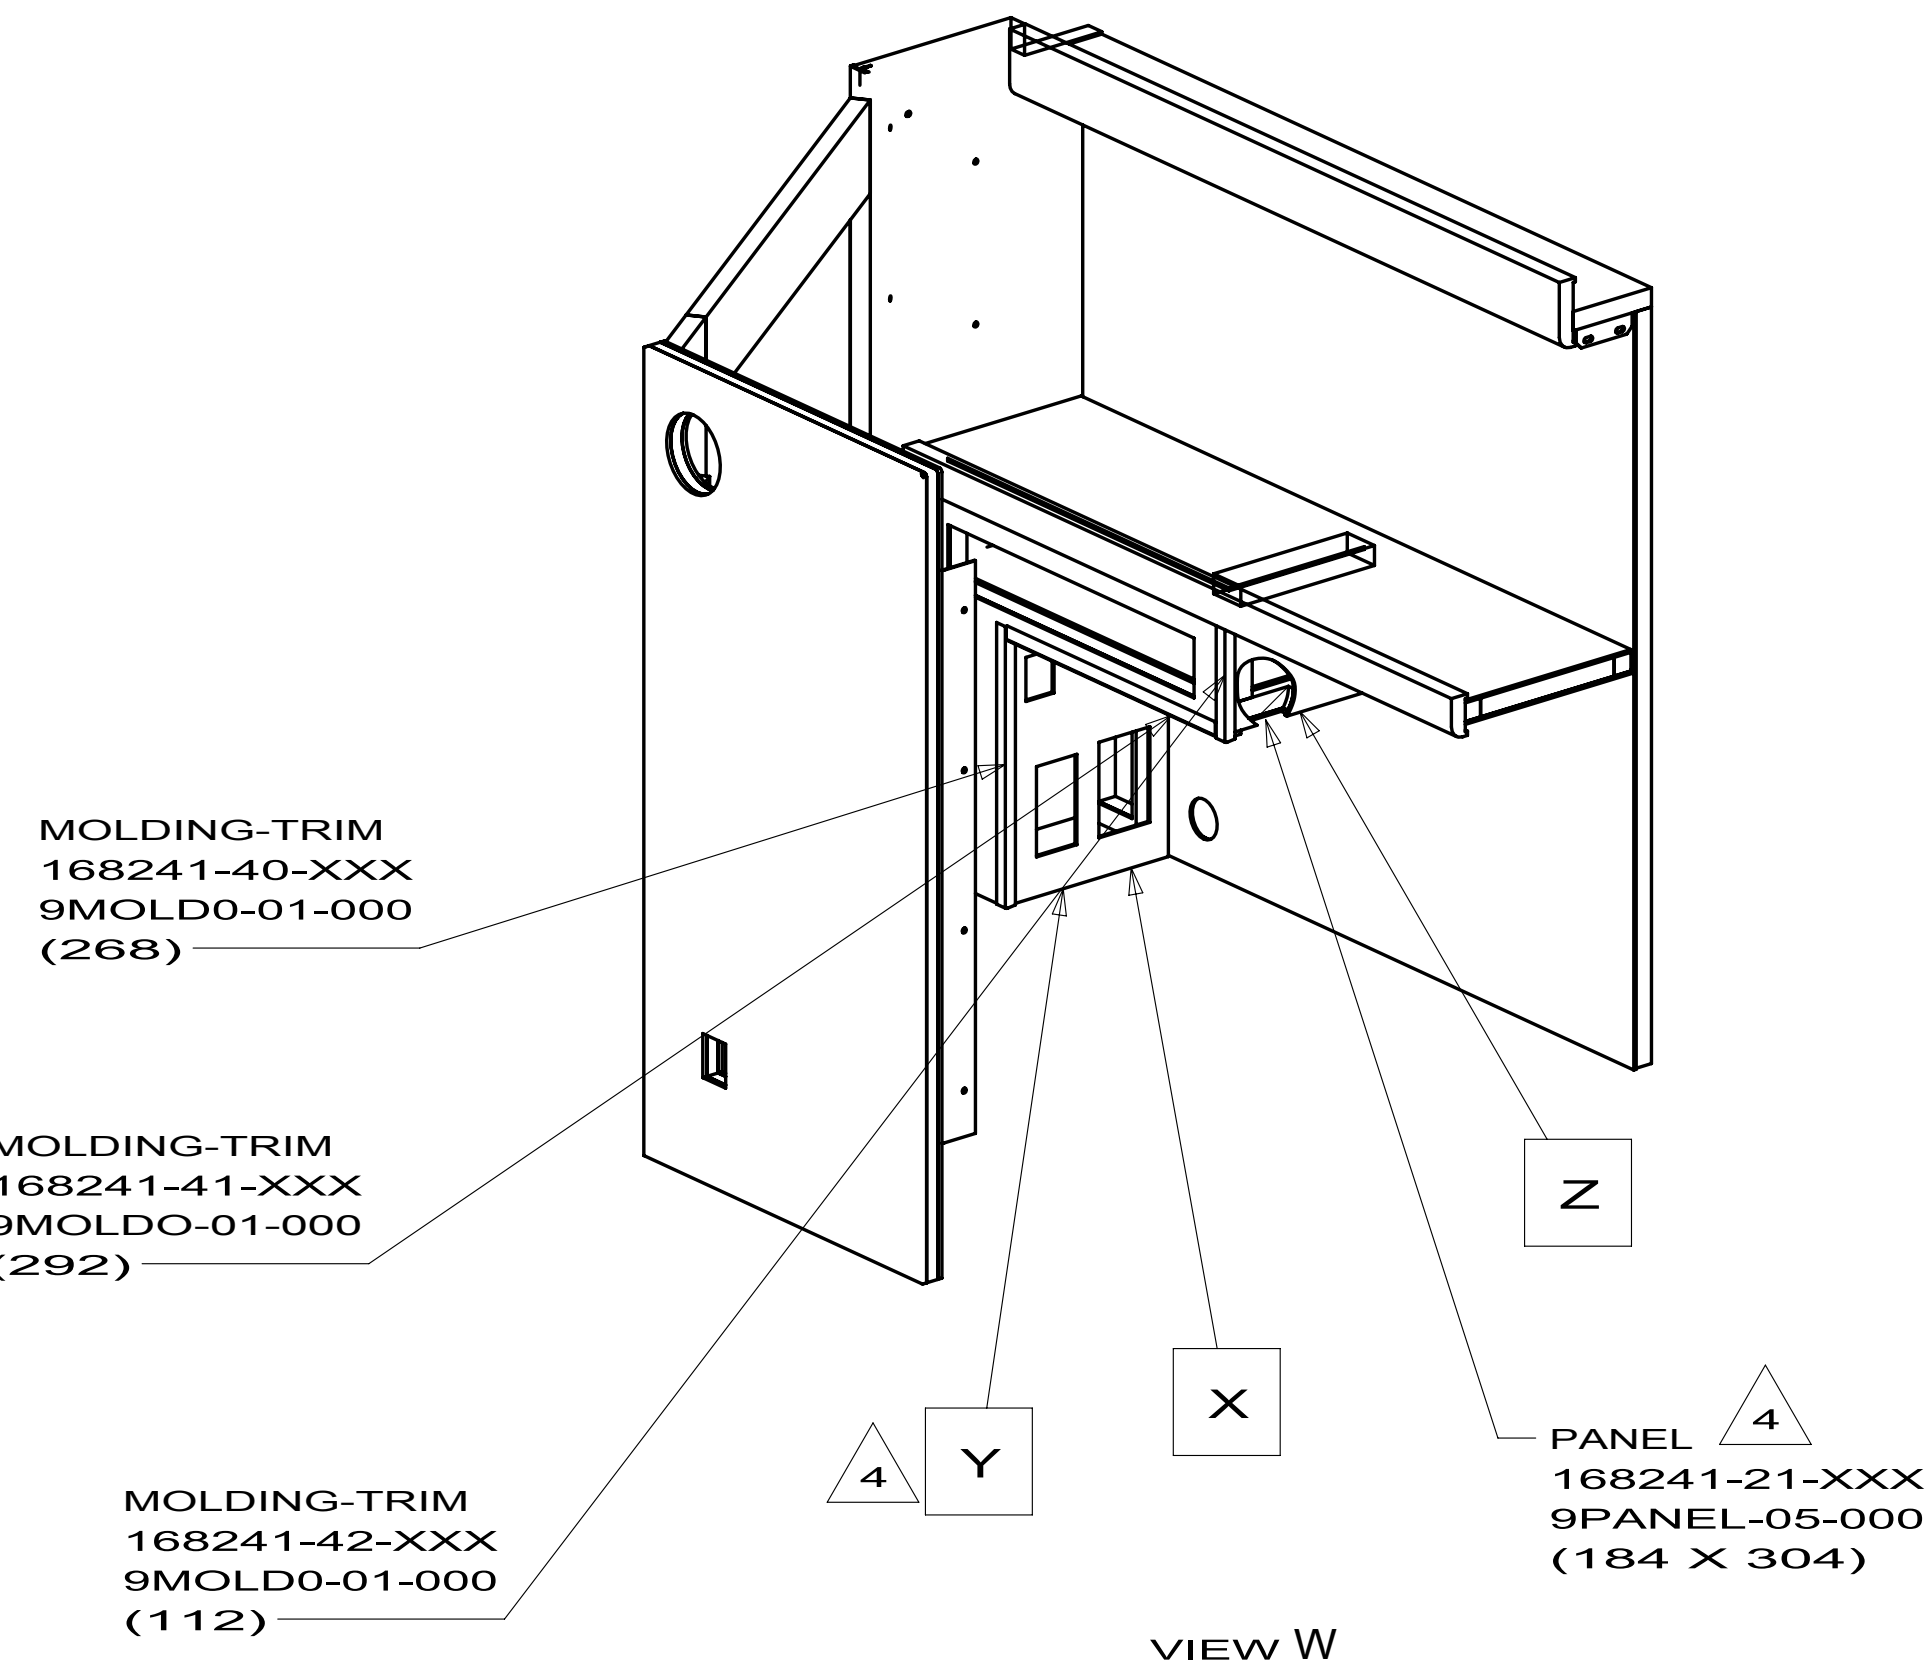


VIEW W

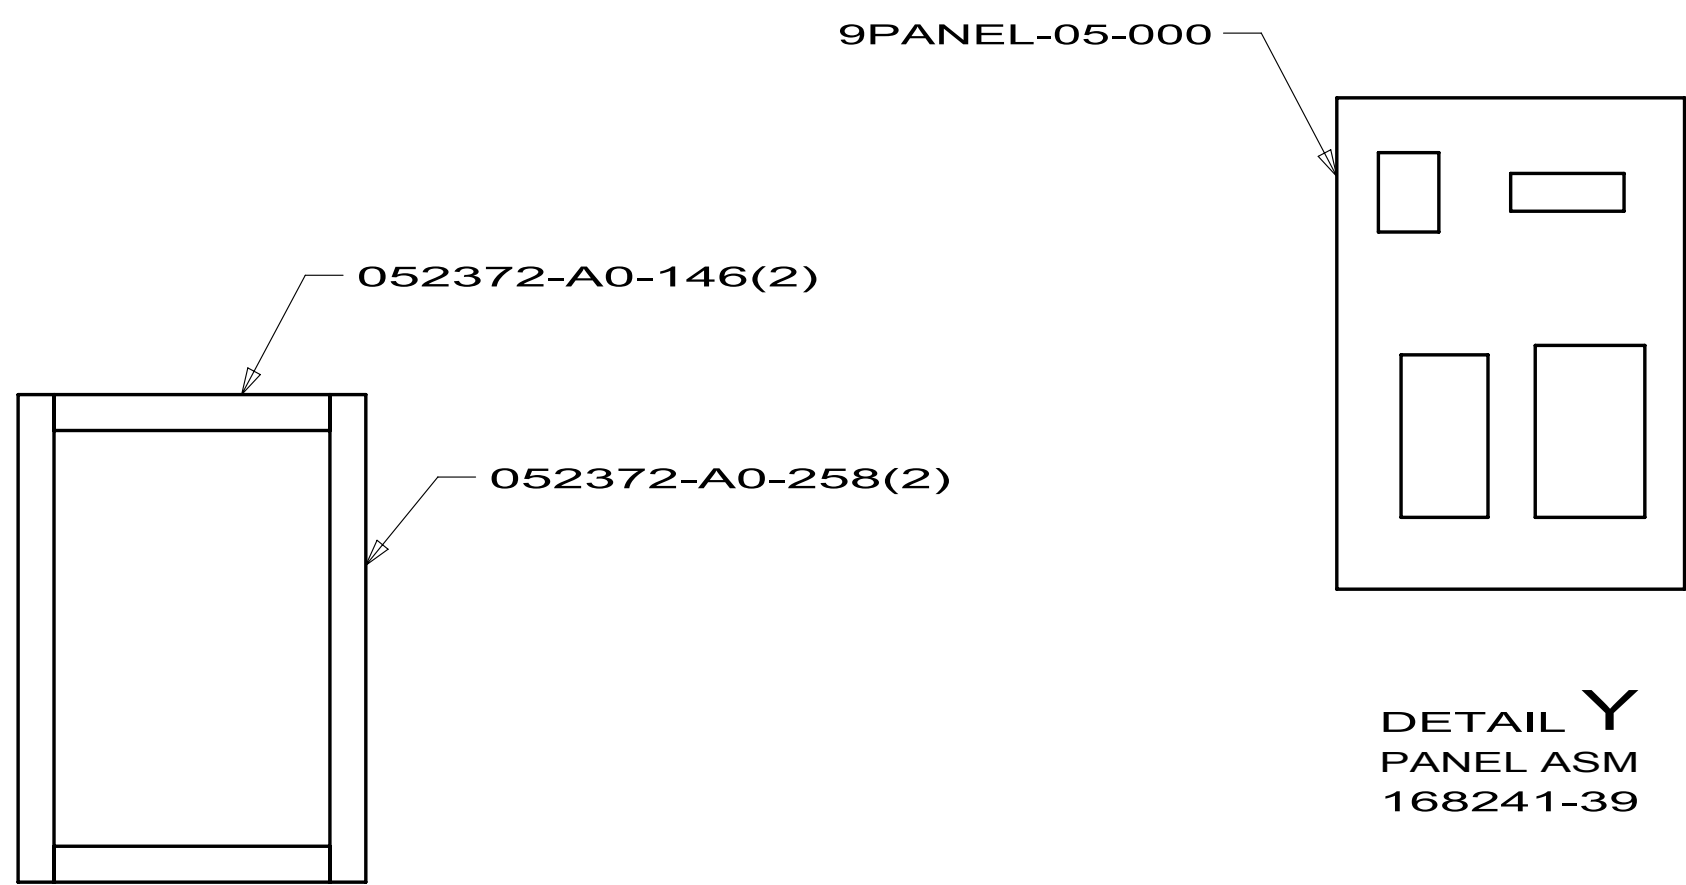


DETAIL X
PANEL ASM
168241-38

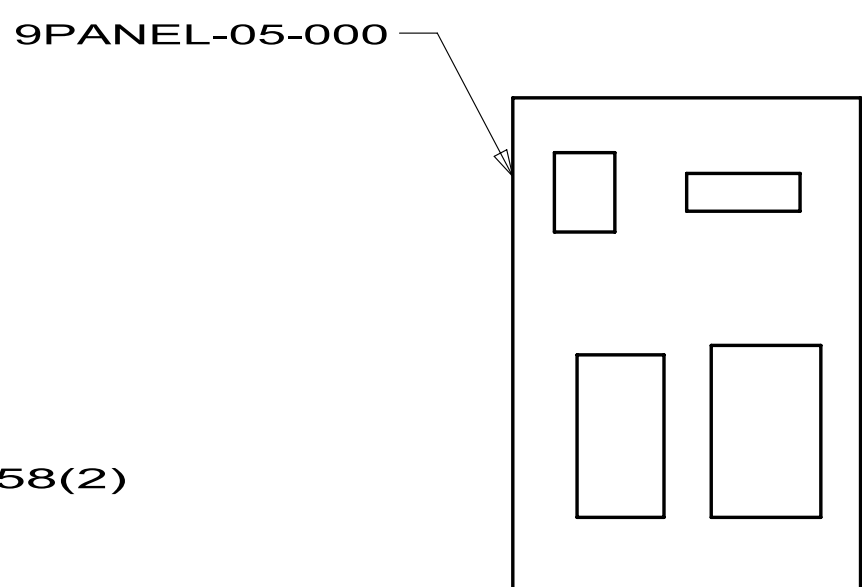


DETAIL Y
PANEL ASM
168241-39

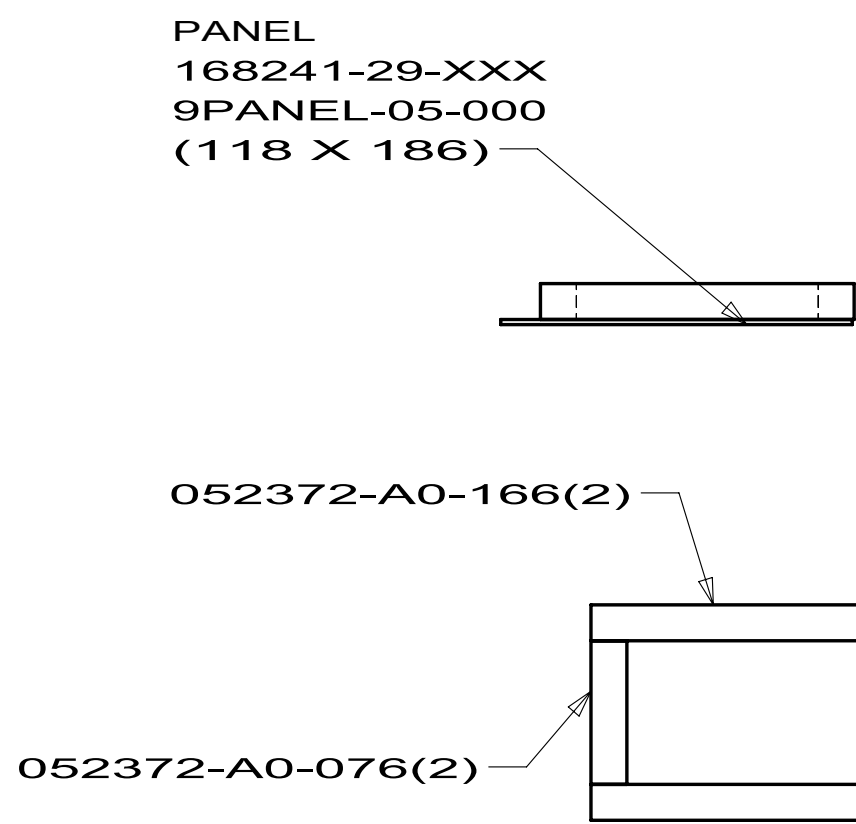


DETAIL Z
PANEL ASM
168241-28

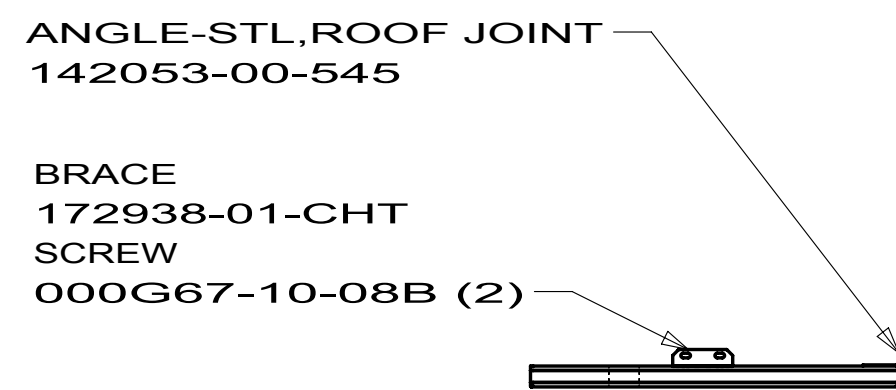

ANGLE-STL, ROOF JOINT
142053-00-545

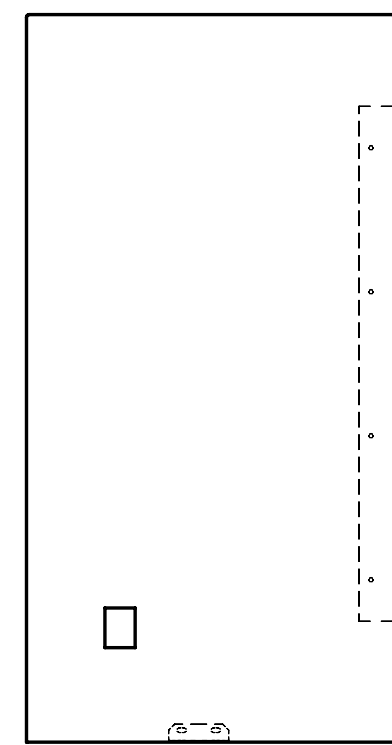


DETAIL AD
PANEL ASM
168241-50

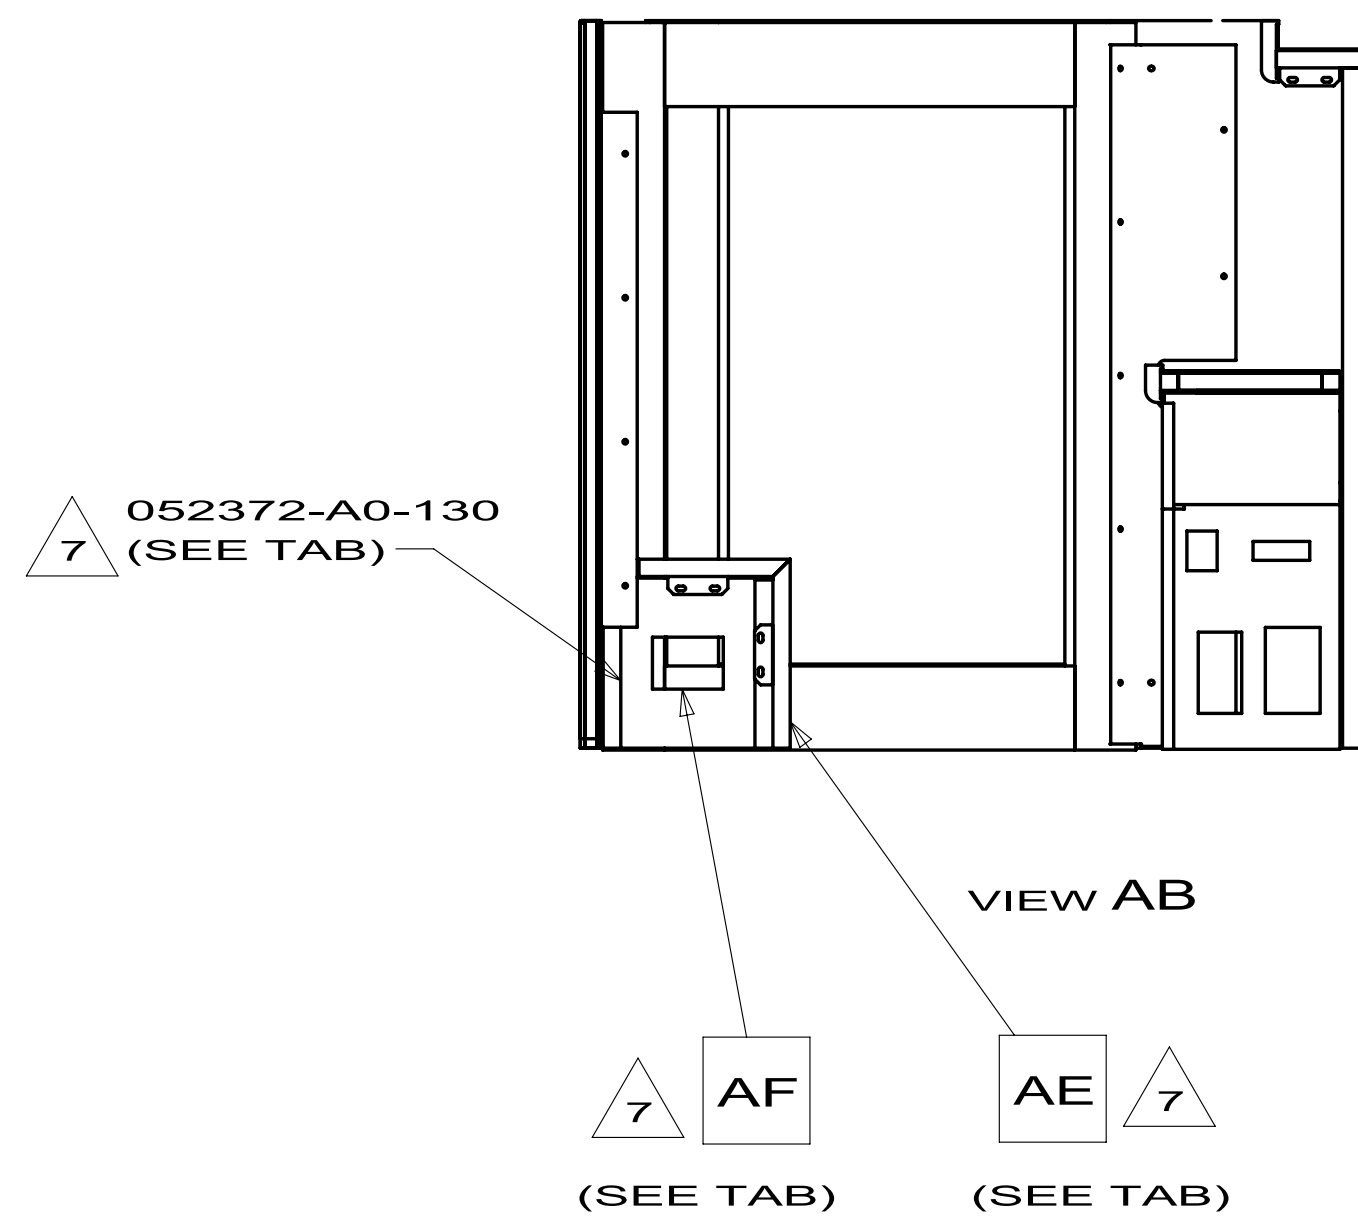


VIEW AB


FIRST USED		
09 200-SERIES		
DO NOT SCALE DRAWING		
TITLE:		
CABINET ASM-ENT CTR		
SHEET 4	PART NO 168241	REV

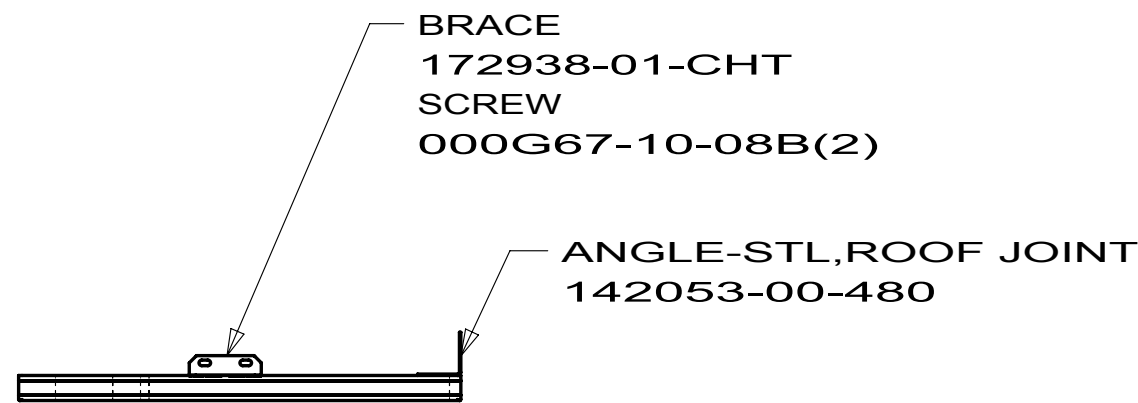


DETAIL **AG**
PANEL ASM
168241-55

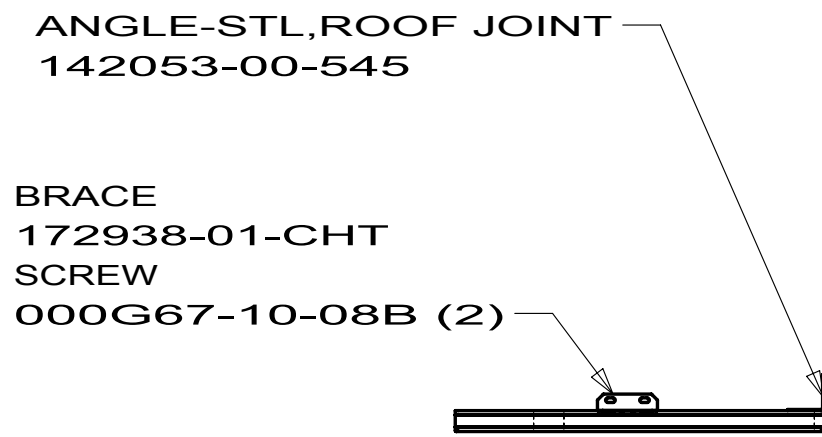


DETAIL **AH**
PANEL ASM
168241-56

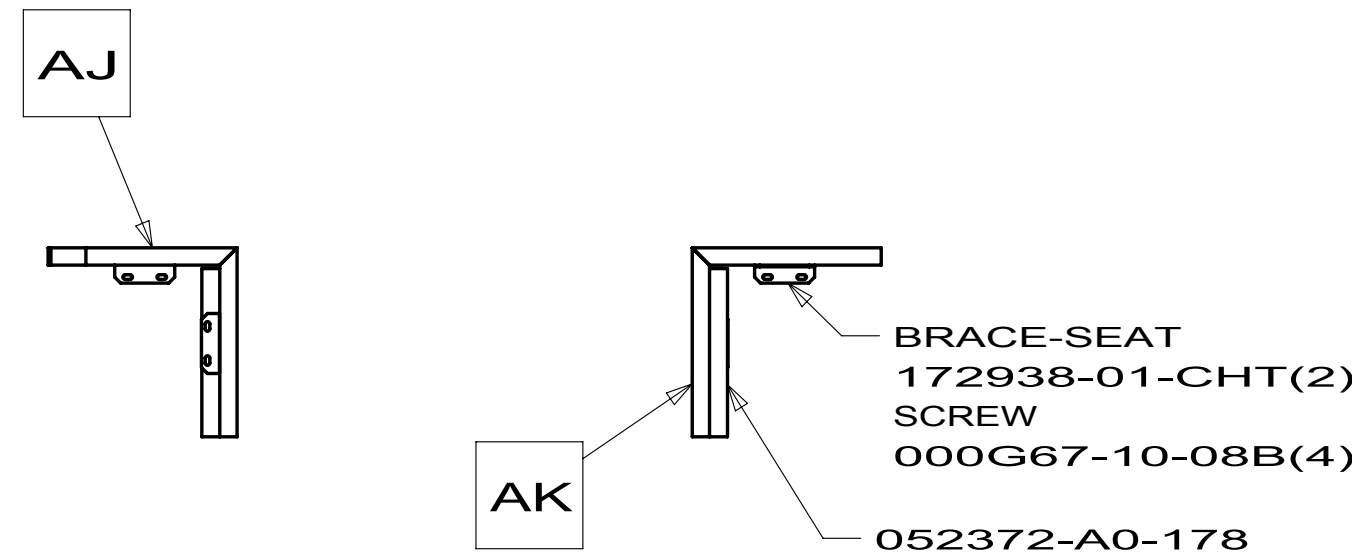

DETAIL **AE**
LUMBER ASM
168241-51

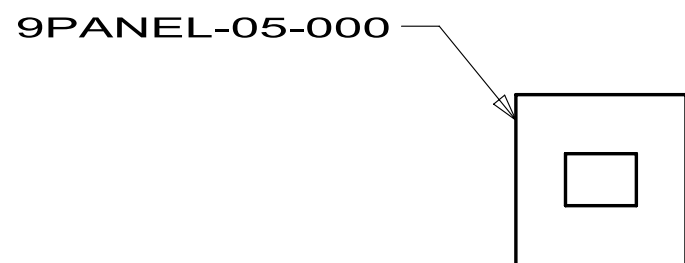


DETAIL **AF**
PANEL
168241-54

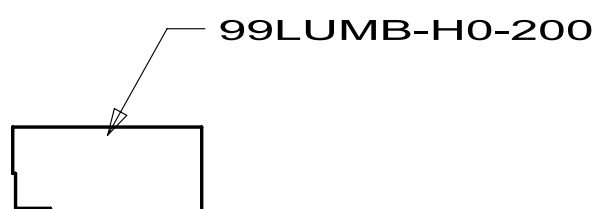

DETAIL **AJ**
LUMBER
168241-52



DETAIL **AK**
LUMBER
168241-53


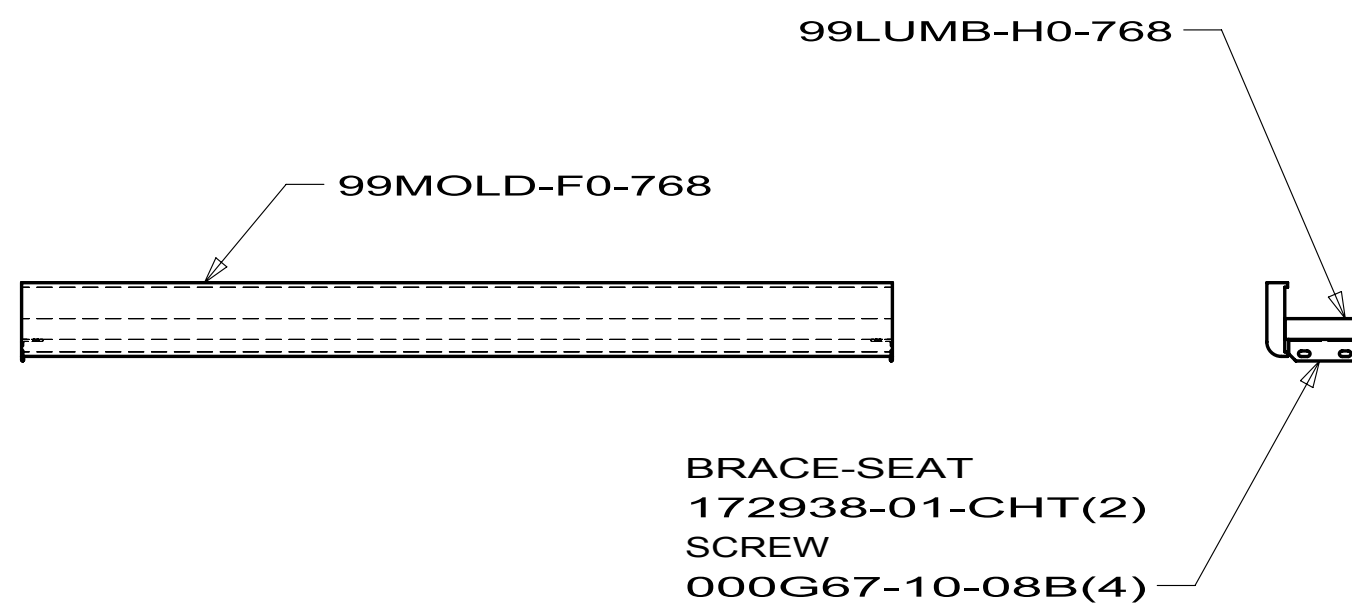


DETAIL **AL**
(AFTER 09-14-09)
LUMBER ASM
168241-57-XXX

FIRST USED		
09 200-SERIES		
DO NOT SCALE DRAWING		
TITLE:		
CABINET ASM-ENT CTR		
SHEET 5	PART NO 168241	REV

DWG NO	
173782-01	1JM 697
173782-02	1JF 697
173782-03	1JM 70C
173782-04	1JF 70C

173782

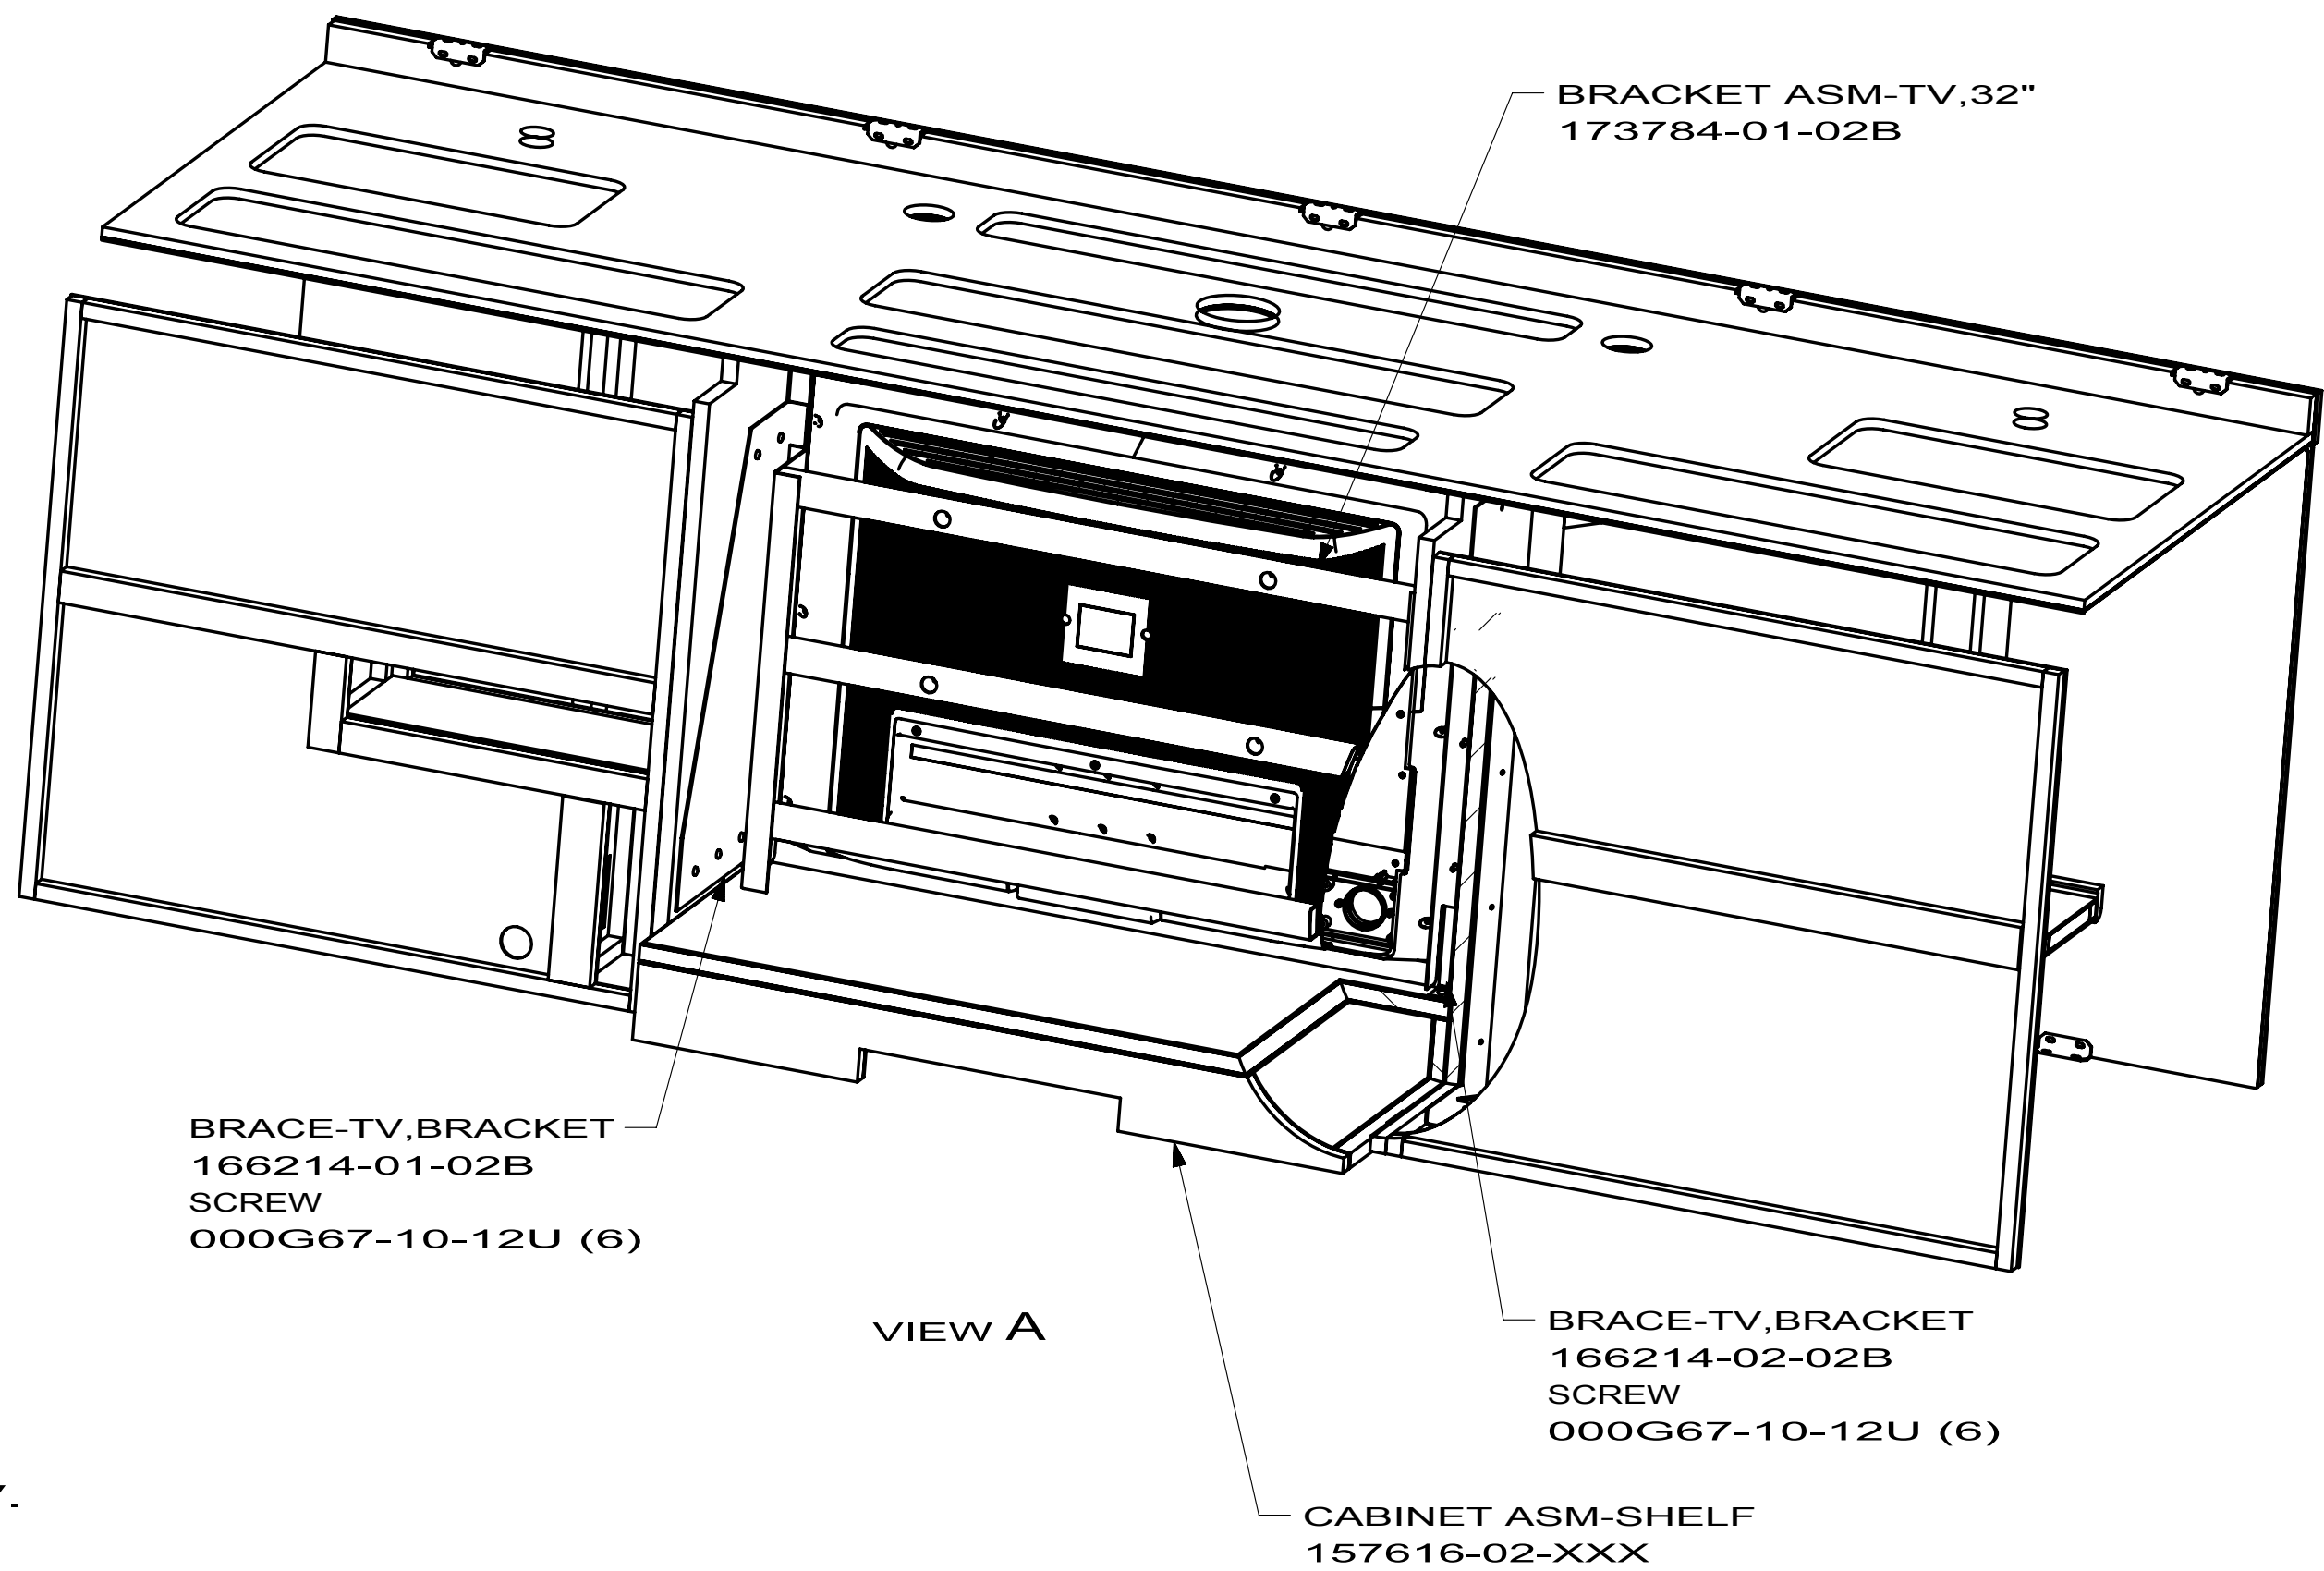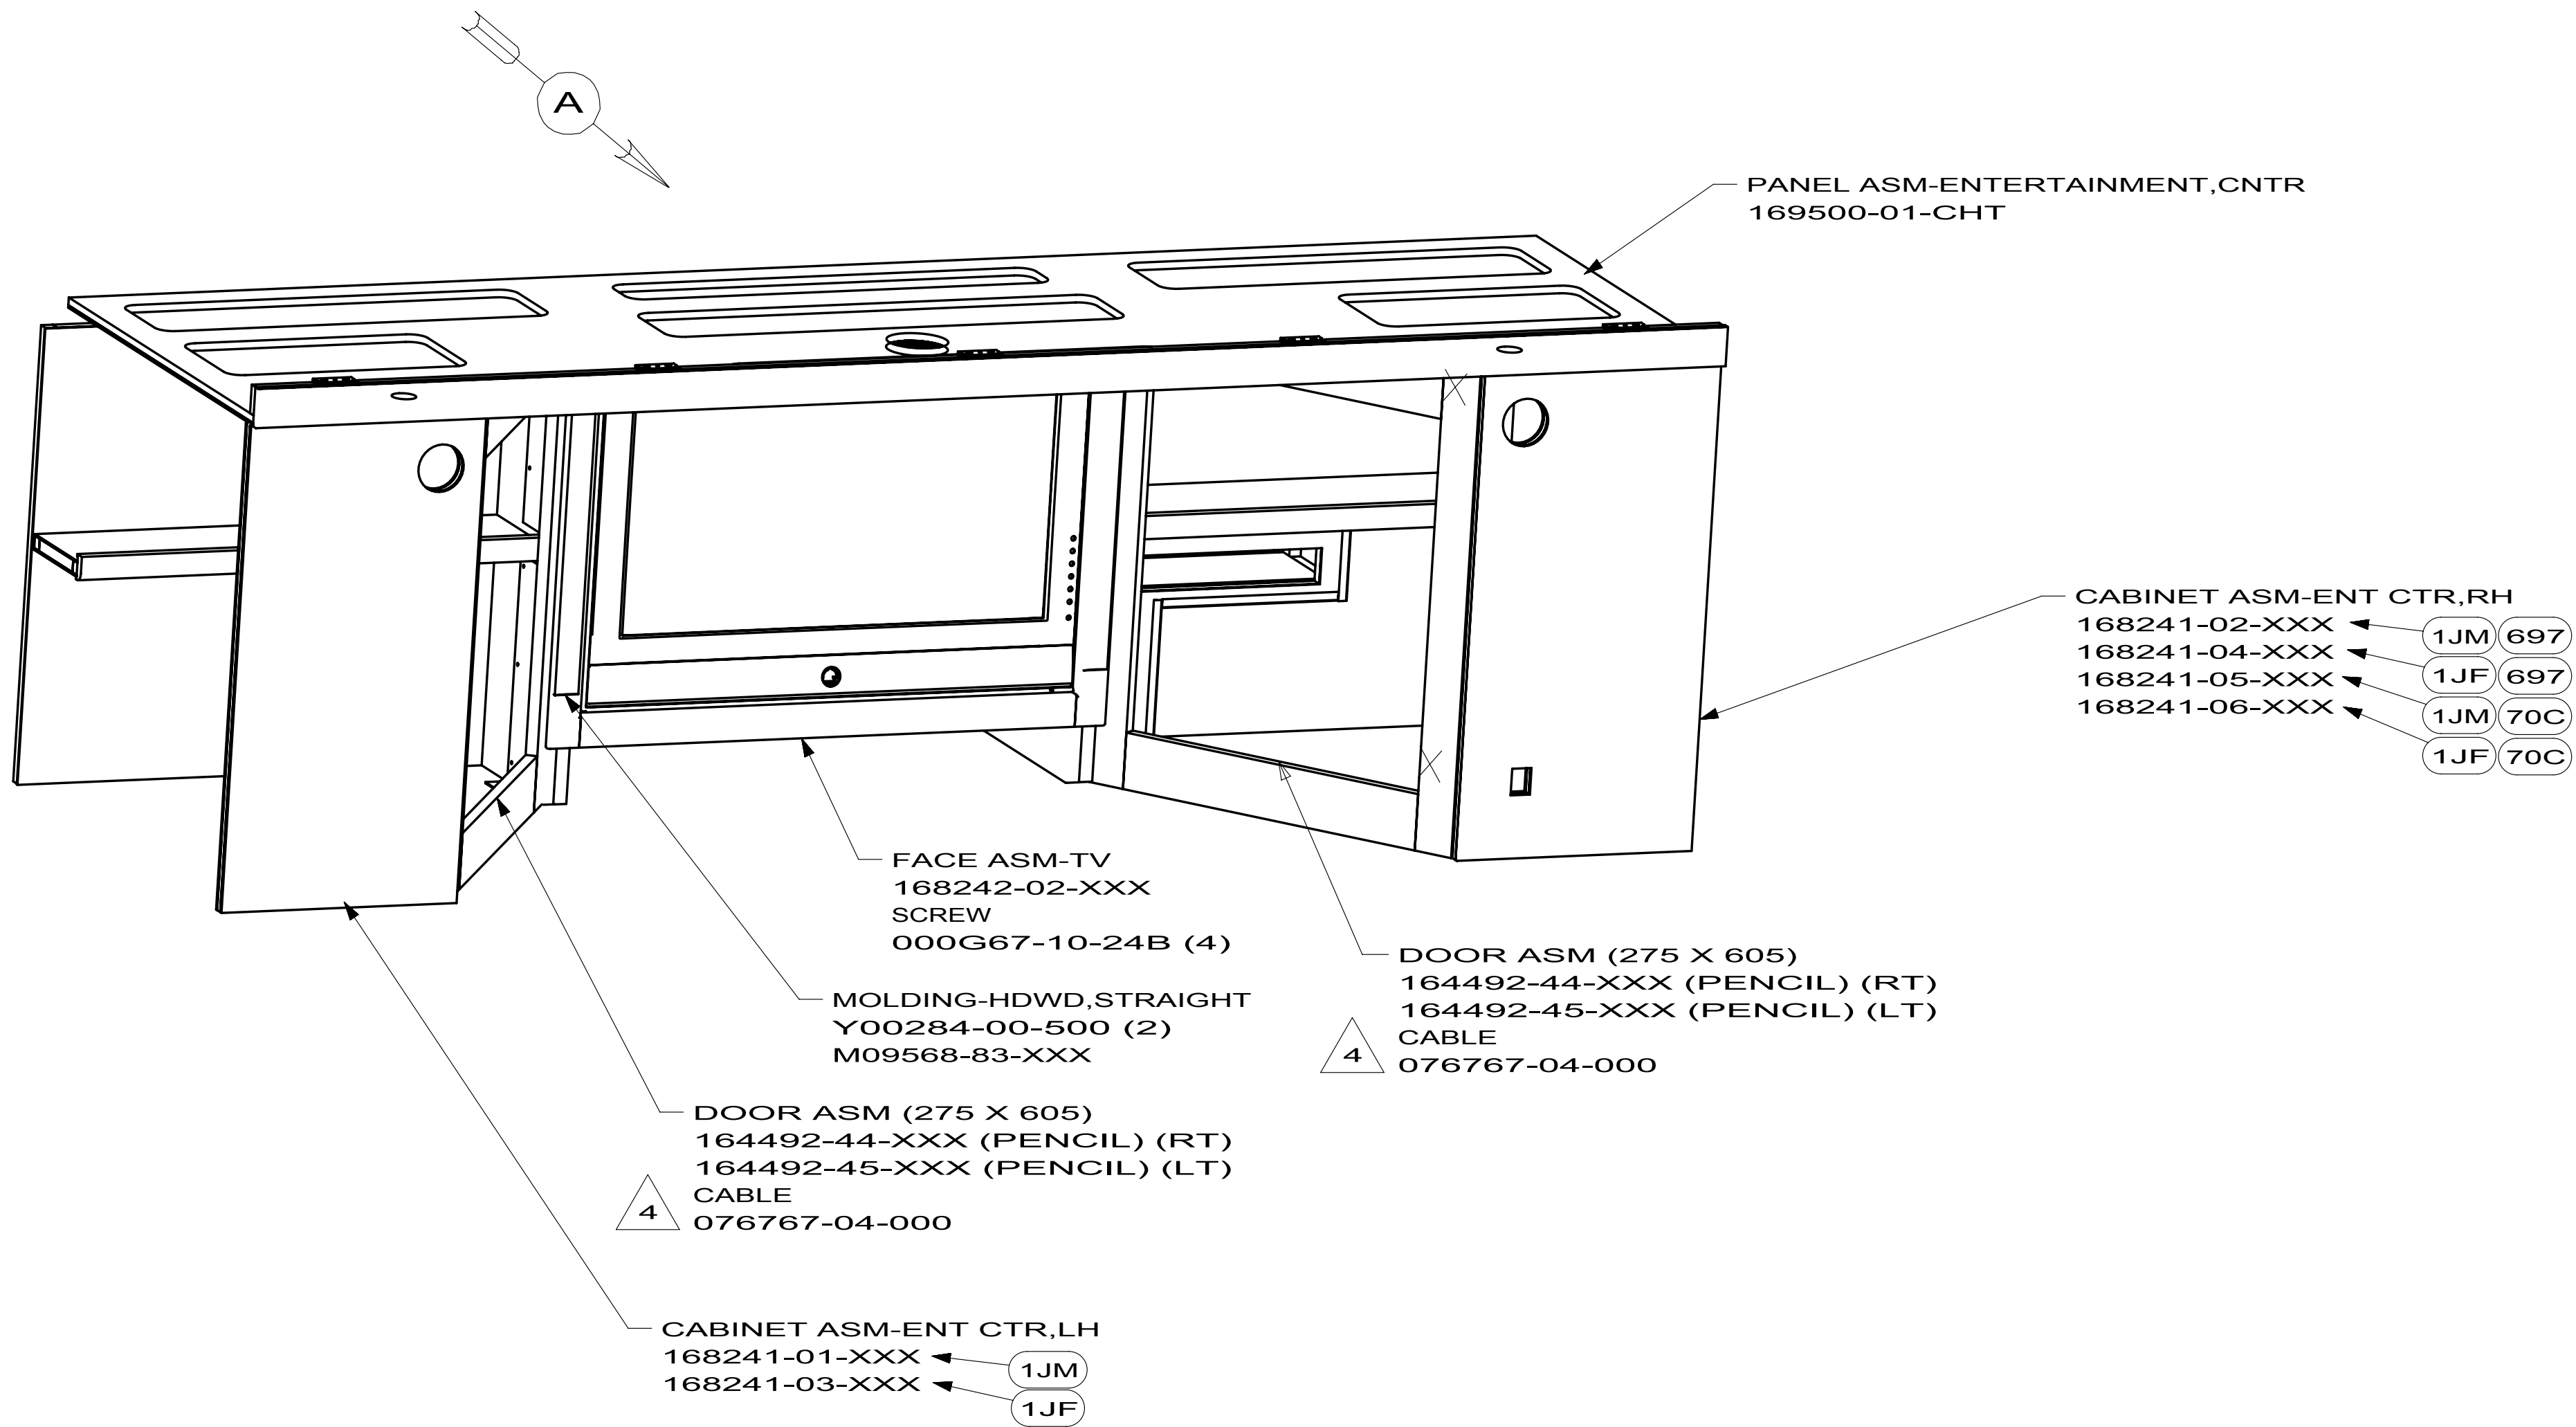

- 1JF HOME THEATER SYS-WITHOUT
- 1JM HOME THEATER SOUND SYSTEM
- 70C RADIO - SATELLITE
- 697 RADIO, SATELLITE - WITHOUT

4. ATTACH CABLE TO DOOR CLOSEST TO THE TV.

3. LOCATE BRACE-TV,BRACKETS SO VERTICAL EDGE RUNS PARALLEL WITH T-MOLDING AT SPECIFIED DIMENSION.

2. TRIM FLOOR TO CABINETS AS NEEDED PER ES0067 (2600).

1. USE ADHESIVE-LOCTITE 243 P/N 062917-06-000 ON BOLTS SUPPLIED WITH TV.

NOTES:


10 200-SERIES

ENTERTAINMENT CENTER COMPL

1 1

173782

3/24/2010

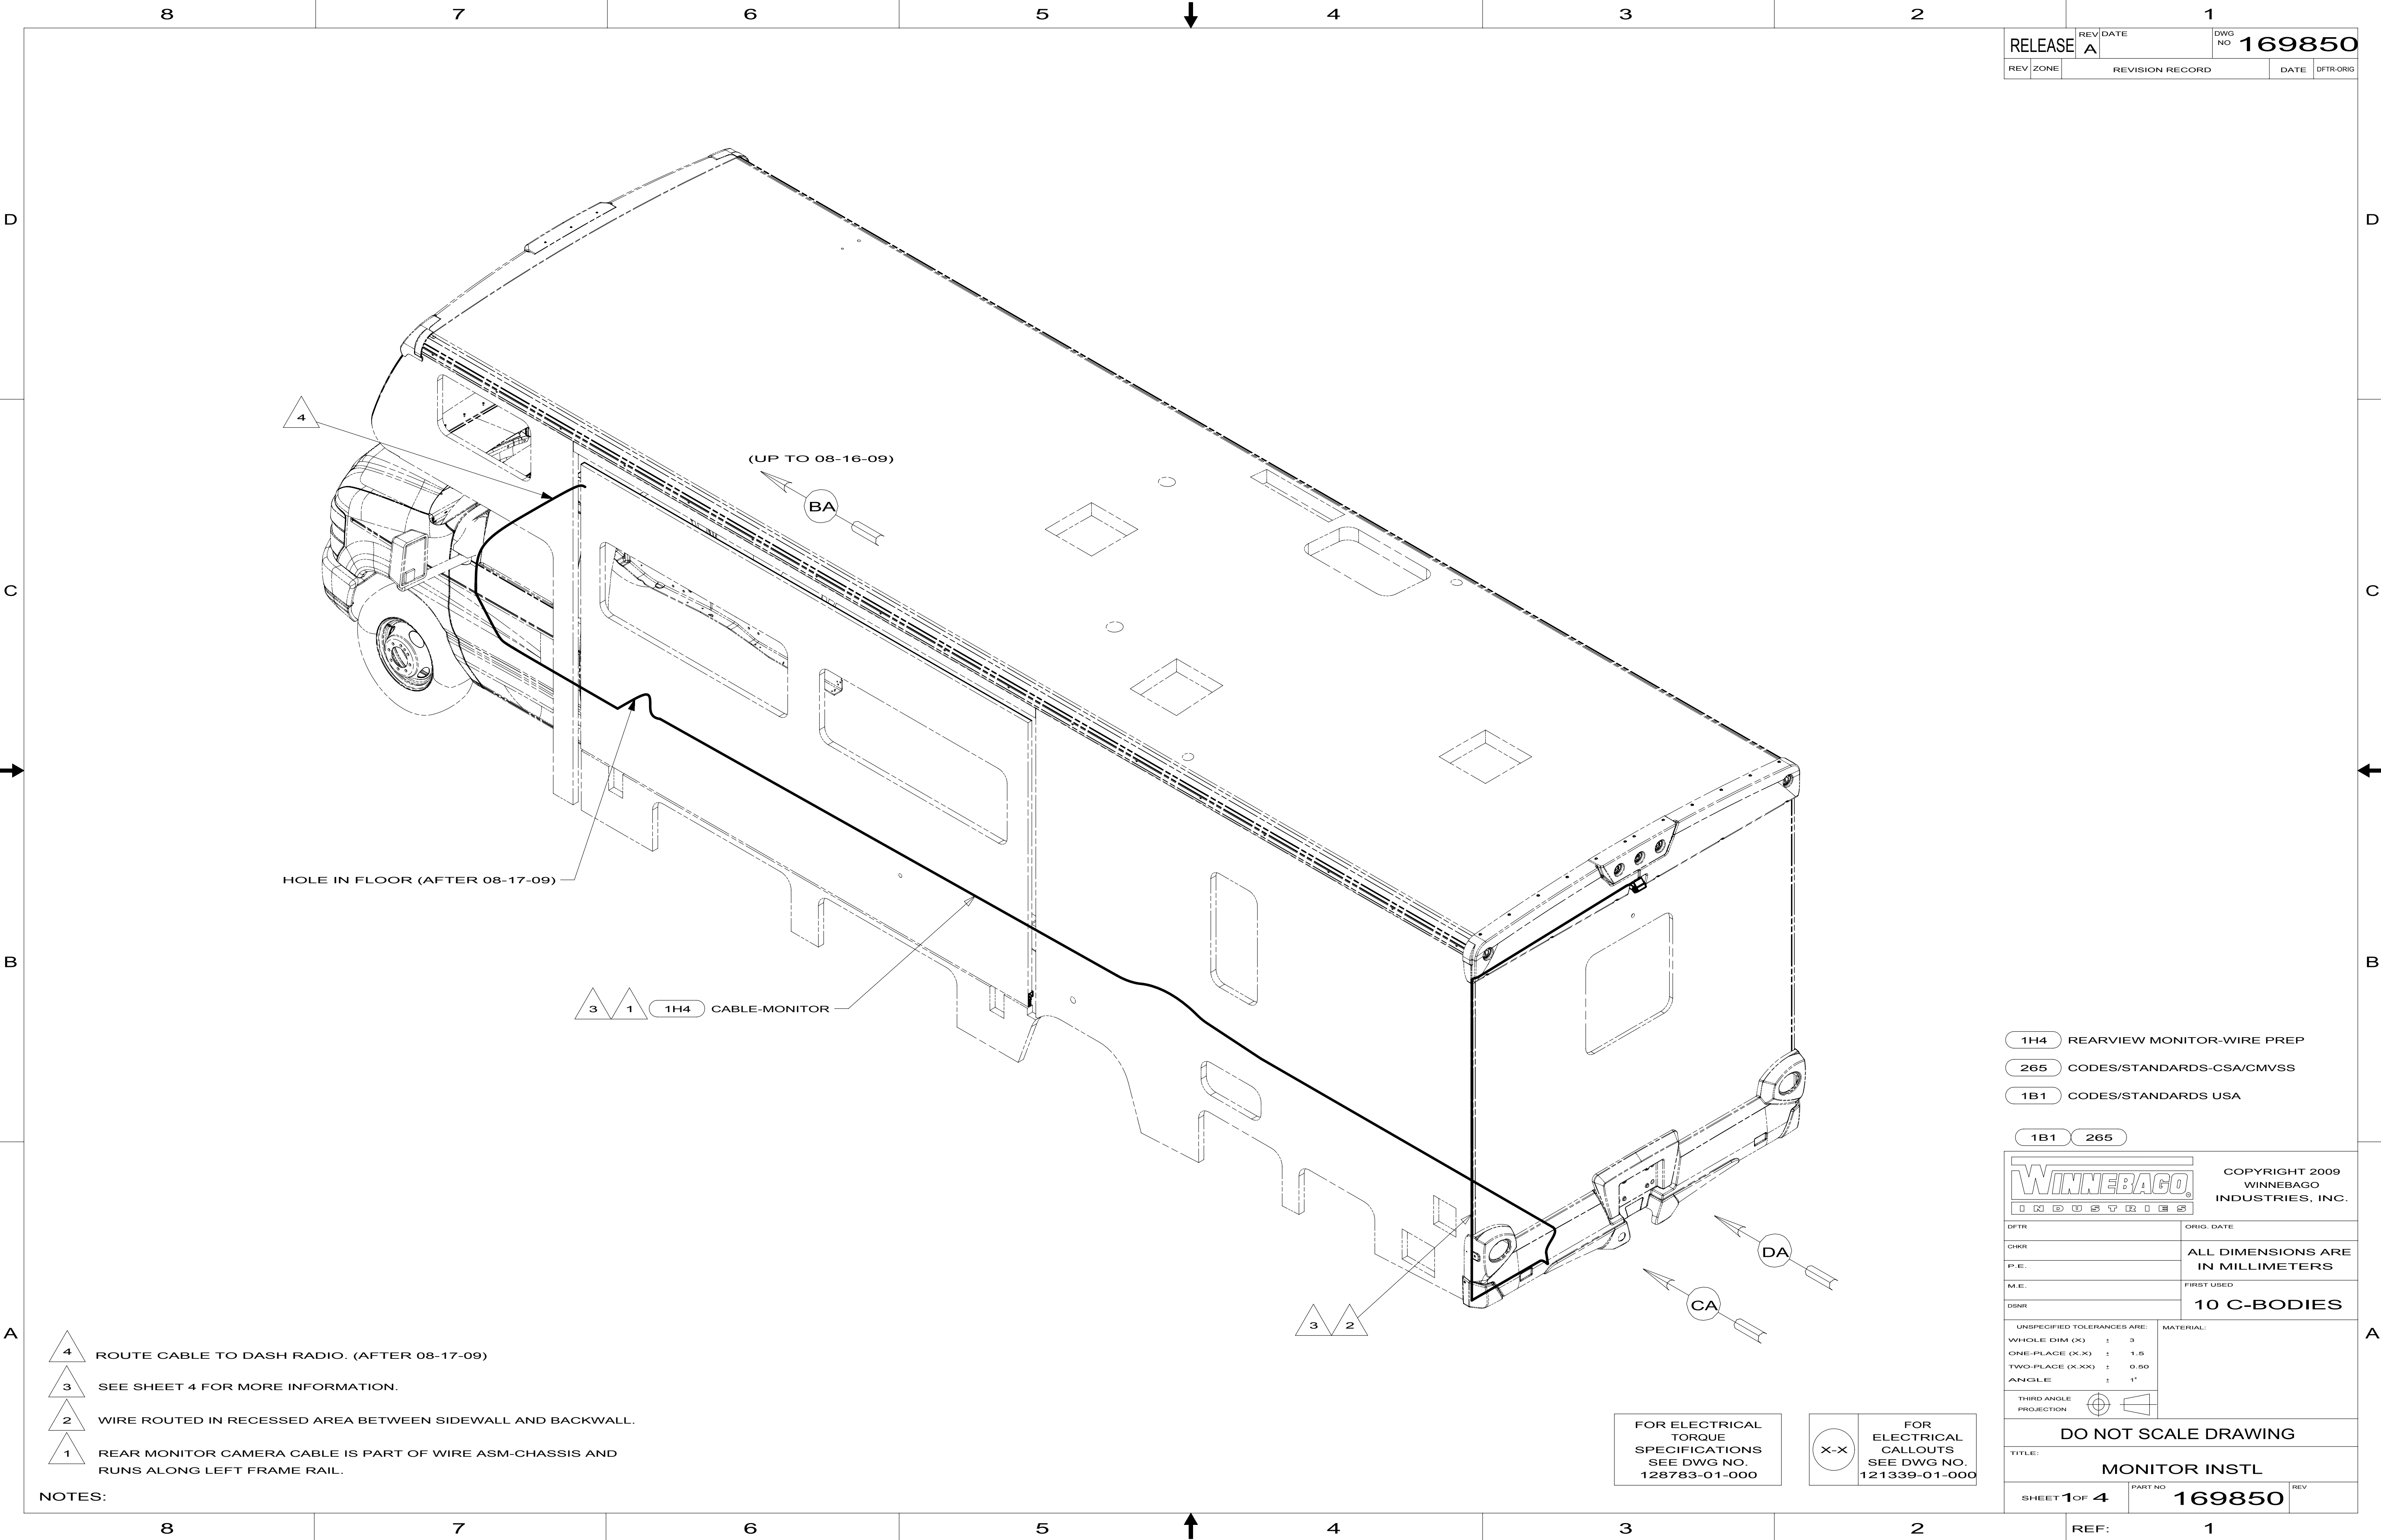

RELEASE		REV	DATE	DWG NO	169850
REV	ZONE	REVISION RECORD		DATE	DFT-ORIG

- 1H4 REARVIEW MONITOR-WIRE PREP
- 265 CODES/STANDARDS-CSA/CMVSS
- 1B1 CODES/STANDARDS USA

1B1 265

WINNEBAGO
INDUSTRIES

COPYRIGHT 2009
WINNEBAGO
INDUSTRIES, INC.

DFT-ORIG	ORIG. DATE
CHGR	ALL DIMENSIONS ARE IN MILLIMETERS
P.E.	
M.E.	FIRST USED
DSNR	10 C-BODIES
UNSPECIFIED TOLERANCES ARE:	
WHOLE DIM (X)	± 3
ONE-PLACE (X.X)	± 1.5
TWO-PLACE (X.XX)	± 0.50
ANGLE	± 1°
THIRD ANGLE PROJECTION	

DO NOT SCALE DRAWING


TITLE:		MONITOR INSTL	
SHEET 1 OF 4	PART NO	169850	REV

REF: 1


FOR ELECTRICAL
TORQUE
SPECIFICATIONS
SEE DWG NO.
128783-01-000

FOR ELECTRICAL
CALLOUTS
SEE DWG NO.
121339-01-000


NOTES:

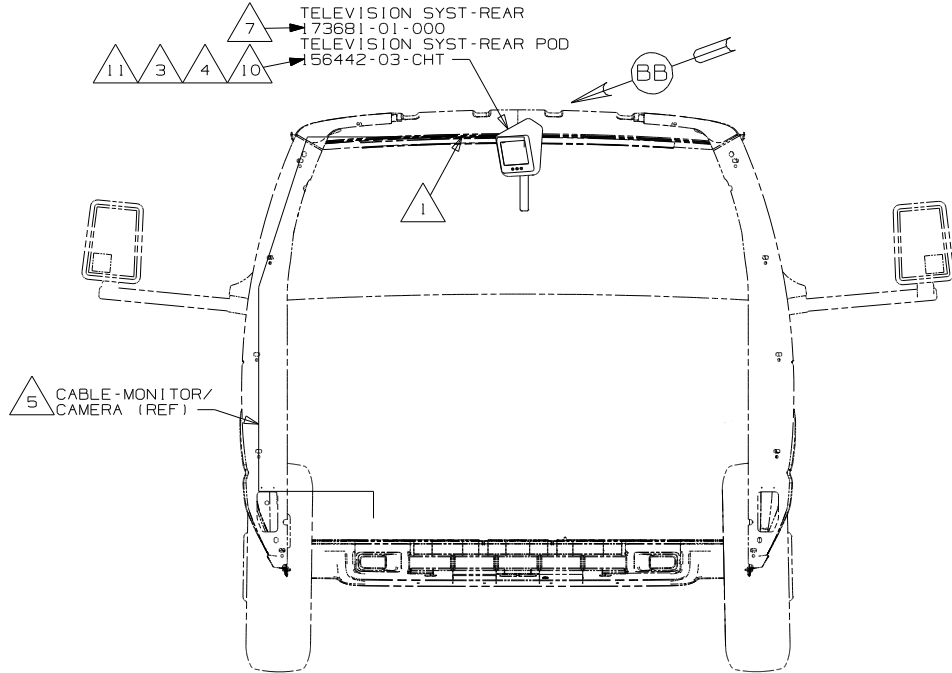

VIEW BA
(200, 300, & 700 SERIES)
74J 16C 16Y

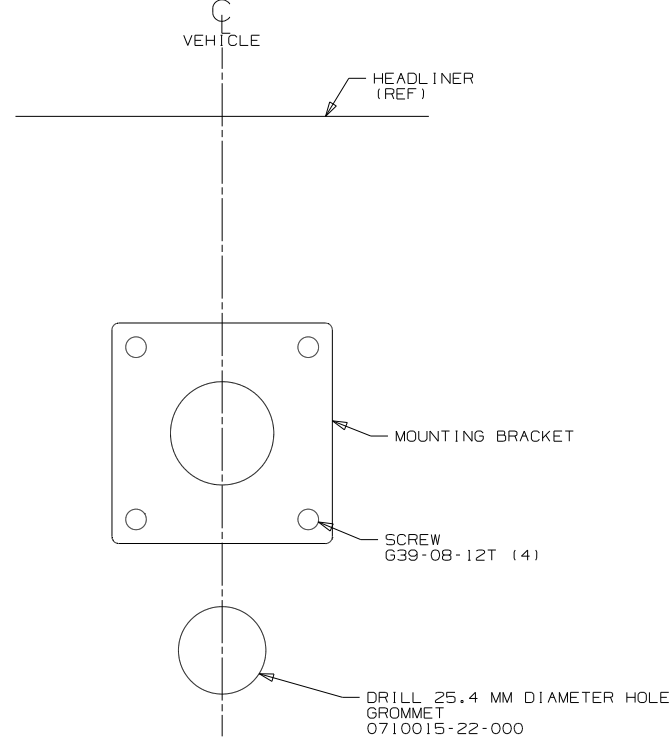


VIEW BB
(700 SERIES)
74J 16C 16Y

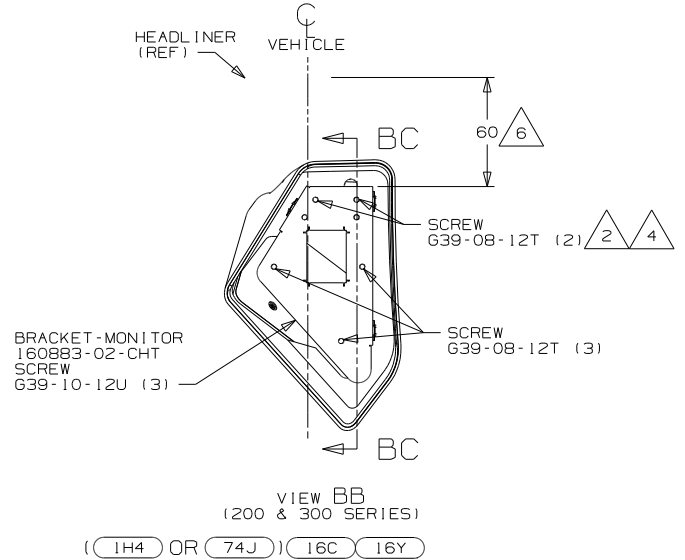

(UP TO 08-16-09)

- 11 200 & 300 SERIES.
- 10 SNAP MONITOR ONTO MOUNTING BRACKET.
- 9 MOUNT MONITOR AS CLOSE TO BOTTOM OF BUNK BOARD AS POSSIBLE.
- 8 ASSEMBLE MOUNTING BRACKET TO HEADLINER PRIOR TO HEADLINER INSTALLATION. PLACE LUMBER ON BACK SIDE OF HEADLINER AND PLACE MOUNTING BRACKET ON FRONT SIDE OF HEADLINER. SCREW THROUGH HEADLINER INTO LUMBER.
- 7 700-SERIES.
- 6 INSTALL MOUNTING BRACKET 20MM FROM EDGE OF HEADLINER ON 300-SER.
- 5 REAR MONITOR CABLE IS PART OF THE WIRE ASM-CHASSIS AND IS TO END BETWEEN SUNVISORS.
- 4 MONITOR BRACKET MOUNTING SCREWS TO BE SCREWED INTO FORD INNER WINDSHIELD HEADER AS FAR TO THE PASSENGER SIDE AS ALLOWED BY THE HOLE IN THE HEADER TRIM PANEL.
- 3 PLUG 3-PIN POWER HARNESS AND REAR MONITOR CABLE INTO REAR MONITOR ASSEMBLY.
- 2 SCREW INTO PLACE AFTER HEADLINER INSTALLATION.
- 1 END CABLE IN THIS AREA WITH 1A5

NOTES:

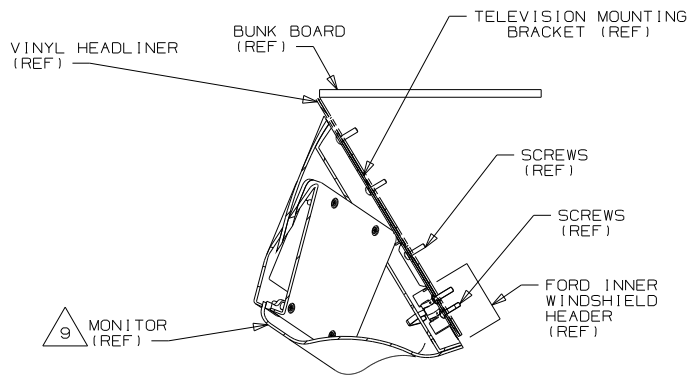

SECTION BC-BC
16C 16Y

FOR ELECTRICAL
TORQUE
SPECIFICATIONS
SEE DWG NO.
128783-01-000

FOR
ELECTRICAL
CALLOUTS
SEE DWG NO.
121339-01-000

- 74J REARVIEW MONITOR SYS W/AUDIO
- 16Y FORD CHASSIS - 14,500#_GVWR
- 16C FORD CHASSIS 11,500 LB.GVWR
- 1H4 REARVIEW MONITOR-WIRE PREP
- 1A5 REARVIEW MONITOR SYSTEM W/O
- 265 CODES/STANDARDS-CSA/CMVSS
- 1B1 CODES/STANDARDS USA

1B1 265

10 C-BODIES

DO NOT SCALE DRAWING

TITLE: MONITOR INSTL


SHEET 2 PART NO 169850 REV

D

C


B

A

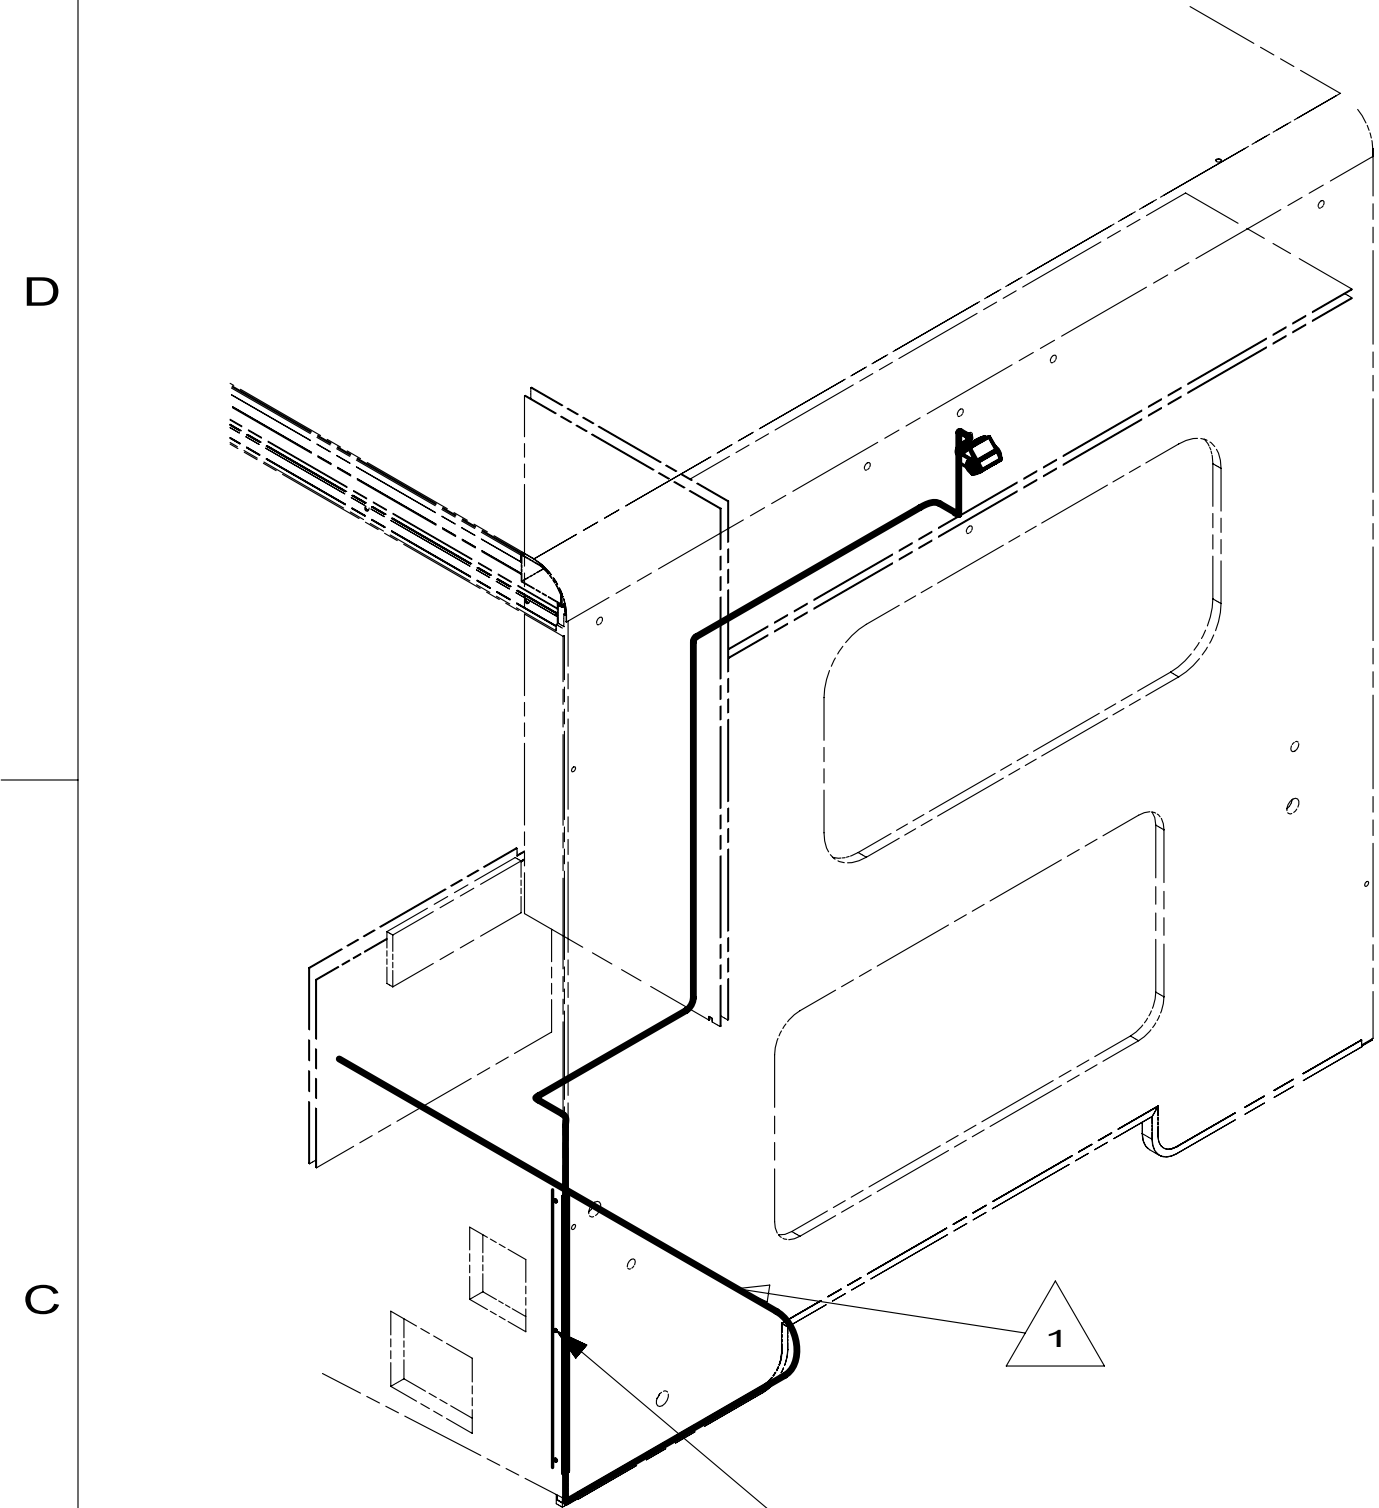


(AFTER 08-17-09)
COVER-TRIM, WIRING
154189-08-CHT
SCREW
000G67-10-08U (3)


VIEW DC

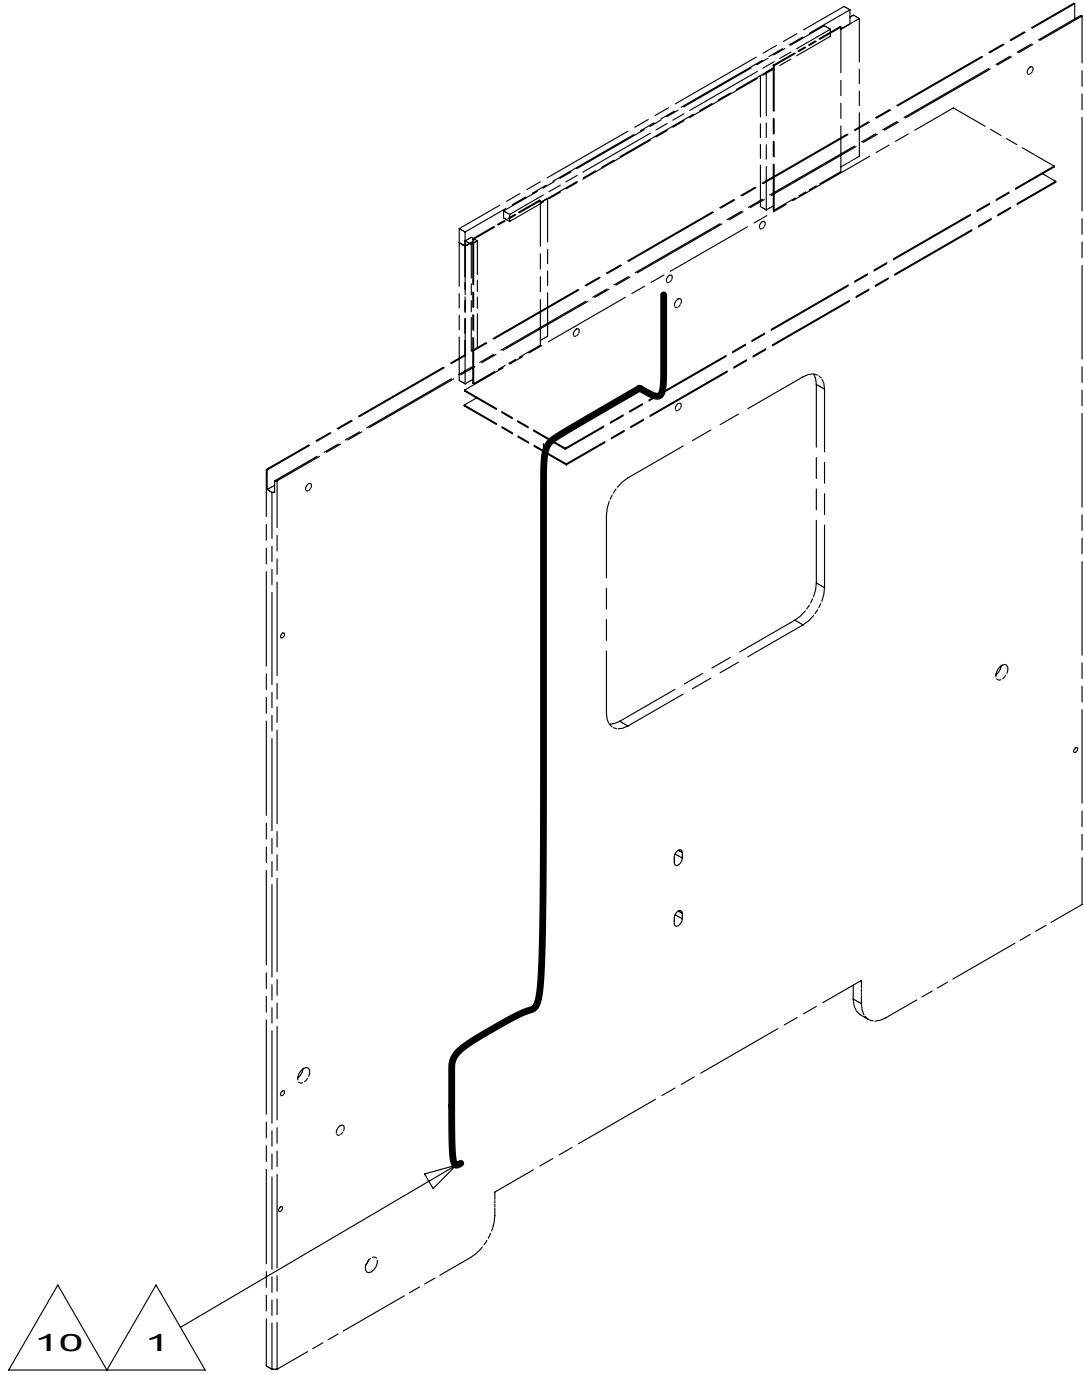

VIEW DE

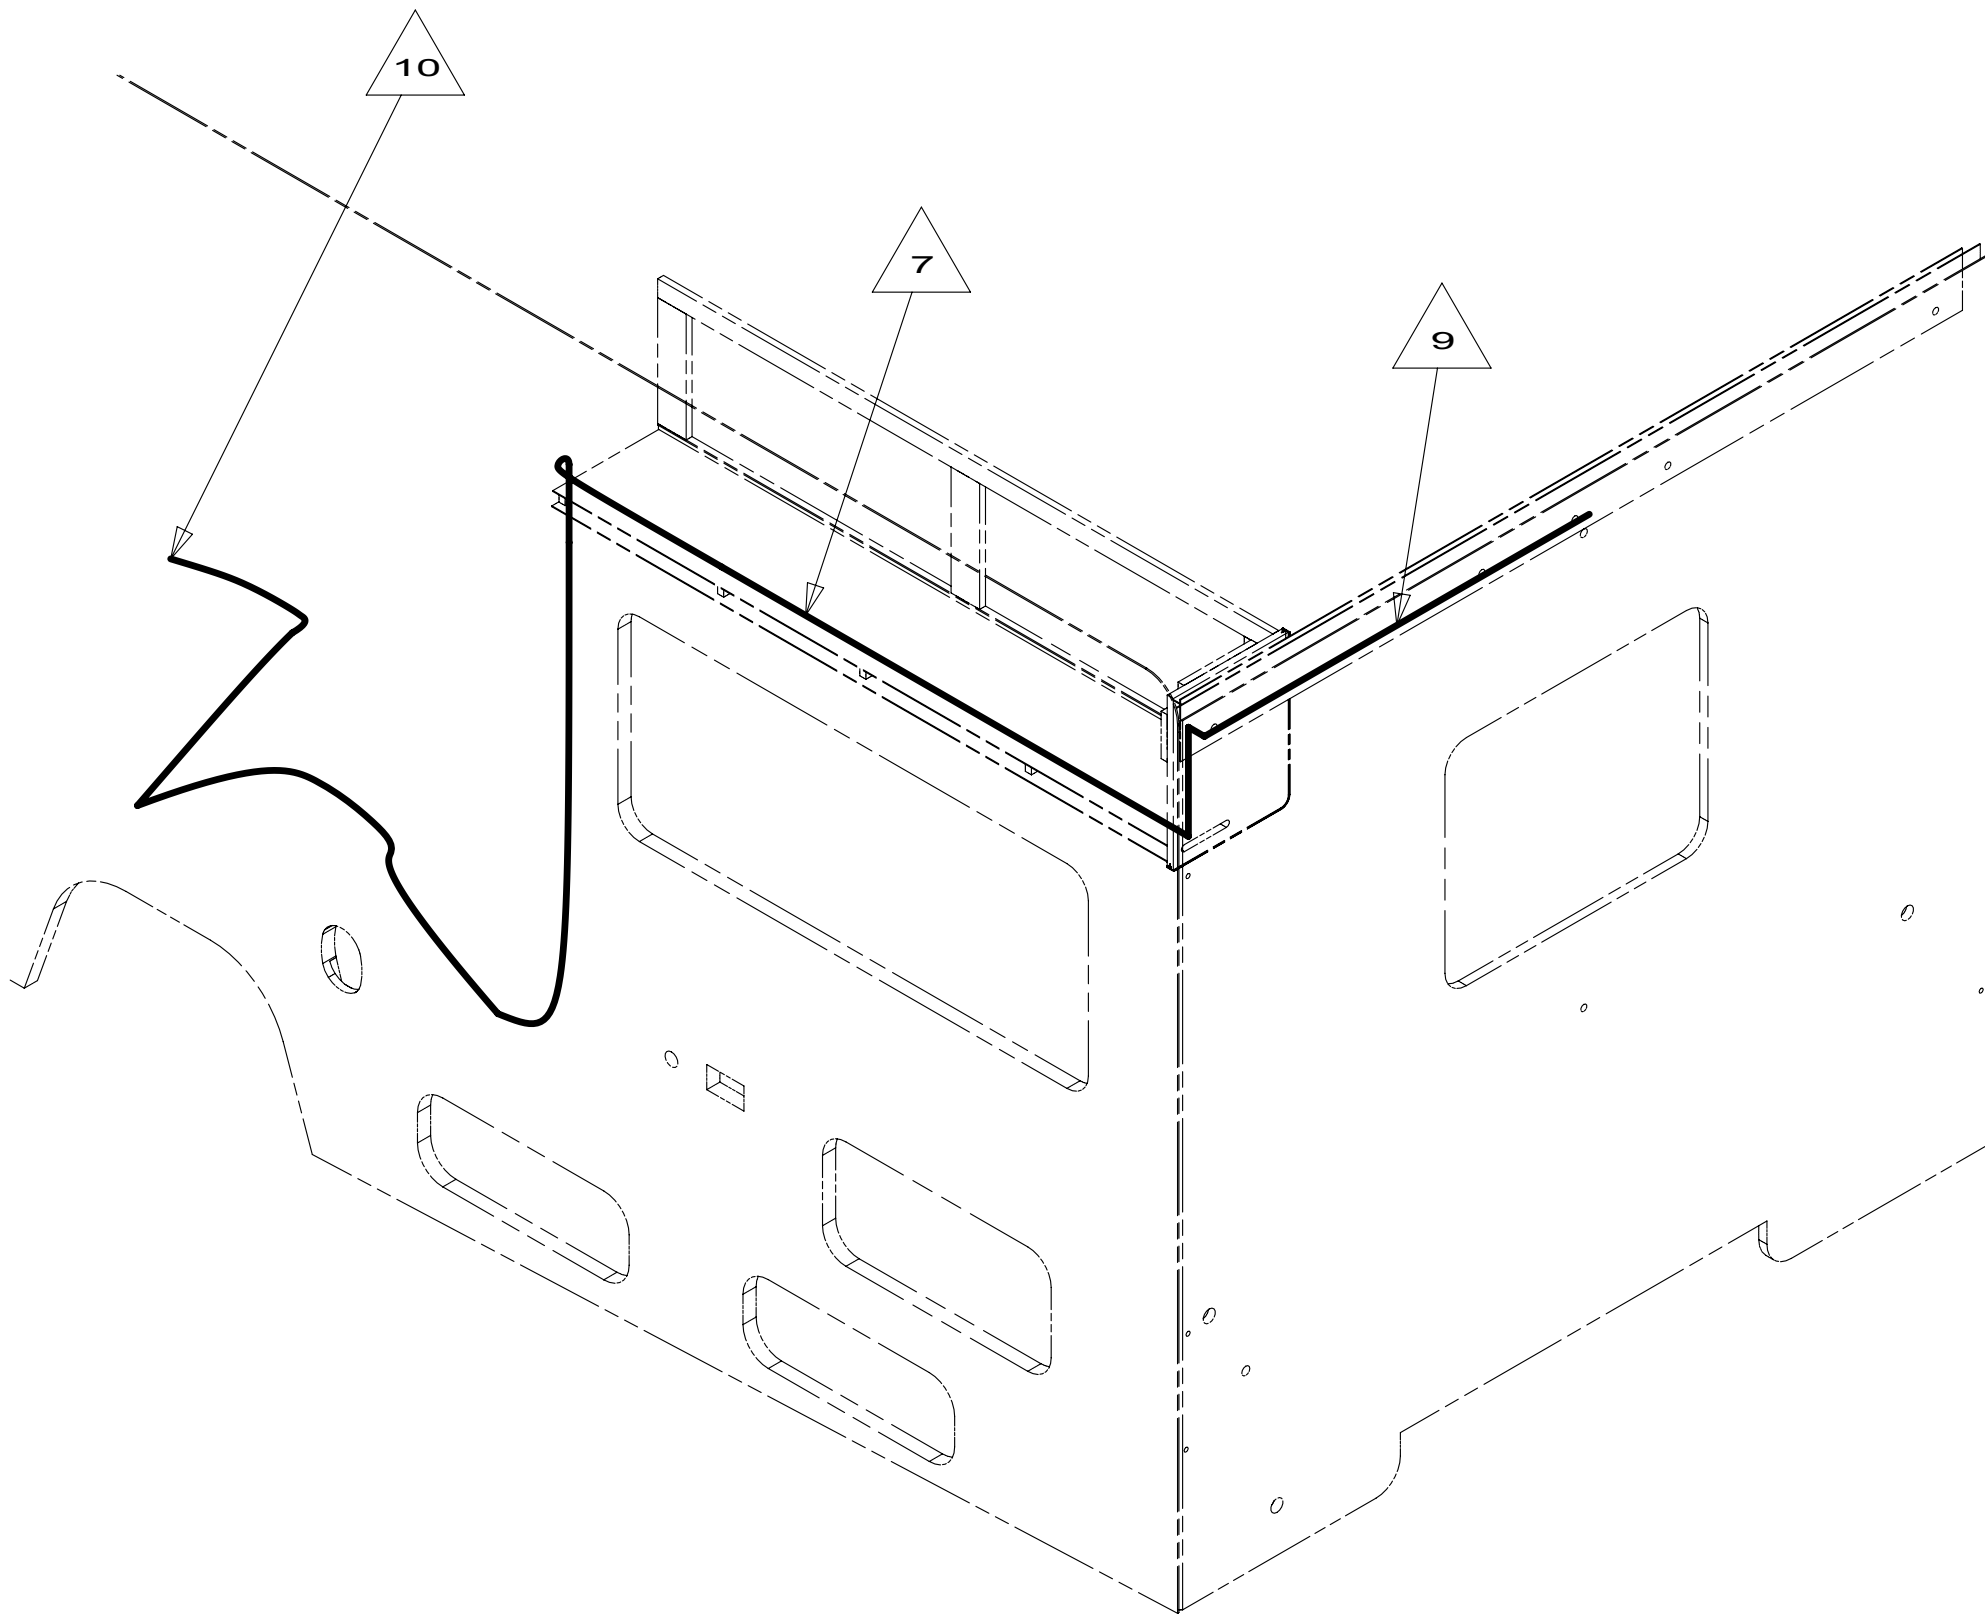

VIEW DD

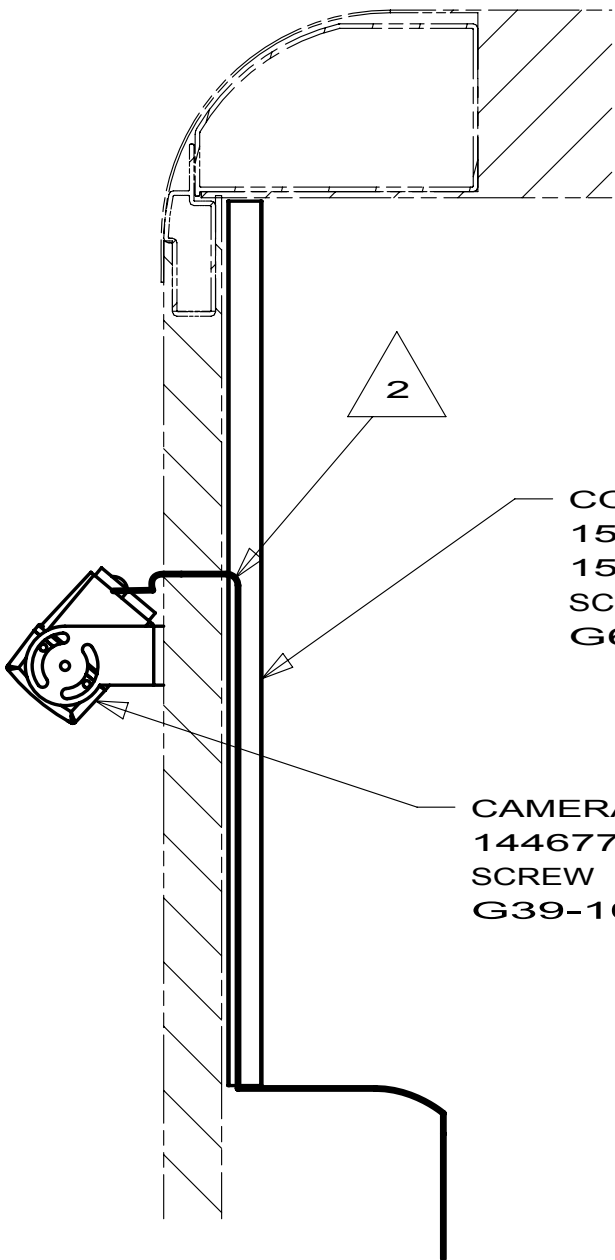



COVER-TRIM, WIRING
154189-04-CHT
154189-06-CHT
SCREW
G67-10-08U (3)

CAMERA-REAR VIEW
144677-14-CHT
SCREW
G39-10-12U (EXT) (5)

SECTION DB-DB

(UP TO 08-16-09)

(AFTER 08-17-09)

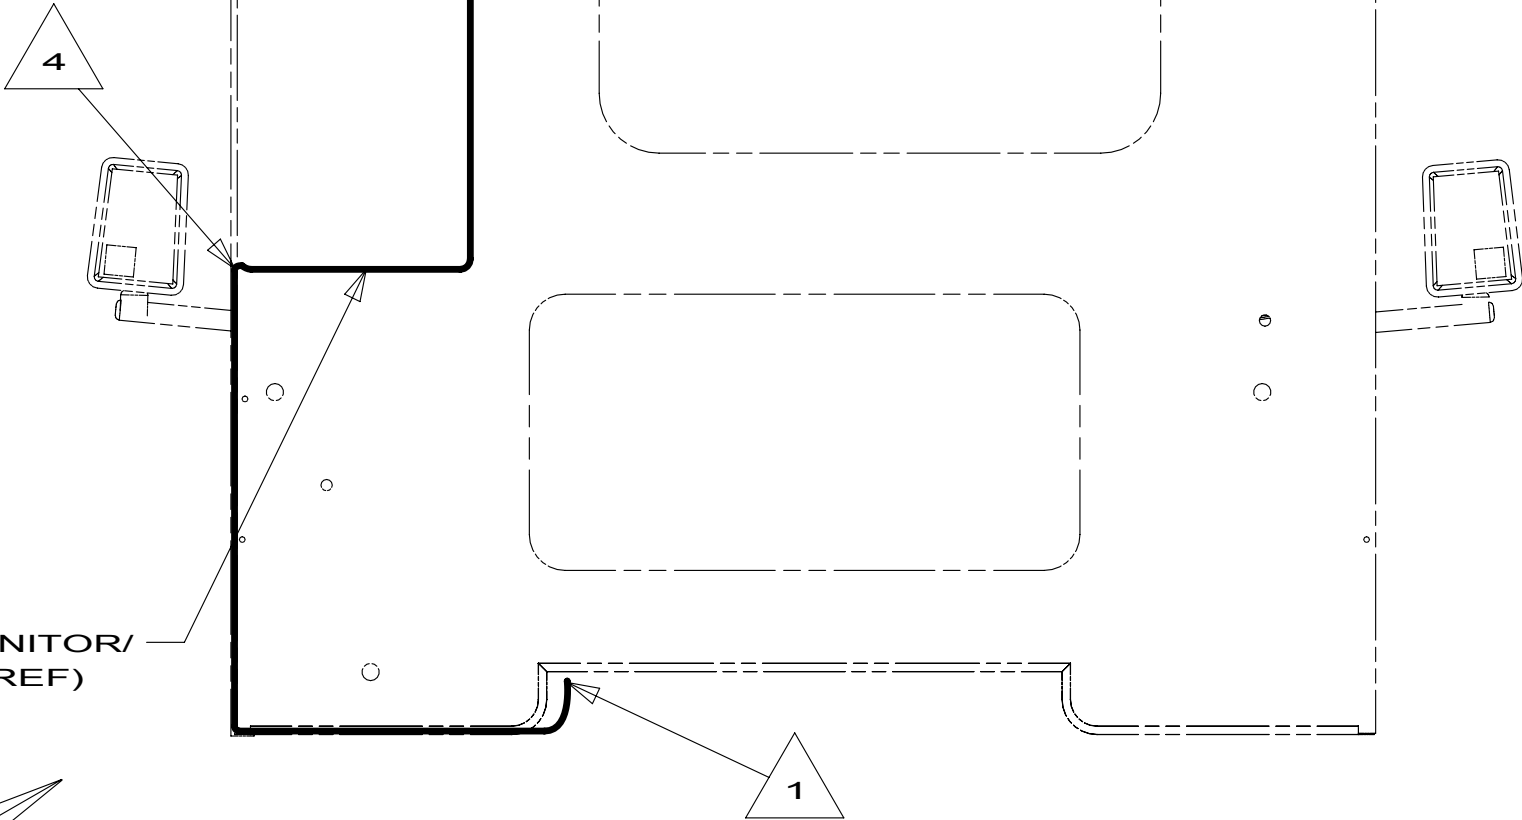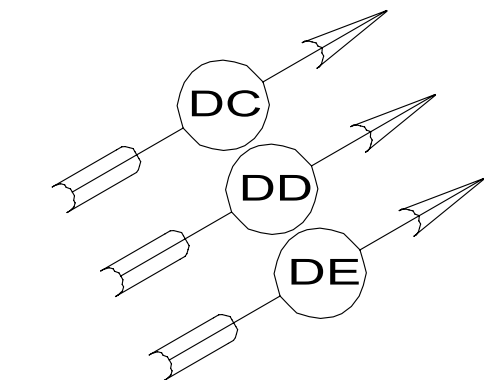

VIEW DA
(200-SERIES)

- NOTES:
- USED ONLY ON 224V.
 - NOT USED ON 231J & 224V.
 - WIRE ROUTED THROUGH FLOOR IN THIS AREA.
 - ROUTE WIRE BEHIND TRIM ON INSIDE OF BACKWALL.
 - VIEW DE COVERS THE 224V AND THE 231N.
 - WIRE ROUTED IN BOTTOM OF OVHD.
 - VIEW DC COVERS THE 231C, & 229T.
 - REAR MONITOR CABLE IS PART OF THE WIRE ASM-CHASSIS.
 - ROUTE CAMERA CABLE THRU BACKWALL IN THIS AREA.
 - VIEW DD COVERS 231J.
 - CABLE ROUTED THRU BACKWALL.
 - ALONG CHASSIS FRAME RAIL SECURE WITH WIRE TIE 8343-04-000.

- RADIO/REARVIEW MONITOR SYS (AFTER 08-17-09)
- REARVIEW MONITOR SYS W/AUDIO (UP TO 08-16-09)
- REARVIEW MONITOR SYSTEM W/O
- CODES/STANDARDS-CSA/CMVSS
- CODES/STANDARDS USA

FIRST USED		
10 C-BODIES		
DO NOT SCALE DRAWING		
TITLE: MONITOR INSTL		
SHEET 4	PART NO 169850	REV

FOR ELECTRICAL
TORQUE
SPECIFICATIONS
SEE DWG NO.
128783-01-000

FOR ELECTRICAL
CALLOUTS
SEE DWG NO.
121339-01-000

KEY	PART NUMBER	U/M DESCRIPTION	156442-02-01A, 156442-03-01A
			VENDOR NO.
	156442-02-700	EA SHROUD - REAR VIEW MONITOR	33200013
	156442-02-701	EA BRACKET - MOUNTING	32300012