


- ② USE WITHOUT SURROUND.
 - ③ USE WITH SURROUND.
 - ⑦ SECURE VENT TUBES TO FLOOR.
 - ⑥ VENT PIPE MUST PROJECT 51" MINIMUM TO 64" ABOVE ROOF FOR PROPER FIT AND FUNCTION.
 - ⑤ SEE DRAWING 61607-01-000 FOR INSTALLATION OF GROMMET.
4. ALL EXTERIOR OPENINGS AROUND PIPE TO BE SEALED.
 3. ALL PIPE AND FITTINGS TO BE ASSEMBLED WITH SOLVENT 4020-01-000.
 2. SLOPE OF TRAP ARM MUST BE 6 PER 305.
 1. SLOPE OF HORIZONTAL PIPING TO BE 6 PER 305.

WINNERS 92 W/F424RC

DATE	UNSPECIFIED TOLERANCES ARE:	MATERIAL
DRWG	WHOLE DIM (IN)	1/8"
PIPE	ONE-PLACE (IN.XI)	1/16"
PIPE	TWO-PLACE (IN.XI)	1/32"
ANGLE	ANGLE	
CONDR	TRUSS ANGLE	
	PROJECTION	

LANO# 424RC2 TITLE: DRAINAGE SYSTEM INSTL
 DIA # SCALE: NONE DO NOT SCALE DRAWING
 ALL DIMENSIONS ARE IN MILLIMETERS SHEET 1 OF 1

REF: 100641 106942

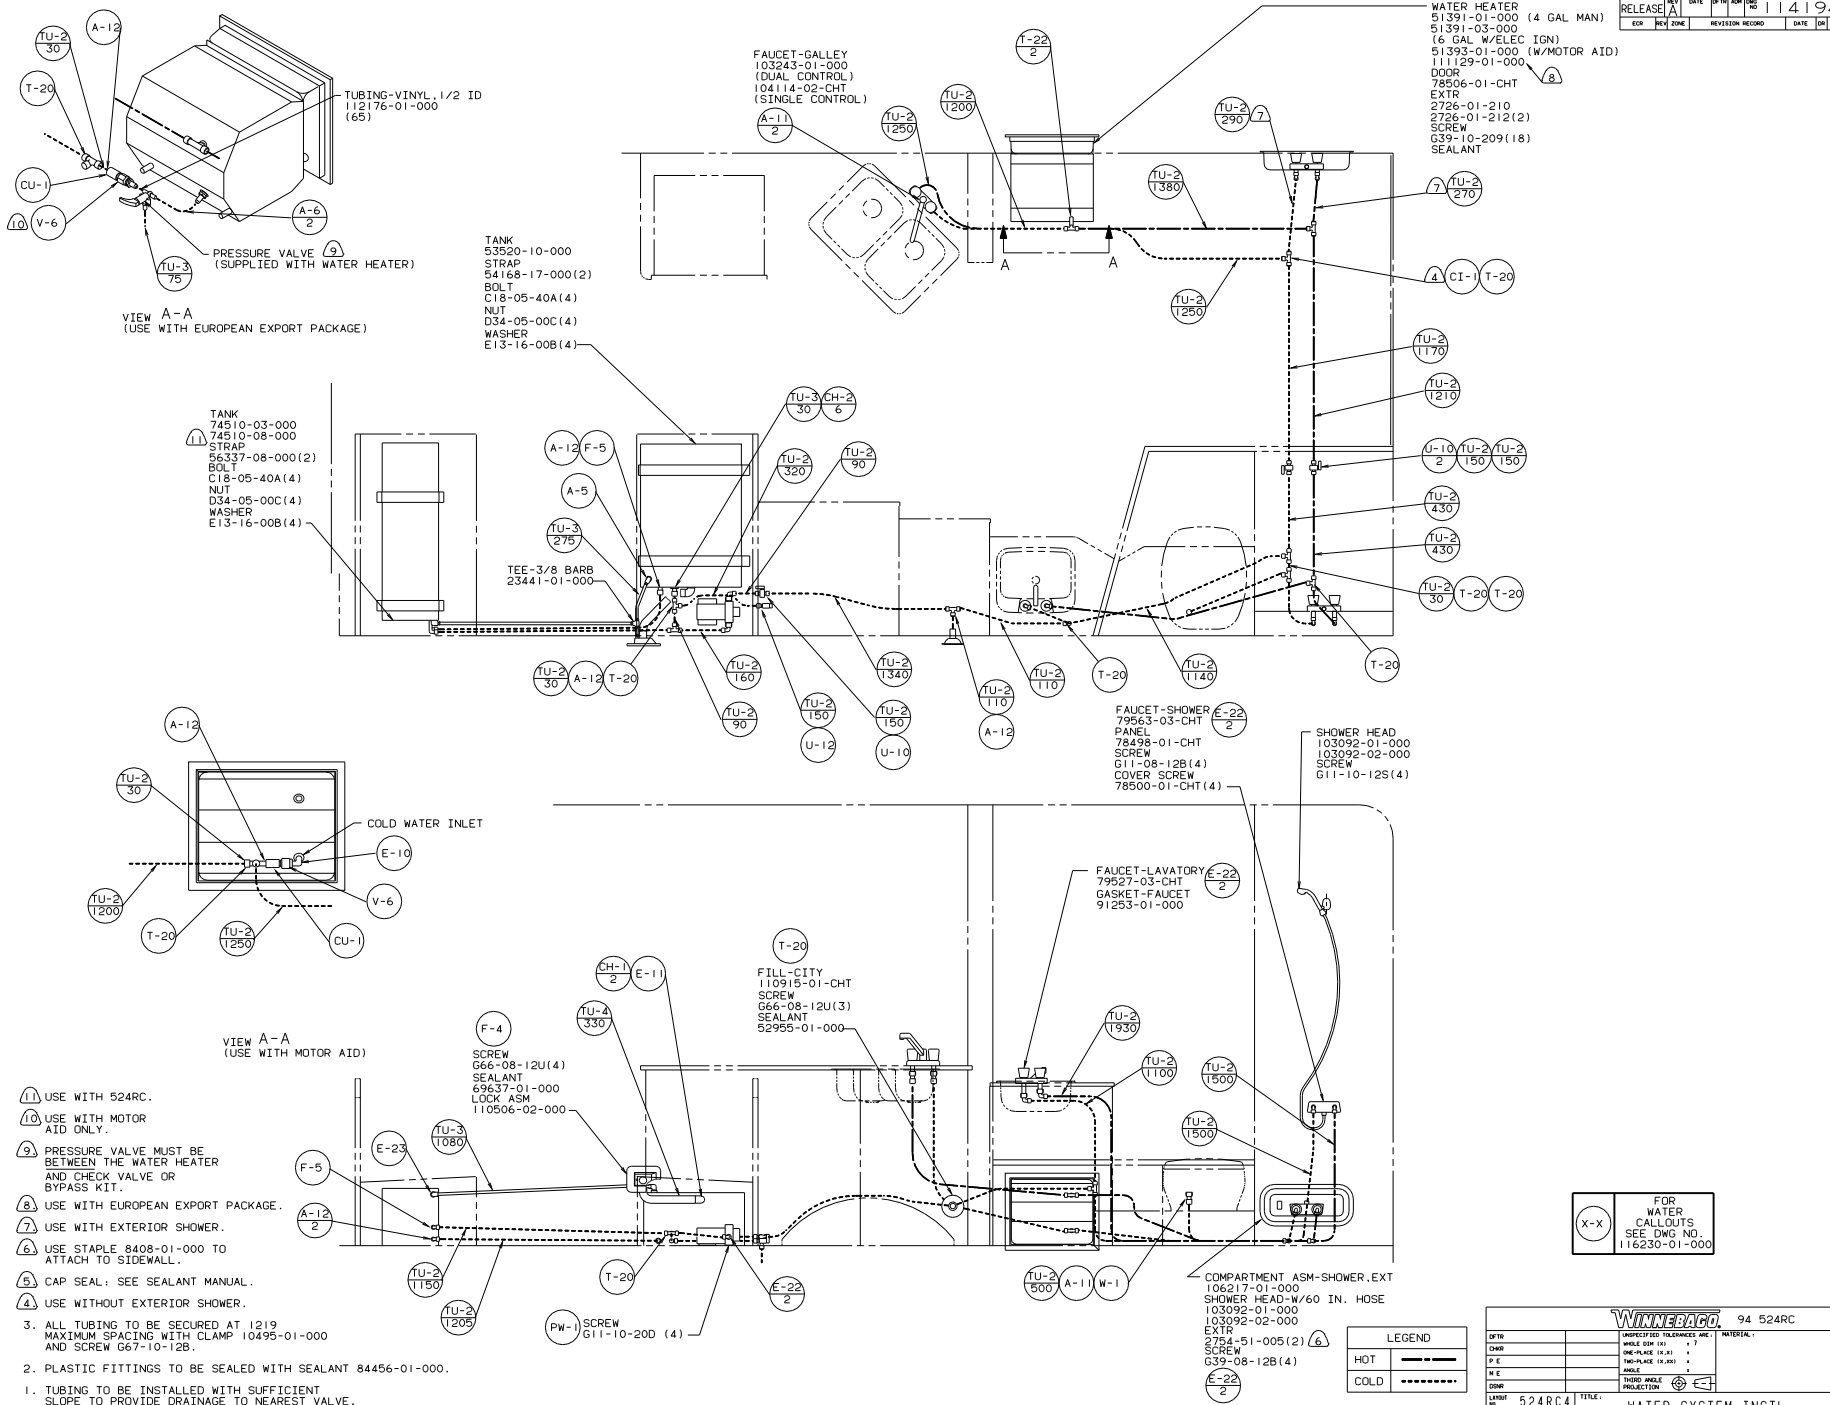

- WATER HEATER
 51391-01-000 (4 GAL MAN)
 51391-03-000 (6 GAL W/ELEC IGN)
 51393-01-000 (W/MOTOR AID)
 11129-01-000 DOOR
 78506-01-CHT EXTR
 2726-01-210
 2726-01-212(2)
 G39-10-209(18) SEALANT

- TANK
 53520-10-000 STRAP
 54168-17-000(2) BOLT
 C18-05-40A(4) NUT
 D34-05-00C(4) WASHER
 E13-16-00B(4)

- TANK
 74510-03-000 STRAP
 56337-08-000(2) BOLT
 C18-05-40A(4) NUT
 D34-05-00C(4) WASHER
 E13-16-00B(4)

- SHOWER HEAD
 103092-01-000
 103092-02-000 SCREW
 G11-10-125(4)

- FAUCET-SHOWER
 79563-03-CHT PANEL
 78498-01-CHT SCREW
 G11-08-12B(4) COVER SCREW
 78500-01-CHT(4)

- FAUCET-LAVATORY
 79527-03-CHT GASKET-FAUCET
 91253-01-000

- FILL-CITY
 110915-01-CHT SCREW
 G66-08-12U(3) SEALANT
 52955-01-000

- SCREW
 G66-08-12U(4)
 SEALANT
 69637-01-000
 LOCK ASM
 110506-02-000

- COMPARTMENT ASM-SHOWER, EXT
 106217-01-000 SHOWER HEAD-W/60 IN. HOSE
 103092-01-000
 103092-02-000 EXTR
 2754-51-005(2) SCREW
 G39-10-12B(4)

LEGEND

HOT	—————
COLD	-----

FOR WATER CALLOUTS SEE DWG NO. 116230-01-000

1. TUBING TO BE INSTALLED WITH SUFFICIENT SLOPE TO PROVIDE DRAINAGE TO NEAREST VALVE.
2. PLASTIC FITTINGS TO BE SEALED WITH SEALANT 84456-01-000.
3. ALL TUBING TO BE SECURED AT 1219 MAXIMUM SPACING WITH CLAMP 10495-01-000 AND SCREW G67-10-12B.
1. USE WITH 524RC.
 2. USE WITH MOTOR AID ONLY.
 3. PRESSURE VALVE MUST BE BETWEEN THE WATER HEATER AND CHECK VALVE OR BYPASS KIT.
 4. USE WITH EUROPEAN EXPORT PACKAGE.
 5. USE WITH EXTERIOR SHOWER.
 6. USE STAPLE 8408-01-000 TO ATTACH TO SIDEWALL.
 7. CAP SEAL: SEE SEALANT MANUAL.
 8. USE WITHOUT EXTERIOR SHOWER.