




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.




CAUTION



If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

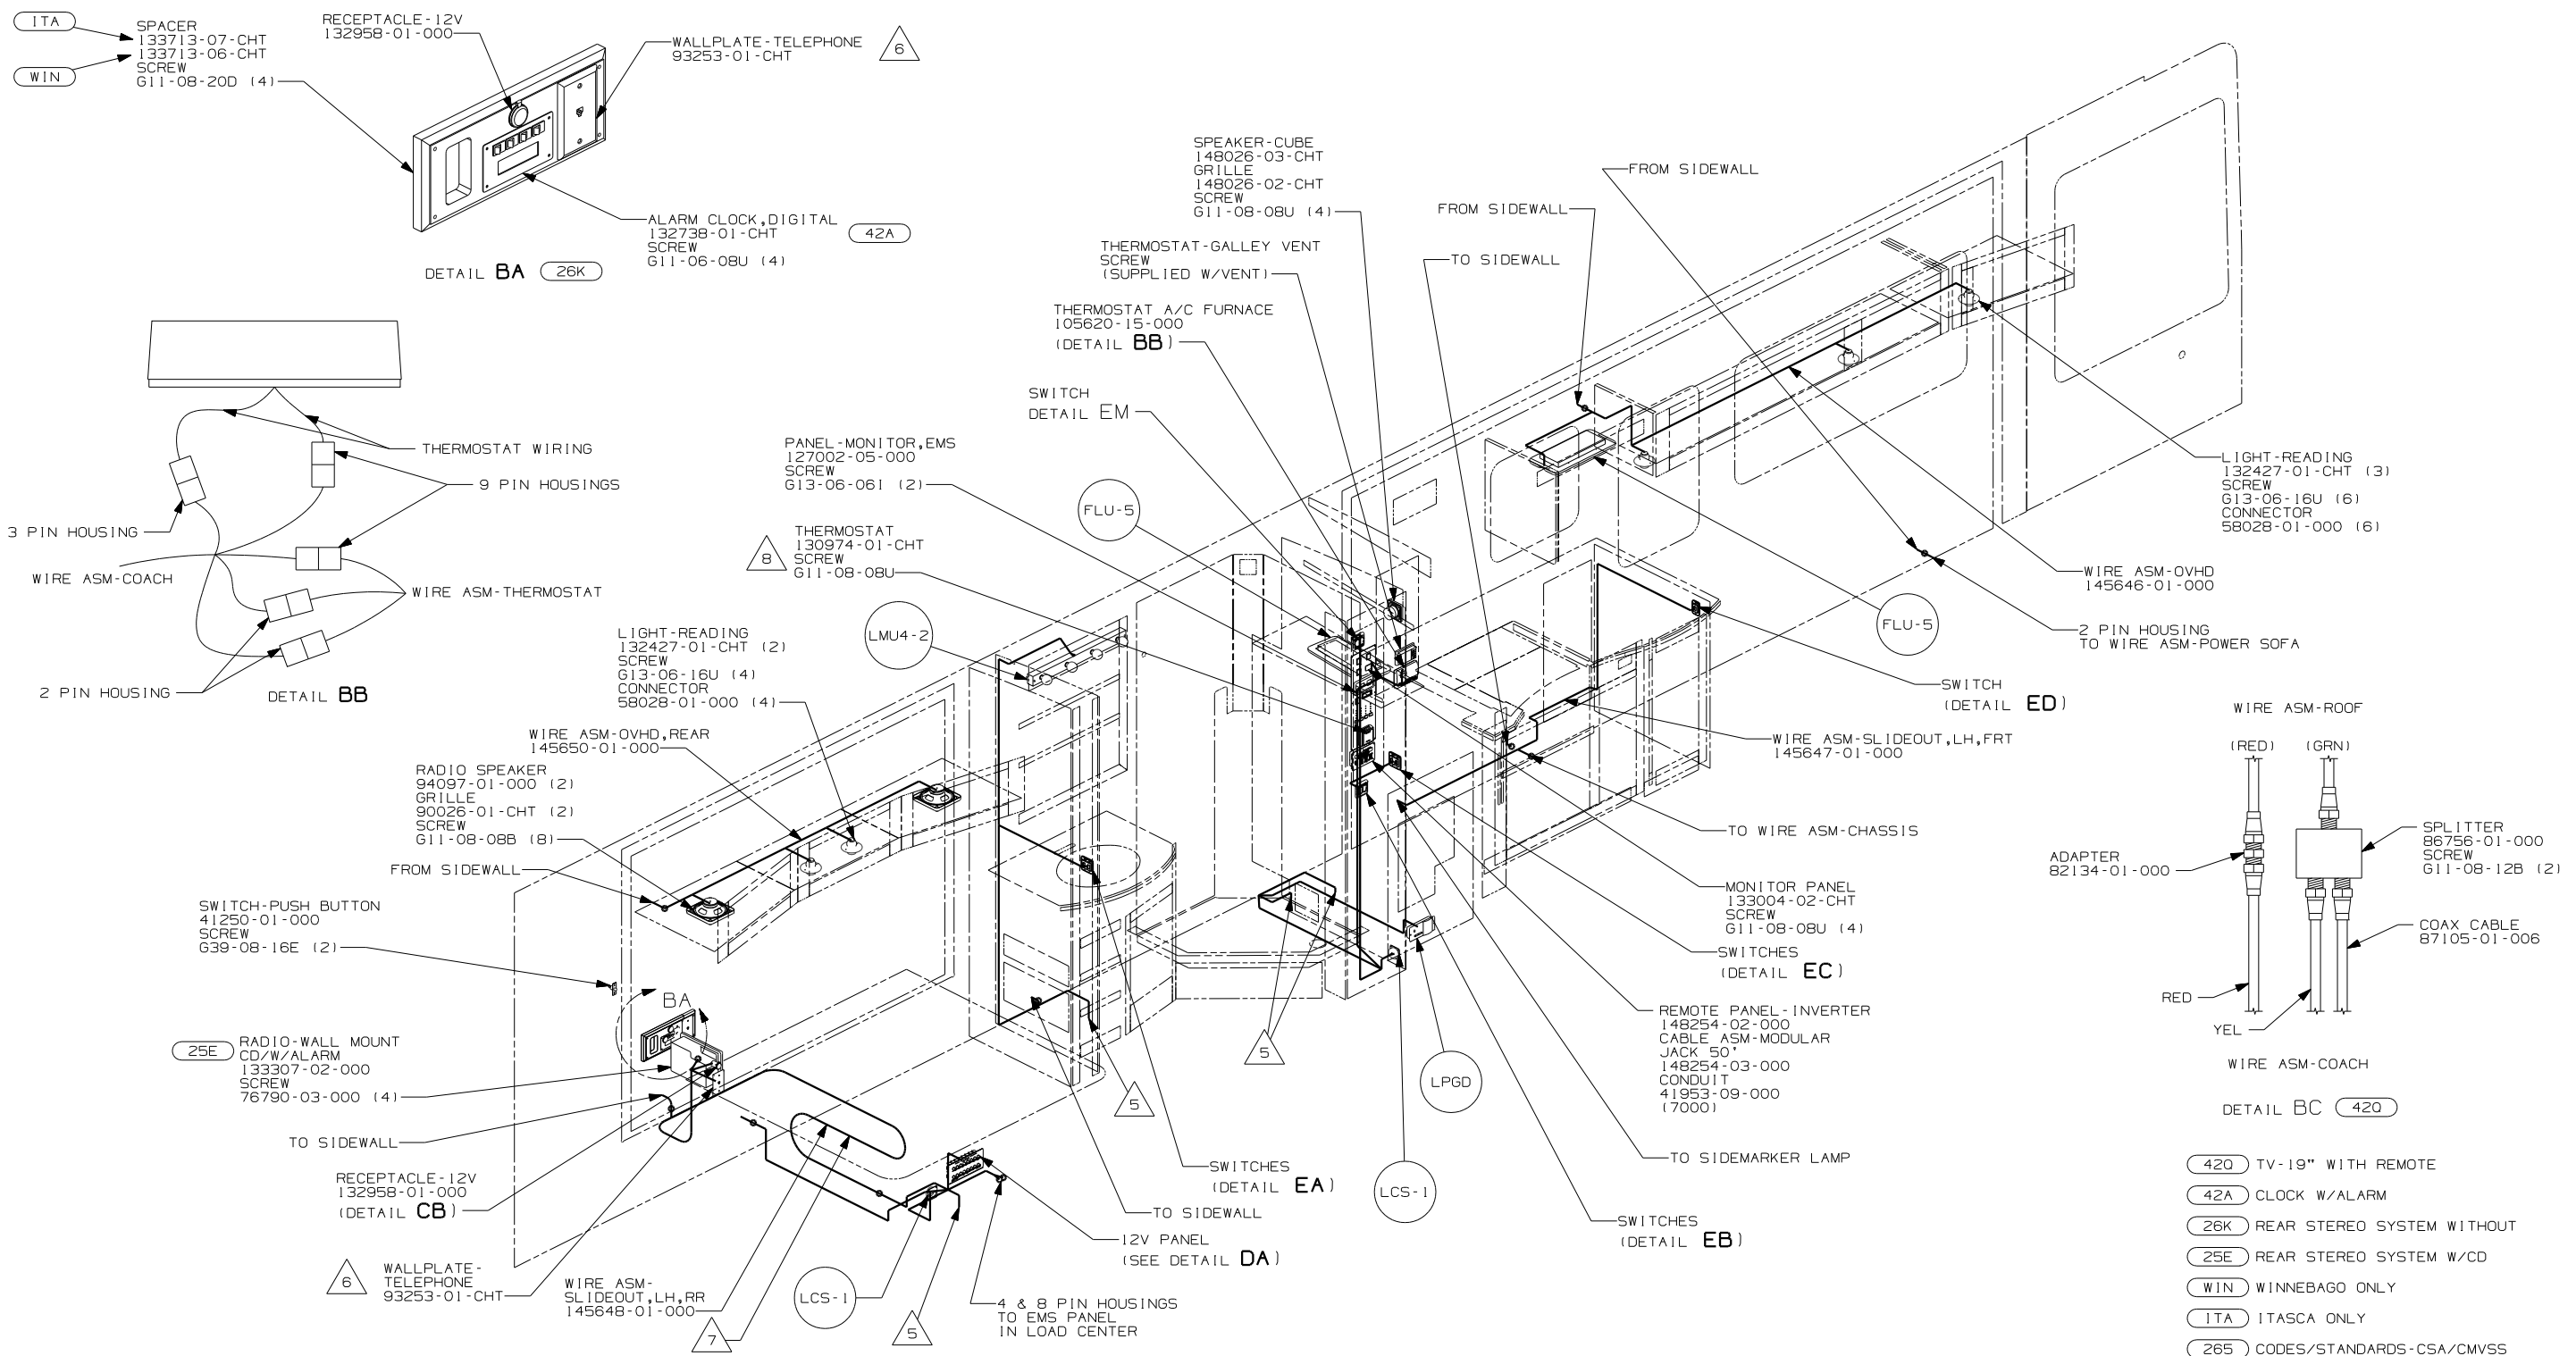


4. SEE WIRING DIAGRAM-BODY FOR ADDITIONAL INFORMATION.
3. ALL GROUND WIRE TO BE COVERED WITH TUBING 8041-02-000.
2. ALL 110V WIRE TO BE CLAMPED WITH CLAMP 10497-05-000 WITHIN 200 OF OUTLET BOXES, USE SCREW G67-10-12B.
1. ALL WIRES TO BE SECURED WITH CLAMP 10495-01-000 OR CLIP 80734-02-000 EVERY 600MM. USE SCREW G67-10-12B UNLESS OTHERWISE SPECIFIED.

- NOTES:
- 8 THERMOSTAT TO COVER RIGHT HAND HOLE. BLACK SCREW TO BE PLACED IN LEFT HAND HOLE.
- 7 SEE WIRING INSTL-BODY,110V FOR ROUTING AND CLAMPING INFORMATION.
- 6 CONNECT TELEPHONE WIRES TO MATCHING COLORS ON PLATE TELEPHONE.
- 5 WIRES PASS UP THRU FLOOR IN THIS AREA.

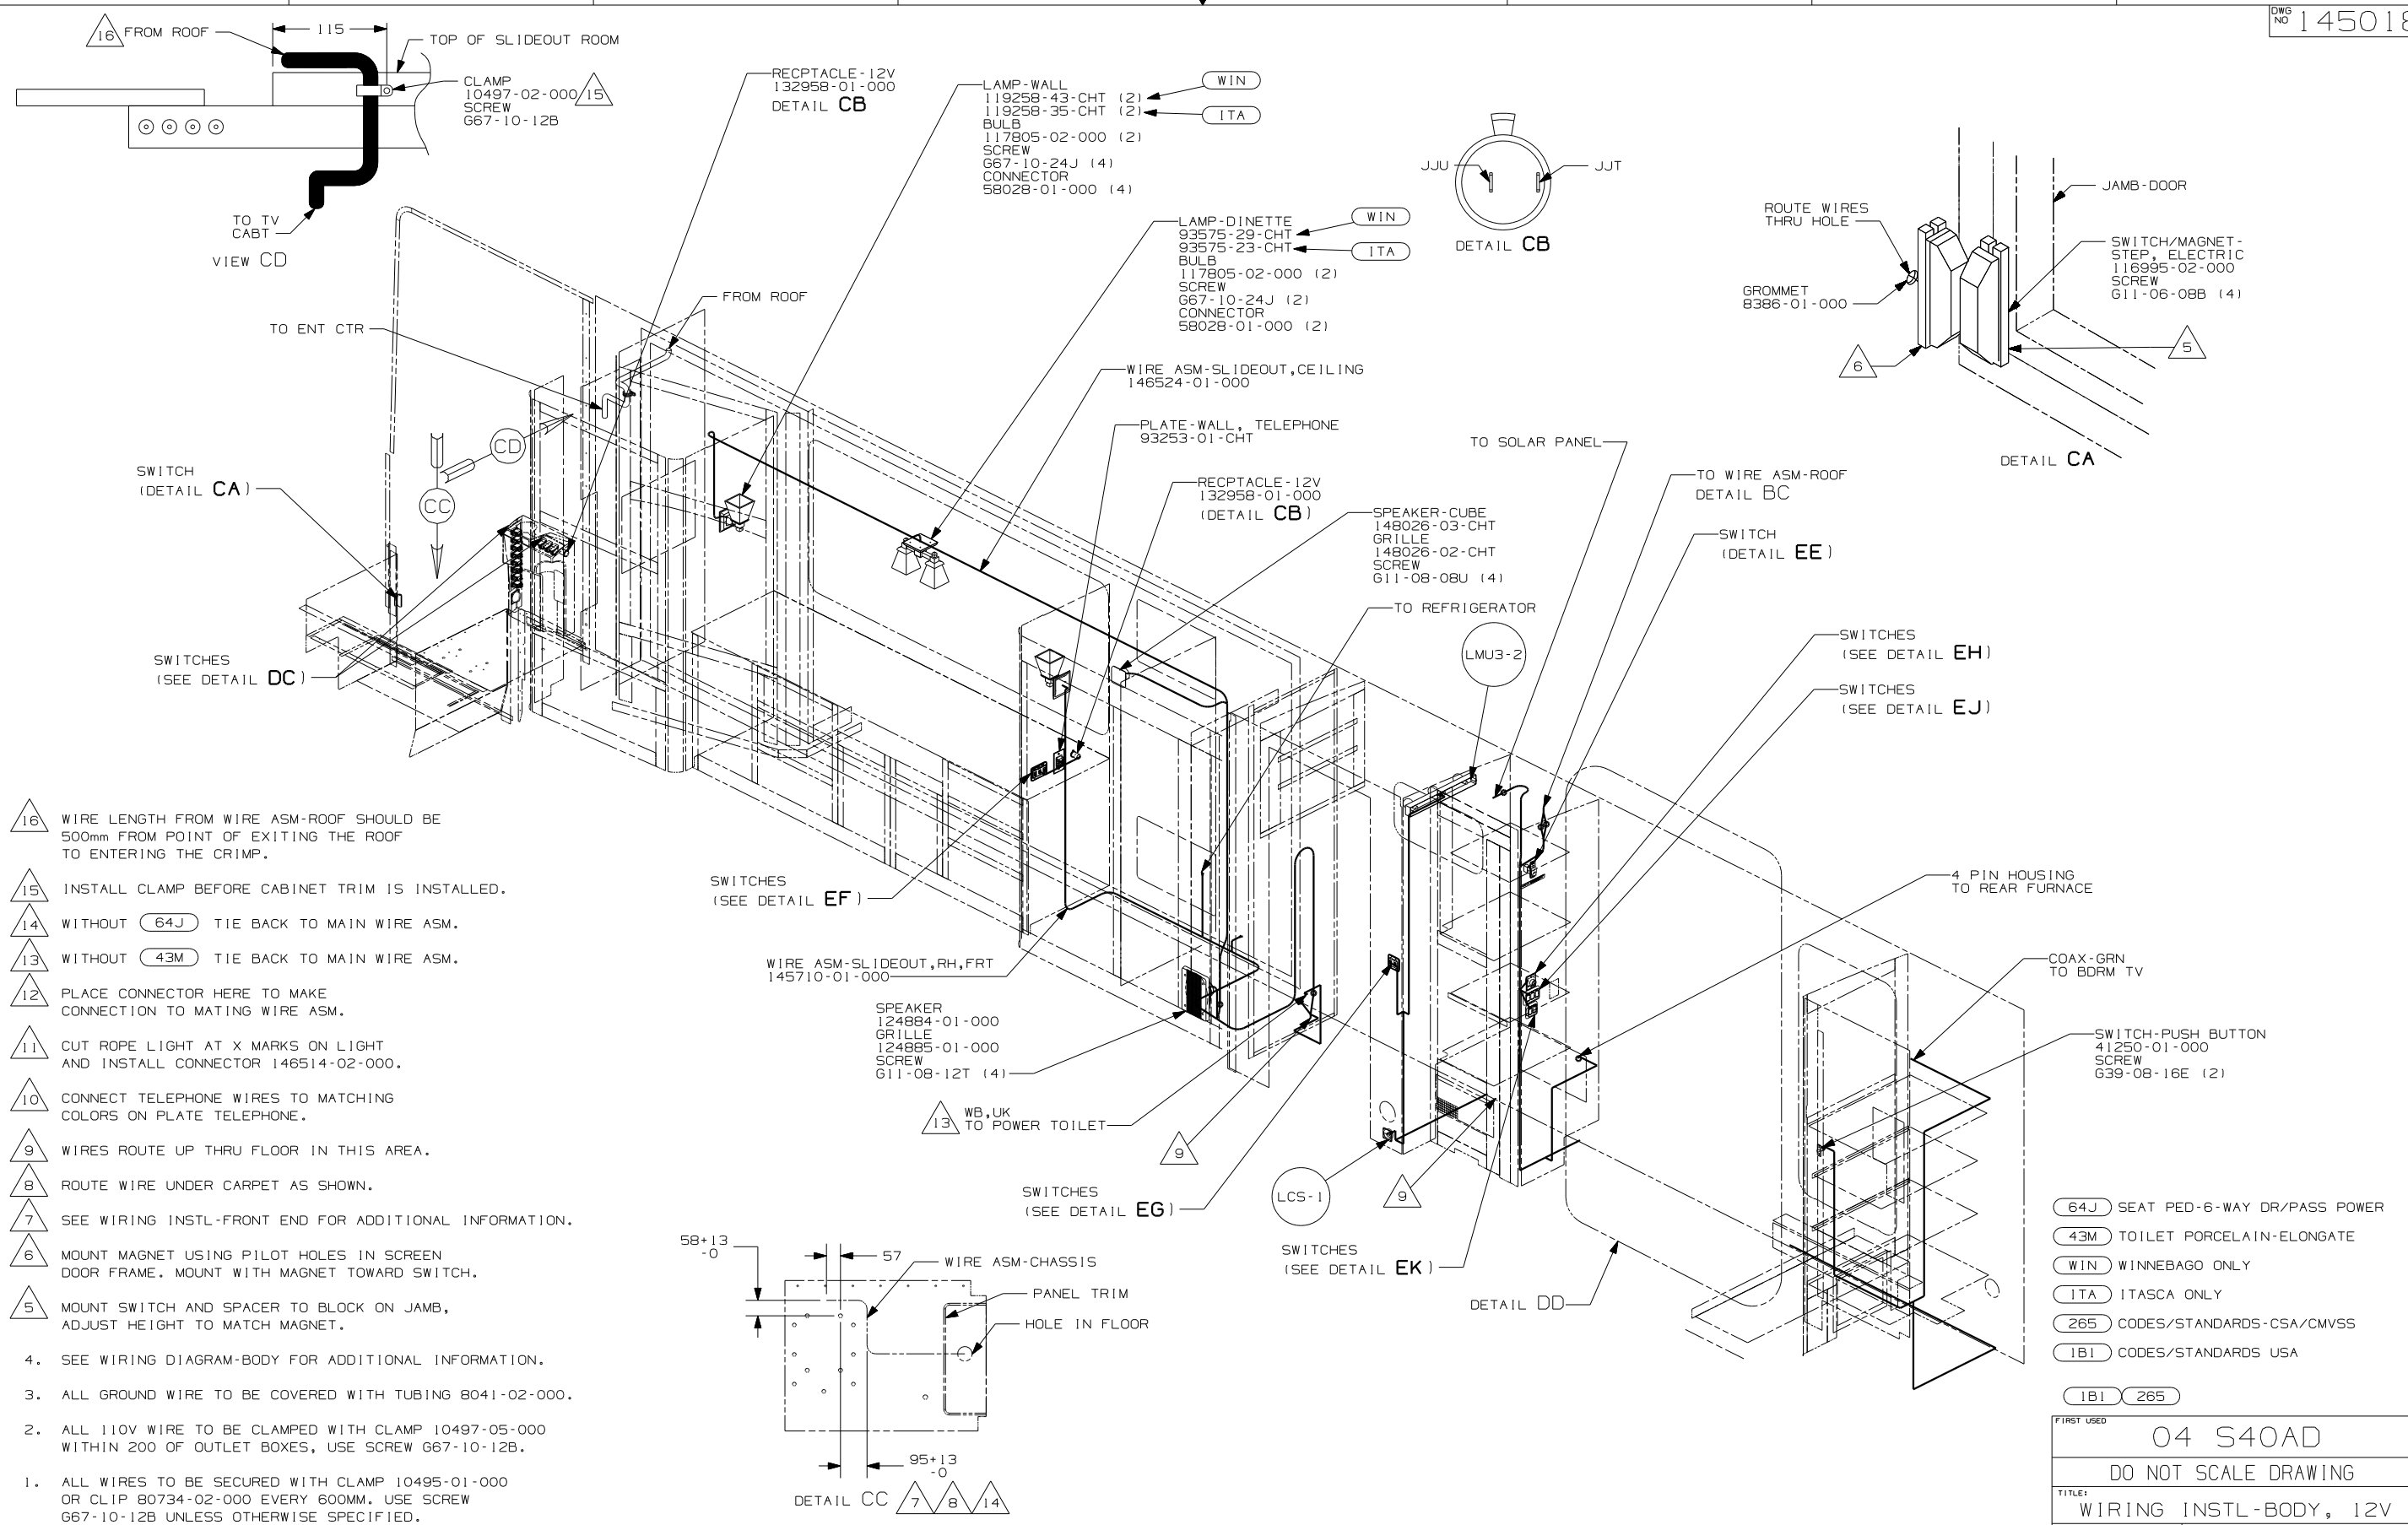


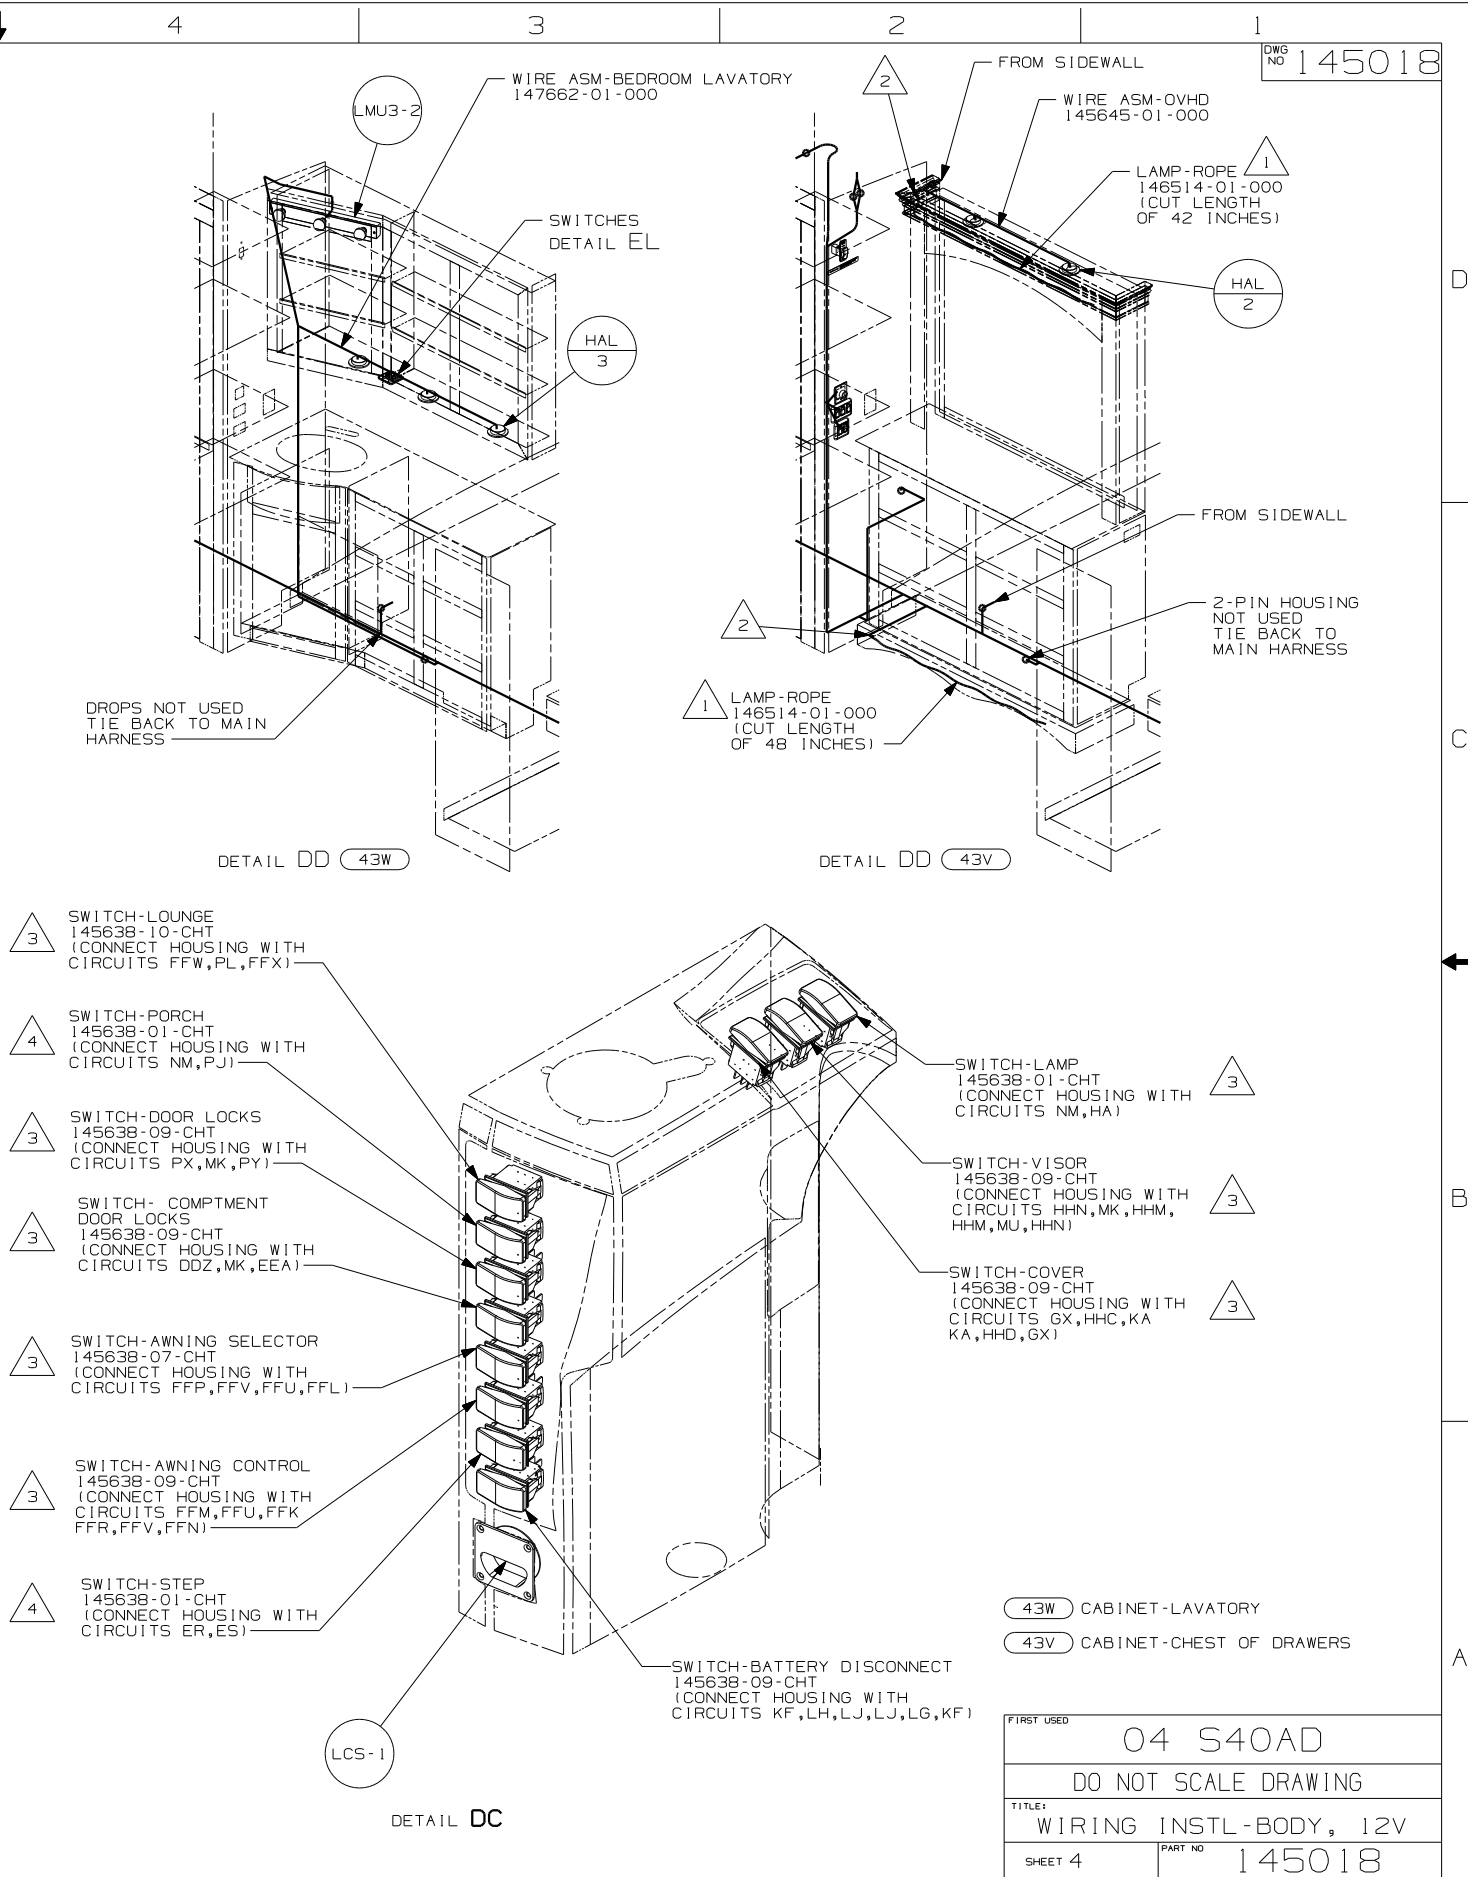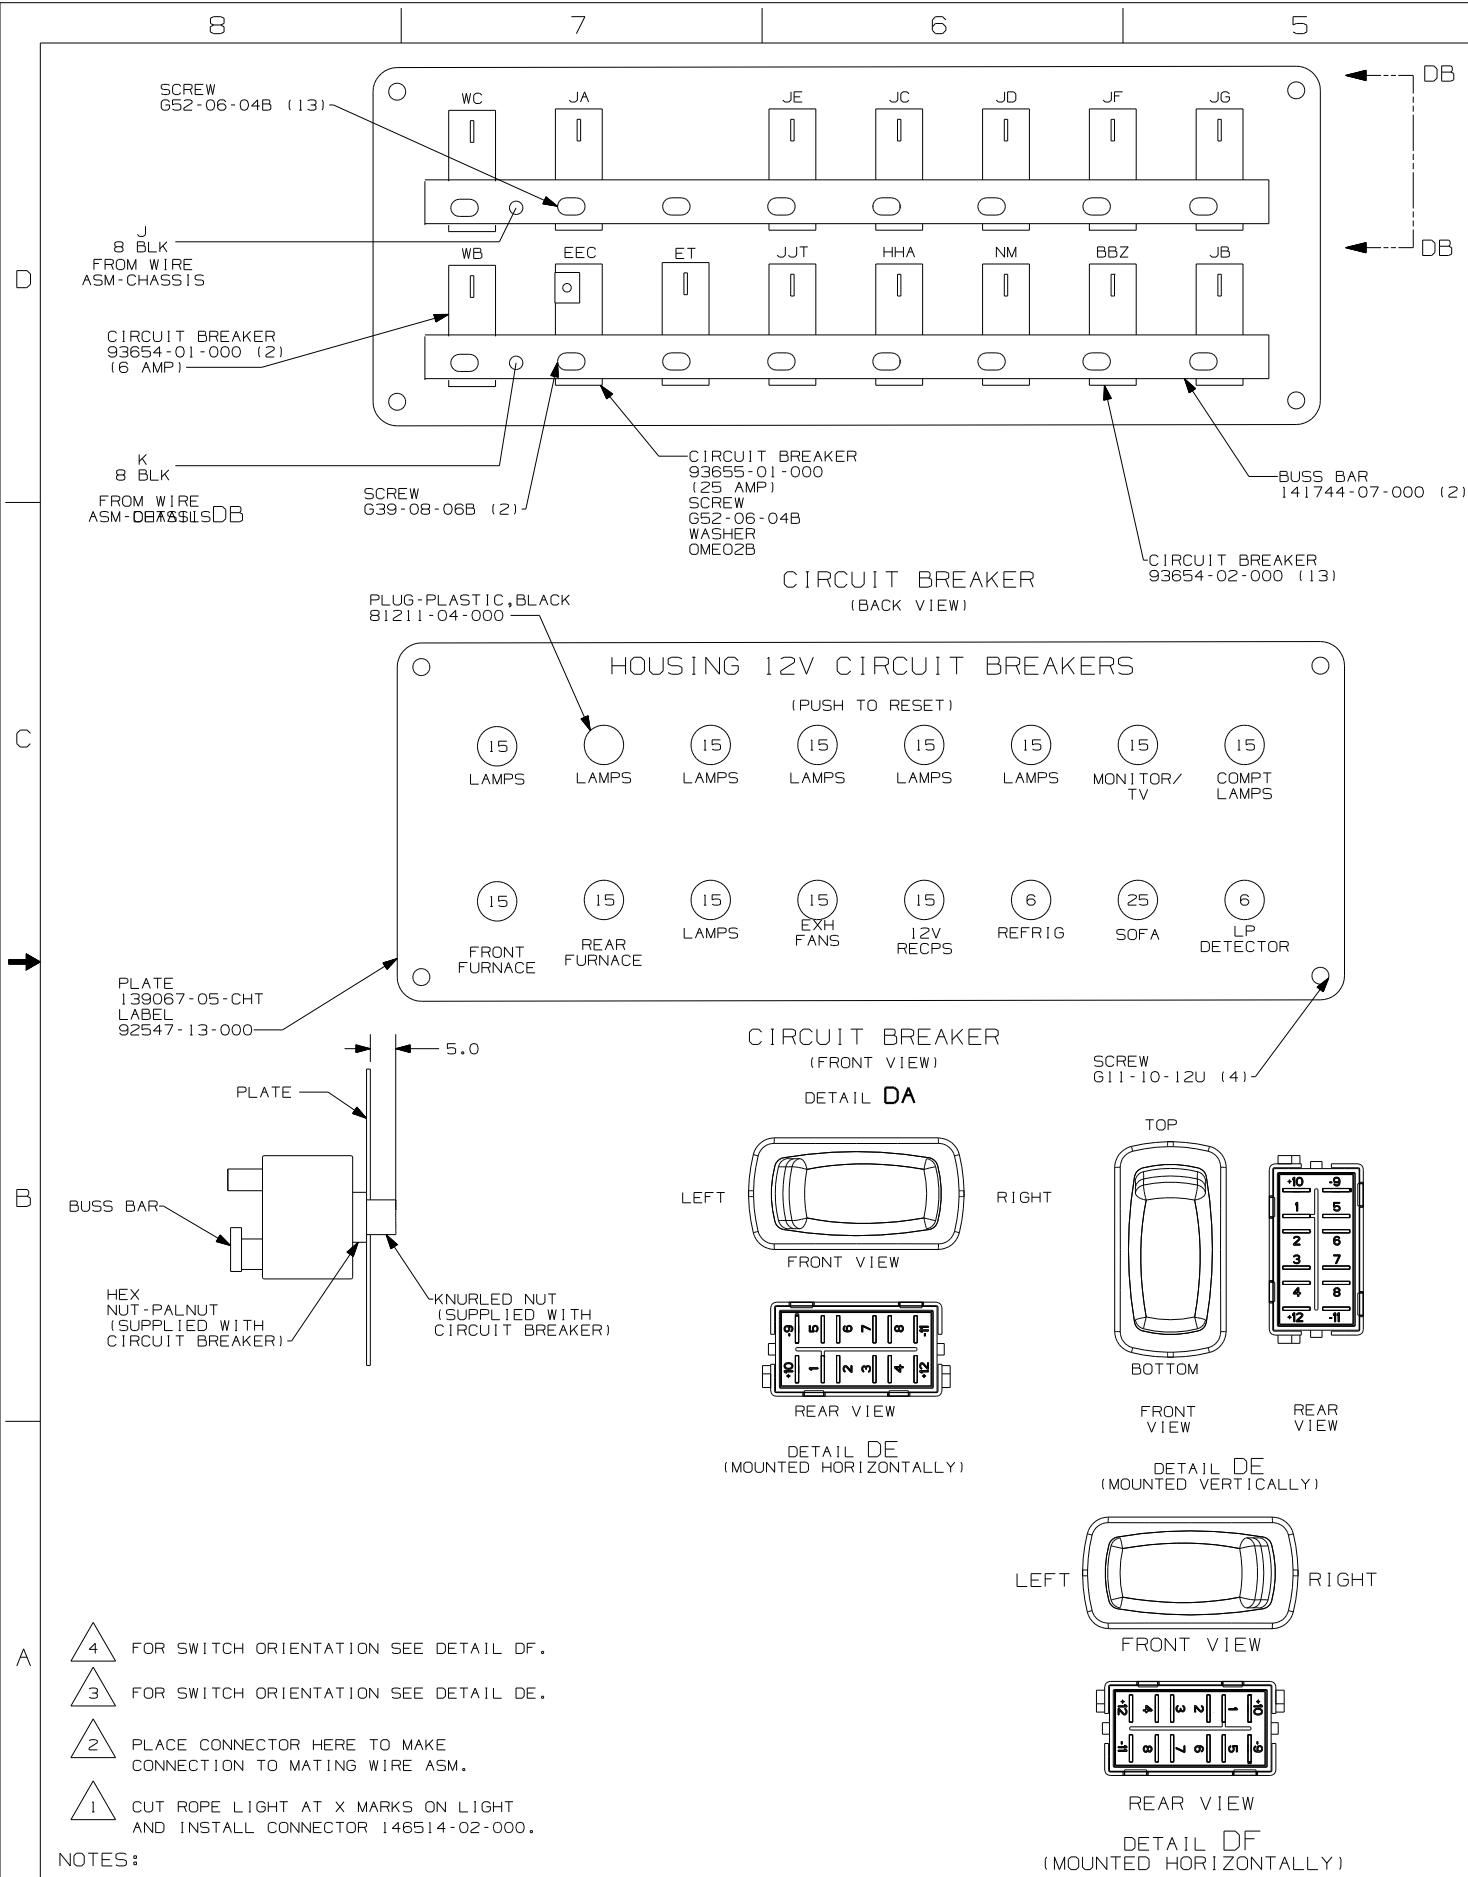

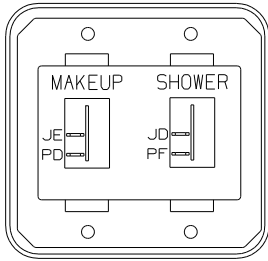


DETAIL EA

SWITCH-ROCKER
135740-01-CHT (2)
SWITCH-BASE
135741-02-CHT
SWITCH-BEZEL
135742-20-CHT
SCREW
G11-08-08U (4)

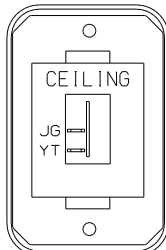


DETAIL ED

SWITCH-ROCKER
135740-01-CHT
SWITCH-BASE
135741-01-CHT
SWITCH-BEZEL
135742-07-CHT
SCREW
G11-08-08U (2)

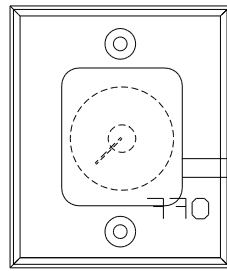


DETAIL EH

SWITCH
137889-01-000
SCREW
G11-06-10U (2)

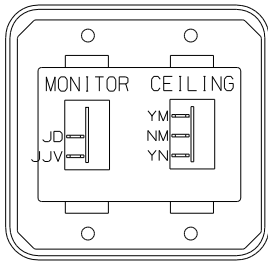

DETAIL EB


SWITCH-ROCKER
135740-01-CHT
135740-02-CHT
SWITCH-BASE
135741-02-CHT
SWITCH-BEZEL
135742-31-CHT
SCREW
G11-08-08U (4)

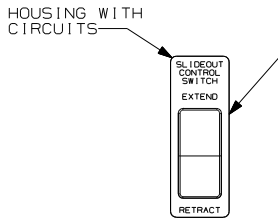

DETAIL EE


PLATE-SWITCH
144363-09-CHT
SWITCH
108357-06-000
ACTUATOR
108356-02-CHT
NUT
D65-08-00B (2)
LABEL
116220-01-000

LABEL-WARNING
116549-01-000

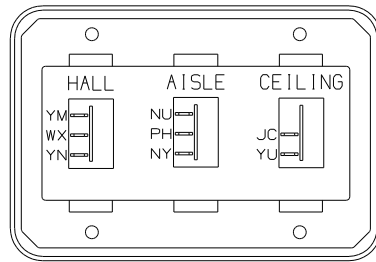


DETAIL EJ

SWITCH-ROCKER
135740-01-CHT
135740-02-CHT (2)
SWITCH-BASE
135741-03-CHT
SWITCH-BEZEL
135742-25-CHT
SCREW
G11-08-08U (4)

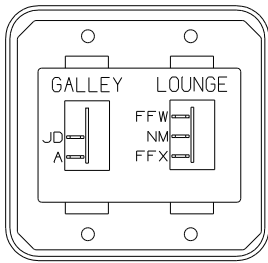


DETAIL EC

SWITCH-ROCKER
135740-01-CHT
135740-02-CHT
SWITCH-BASE
135741-02-CHT
SWITCH-BEZEL
135742-18-CHT
SCREW
G11-08-08U (4)

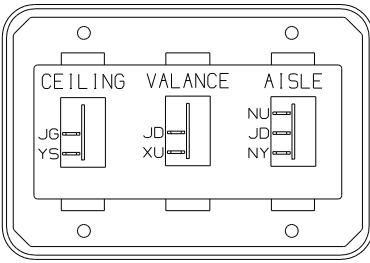


DETAIL EF

SWITCH-ROCKER
135740-01-CHT (2)
135740-02-CHT
SWITCH-BASE
135741-03-CHT
SWITCH-BEZEL
135742-22-CHT
SCREW
G11-08-08U (4)

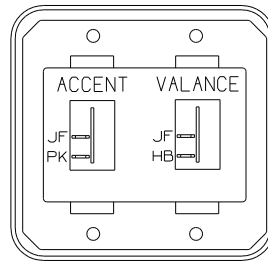


DETAIL EK 43V

SWITCH-ROCKER
135740-01-CHT (2)
SWITCH-BASE
135741-02-CHT
SWITCH-BEZEL
135742-36-CHT
SCREW
G11-08-08U (4)

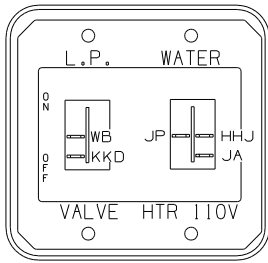


DETAIL EM

SWITCH-ROCKER
135740-01-CHT
135740-06-CHT
SWITCH-BASE
135741-02-CHT
SWITCH-BEZEL
135742-34-CHT
SCREW
G11-08-08U (4)

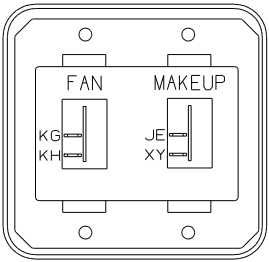

DETAIL EG

SWITCH-ROCKER
135740-01-CHT (2)
SWITCH-BASE
135741-02-CHT
SWITCH-BEZEL
135742-38-CHT
SCREW
G11-08-08U (4)

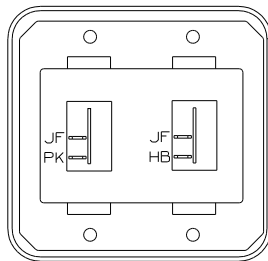


DETAIL EL 43W


SWITCH-ROCKER
135740-01-CHT (2)
SWITCH-BASE
135741-02-CHT
SWITCH-BEZEL
135742-02-CHT
SCREW
G11-08-08U (4)

43W CABINET-LAVATORY
43V CABINET-CHEST OF DRAWERS
265 CODES/STANDARDS-CSA/CMVSS
1B1 CODES/STANDARDS USA

1B1 265

FIRST USED		04 S40AD	
TITLE		DO NOT SCALE DRAWING	
WIRING INSTL-BODY, 12V		PART NO	
SHEET 5		145018	

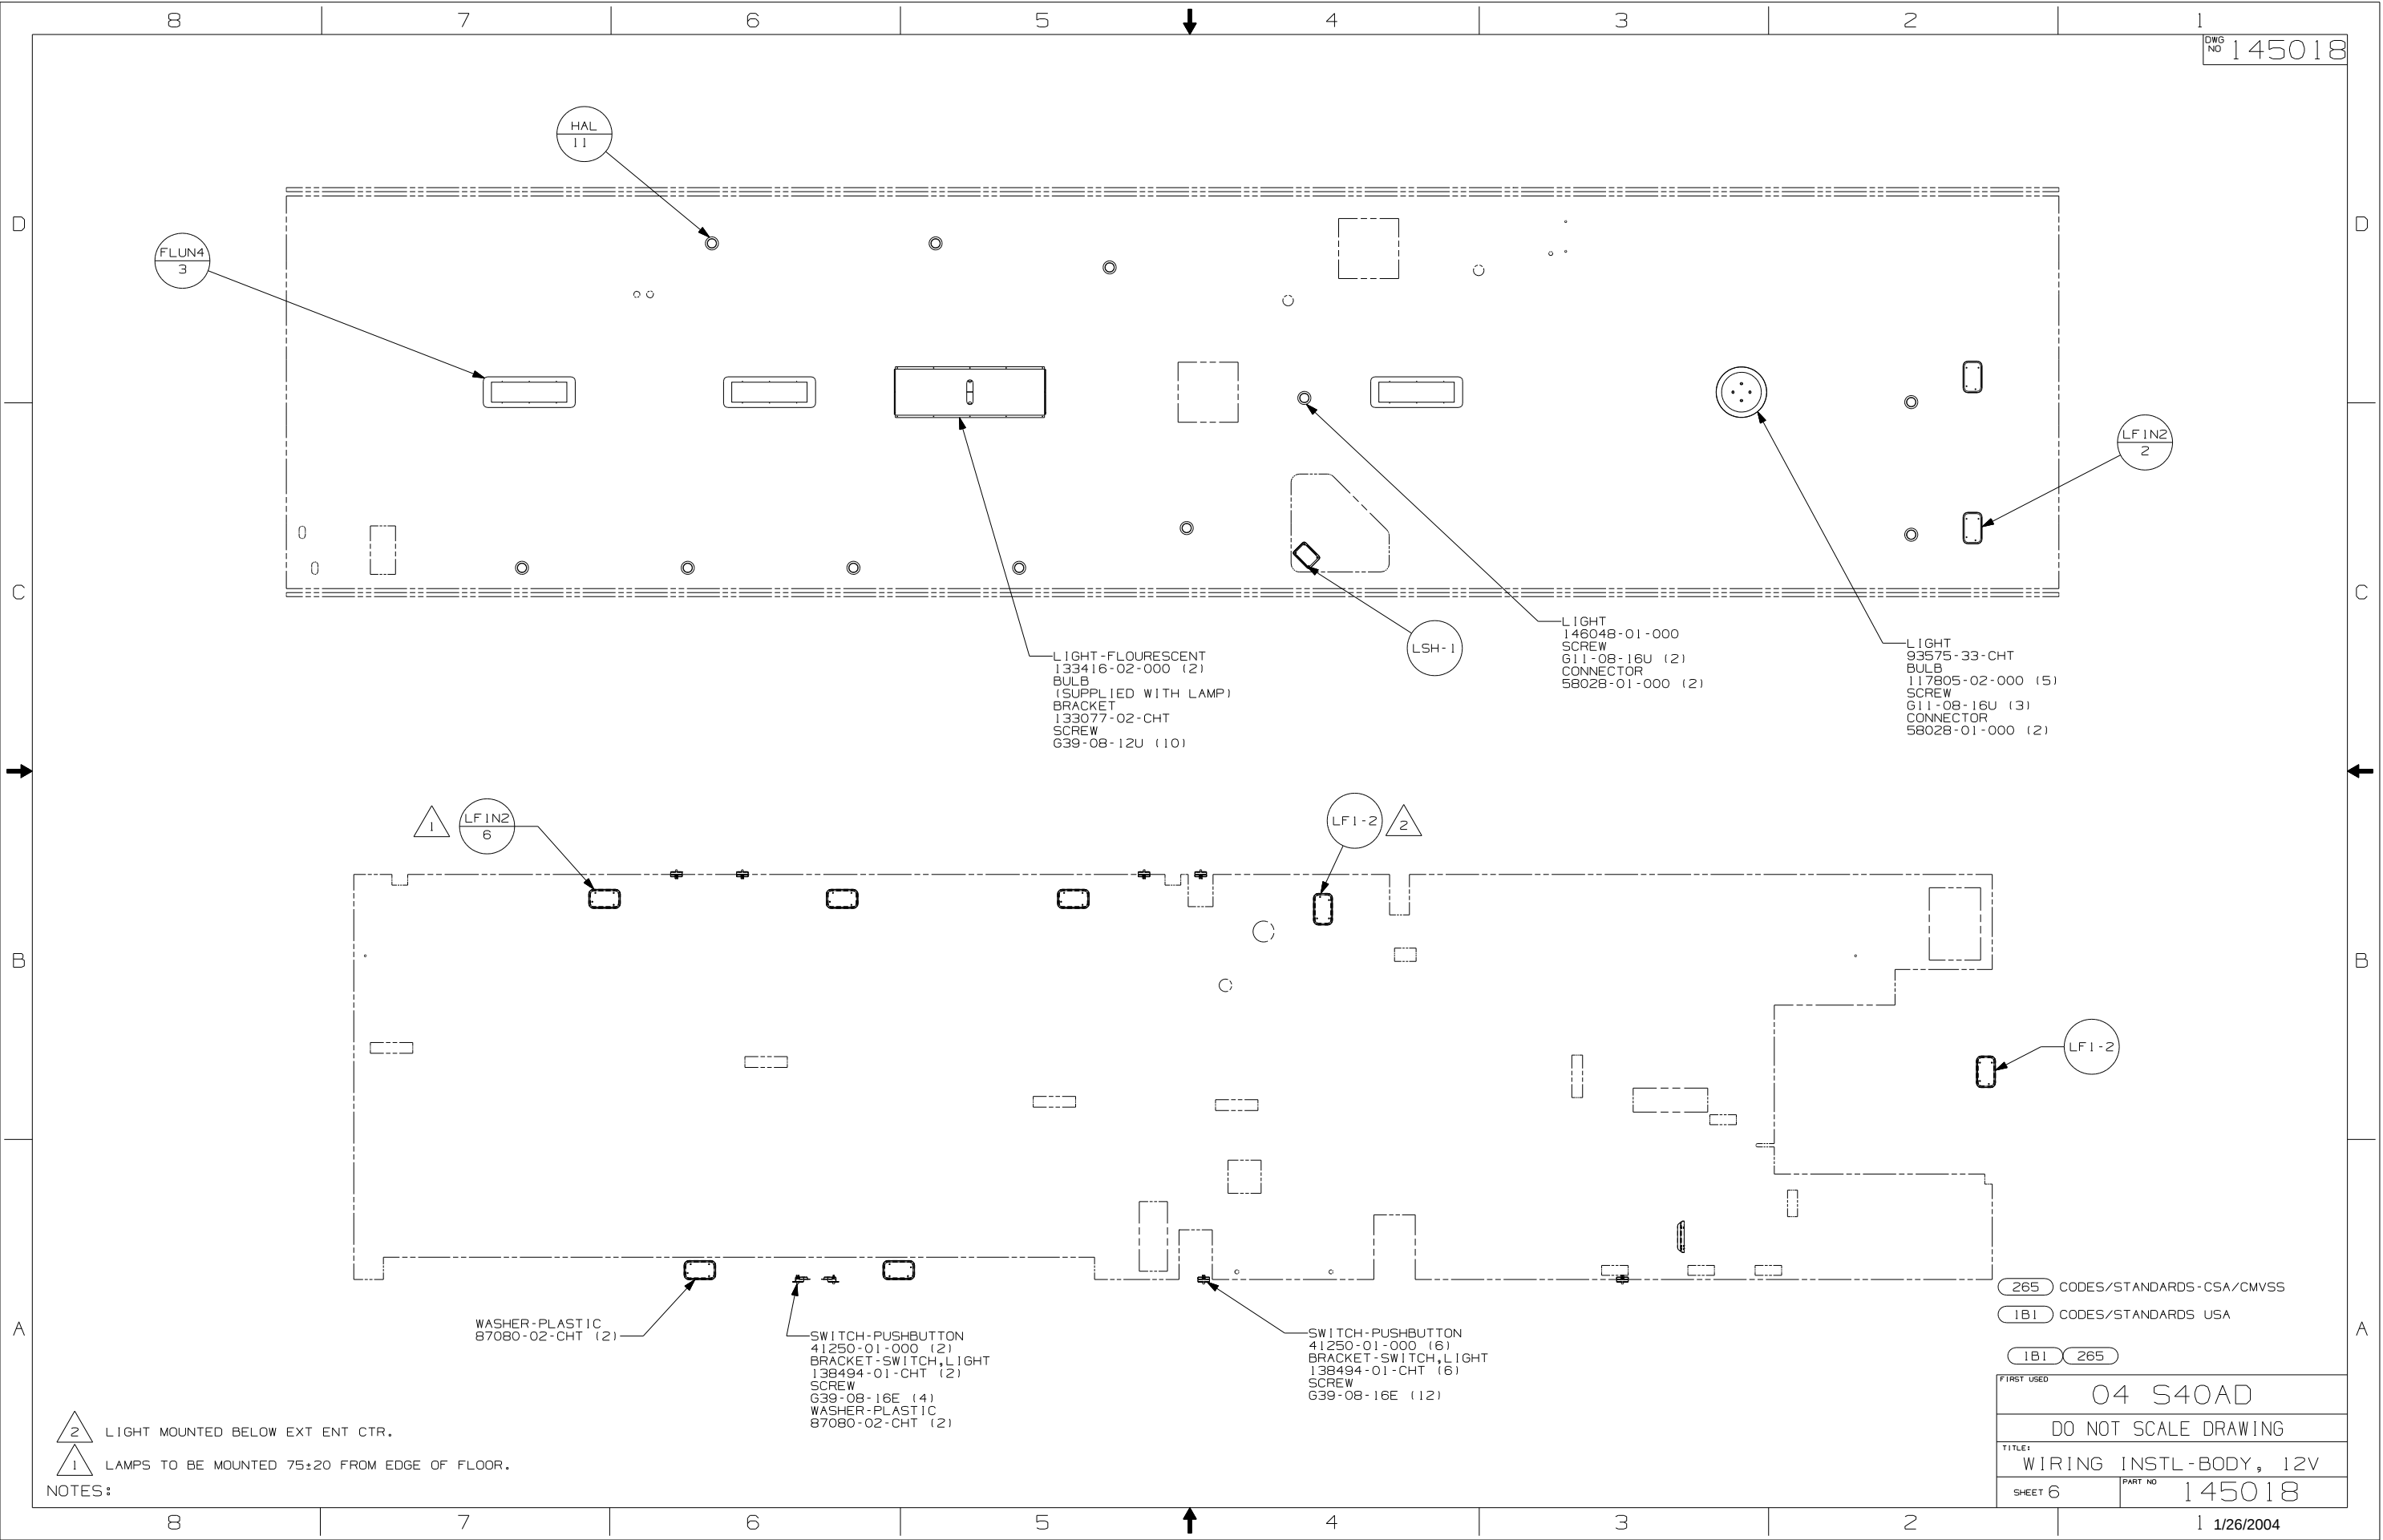

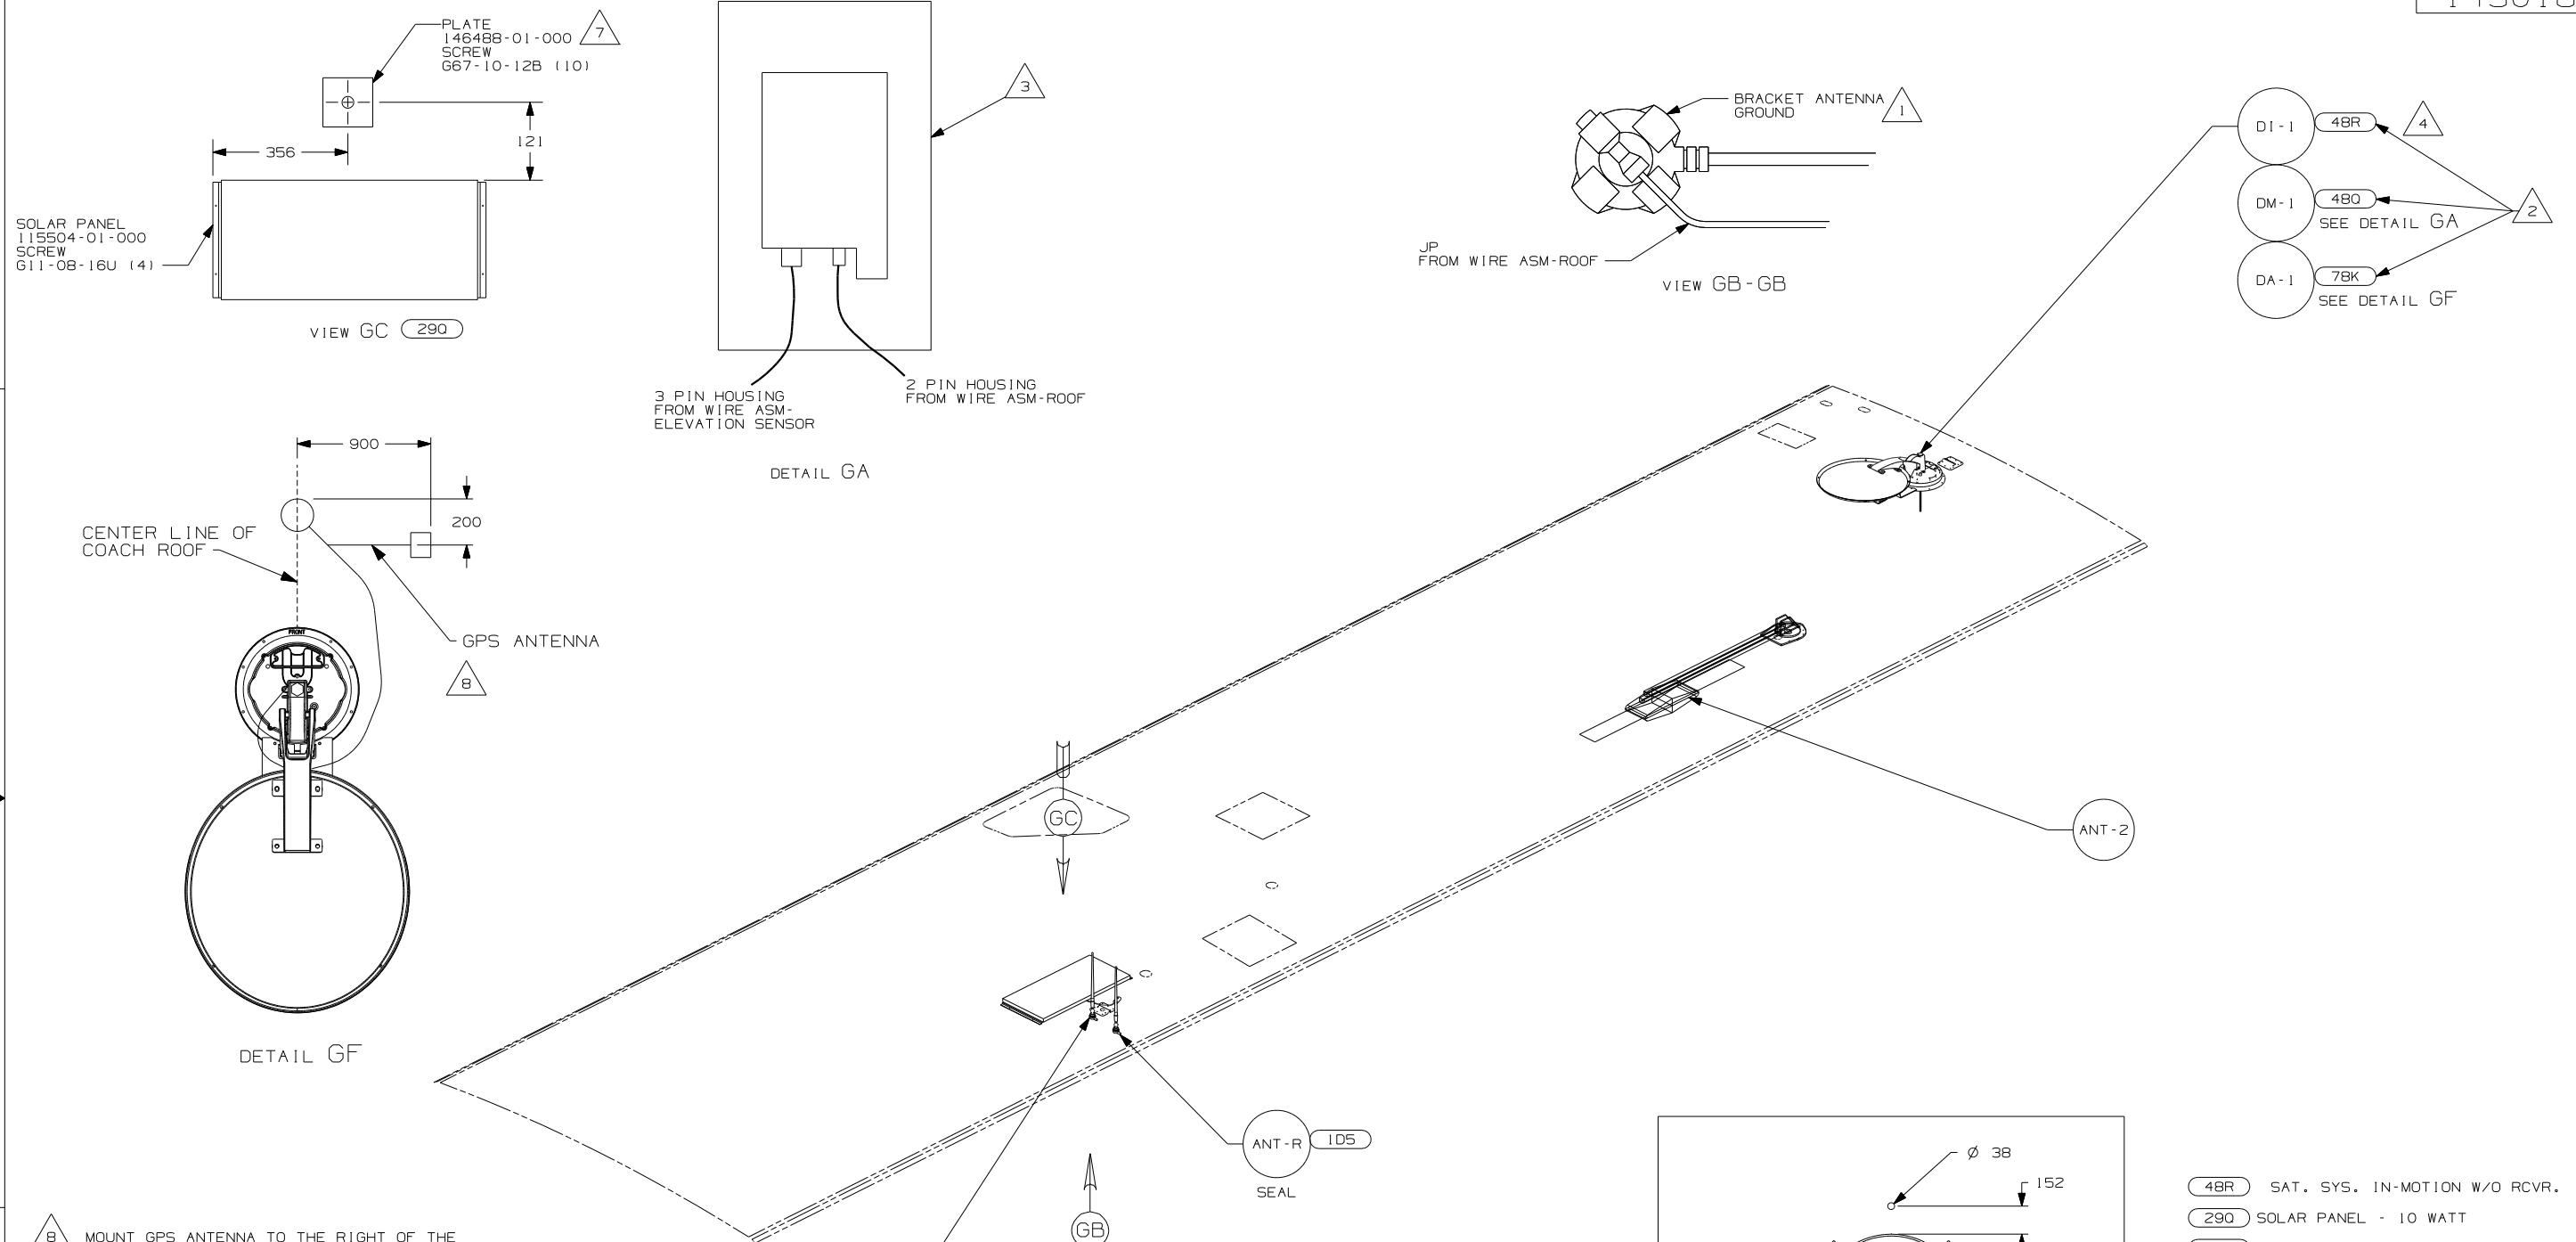

- 8 MOUNT GPS ANTENNA TO THE RIGHT OF THE SATELLITE AS SHOWN. SECURE CABLE WITH ROOF SEALANT.
- 7 SEAL
- 6 CUT AND REMOVE STRAPS.
- 5 MOUNT GPS ANTENNA AS FAR TO THE REAR OF THE SATELLITE AS POSSIBLE. SECURE CABLE WITH ROOF SEALANT.
- 4 SEE DETAIL GE FOR SATELLITE LOCATION.
- 3 SENSOR SUPPLIED WITH SATELLITE ASSEMBLY.
- 2 SEE MANUFACTURER'S INSTALLATION FOR ADDITIONAL INFORMATION.
- 1 WRAP BRACKET LEGS AROUND ANTENNA BASE.

NOTES:

- 48R SAT. SYS. IN-MOTION W/O RCVR.
290 SOLAR PANEL - 10 WATT
25E REAR STEREO SYSTEM W/CD
1D5 ENTERTAINMENT CTR/EXT W/CD
78K SATELLITE DISH-AUTOMATIC
48Q SATELLITE DISH & ELEV.SENSOR
265 CODES/STANDARDS-CSA/CMVSS
1B1 CODES/STANDARDS USA

FIRST USED		04 S40AD	
TITLE		DO NOT SCALE DRAWING	
WIRING		INSTL - BODY, 12V	
SHEET 7	PART NO	145018	