




DANGER


Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.





CAUTION


If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

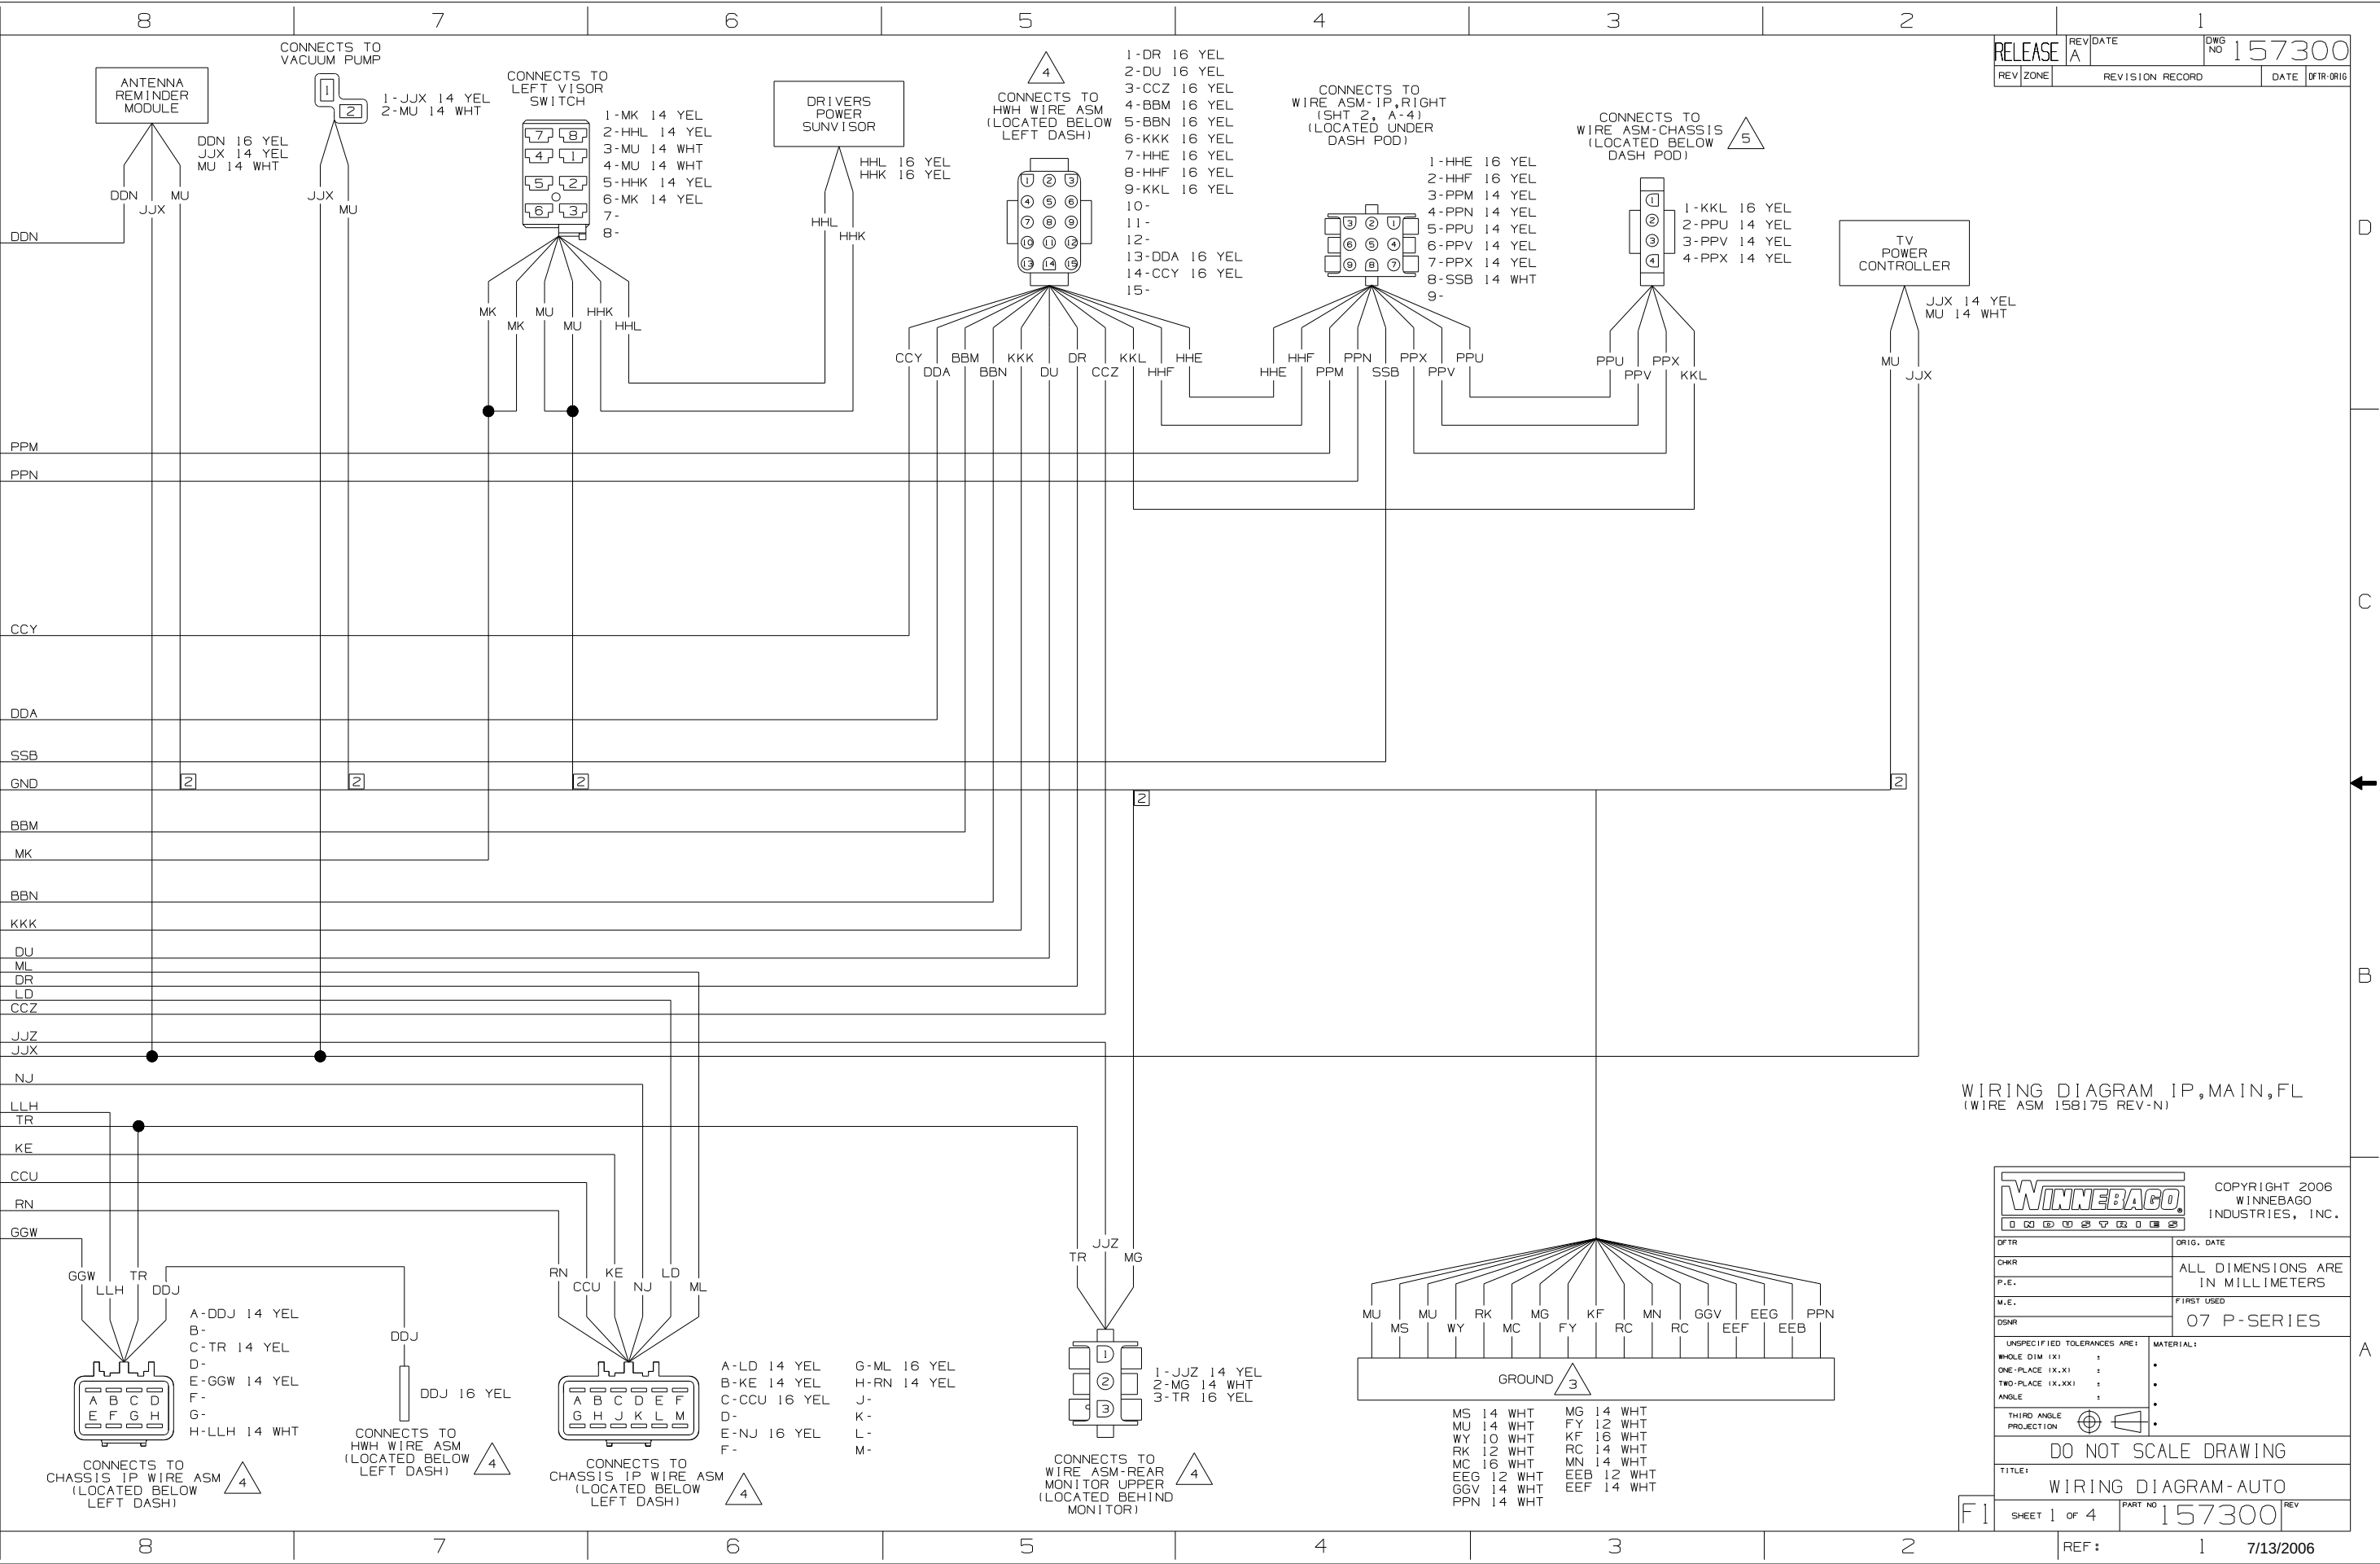


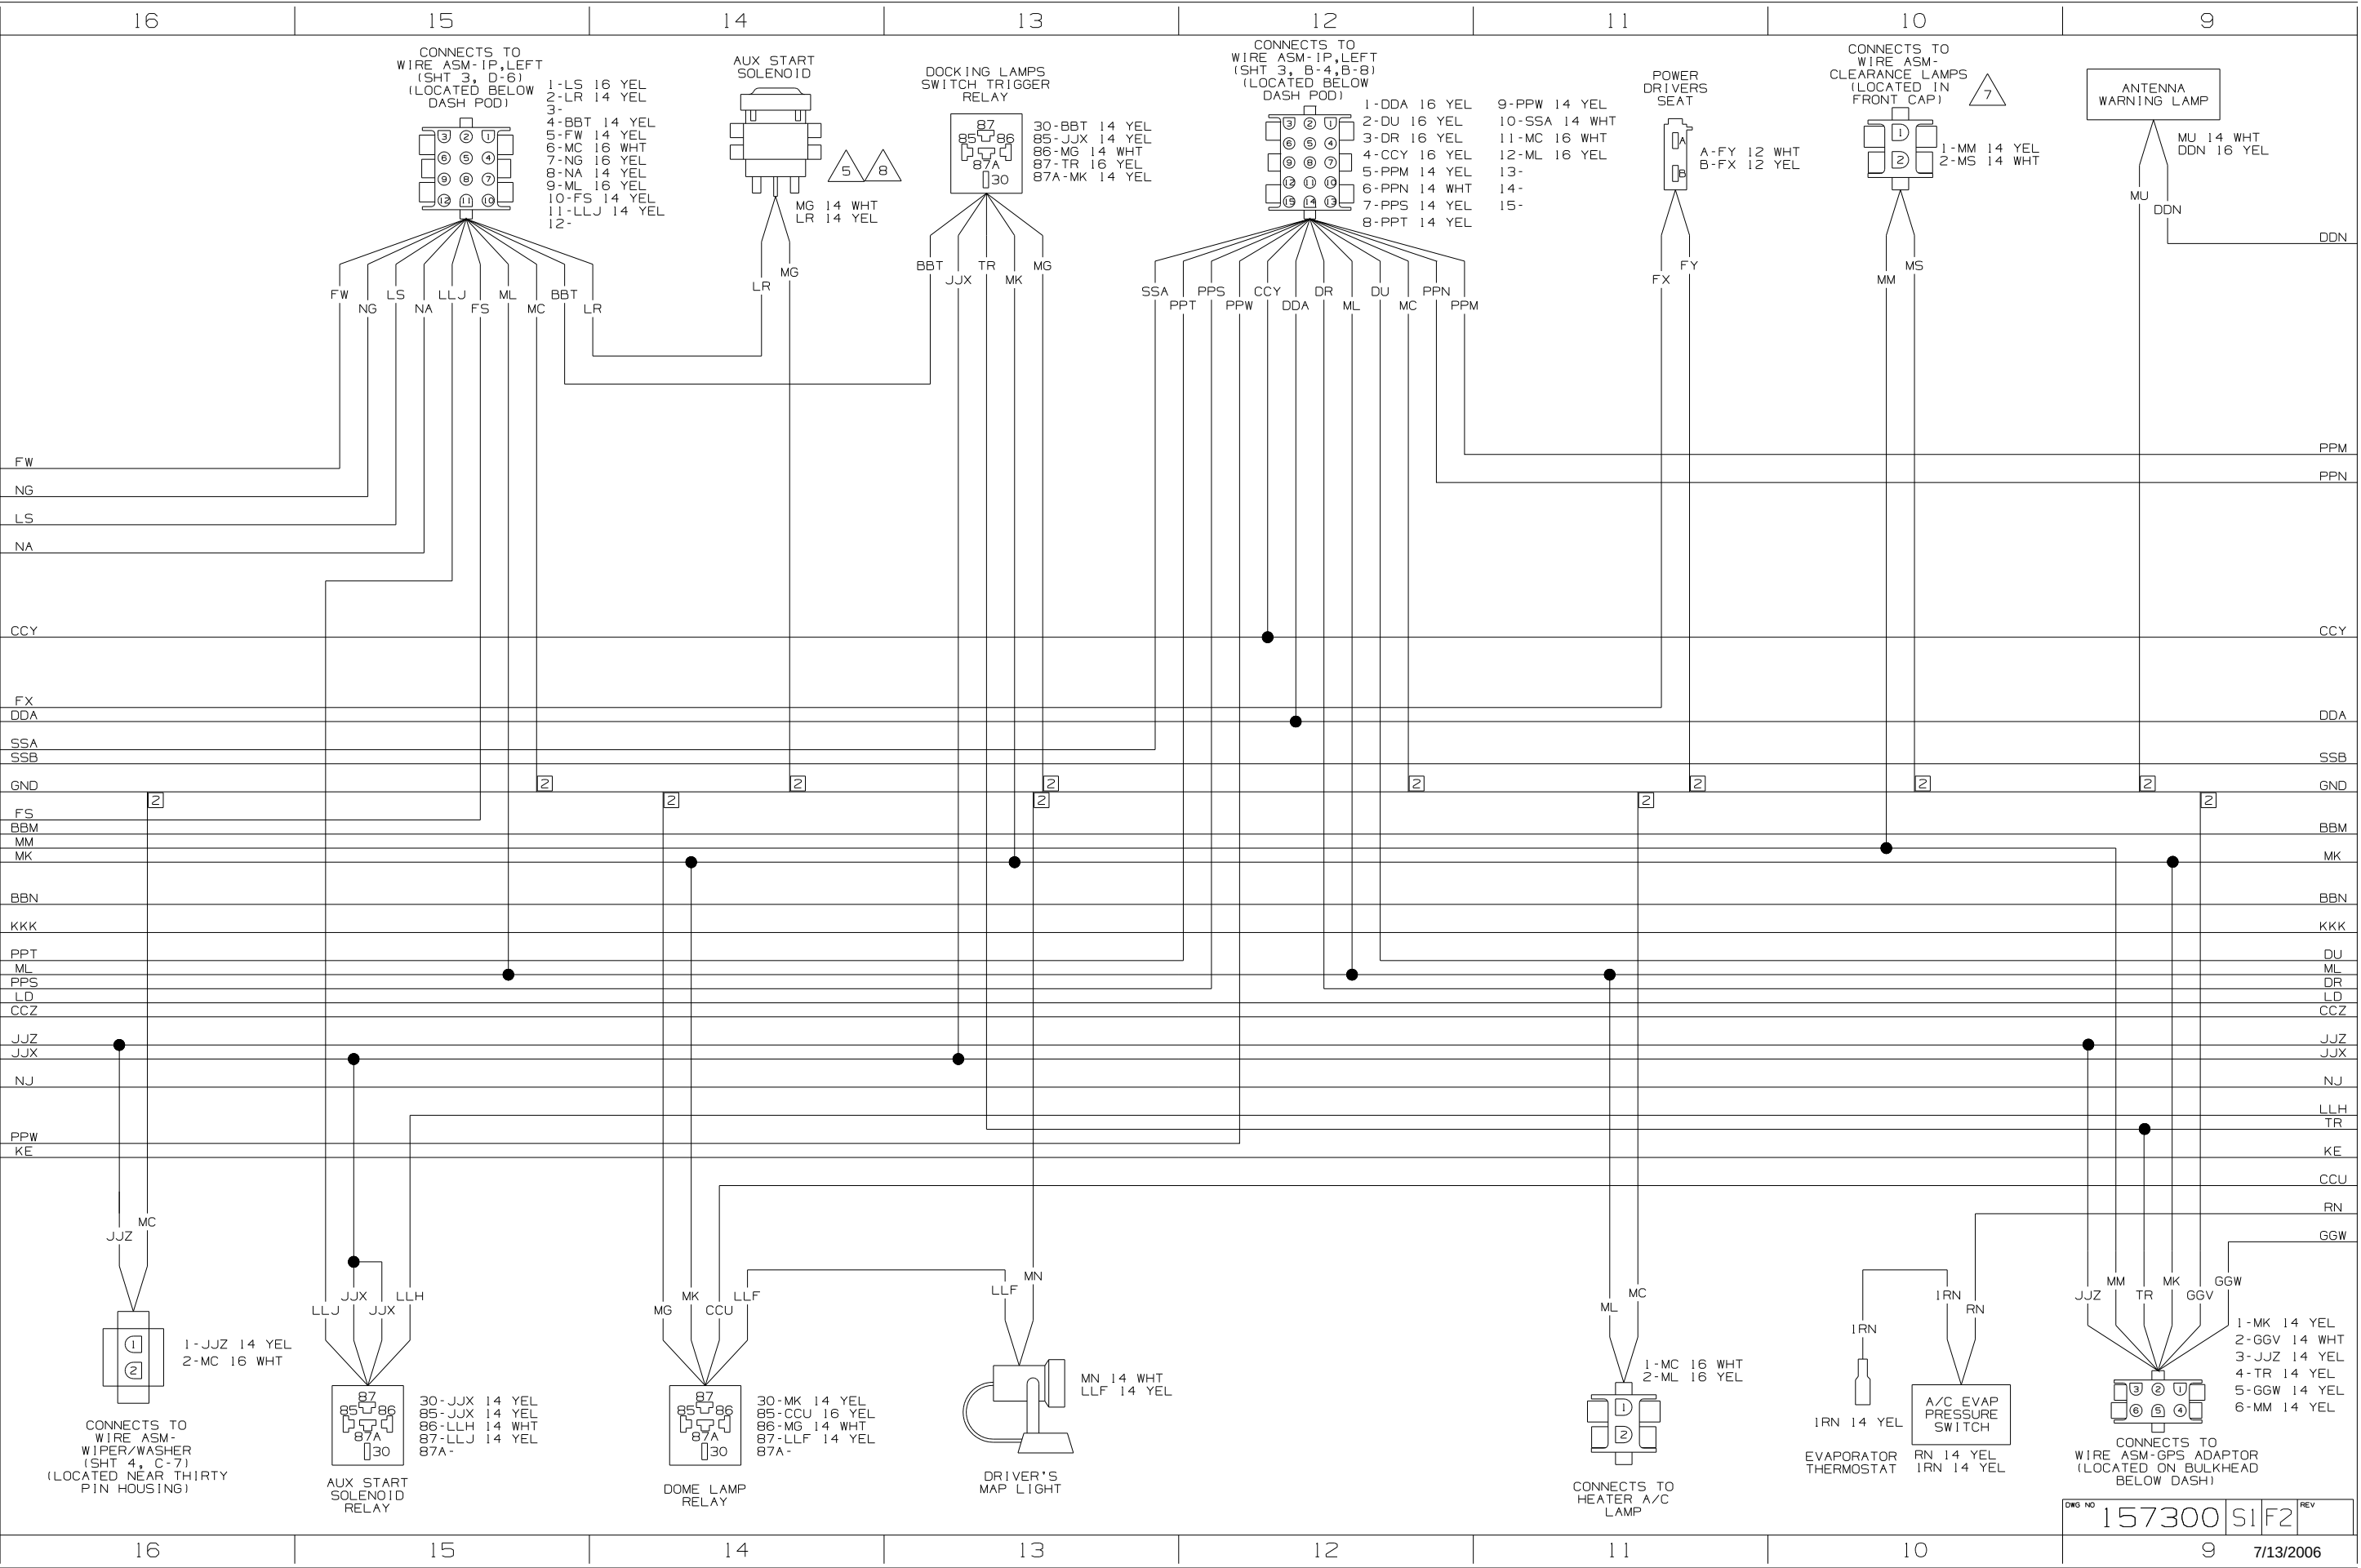

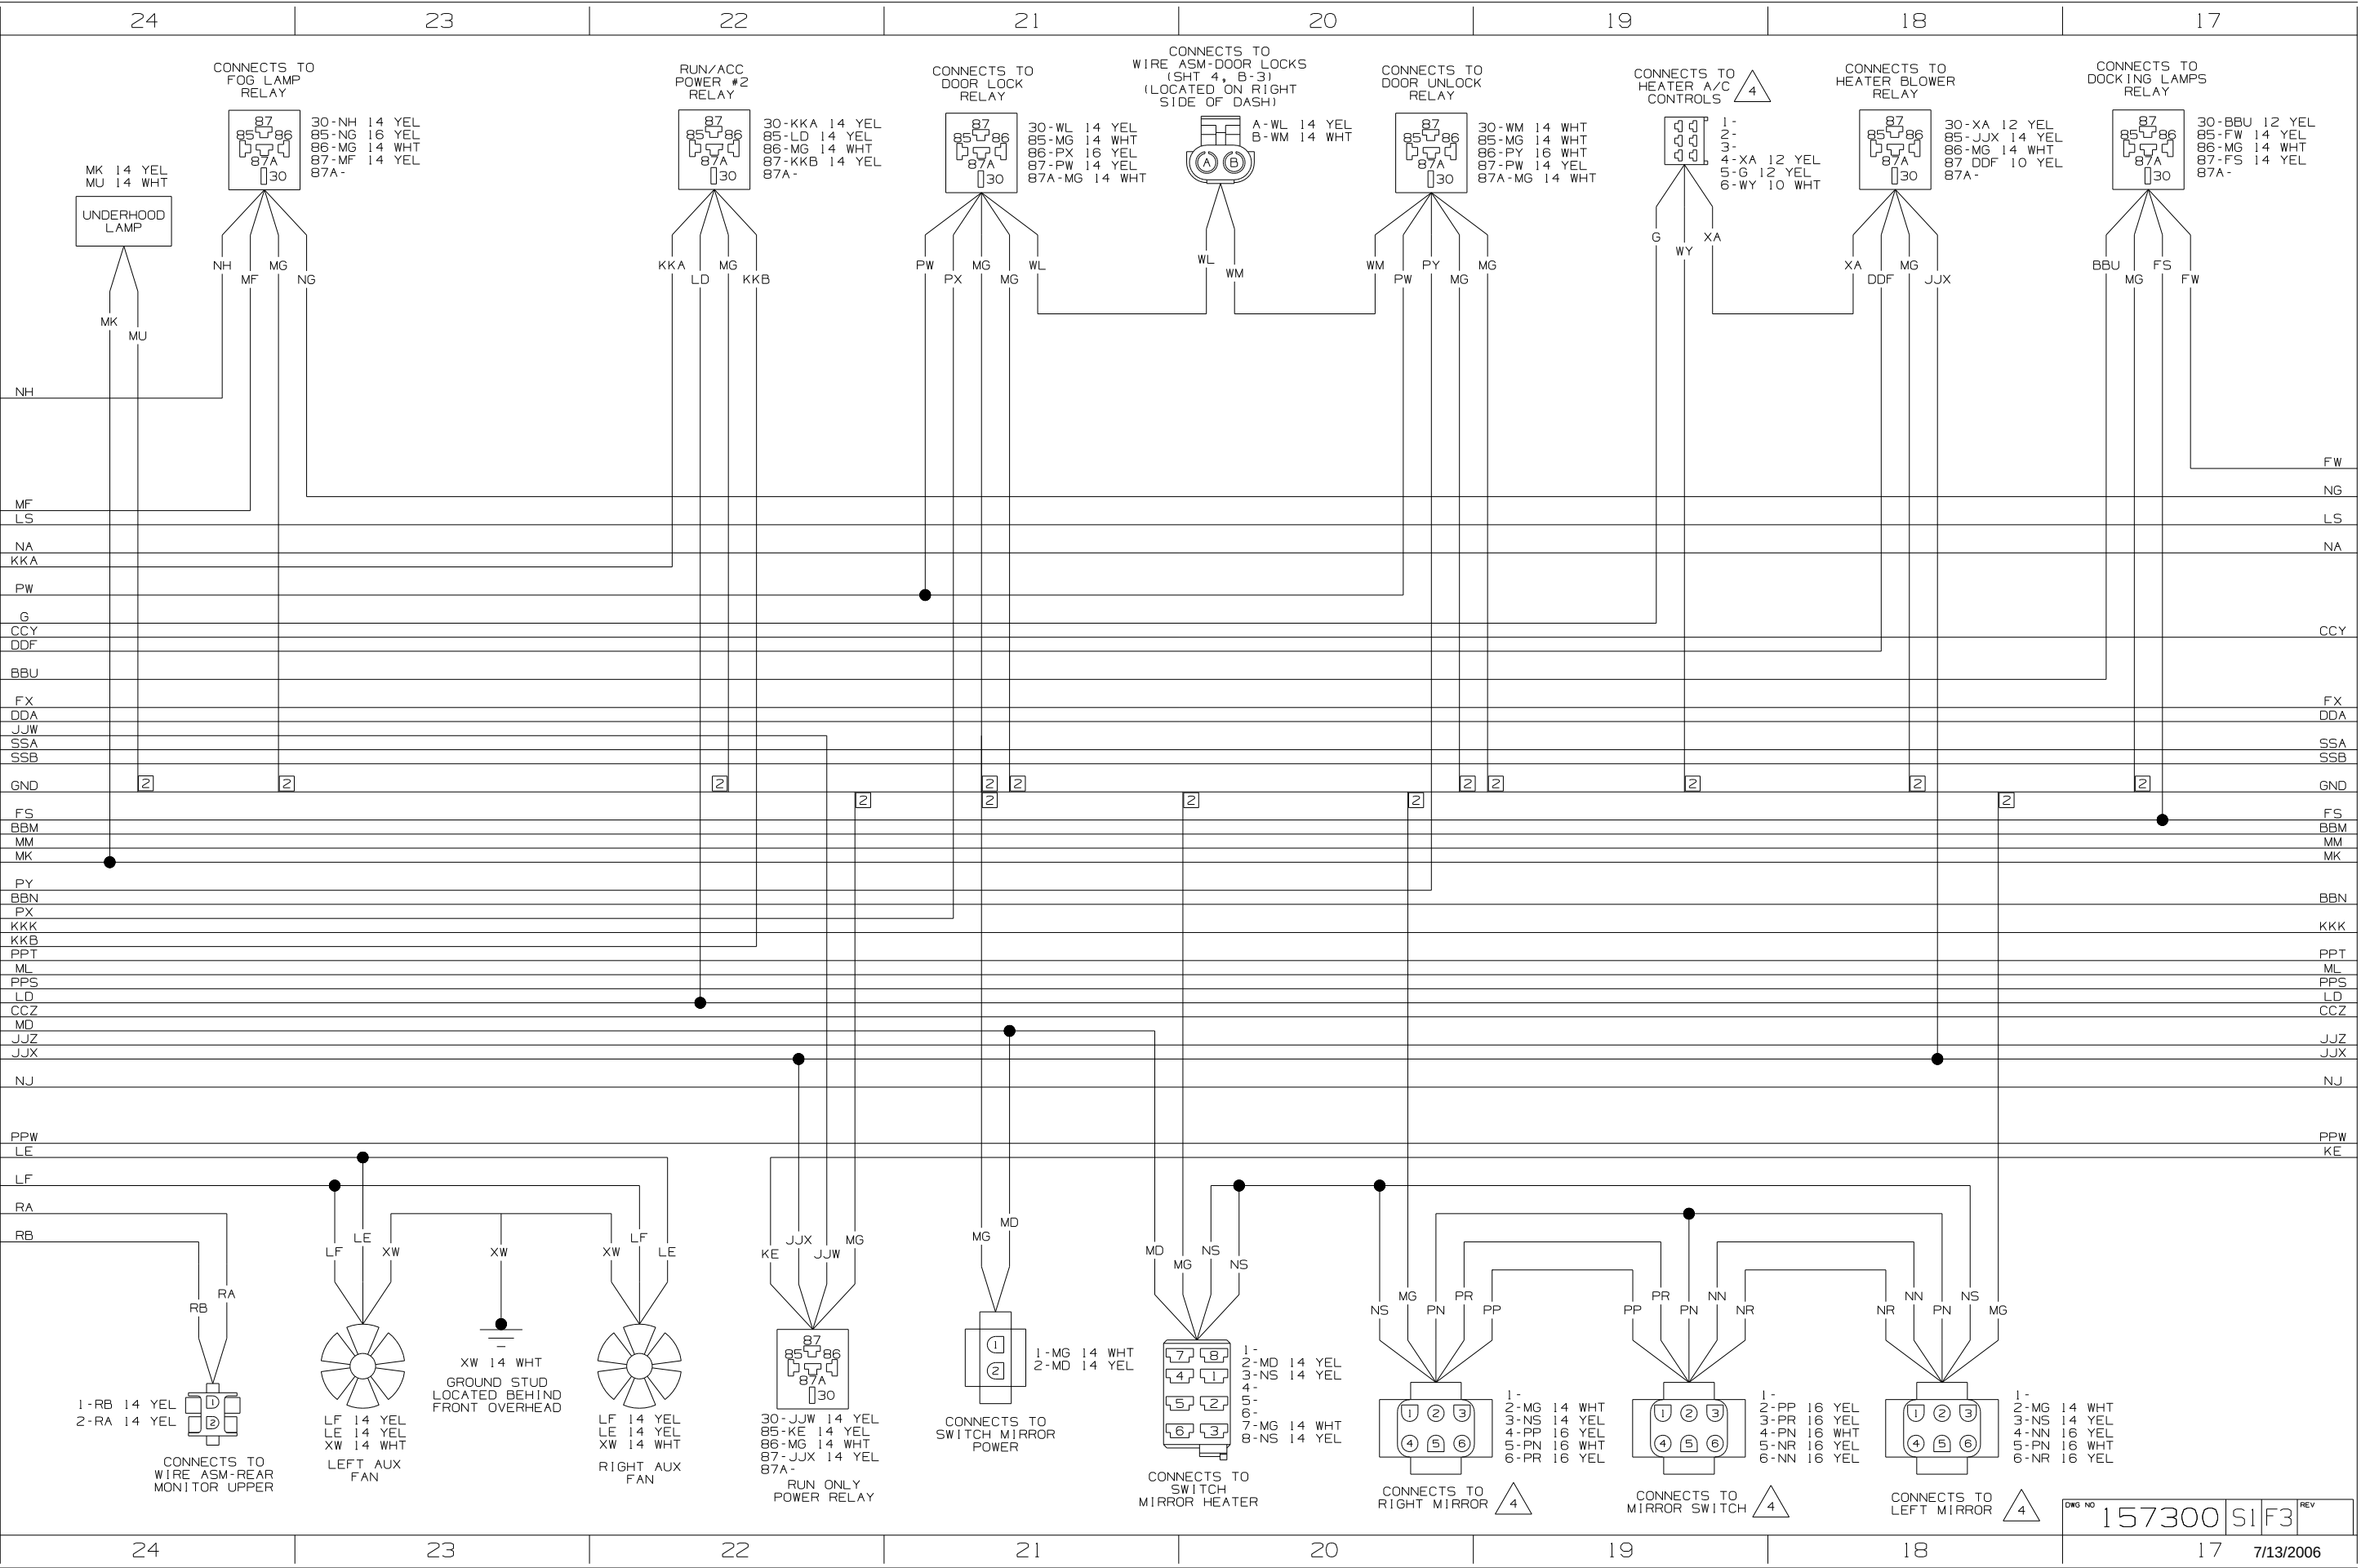

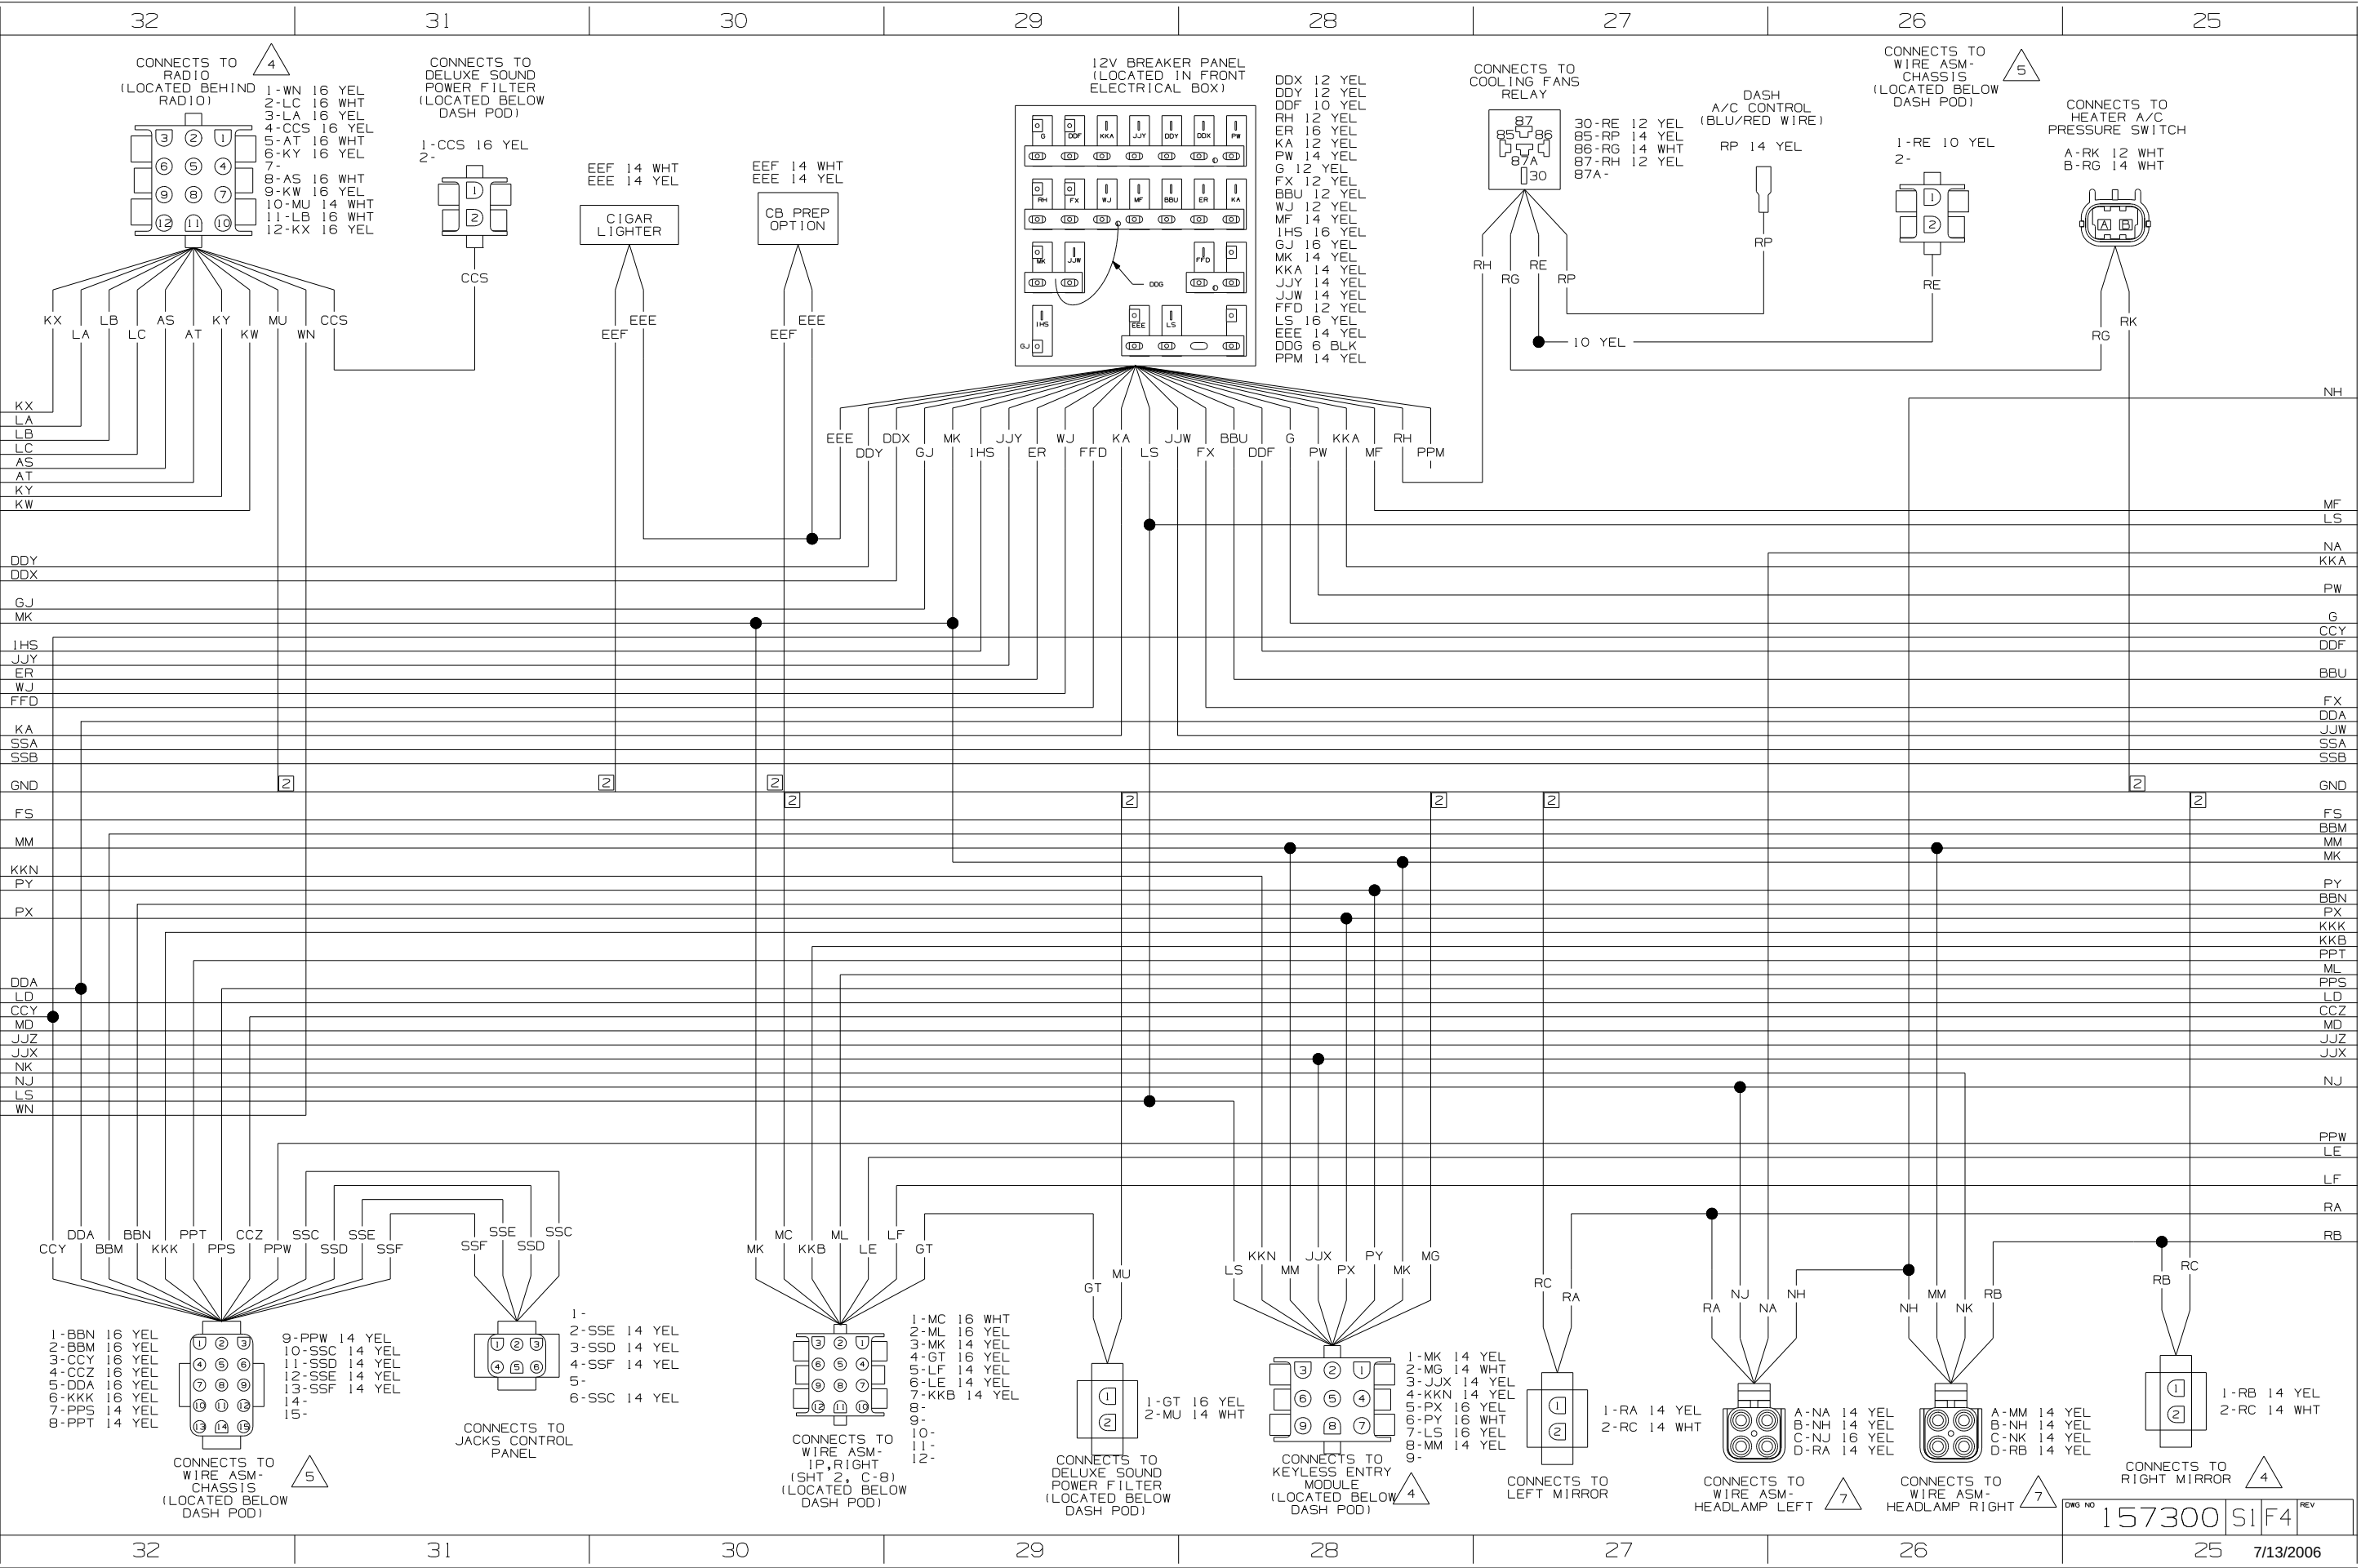

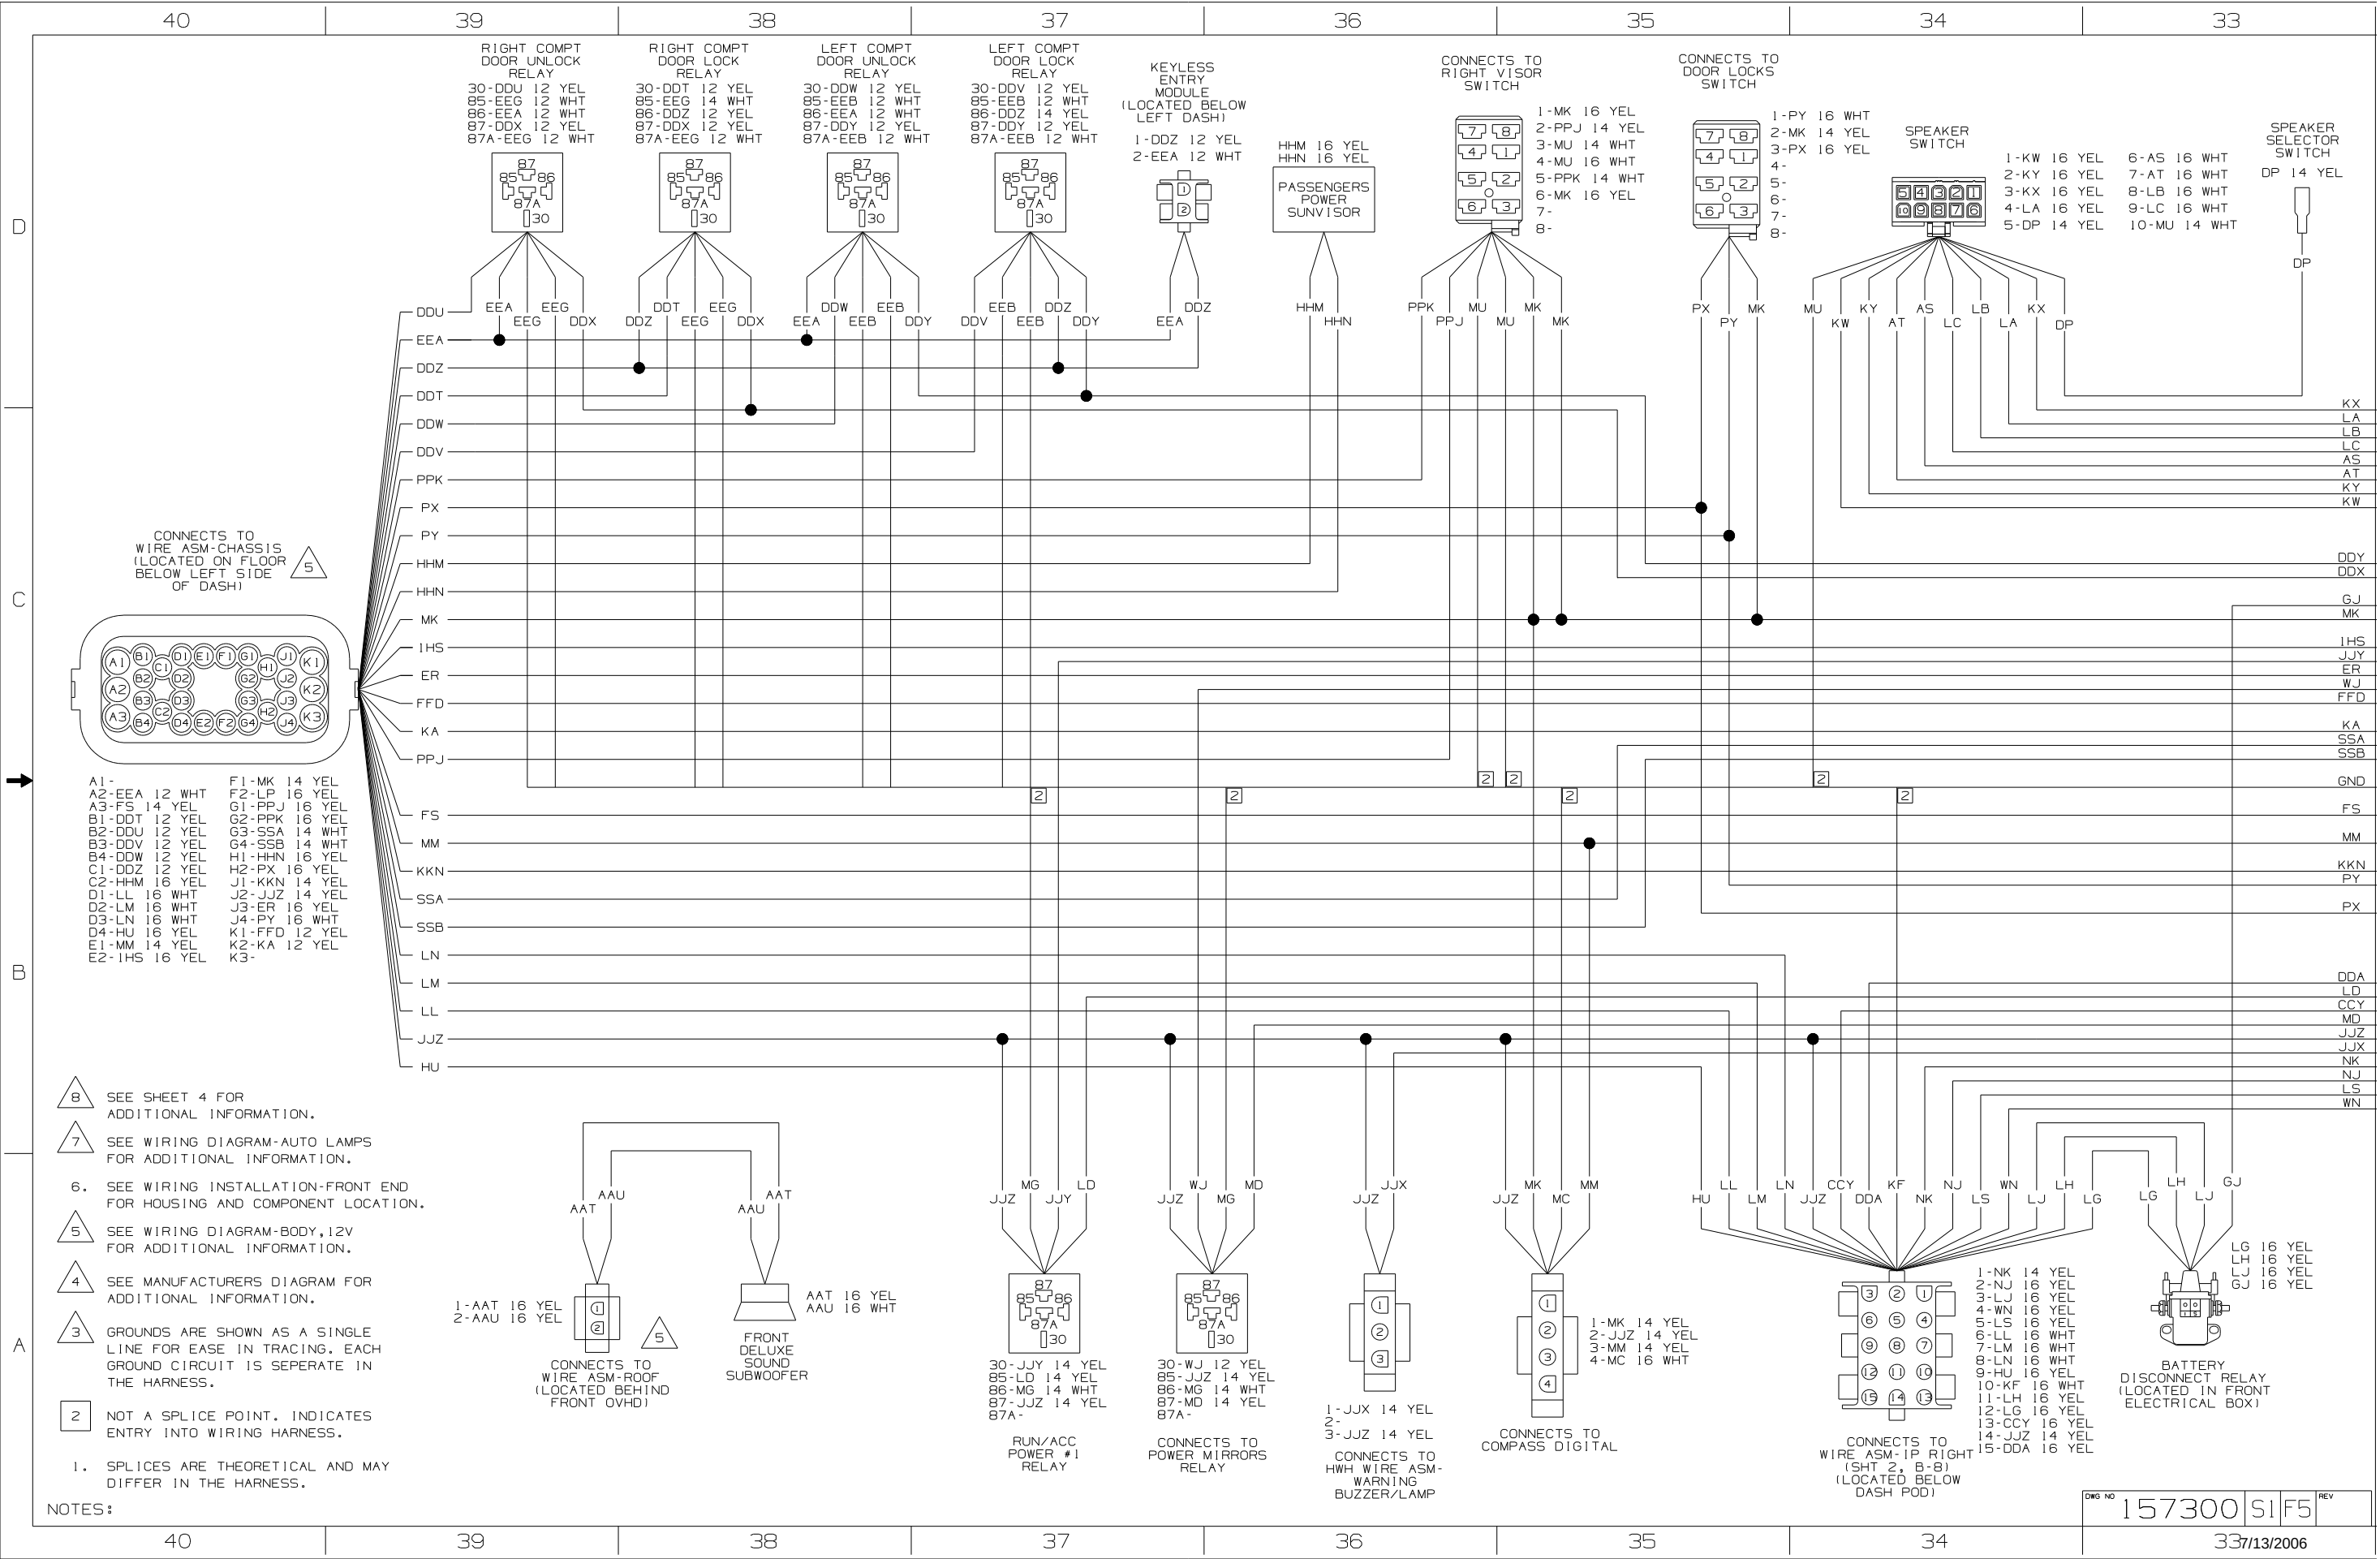


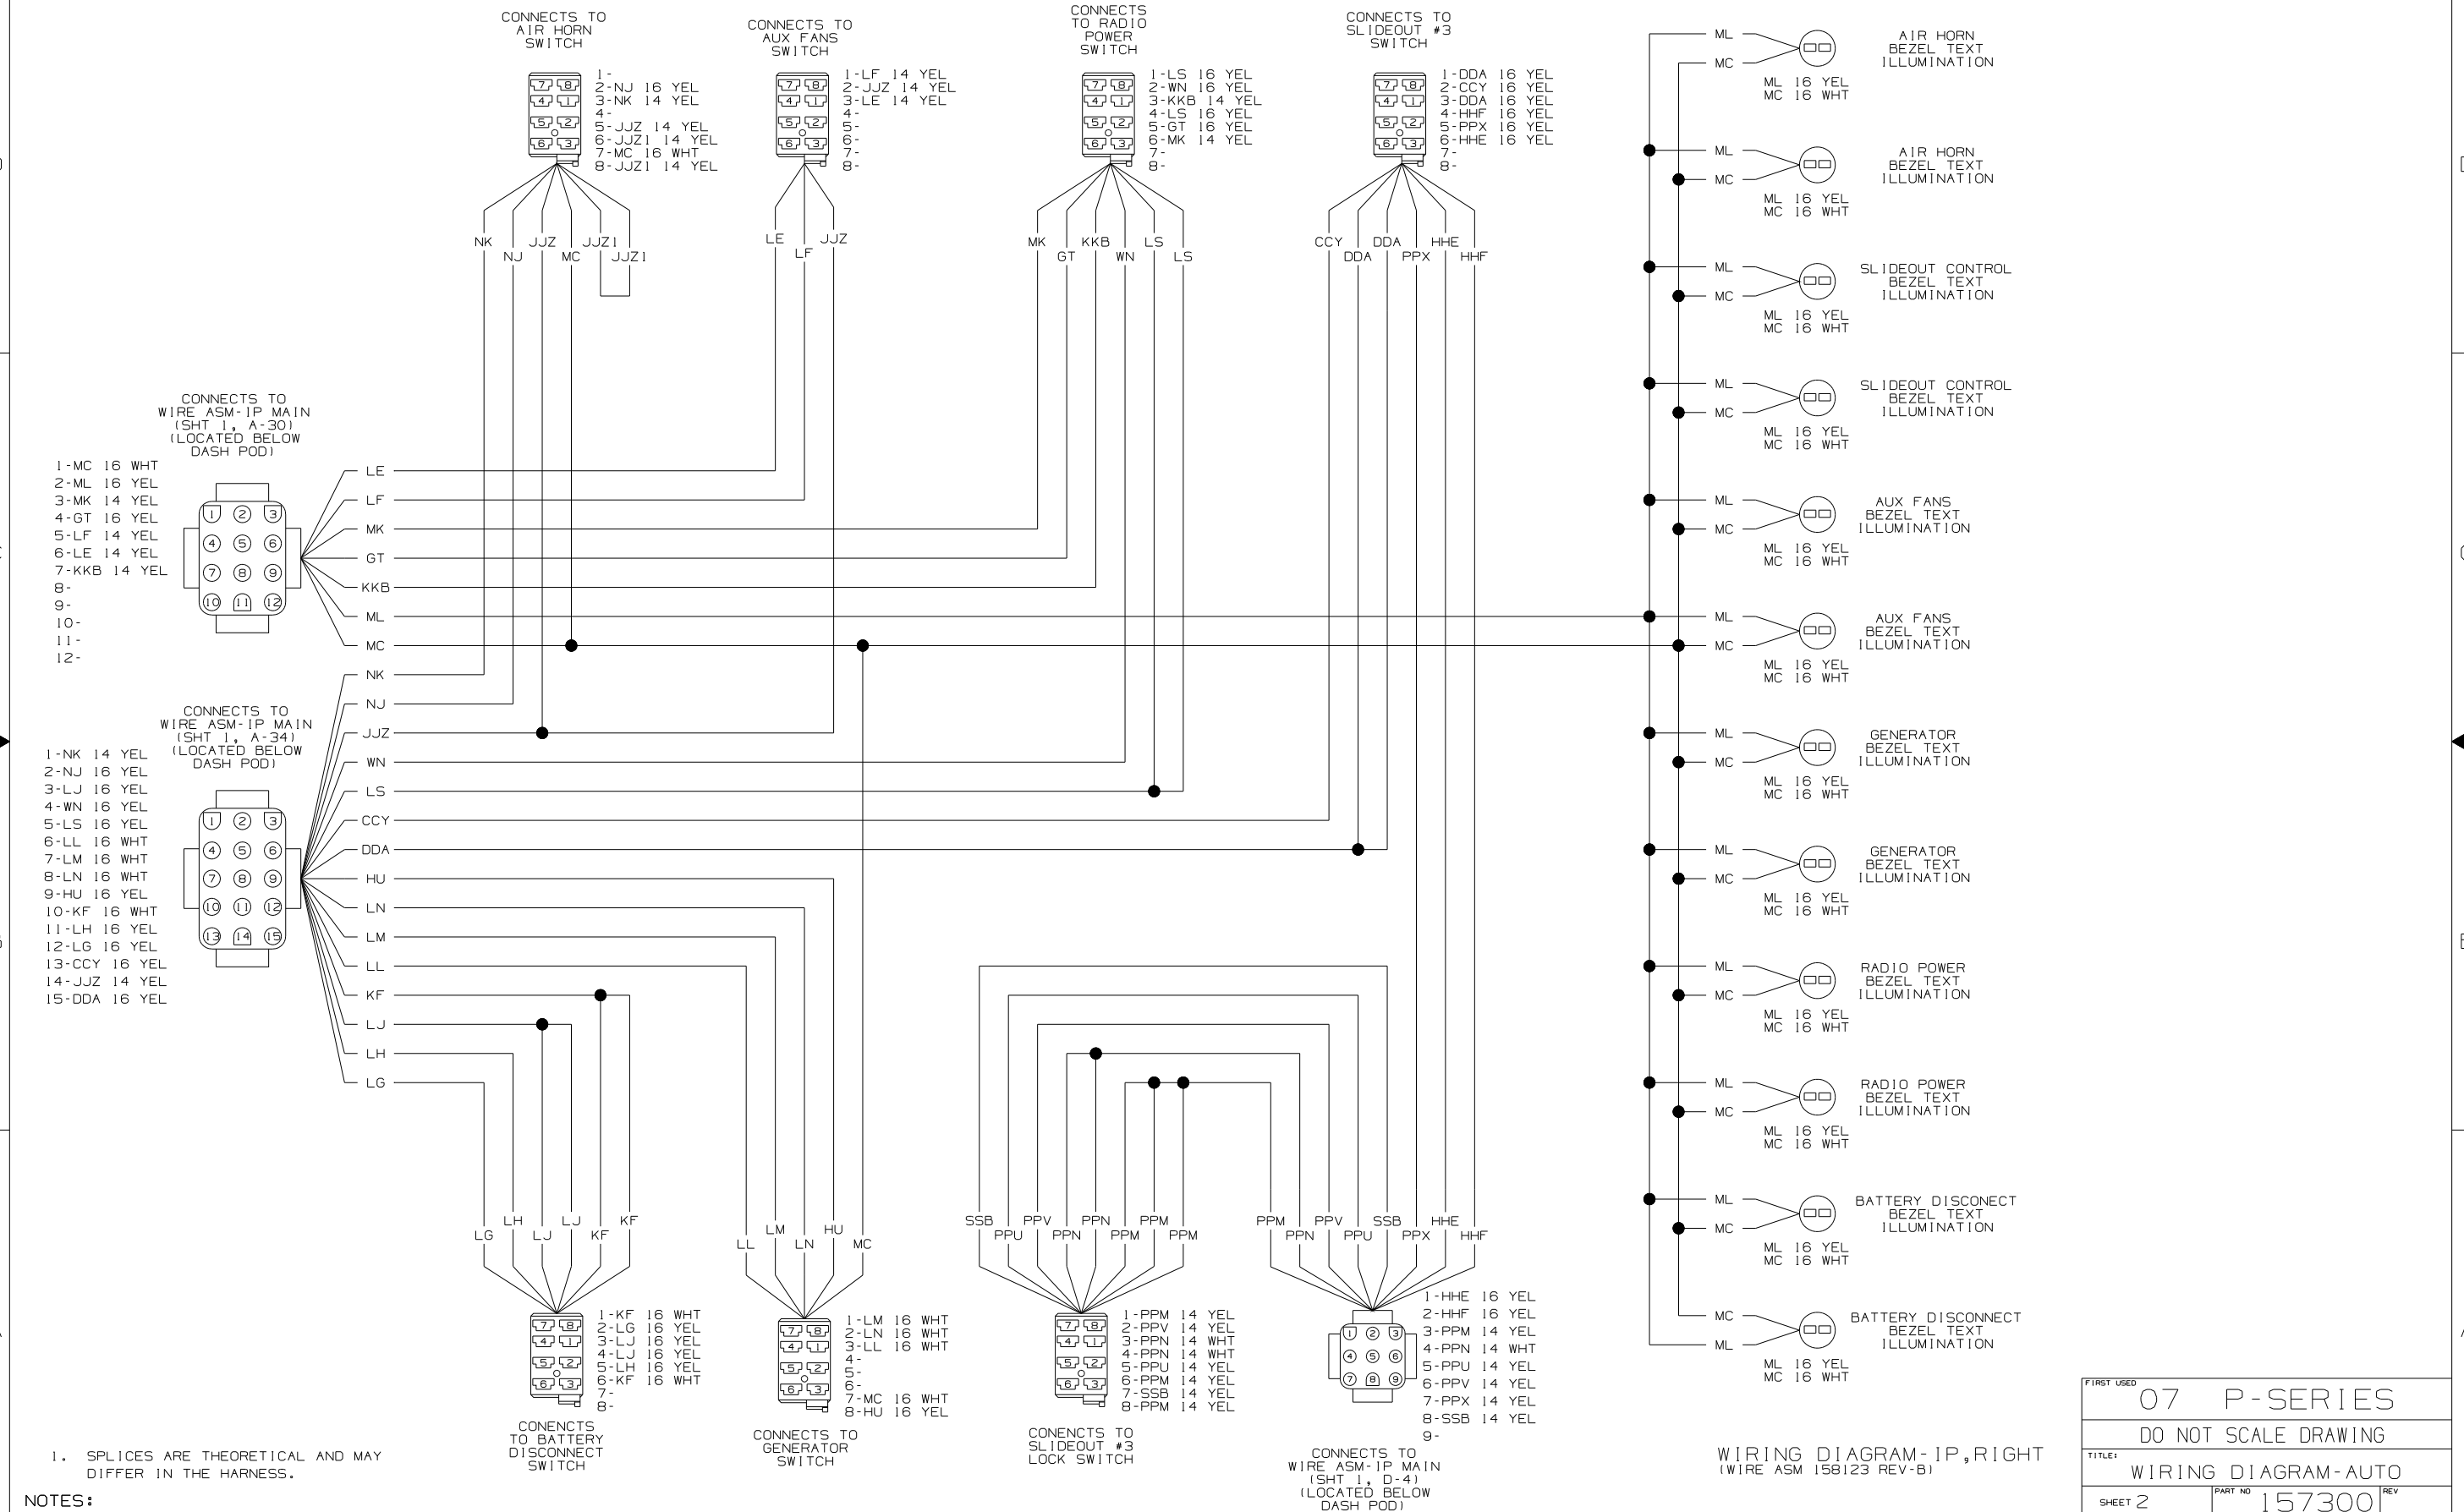


NOTES:
1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.



WIRING DIAGRAM-IP,RIGHT
(WIRE ASM 158123 REV-B)

07 P-SERIES	
DO NOT SCALE DRAWING	
TITLE: WIRING DIAGRAM-AUTO	
SHEET 2	PART NO 157300

WIRING DIAGRAM-WIPER/WASHER
(WIRE ASM 149214-05 REV-G)
(FREIGHTLINER 27,910 300HP 5.9L 5 SPEED
AND ALL FREIGHTLINER CHASSIS (JOB 2)
WITH POLLAK GAUGES)

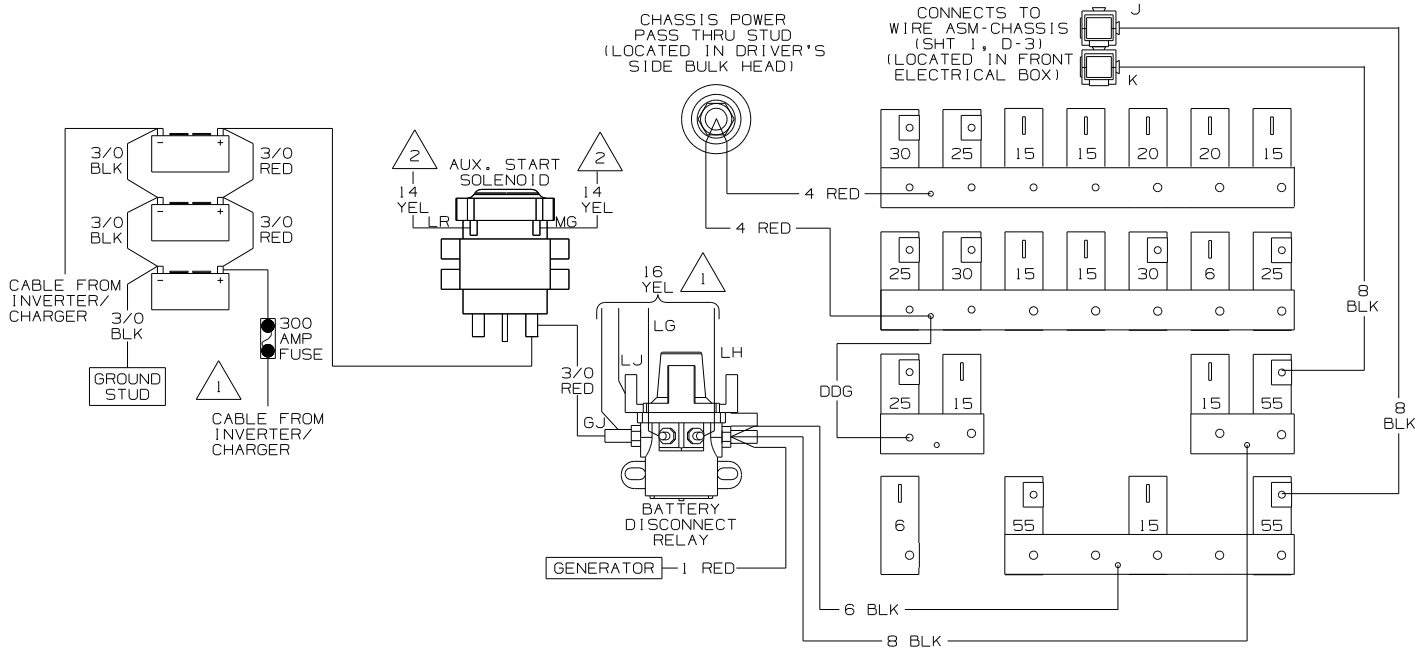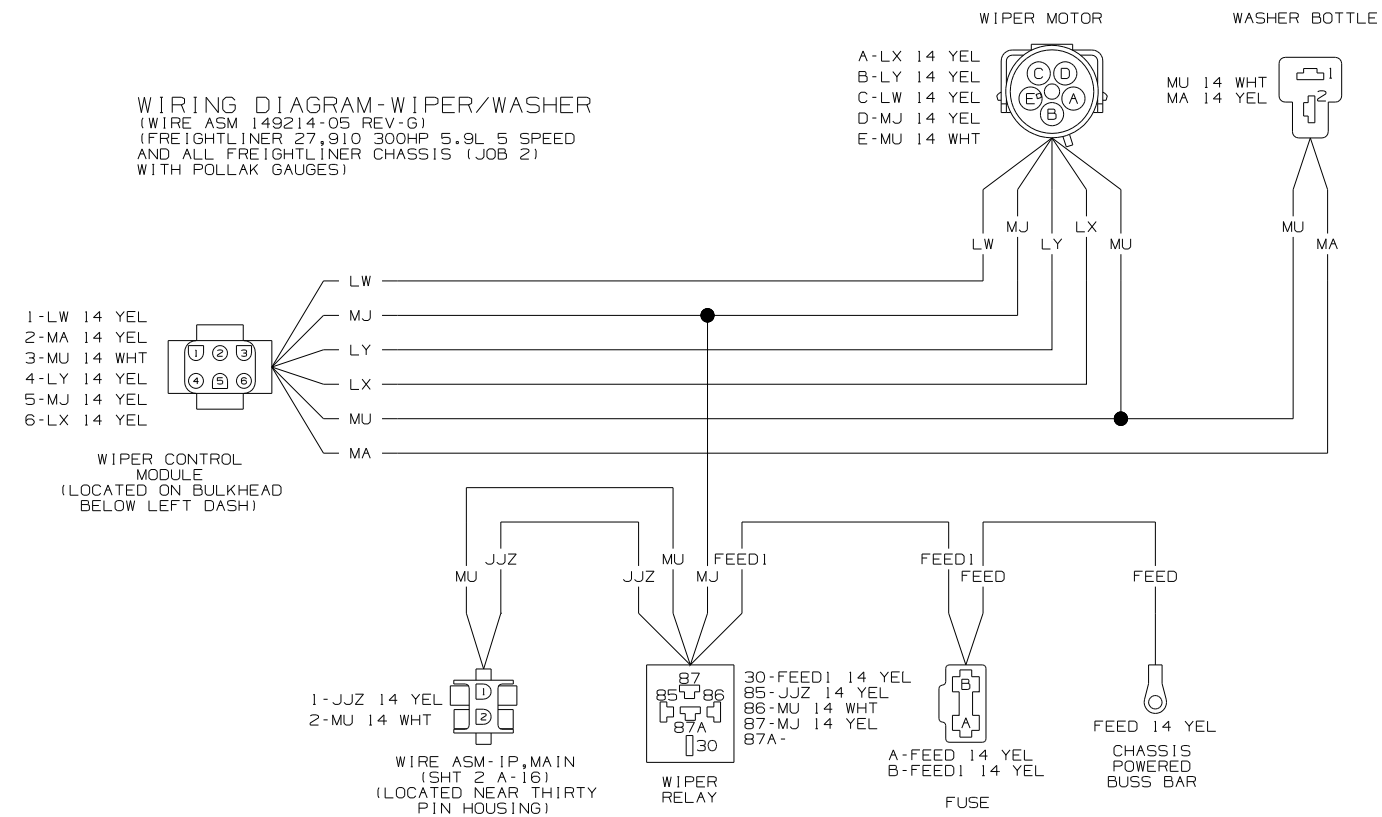

WIRING DIAGRAM-CRT BKR POWER
(WIRE ASM CRT BRK,POWER 103991-01 REV-G)
WIRE ASM COACH BKR FEED 103752-06-000 REV E)

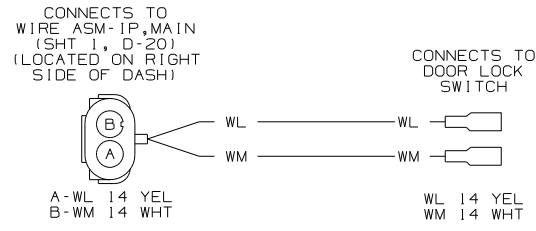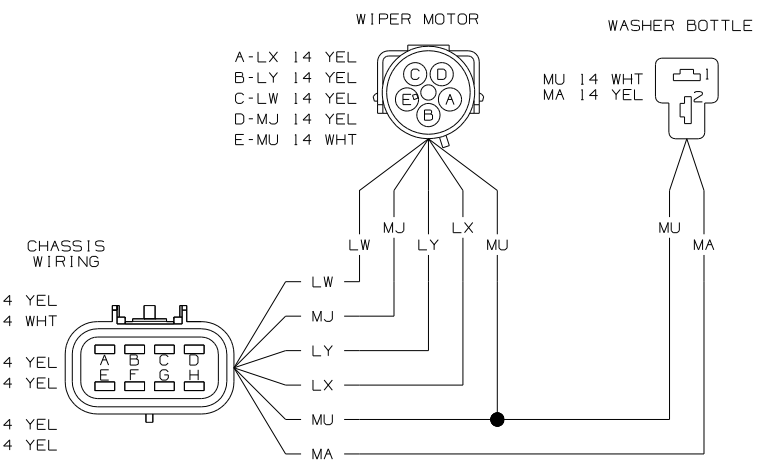

WIRING DIAGRAM-DOOR LOCK
(WIRE ASM 132267 REV-C)

NOTES:
2 SEE SHEET 1 FOR ADDITIONAL INFORMATION
1 SEE WIRING DIAGRAM-BODY, 12V FOR ADDITIONAL INFORMATION

WIRING DIAGRAM-WIPER/WASHER
(WIRE ASM 145778-02 REV-E)
(FREIGHTLINER 27,910 350 7.2L 6 SPEED OR
FREIGHTLINER 27,910 350 7.2L 6 SPEED WITH
MEDALLION GAUGES)

FIRST USED		07 P-SERIES	
		DO NOT SCALE DRAWING	
TITLE:		WIRING DIAGRAM-AUTO	
SHEET 4	PART NO	157300	REV