




DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION


If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

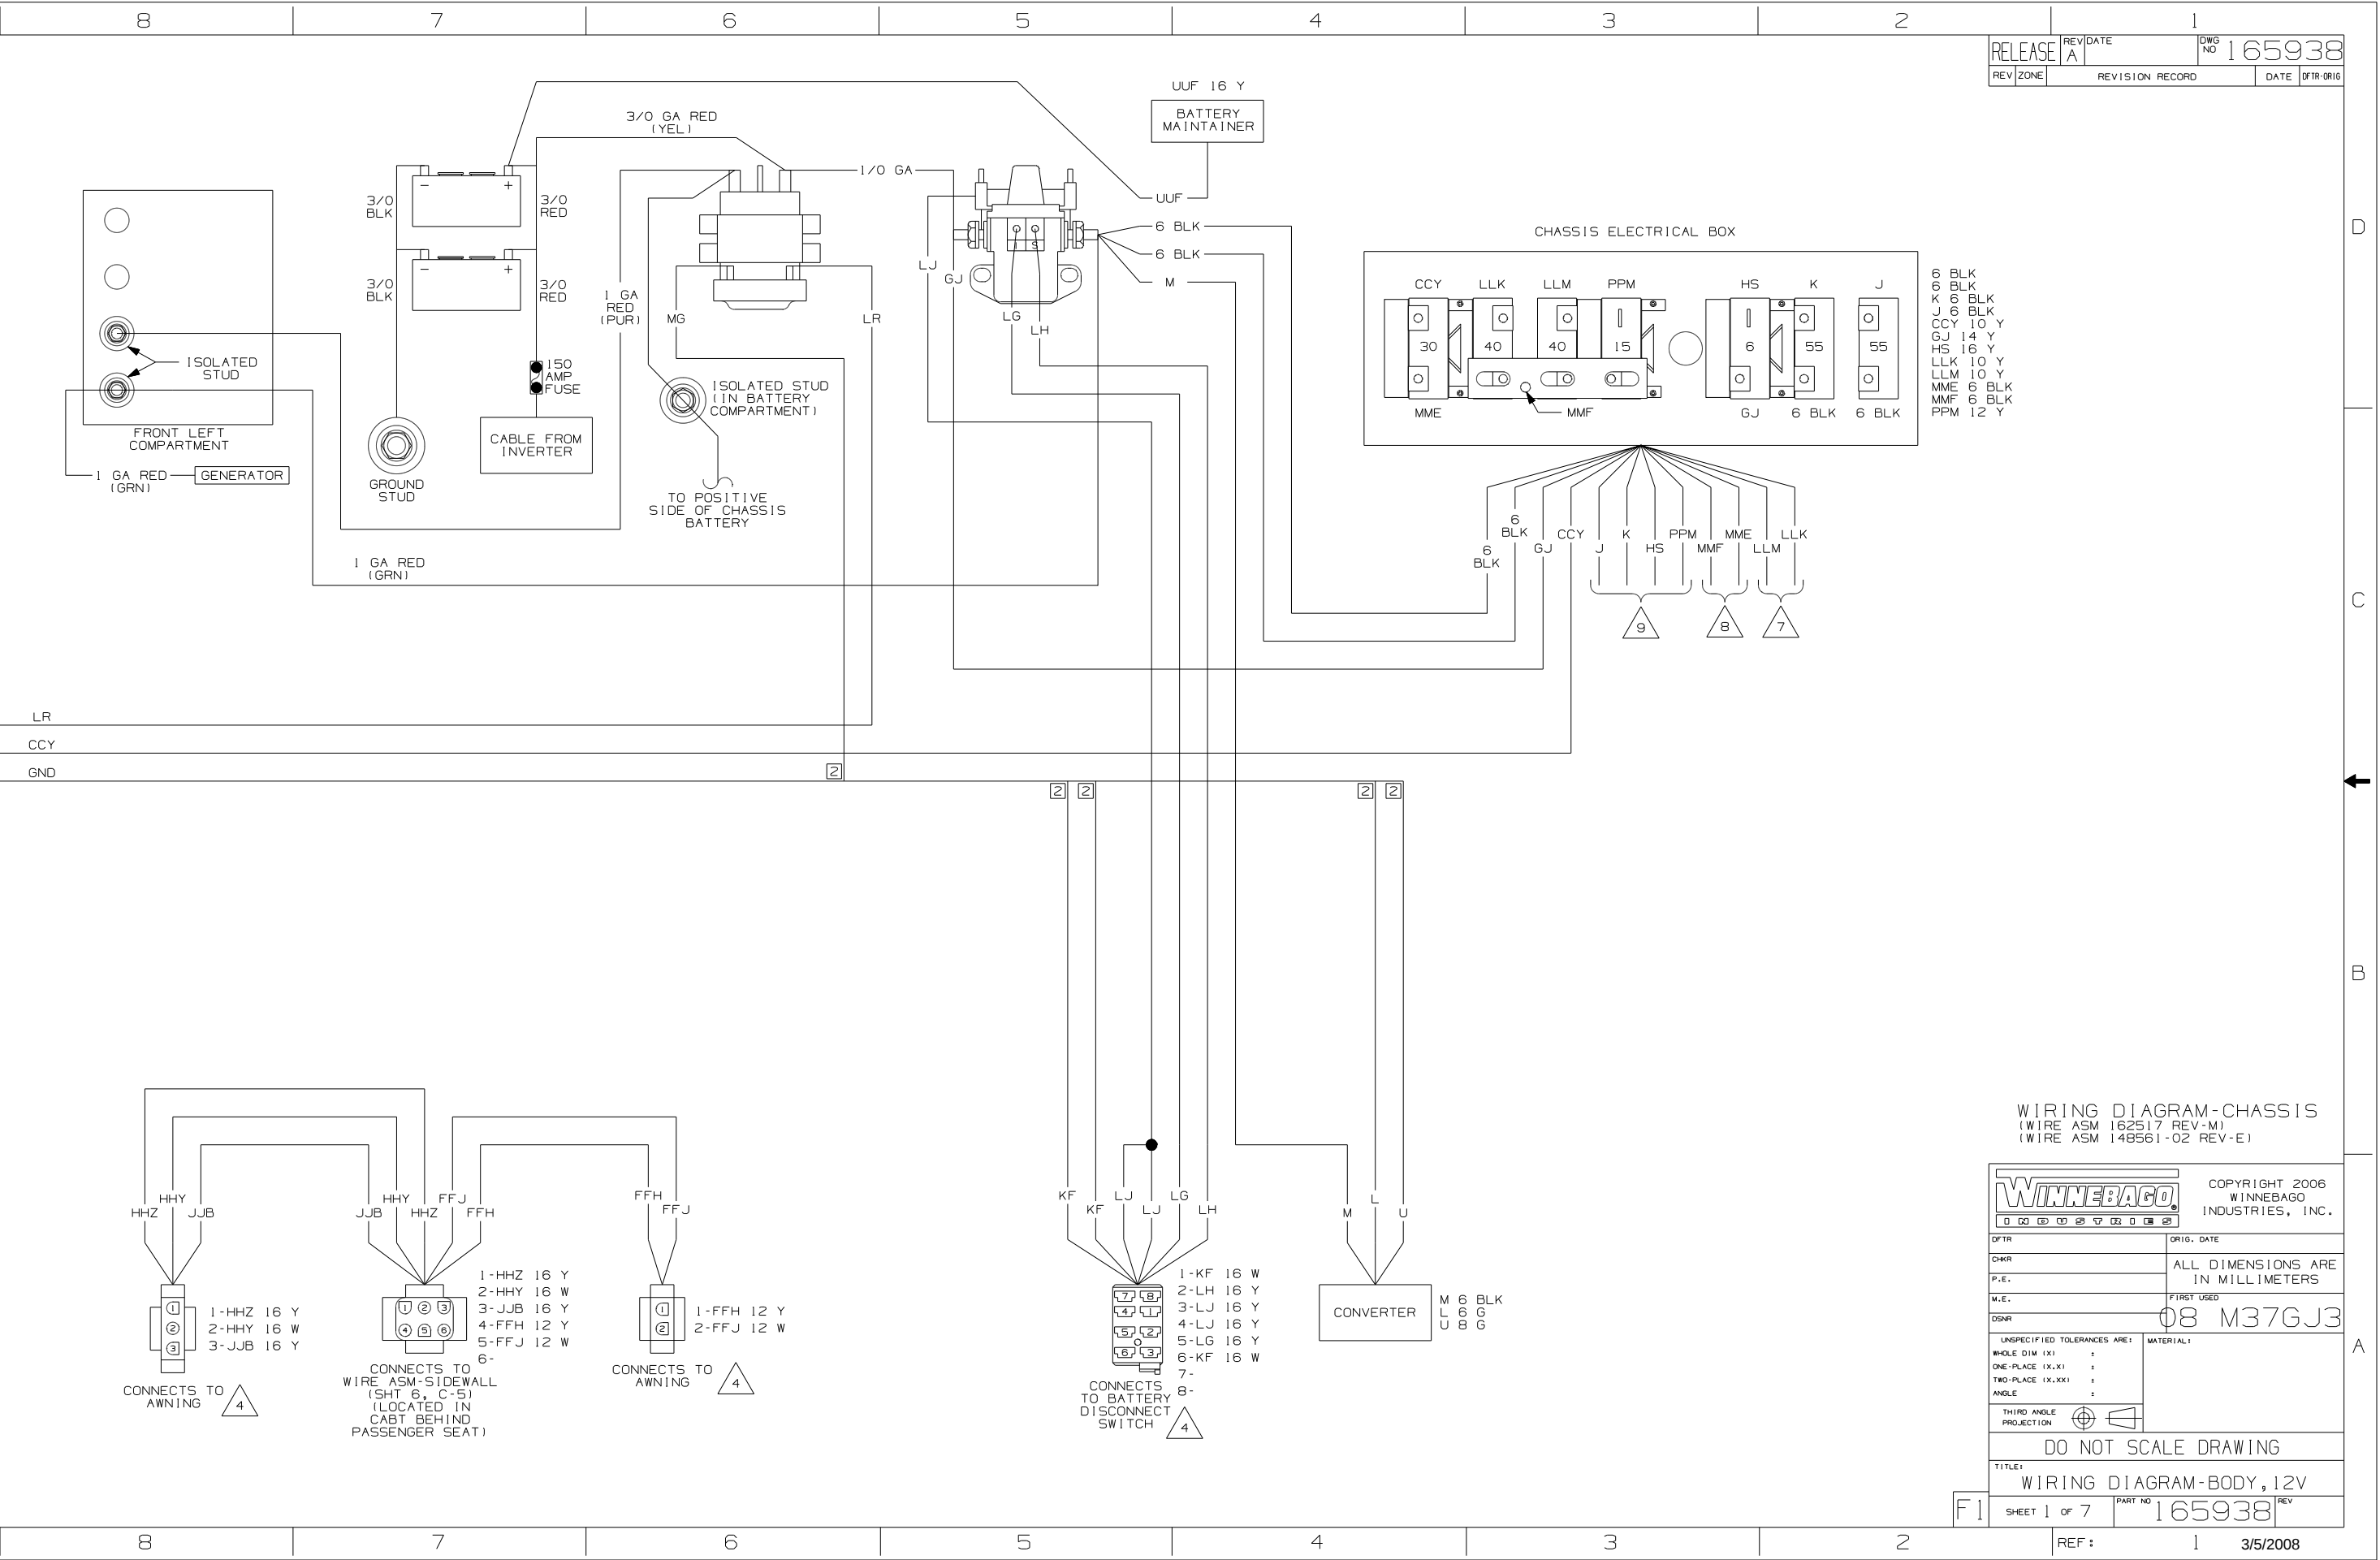



6 BLK
6 BLK
K 6 BLK
J 6 BLK
CCY 10 Y
GJ 14 Y
HS 16 Y
LLK 10 Y
LLM 10 Y
MME 6 BLK
MMF 6 BLK
PPM 12 Y

WIRING DIAGRAM-CHASSIS
(WIRE ASM 162517 REV-M)
(WIRE ASM 148561-02 REV-E)


WINNEBAGO		COPYRIGHT 2006 WINNEBAGO INDUSTRIES, INC.	
DFTR	ORIG. DATE		
CHKR	ALL DIMENSIONS ARE IN MILLIMETERS		
P.E.			
M.E.	FIRST USED		
DSNR	08 M37GJ3		
UNSPECIFIED TOLERANCES ARE:		MATERIAL:	
WHOLE DIM (X) :			
ONE-PLACE (X,X) :			
TWO-PLACE (X,XX) :			
ANGLE :			
THIRD ANGLE PROJECTION			
DO NOT SCALE DRAWING			
TITLE:			
WIRING DIAGRAM-BODY, 12V			
SHEET 1 of 7		PART NO 165938	
REF :		1 3/5/2008	

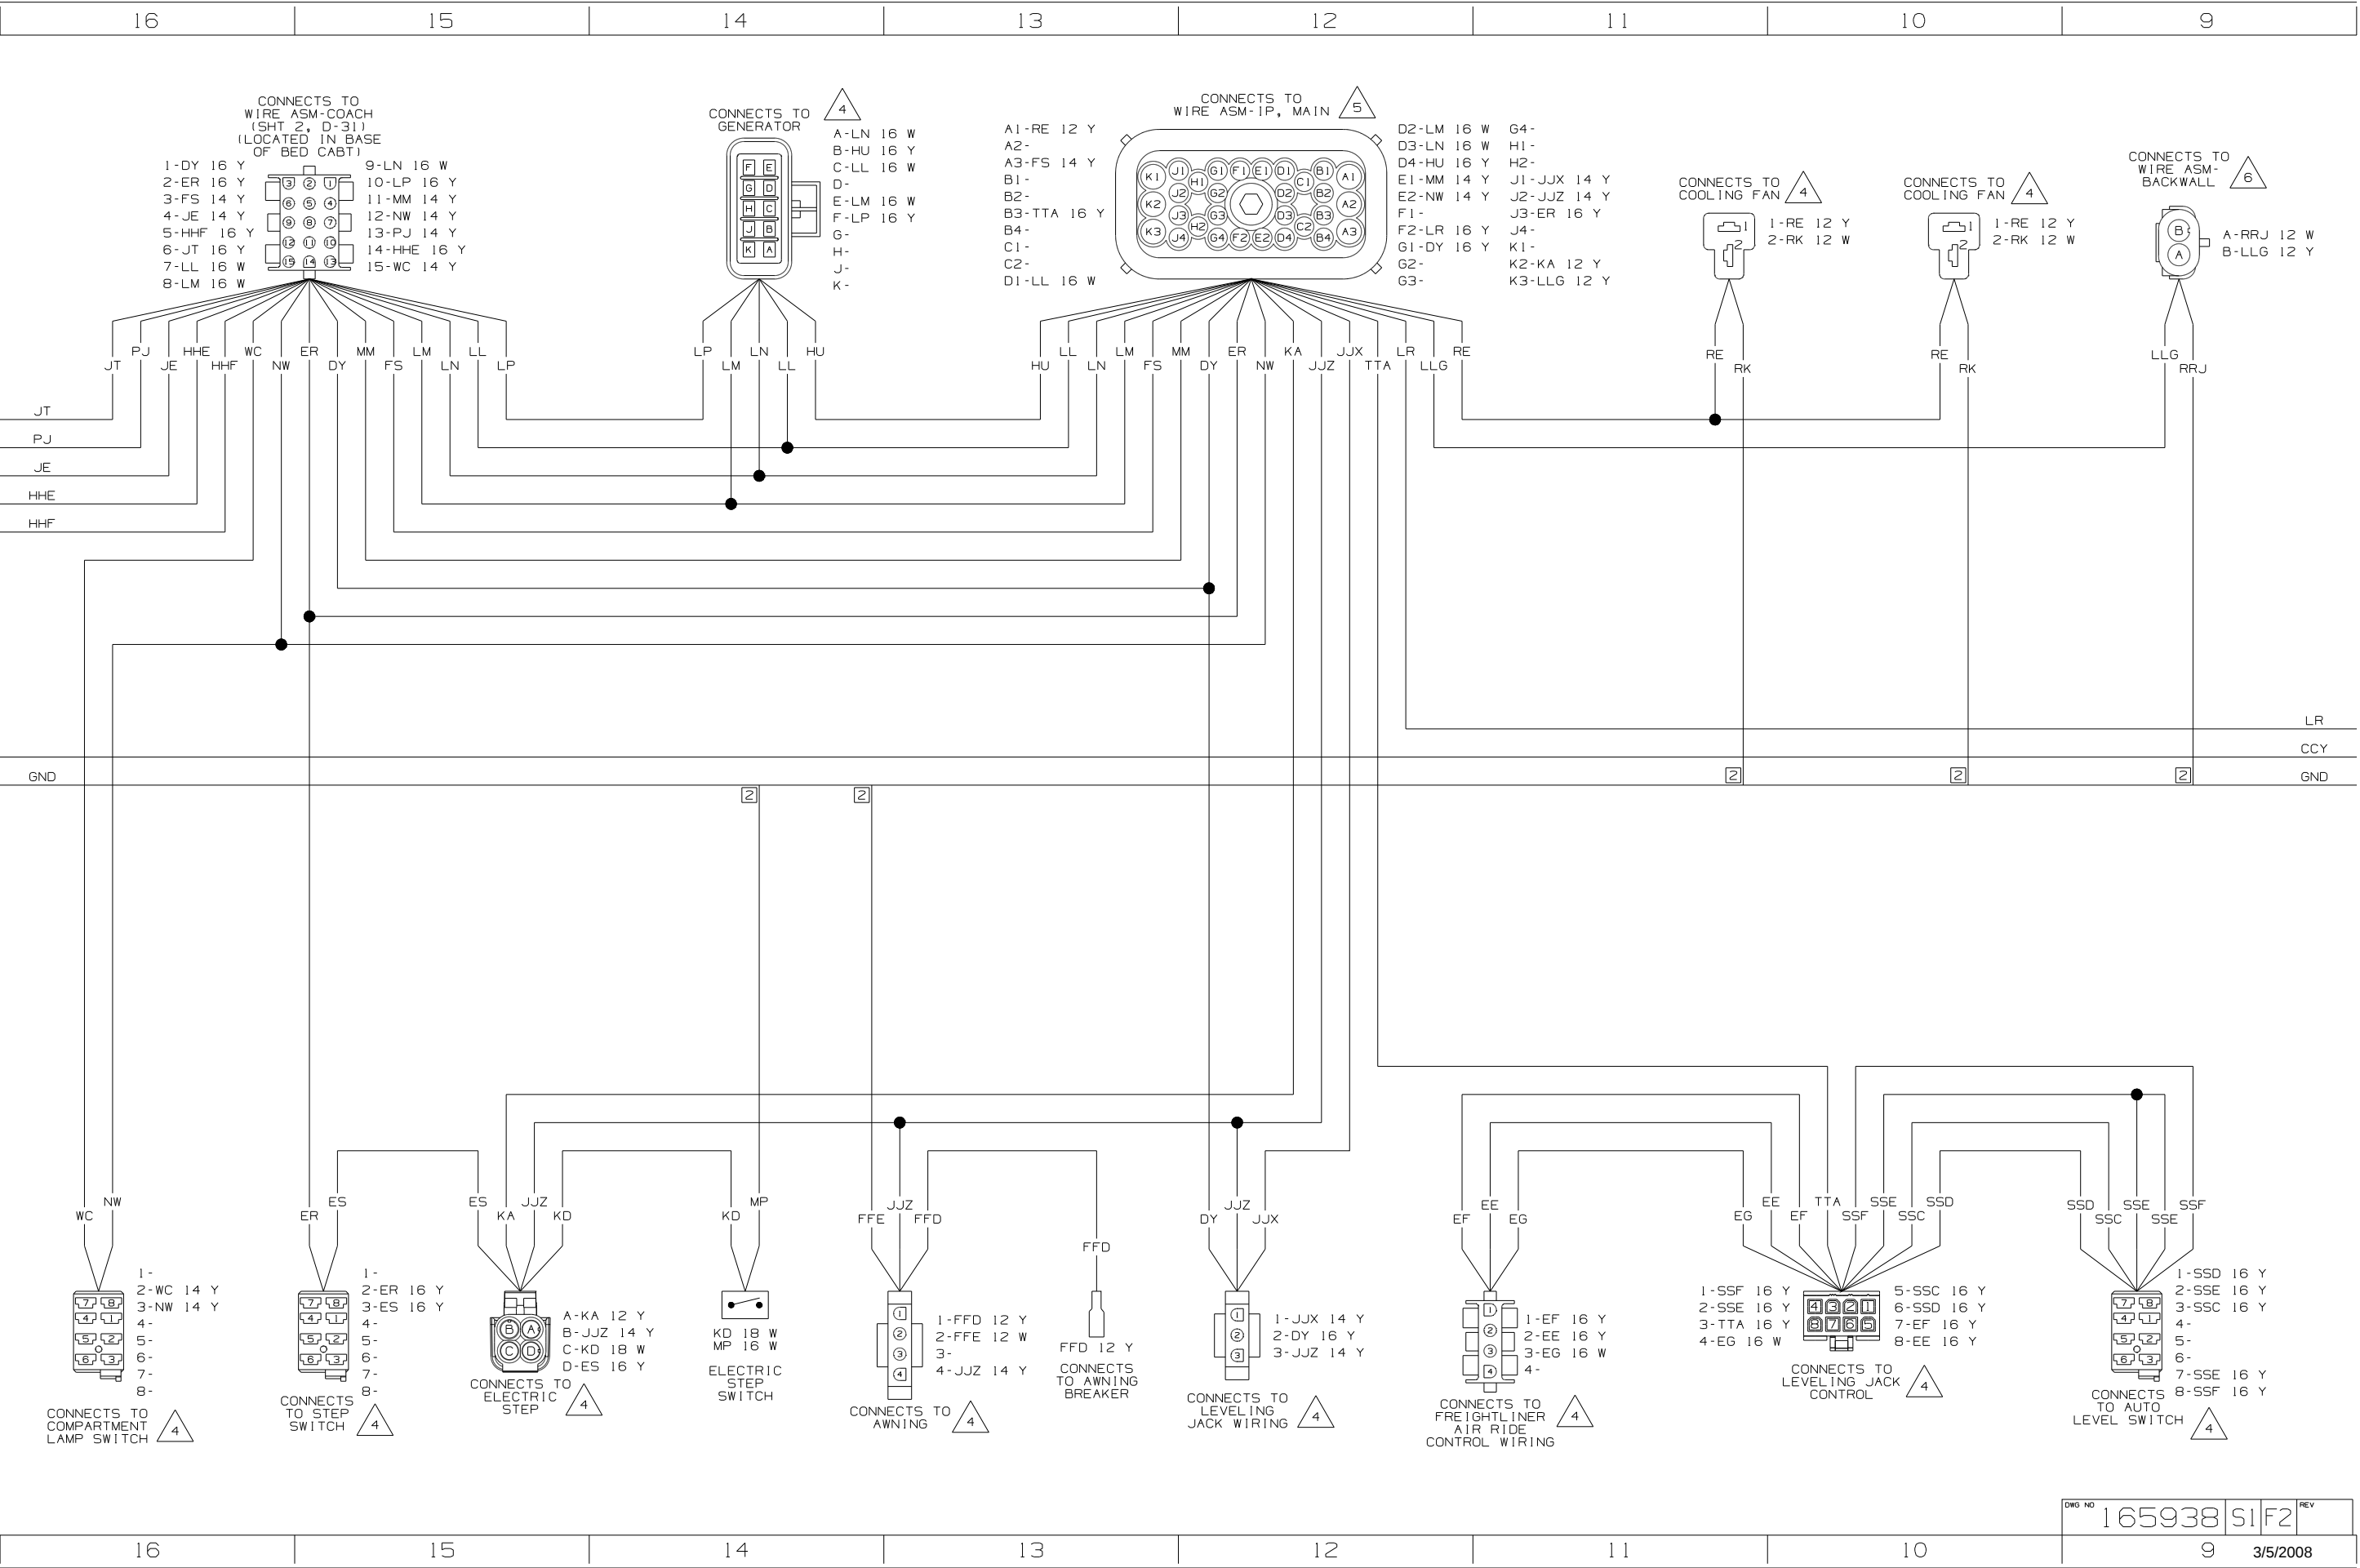


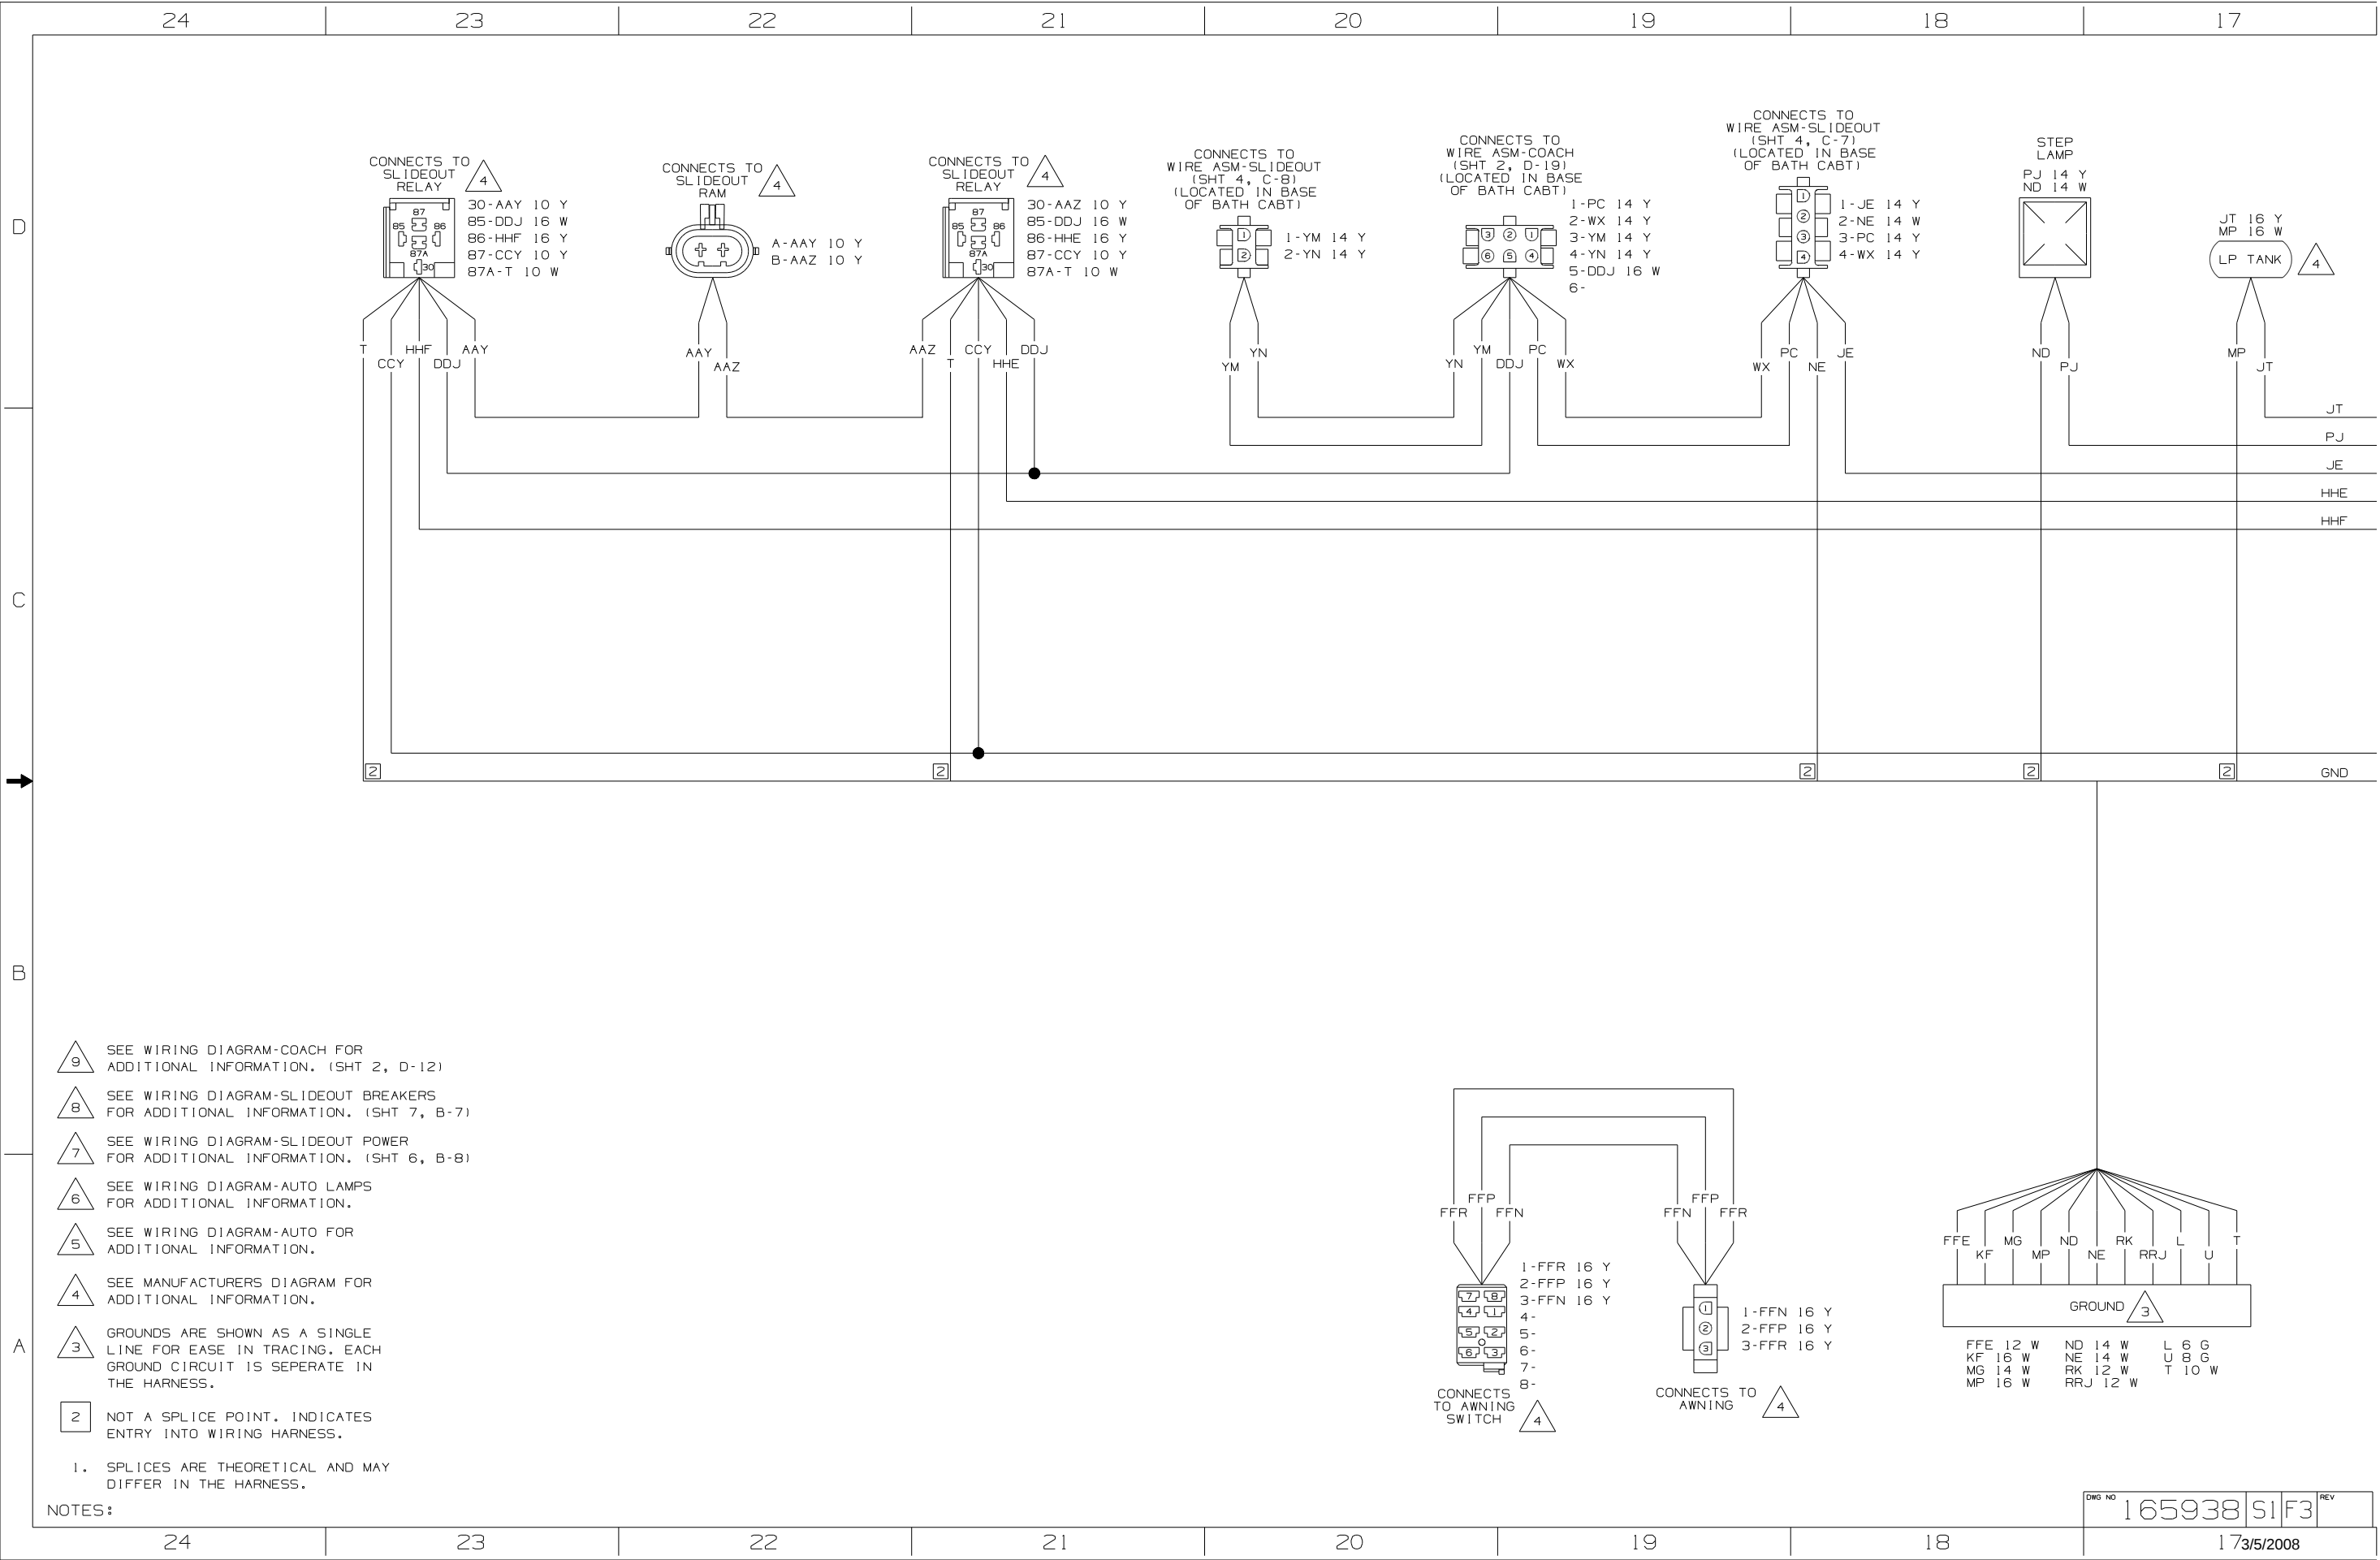


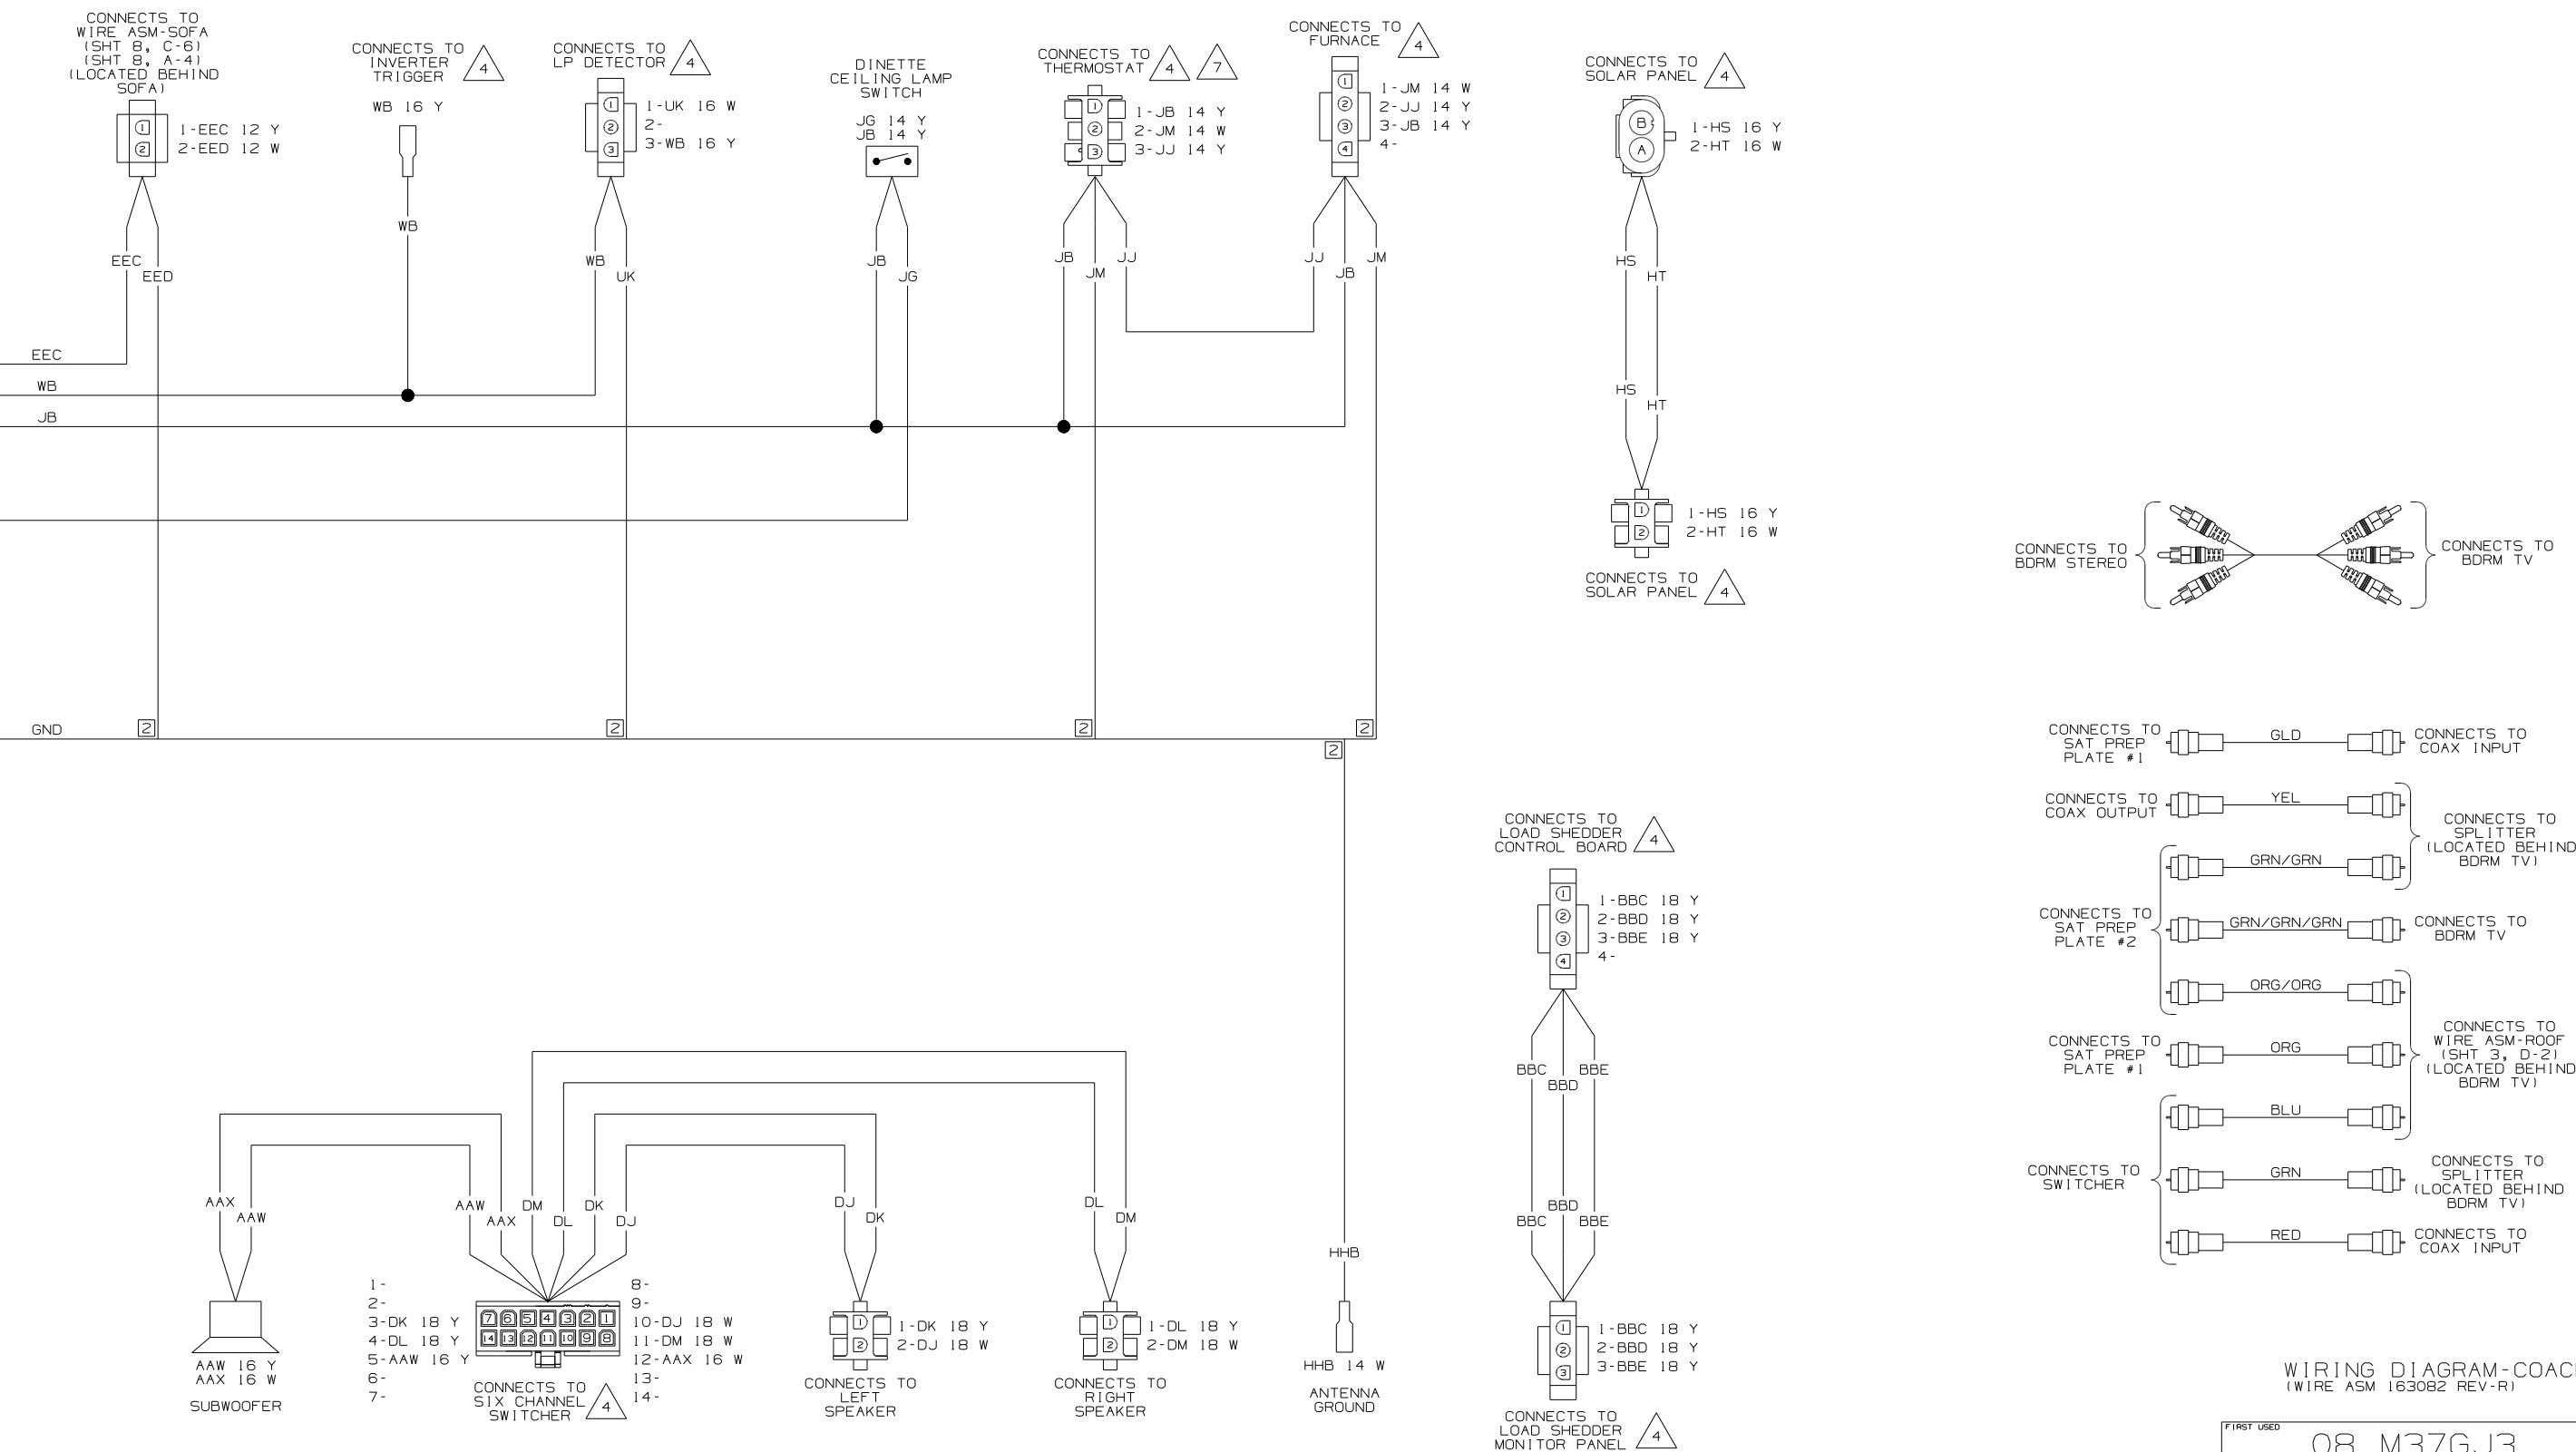
WIRING DIAGRAM-COACH
(WIRE ASM 163082 REV-R)


FIRST USED		08 M37GJ3	
DO NOT SCALE DRAWING			
TITLE:			
WIRING DIAGRAM-BODY, 12V			
SHEET 2		PART NO	165938 REV

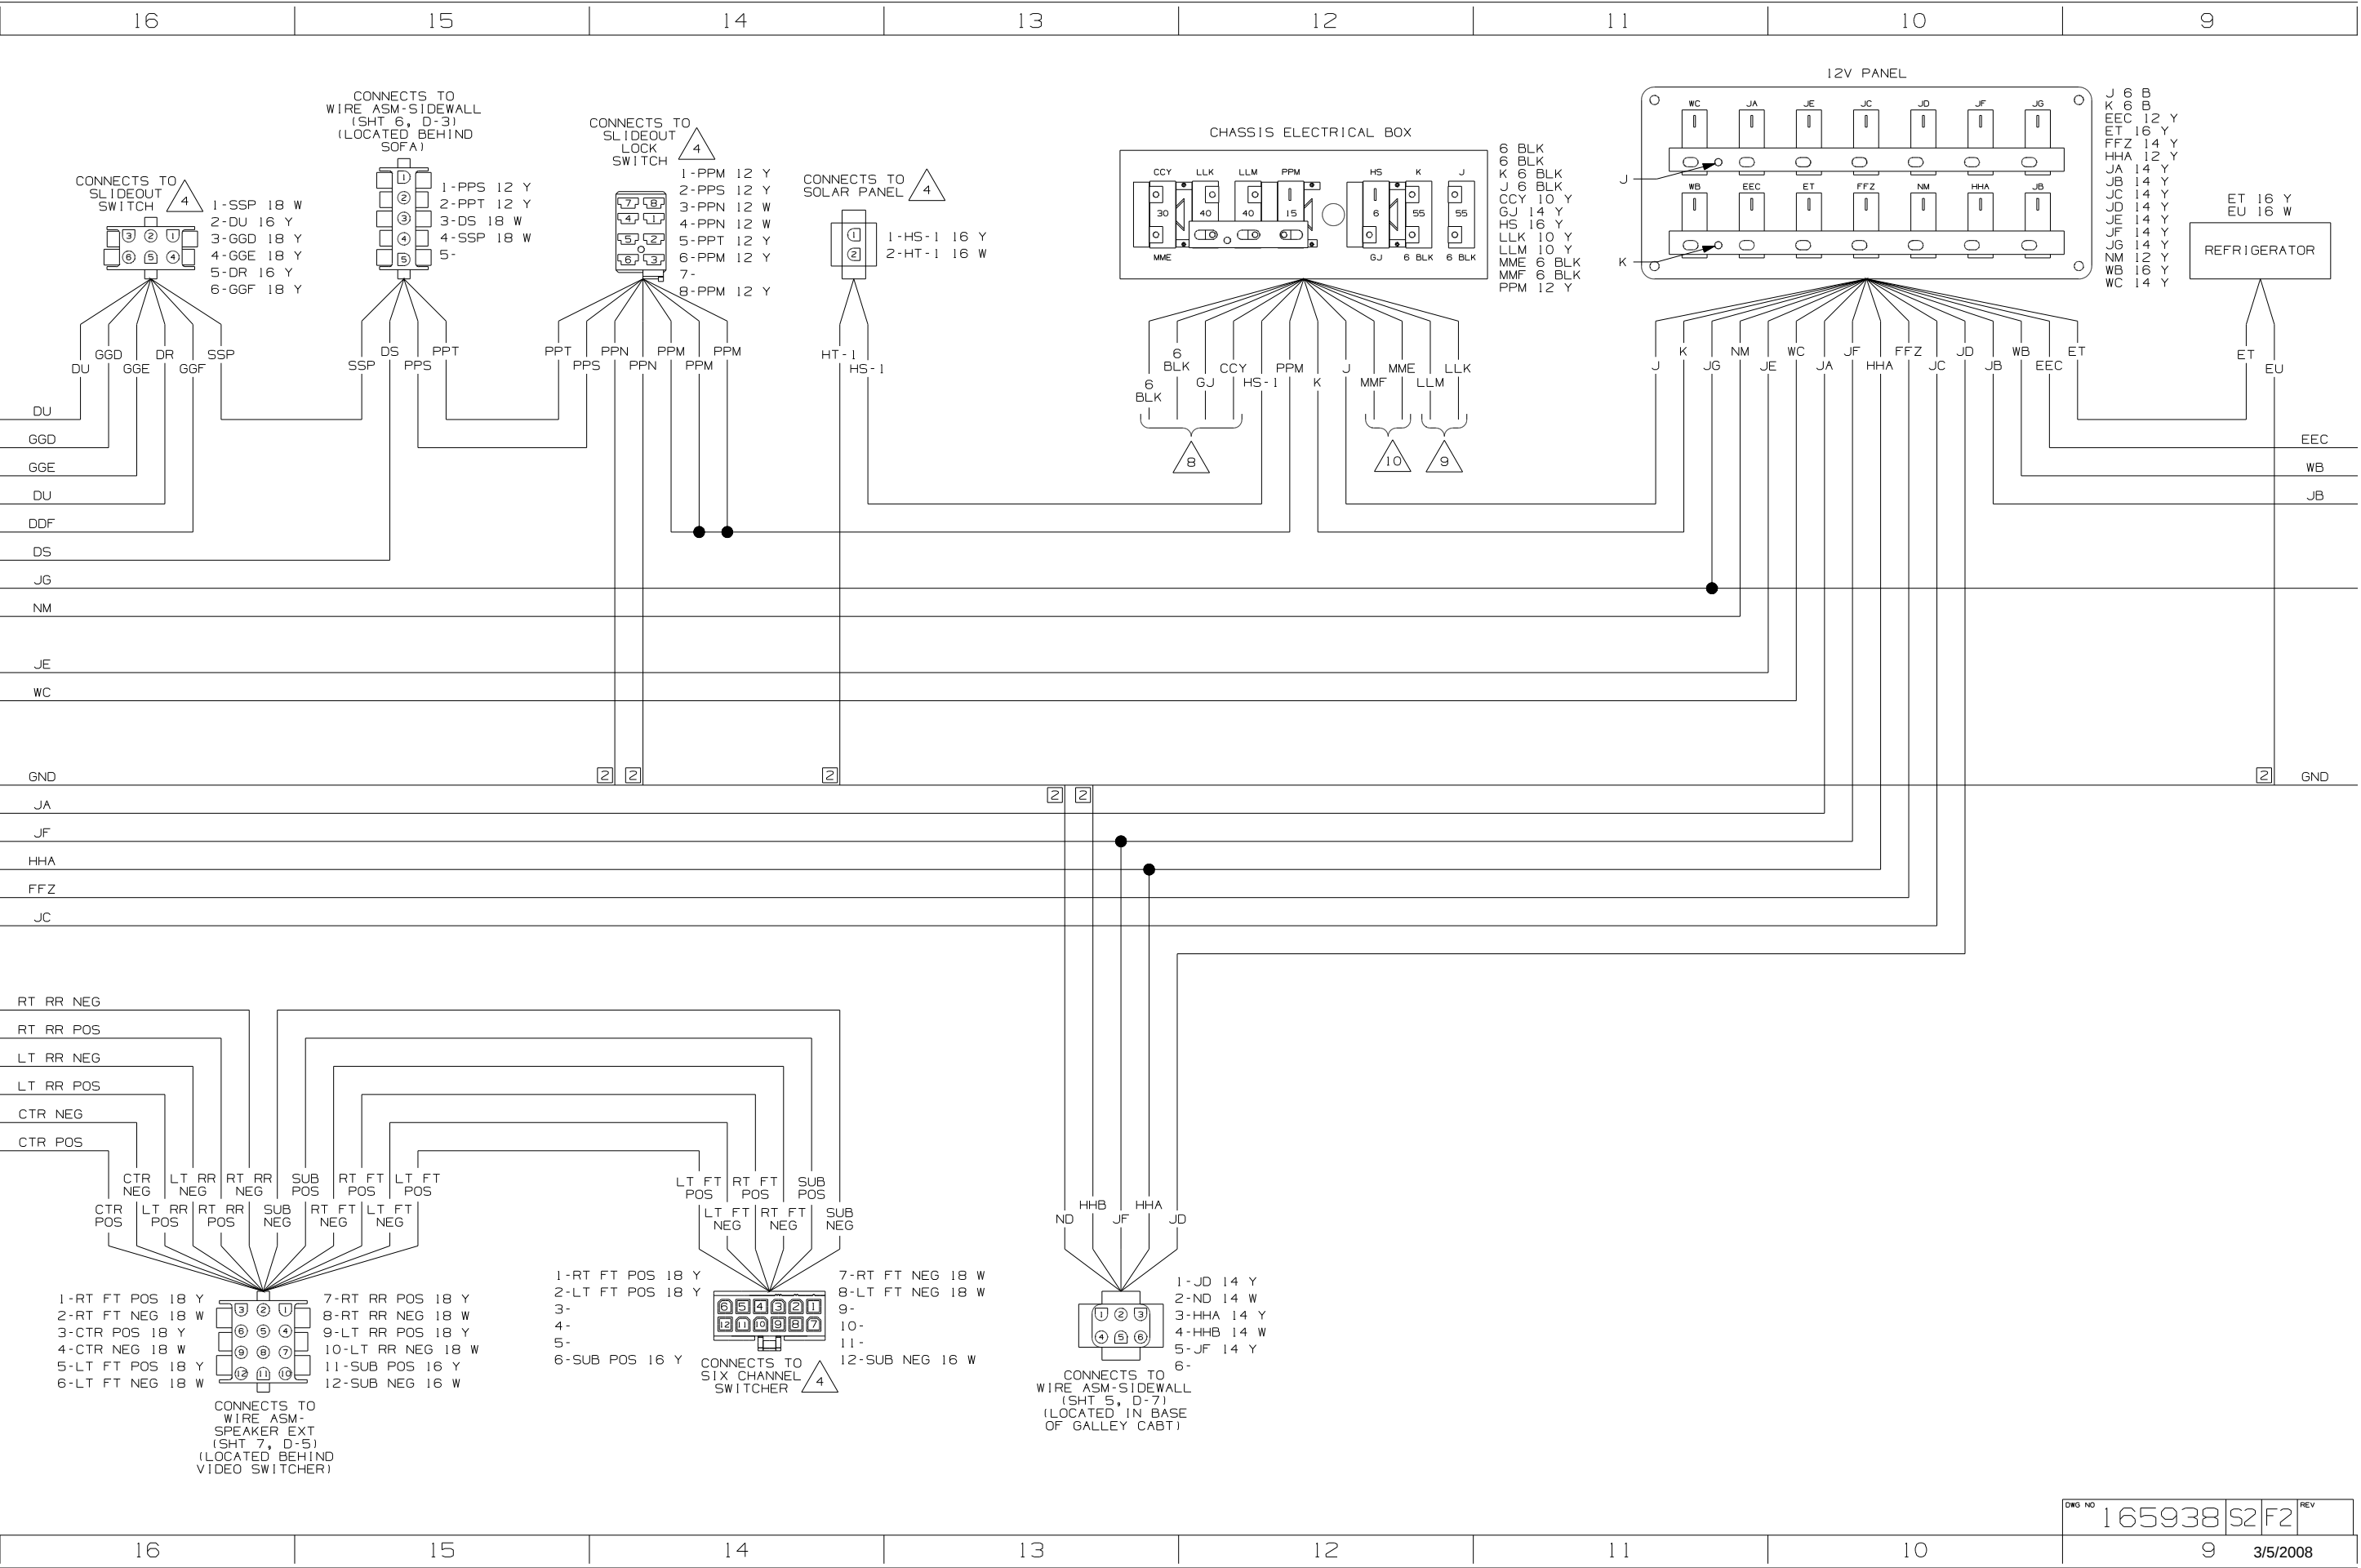







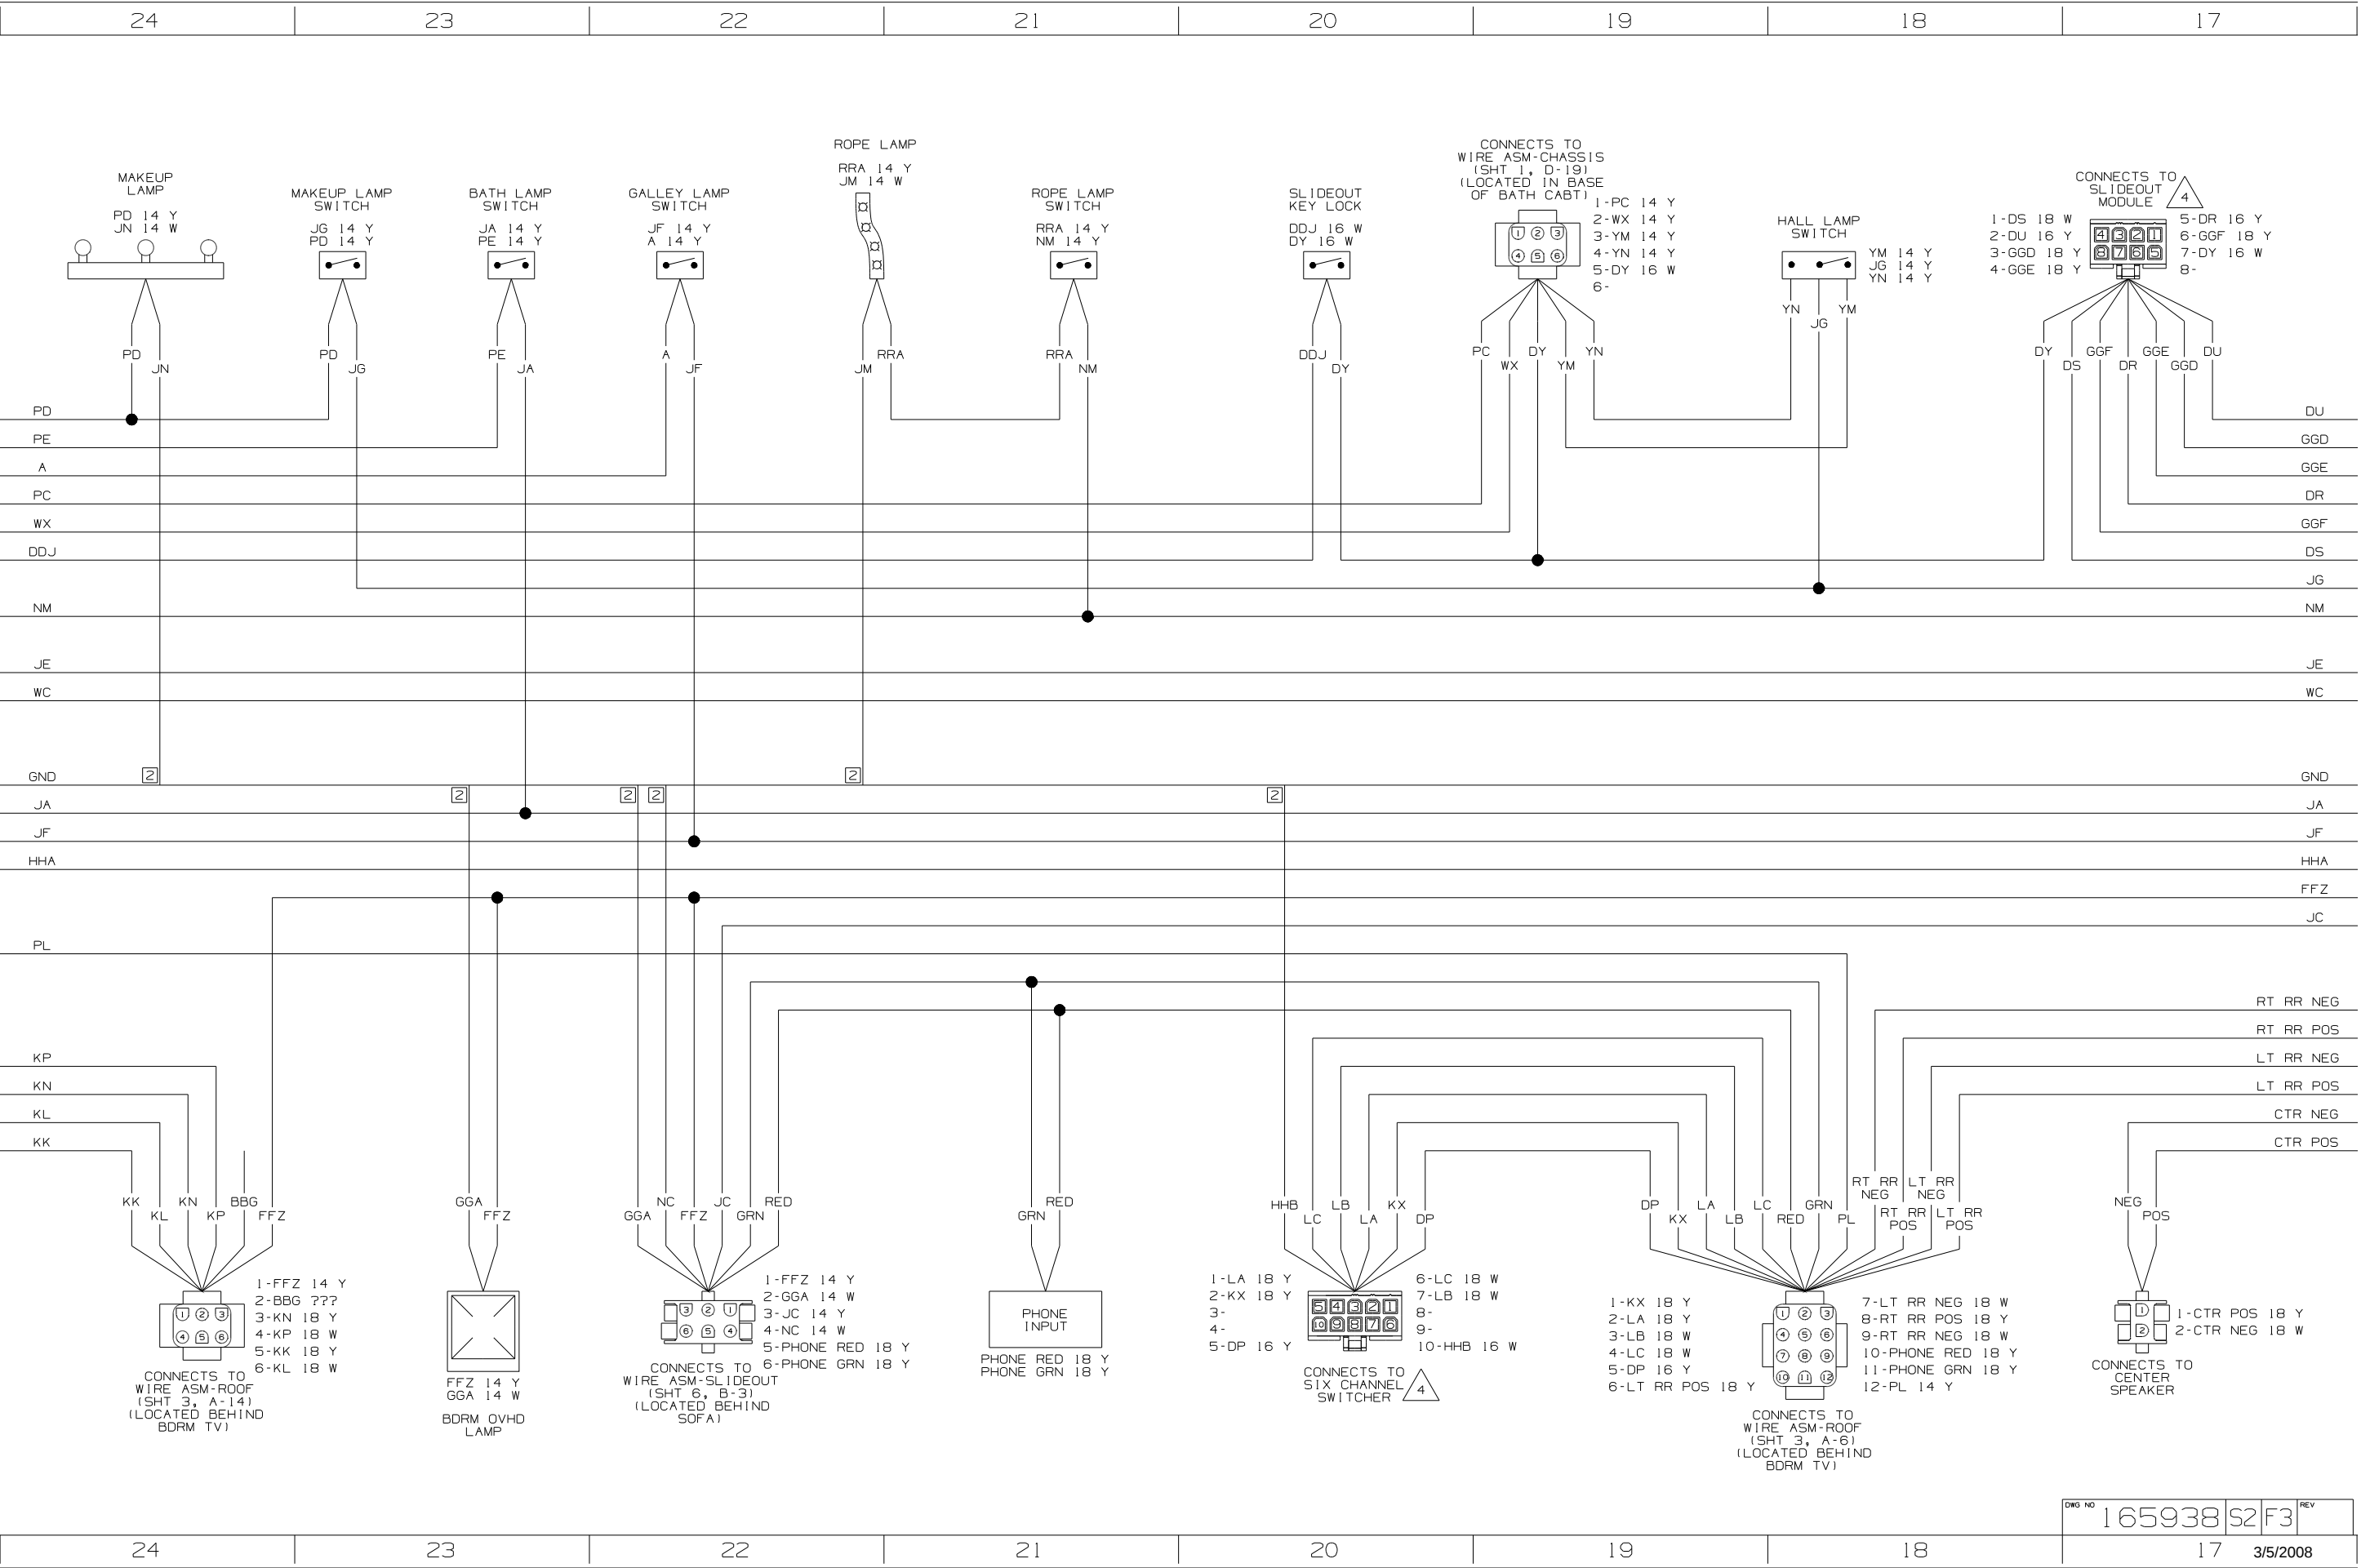




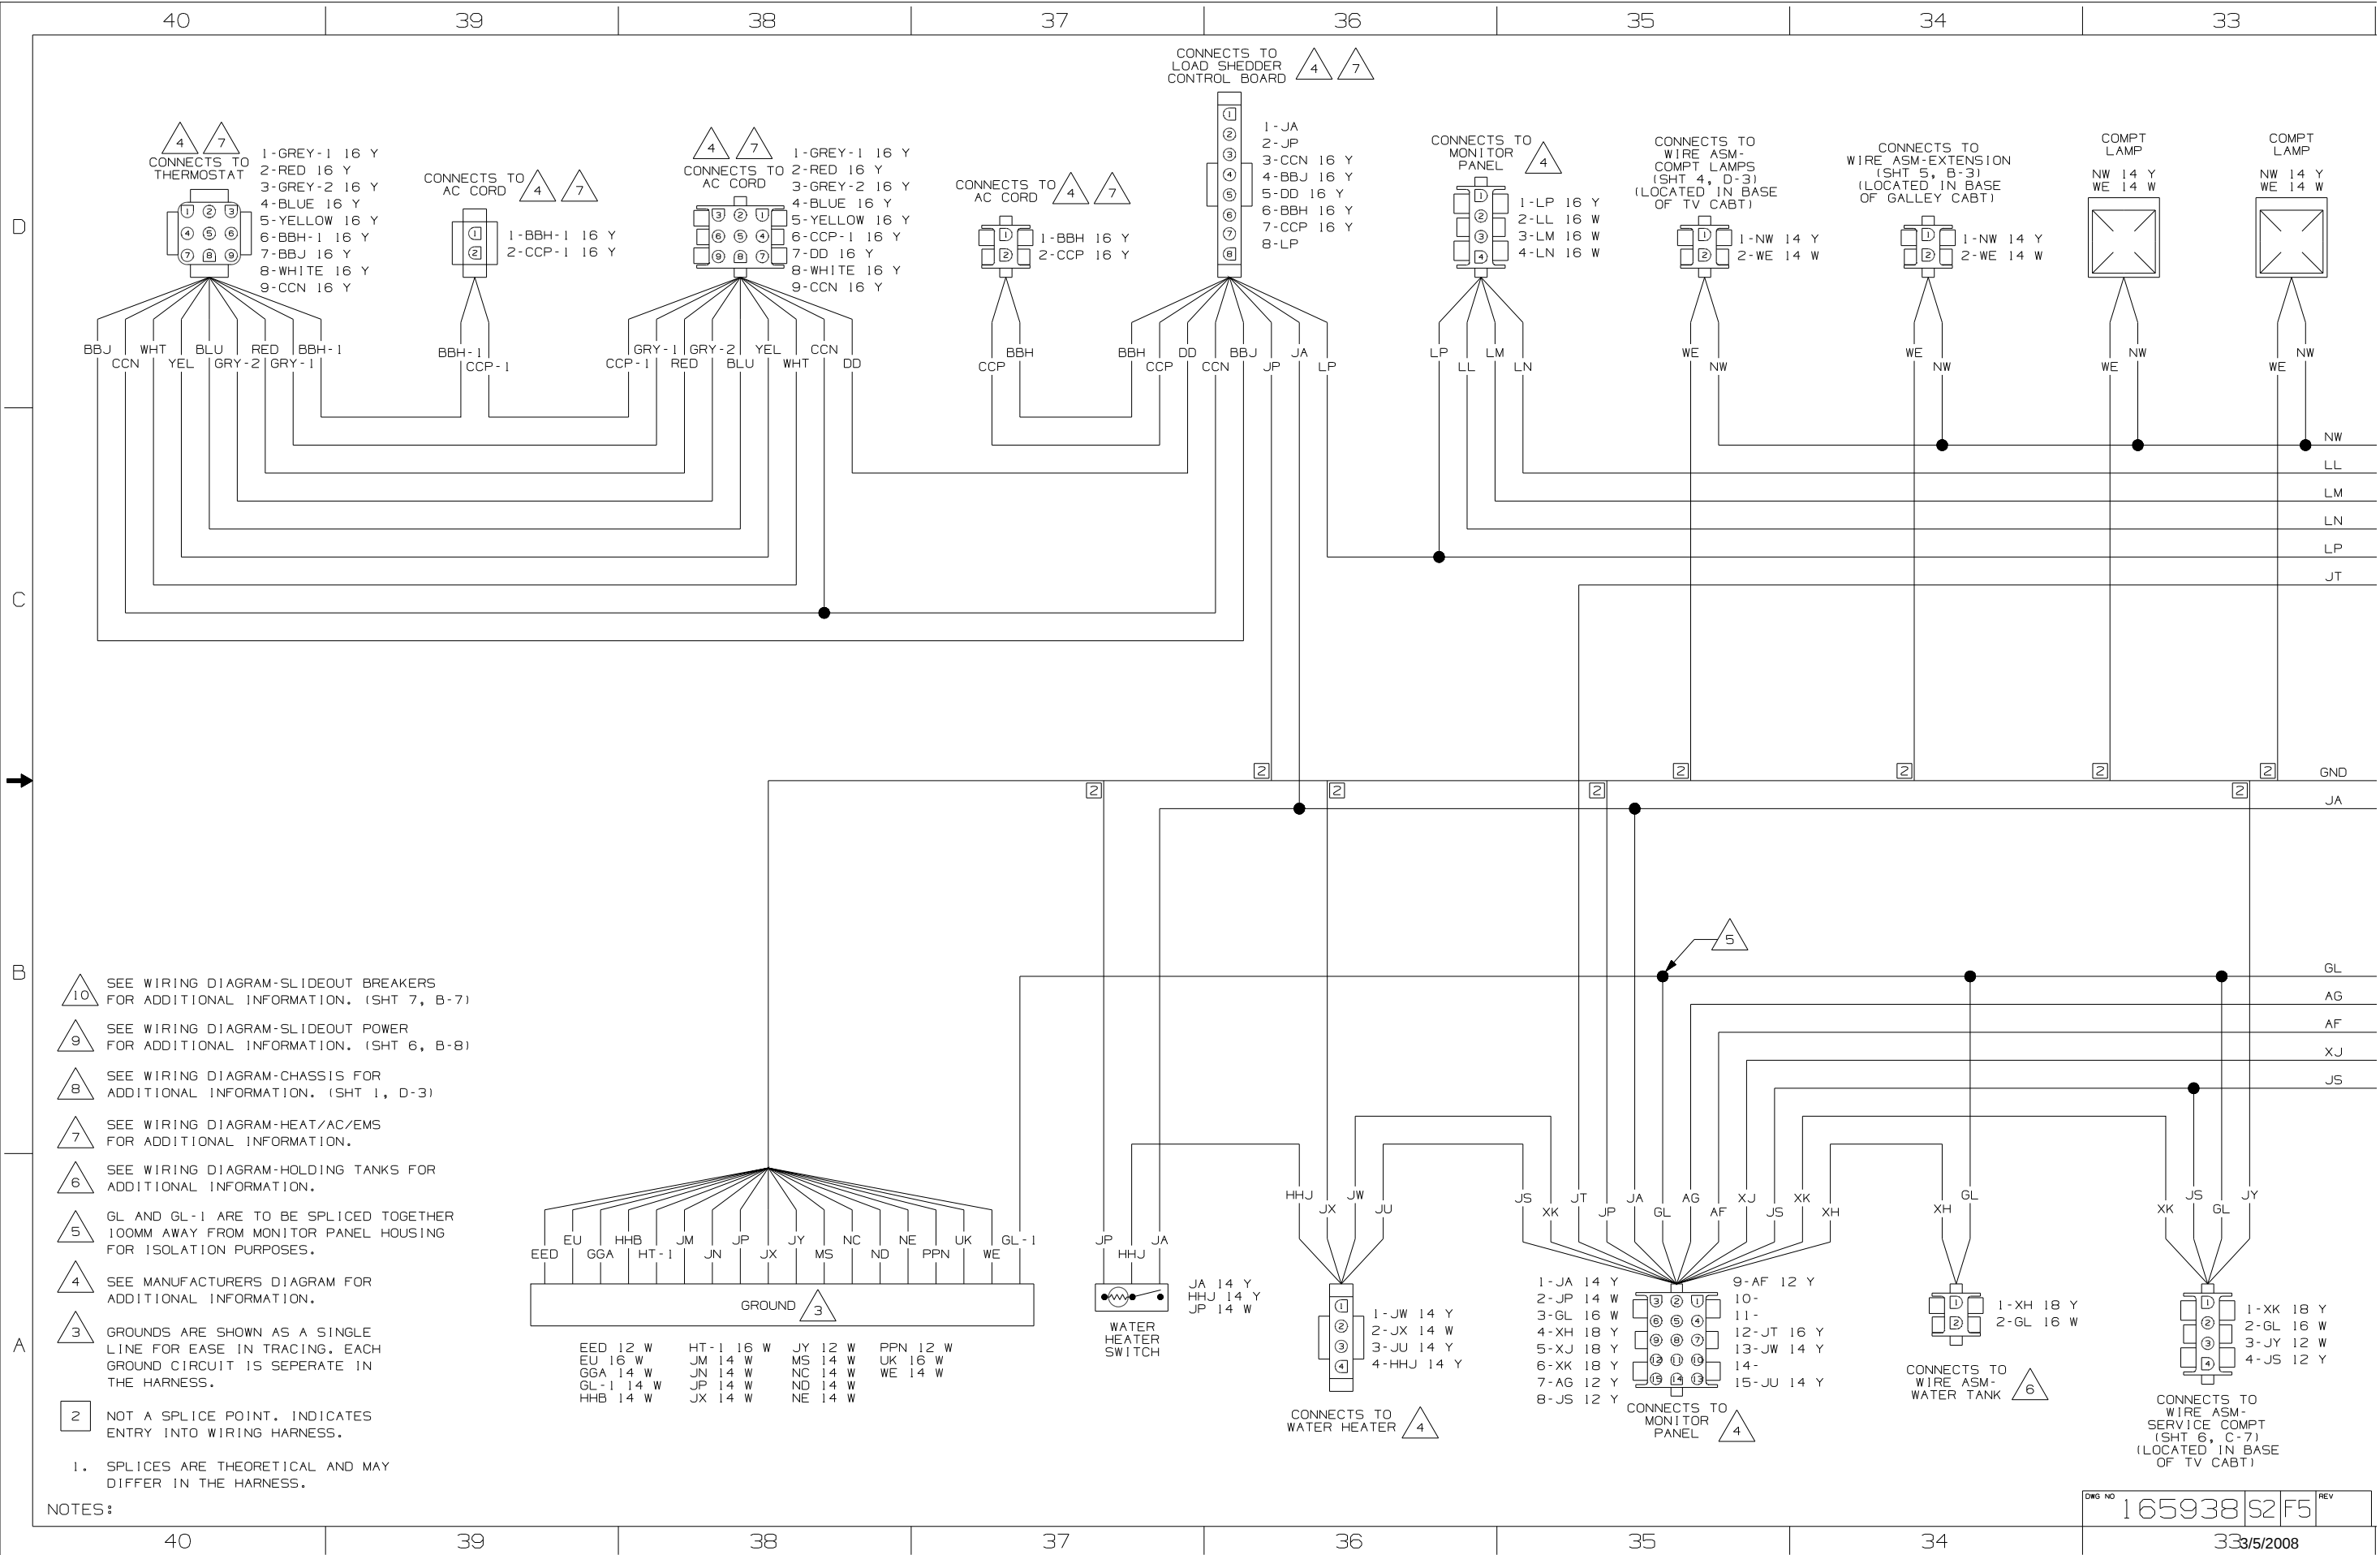

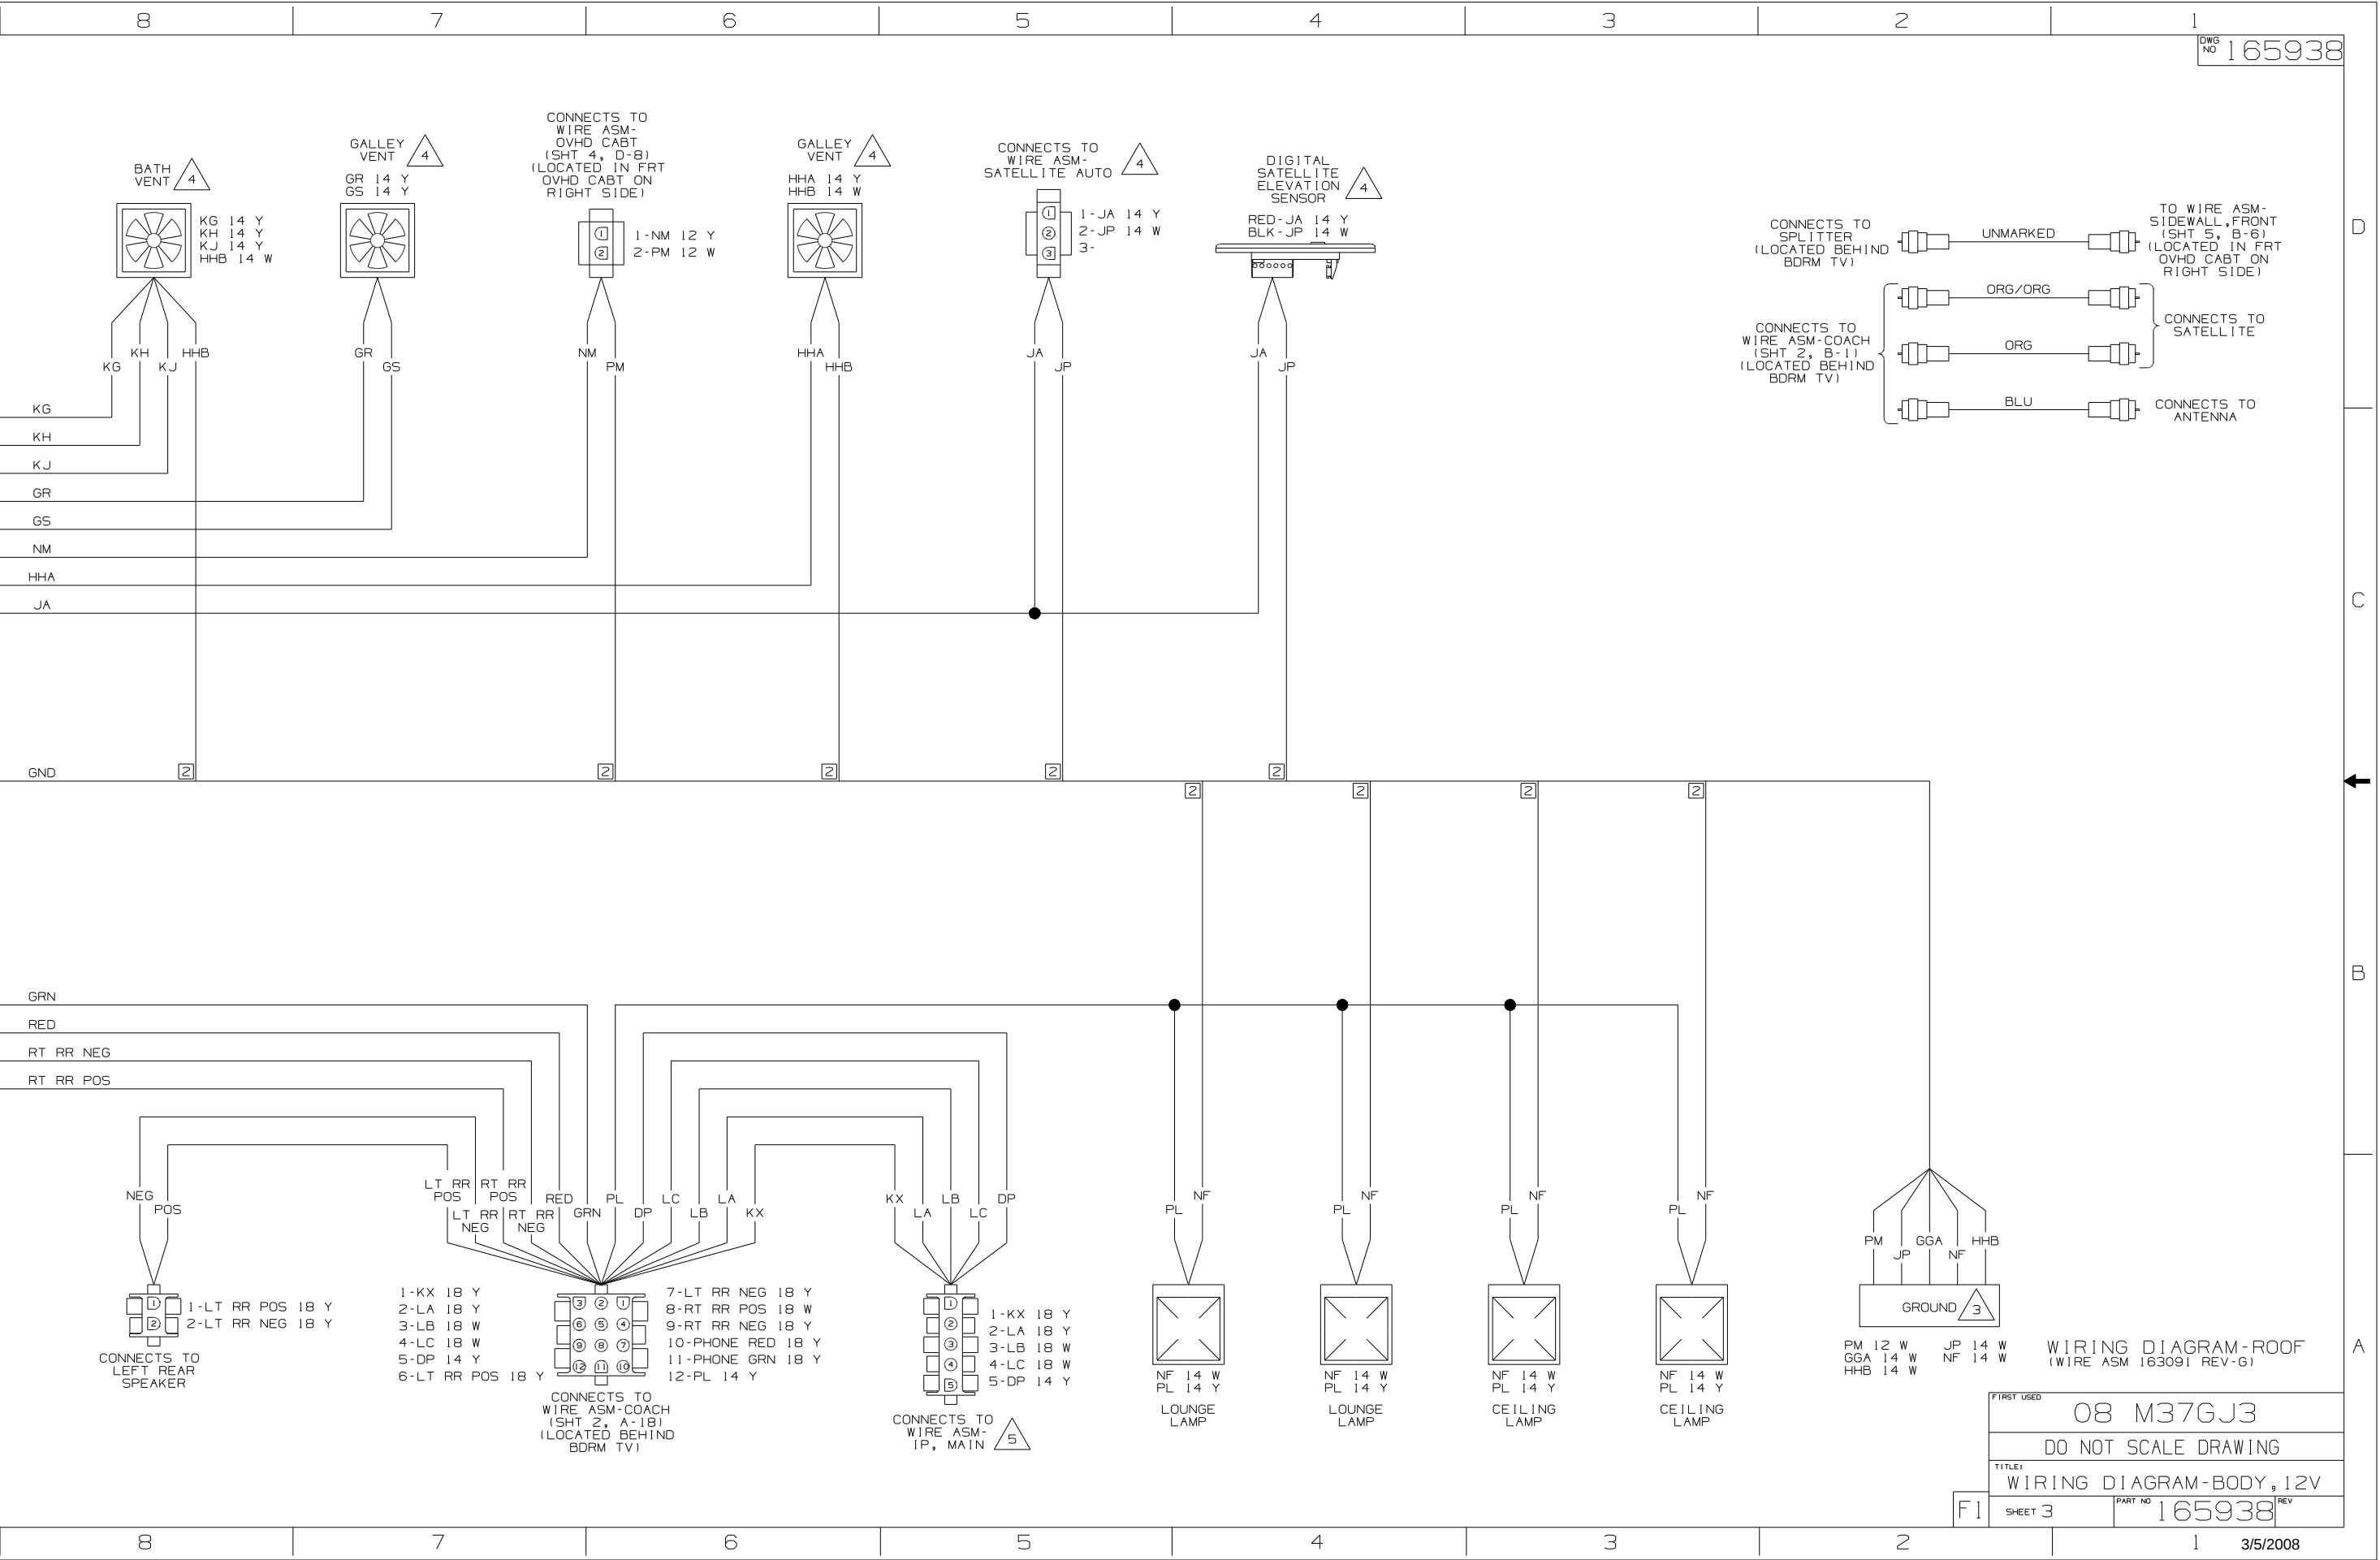

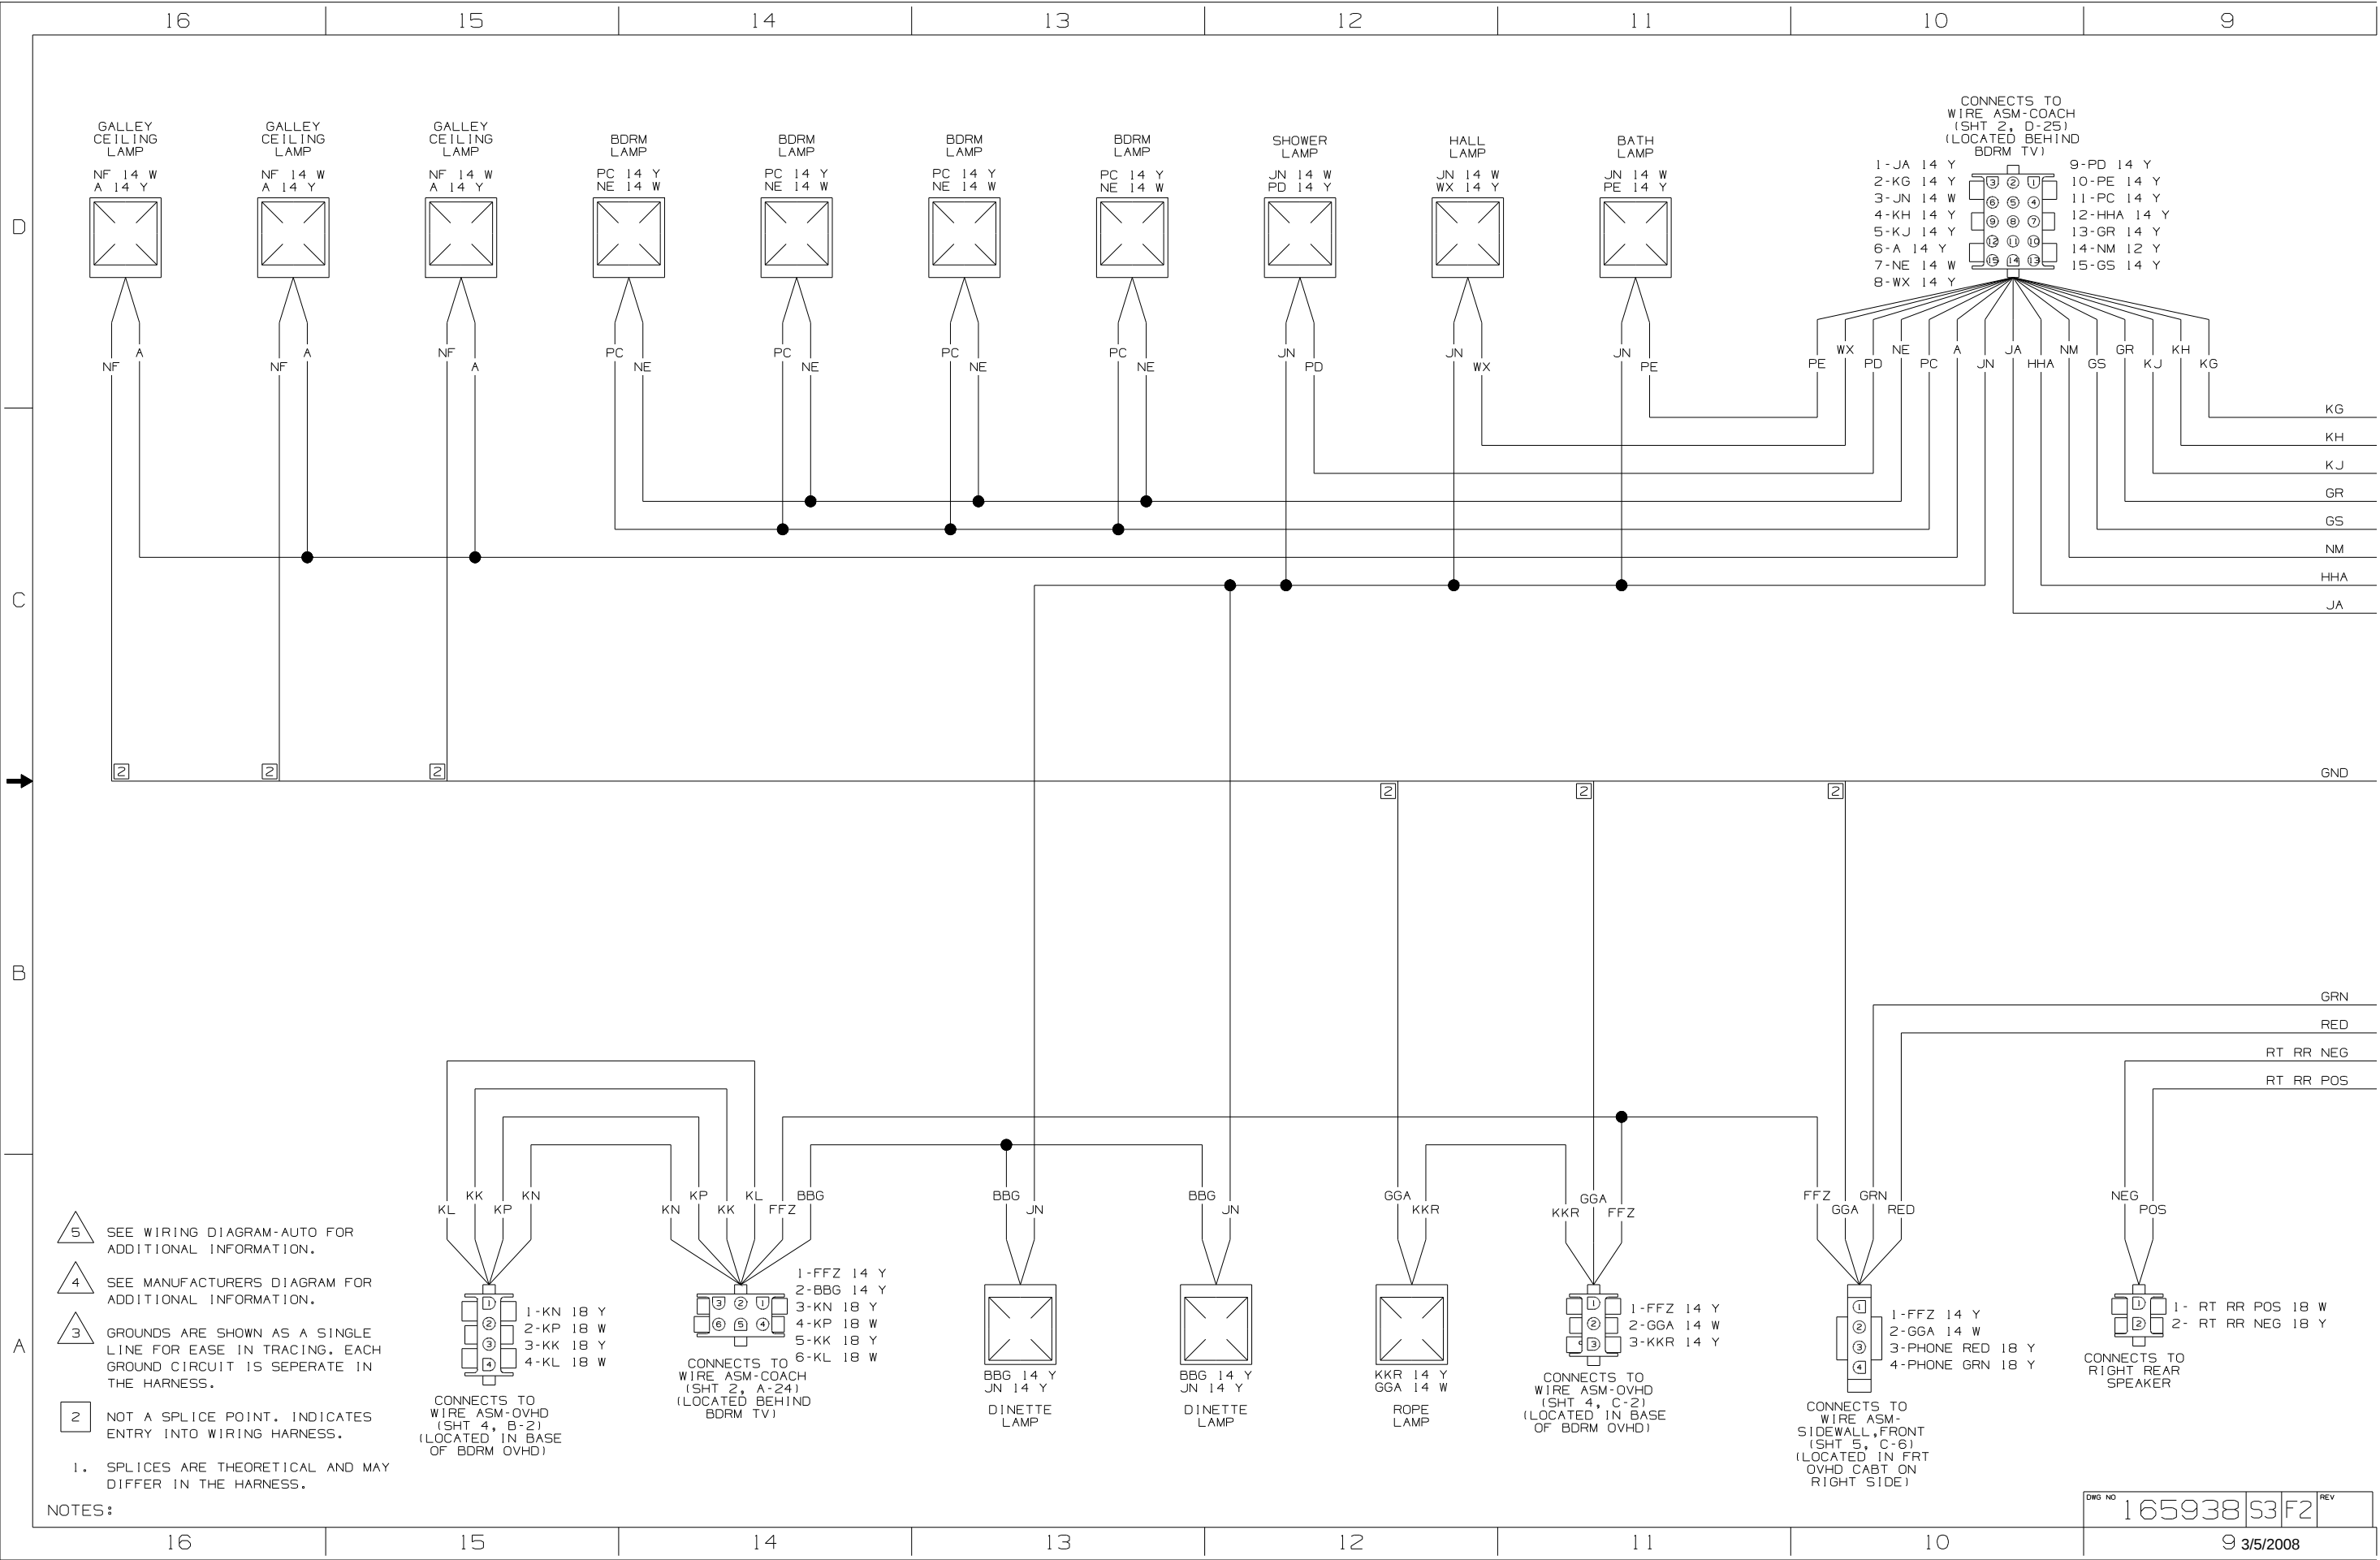

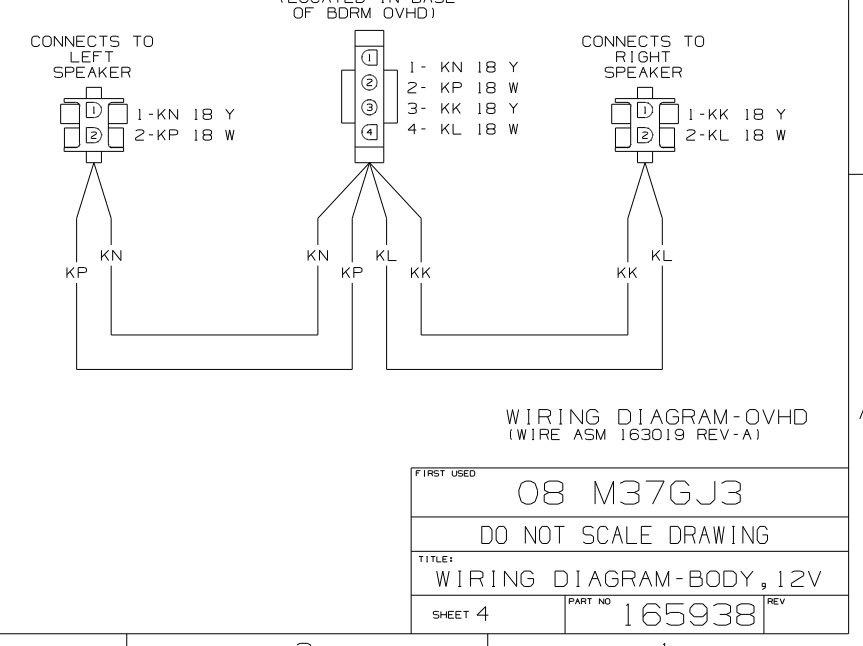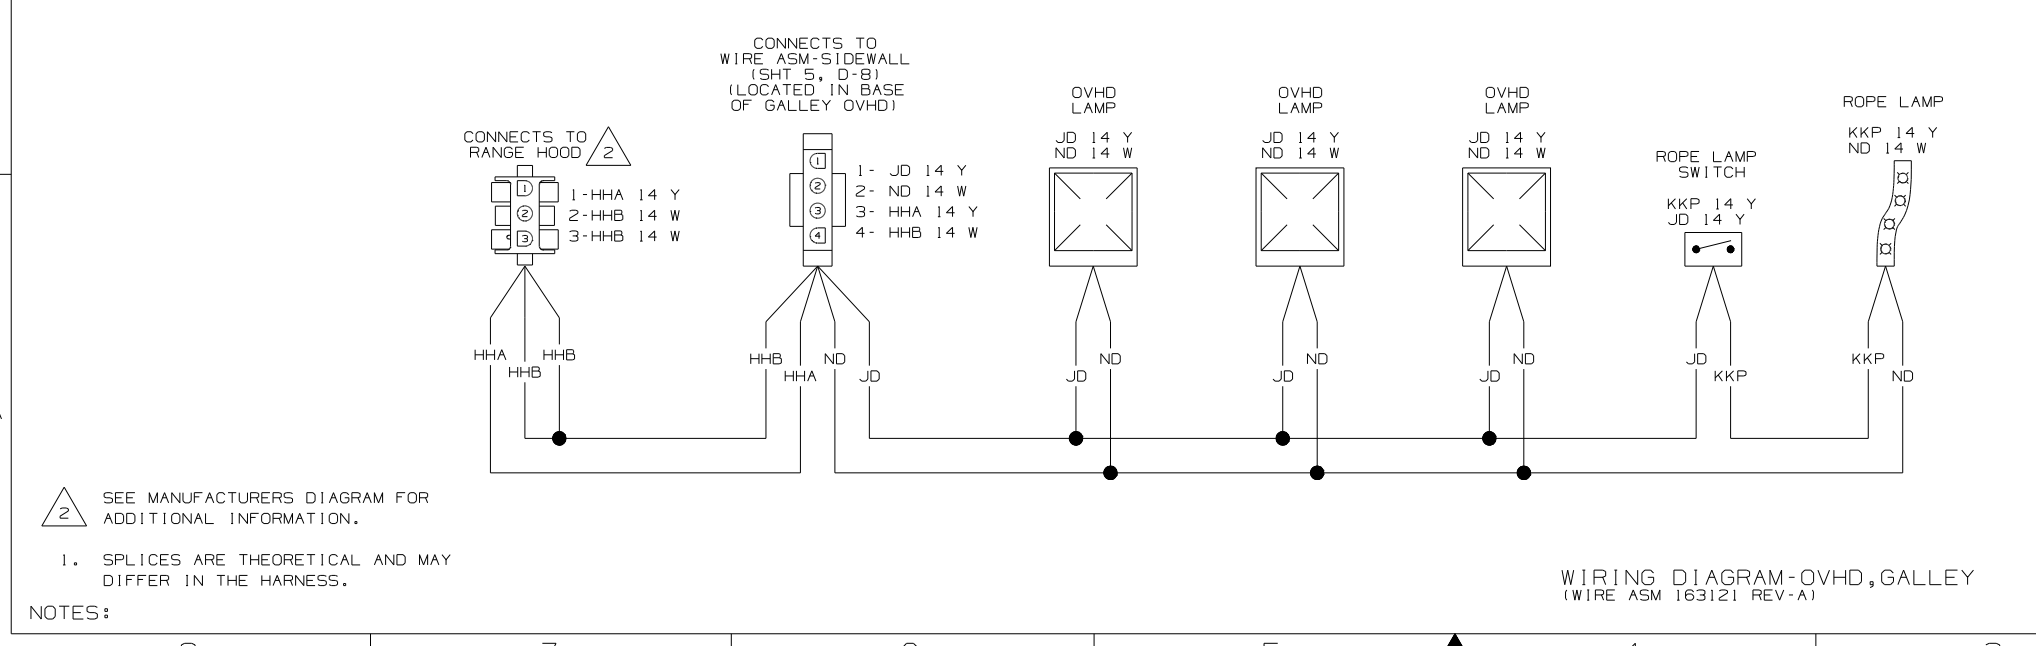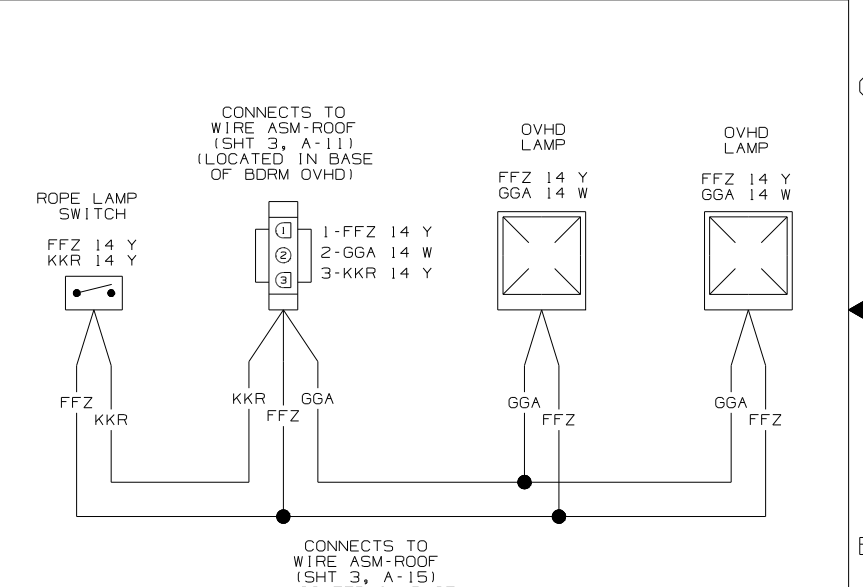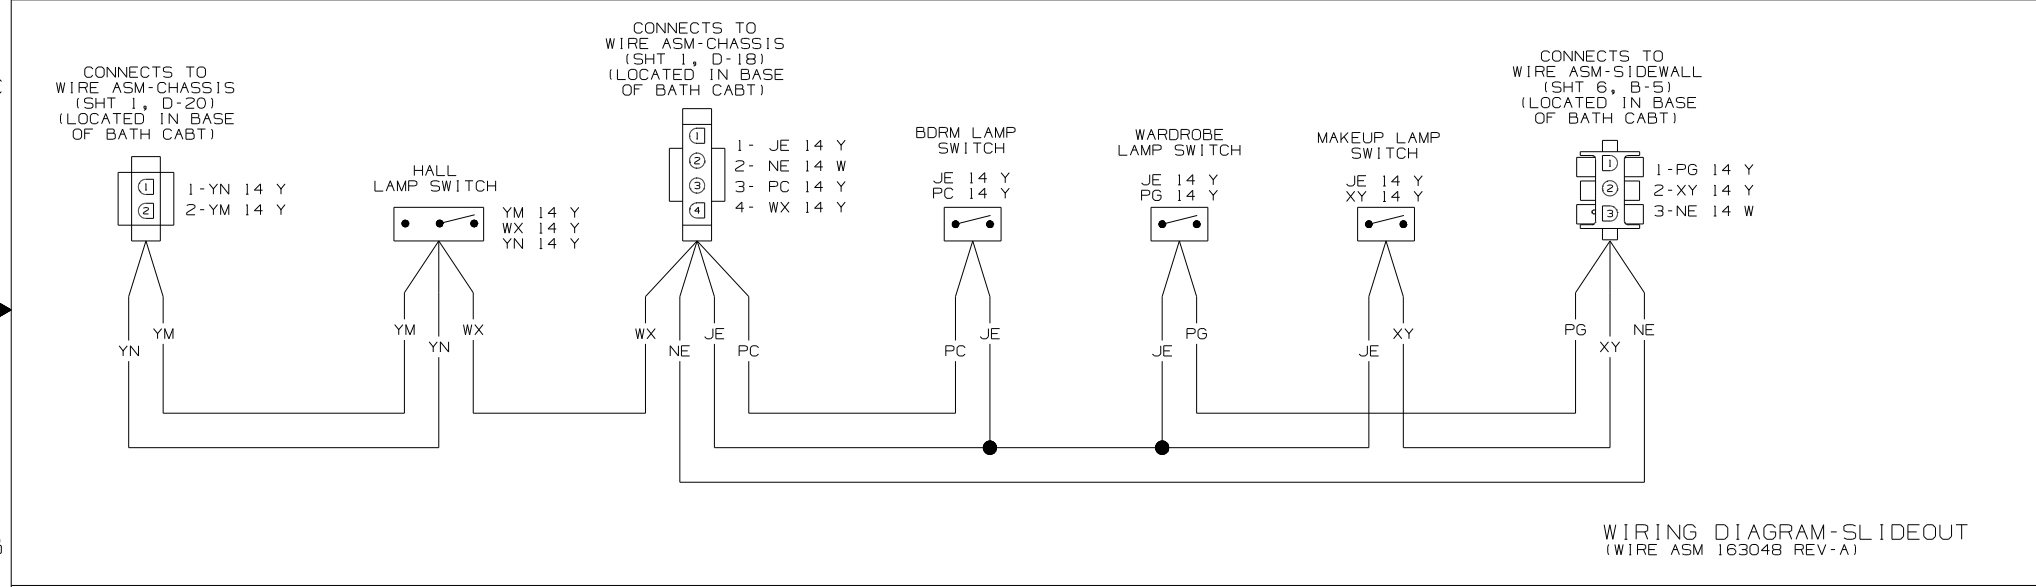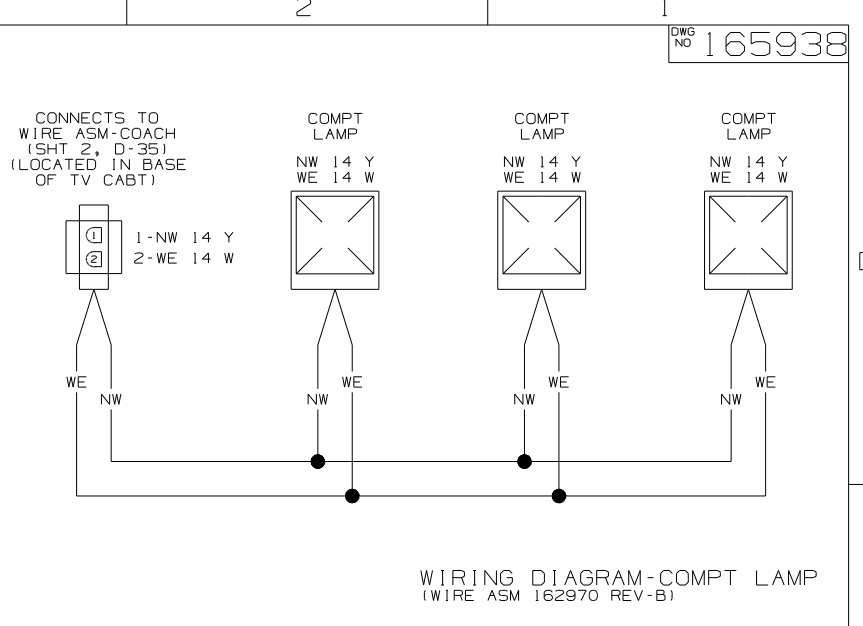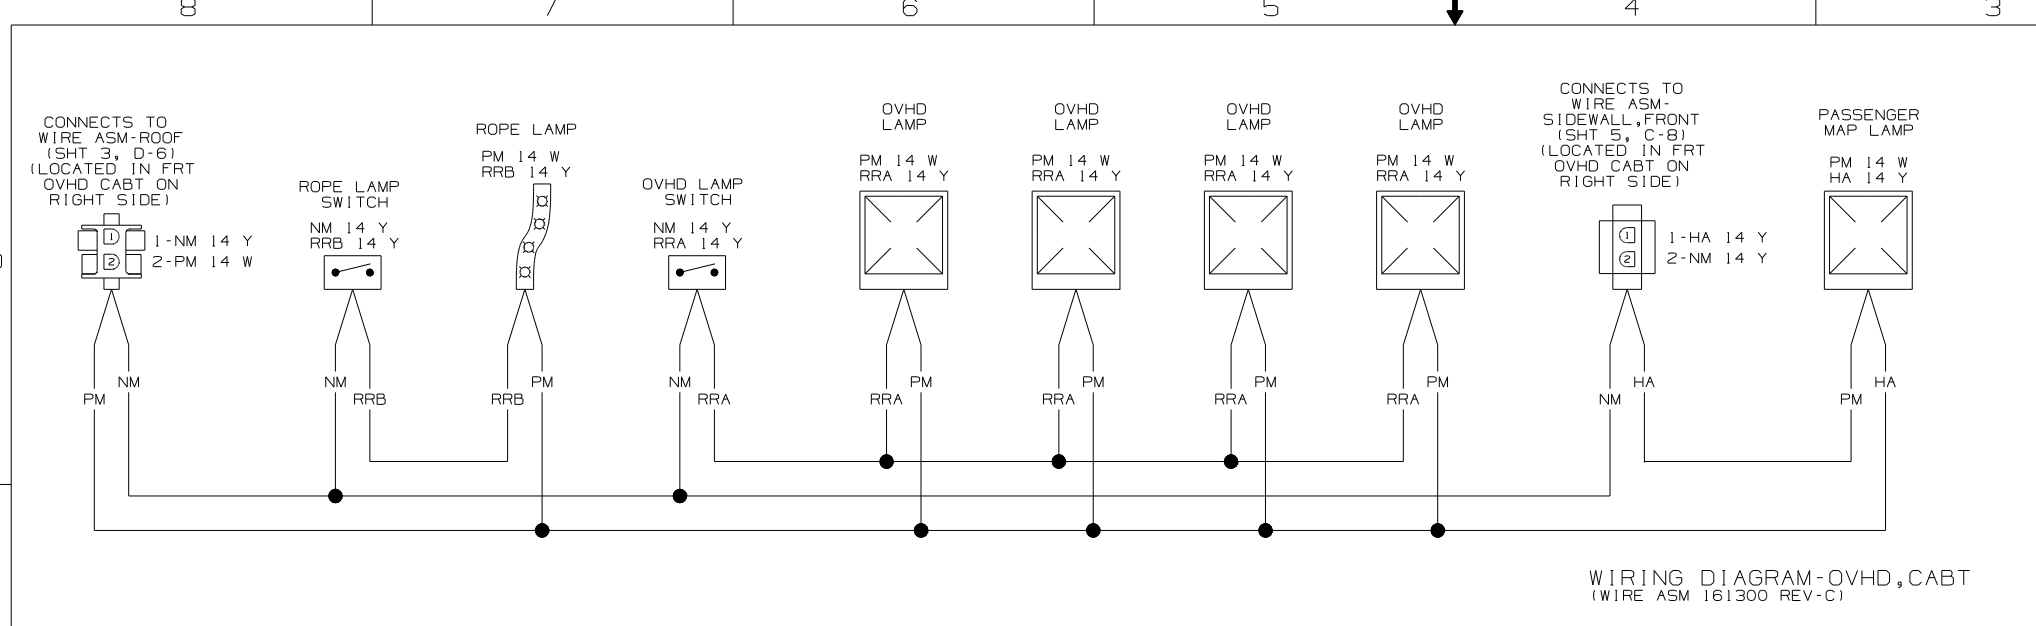


2 SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.


1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

NOTES:


FIRST USED		08 M37GJ3	
		DO NOT SCALE DRAWING	
TITLE:		WIRING DIAGRAM-BODY, 12V	
SHEET 4		PART NO	165938
		REV	

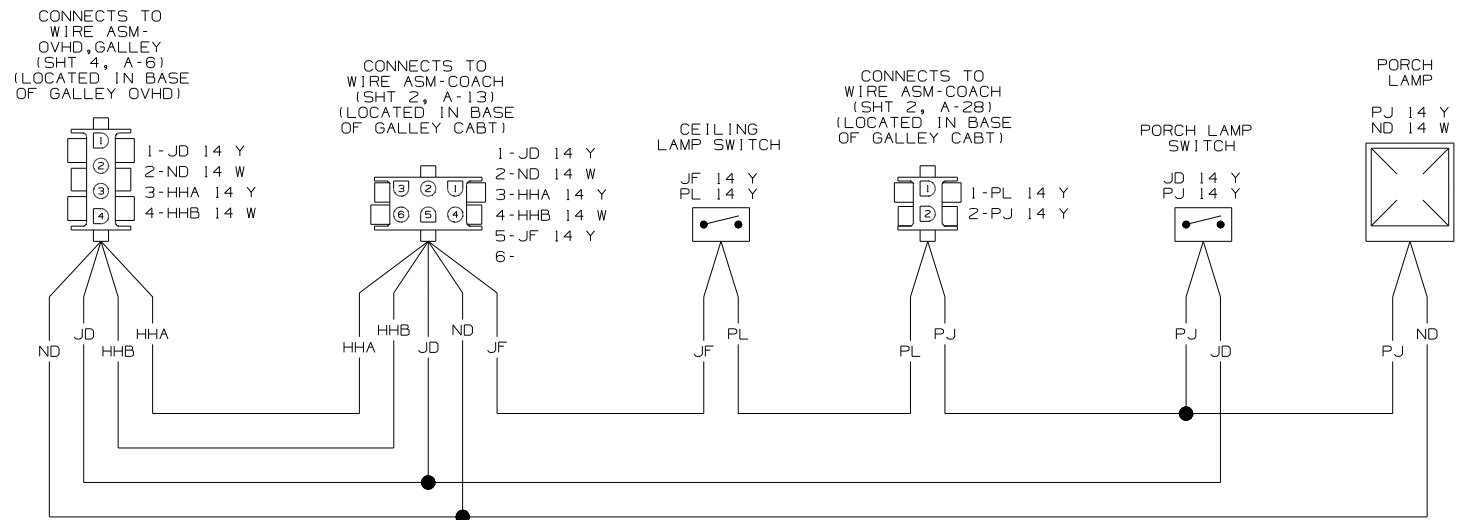


WIRING DIAGRAM-SIDEWALL
(WIRE ASM 163010 REV-A)

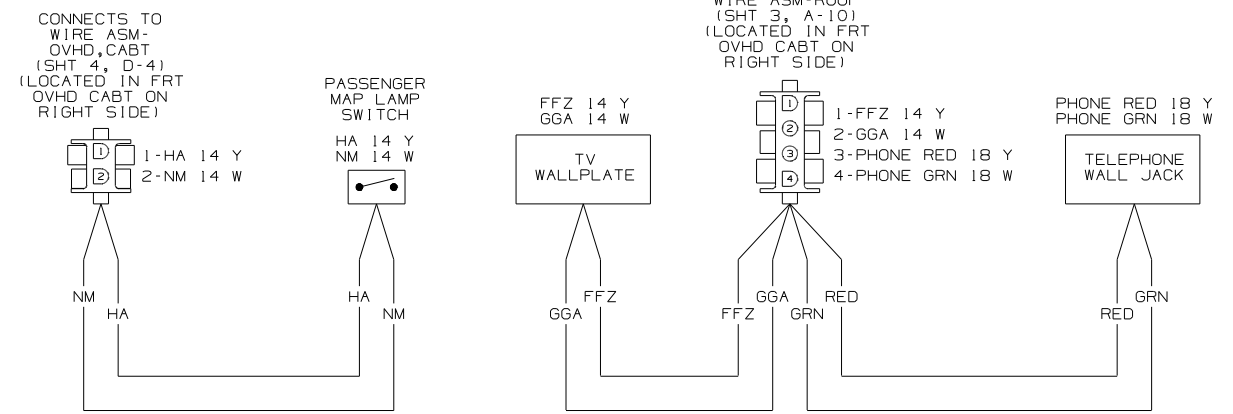



WIRING DIAGRAM-SIDEWALL, FRONT
(WIRE ASM 161504 REV-B)

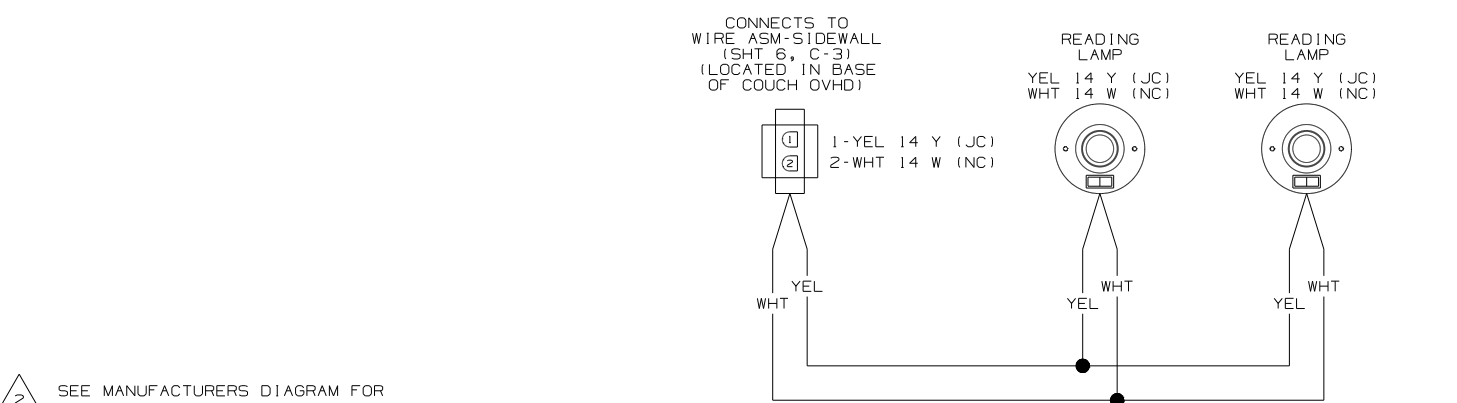


WIRING DIAGRAM-OVHD LAMPS
(WIRE ASM 133574 REV-G)

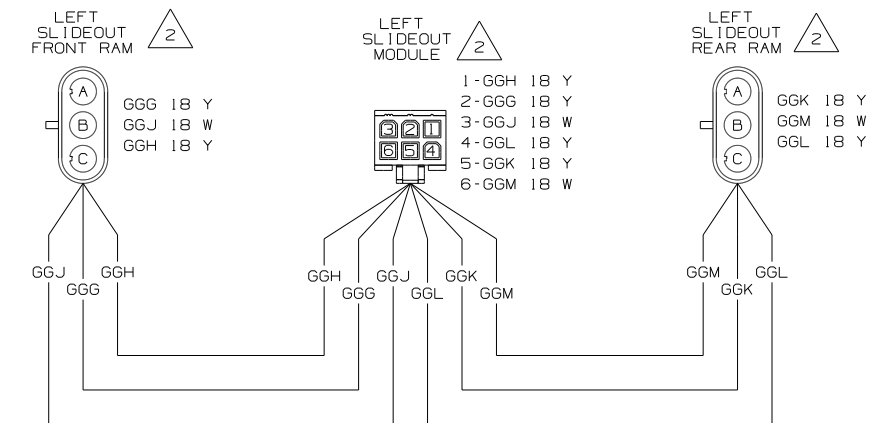

WIRING DIAGRAM-SLIDEOUT RAMS, LEFT
(WIRE ASM 163106 REV-B)

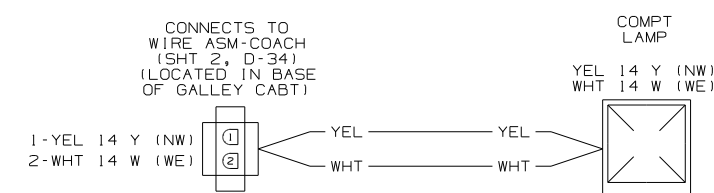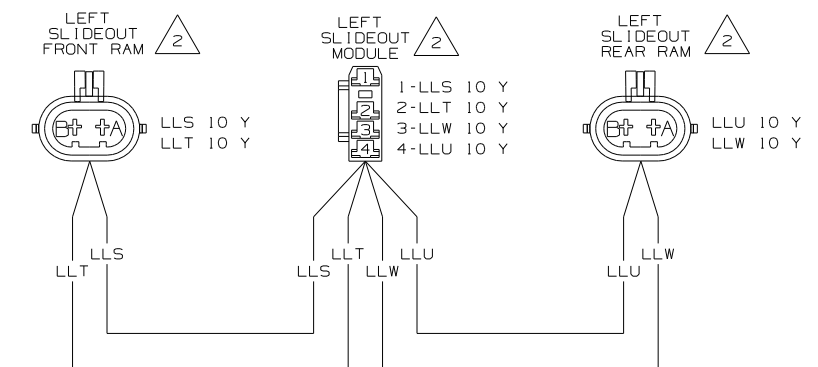

WIRING DIAGRAM-EXTENSION, 2 PIN
(WIRE ASM 133572 REV-G)






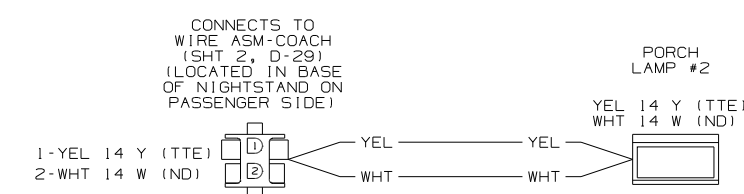


WIRING DIAGRAM-EXTENSION, 2 PIN
(WIRE ASM 149130 REV-D)

NOTES:

1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.

FIRST USED		08 M37GJ3	
DO NOT SCALE DRAWING			
TITLE: WIRING DIAGRAM-BODY, 12V			
SHEET 5	PART NO	165938	REV

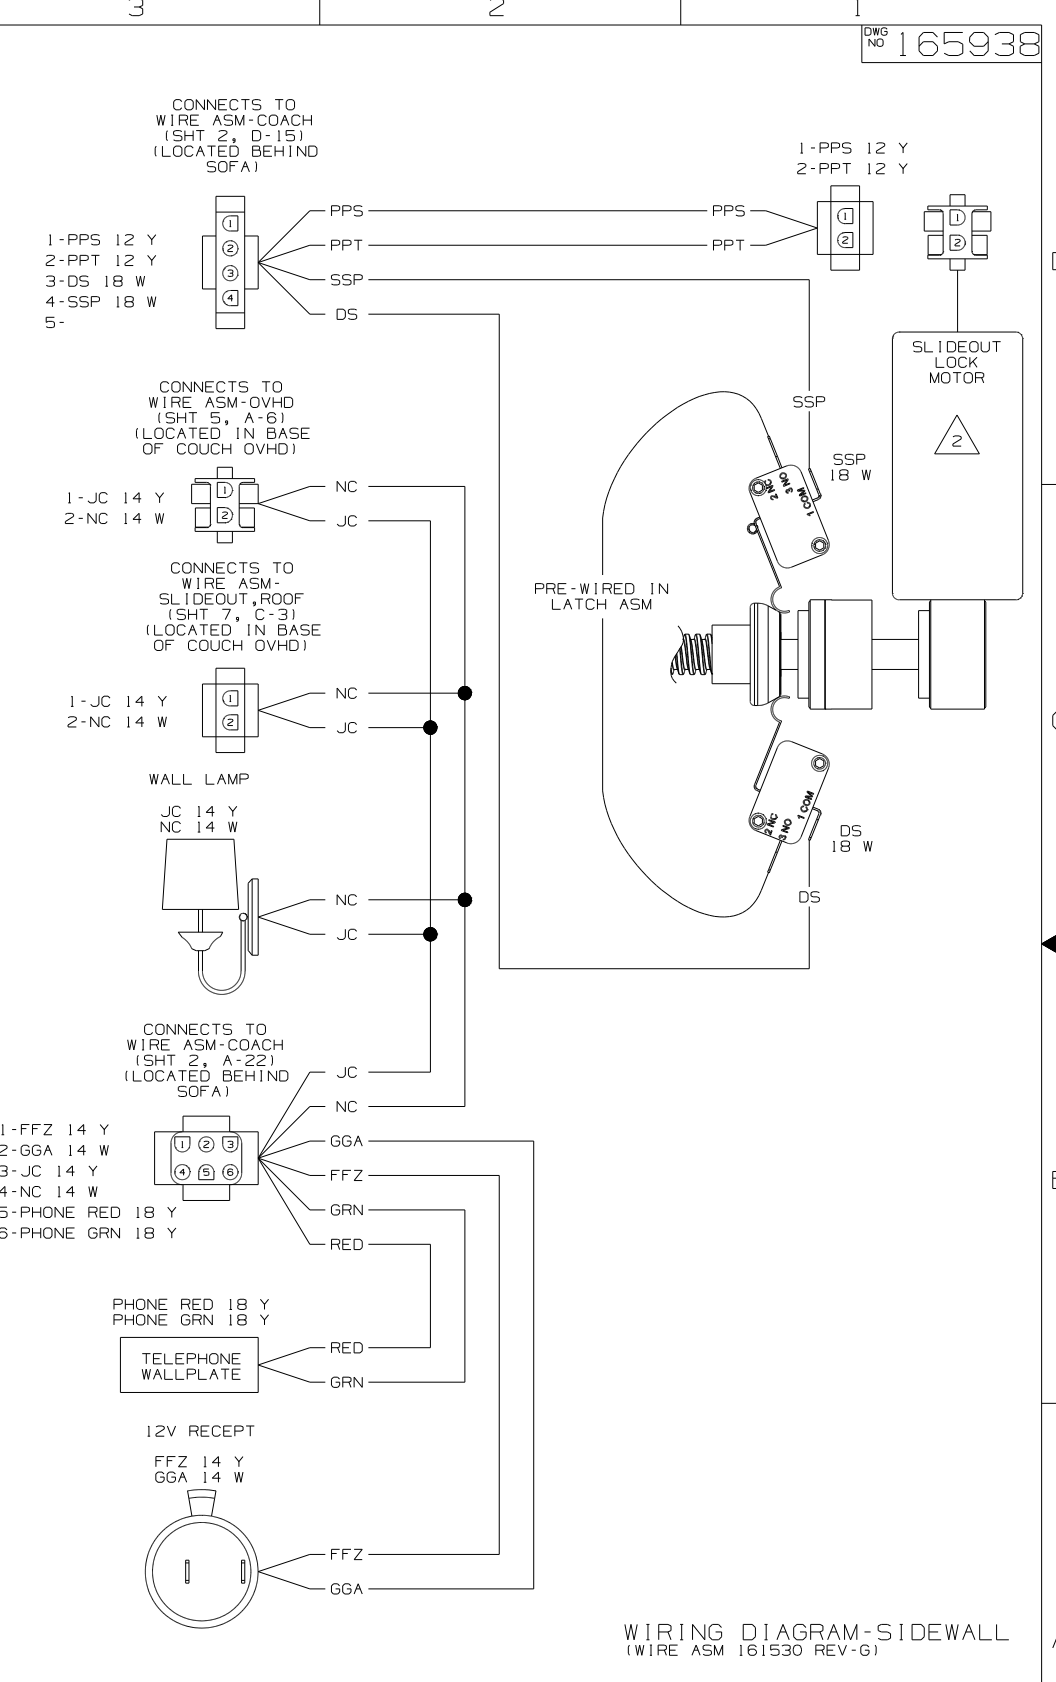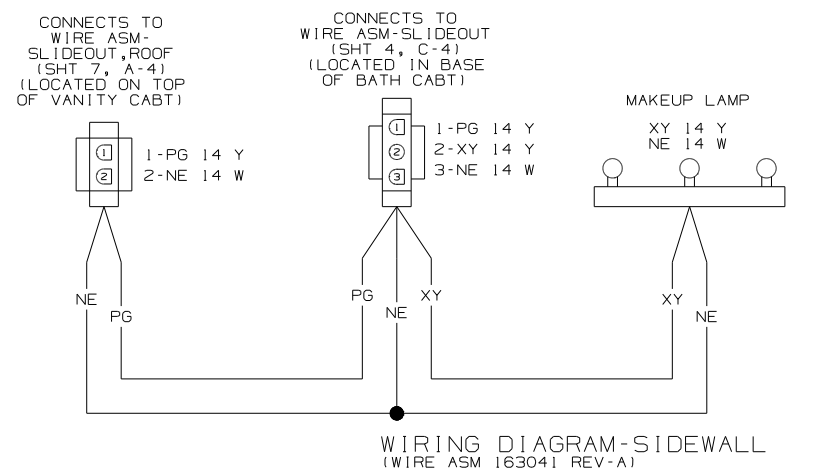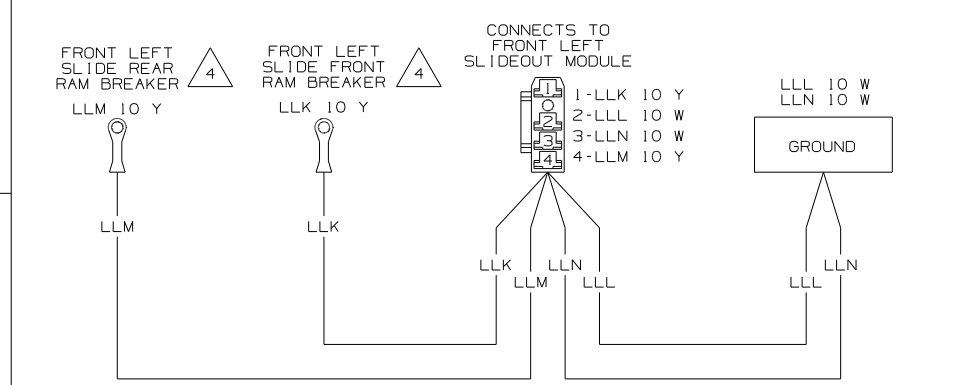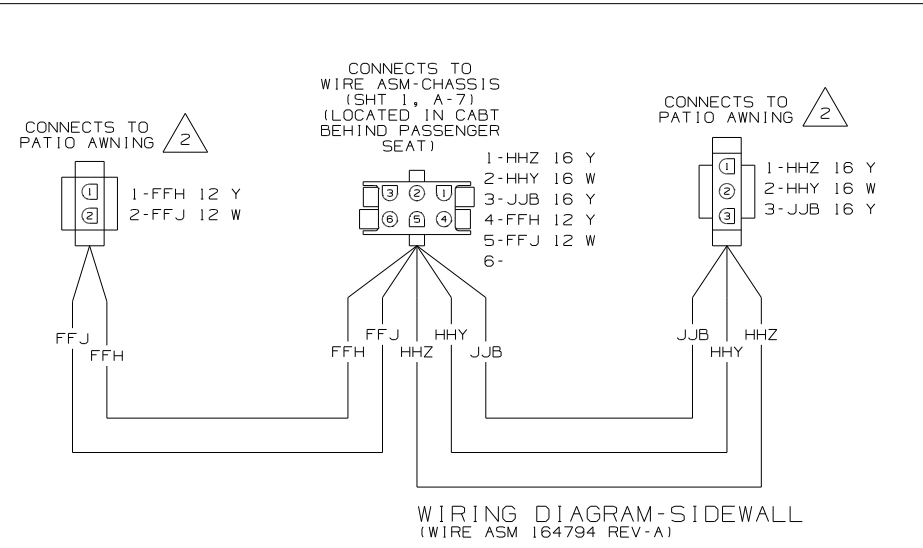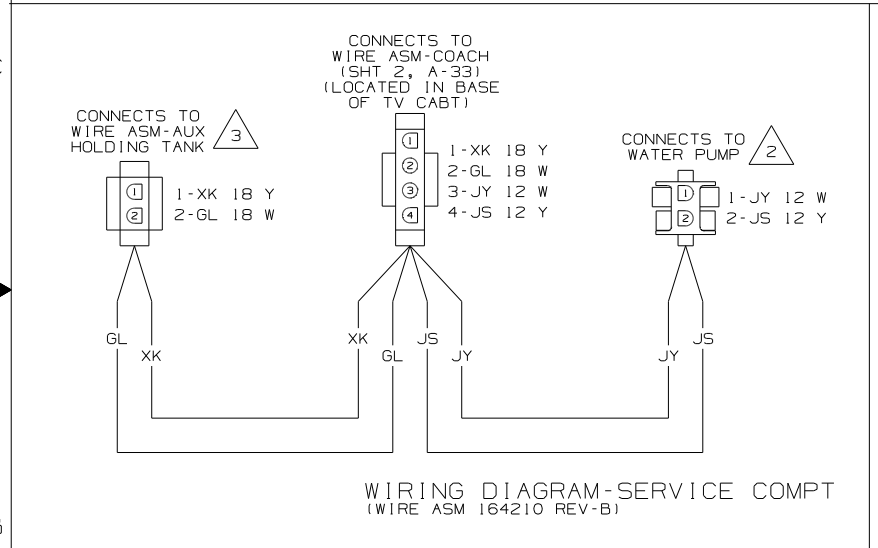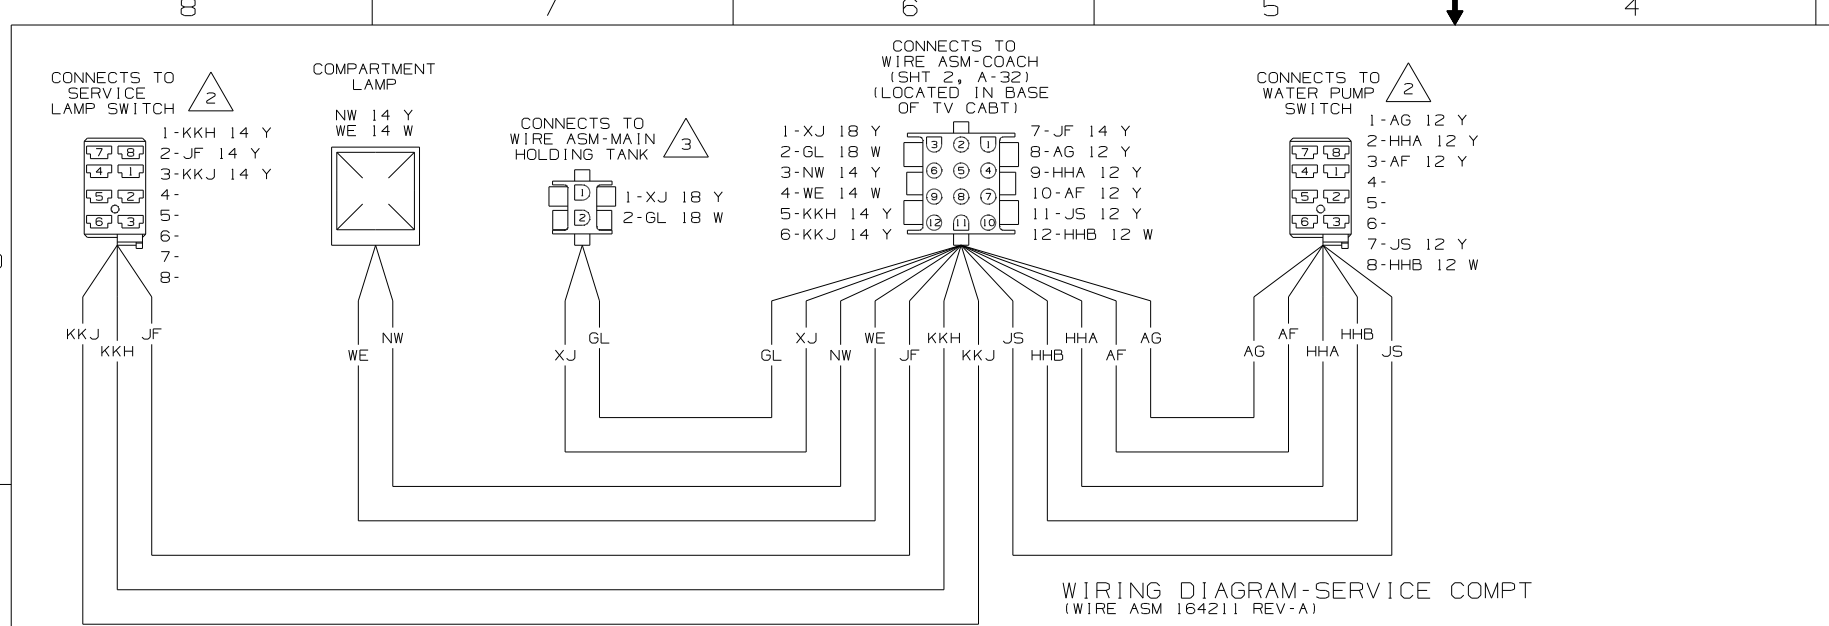


4 SEE WIRING DIAGRAM-CHASSIS FOR ADDITIONAL INFORMATION.

3 SEE WIRING DIAGRAM-HOLDING TANKS FOR ADDITIONAL INFORMATION.


2 SEE MANUFACTURERS DIAGRAM FOR ADDITIONAL INFORMATION.

1. SPLICES ARE THEORETICAL AND MAY DIFFER IN THE HARNESS.


NOTES:

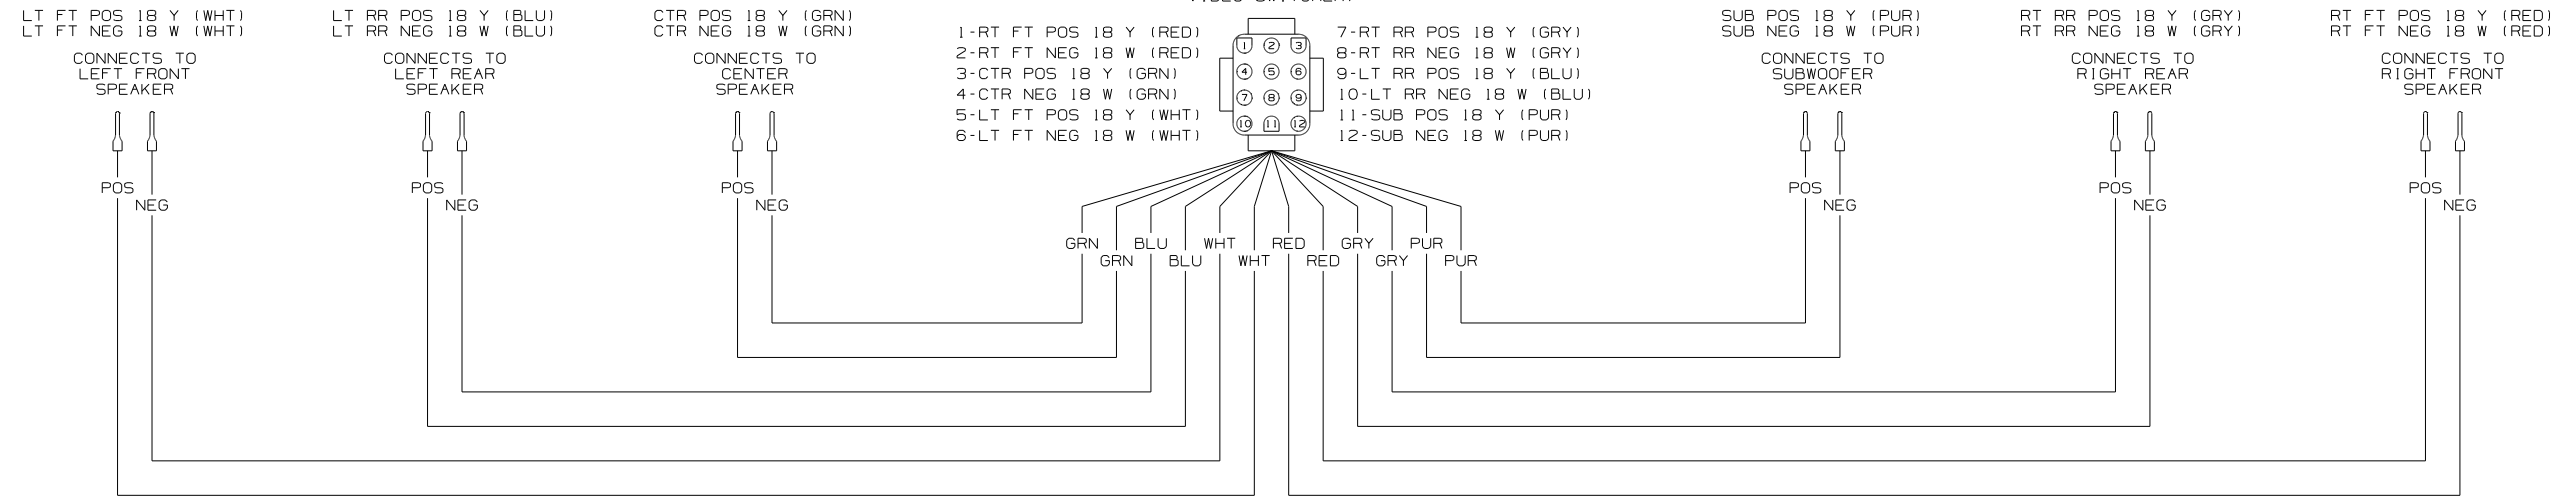


WIRING DIAGRAM JUMPER, SPEAKER
(WIRE ASM 153349-08 REV-N)

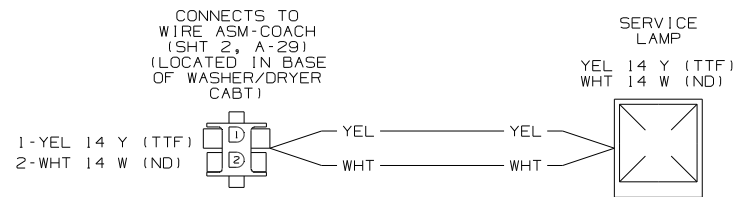


WIRING DIAGRAM-EXTENSION, 2 PIN
(WIRE ASM 149130 REV-D)

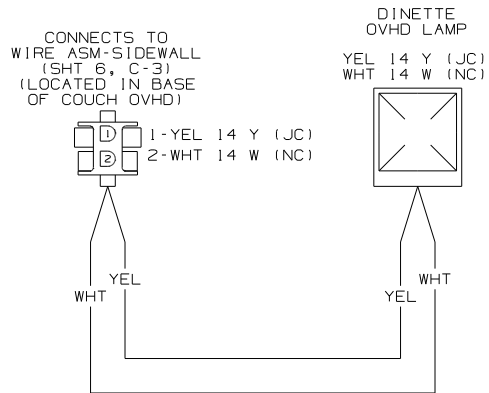

WIRING DIAGRAM-SLIDEOUT ROOF
(WIRE ASM 149130-01 REV-H)

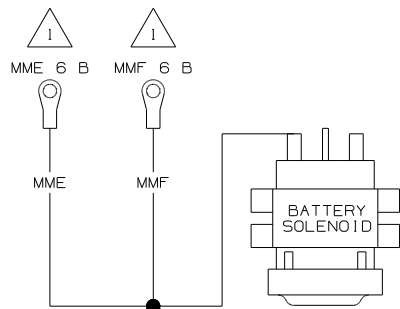

WIRING DIAGRAM-SLIDEOUT BREAKERS
(WIRE ASM 148561 REV-E)

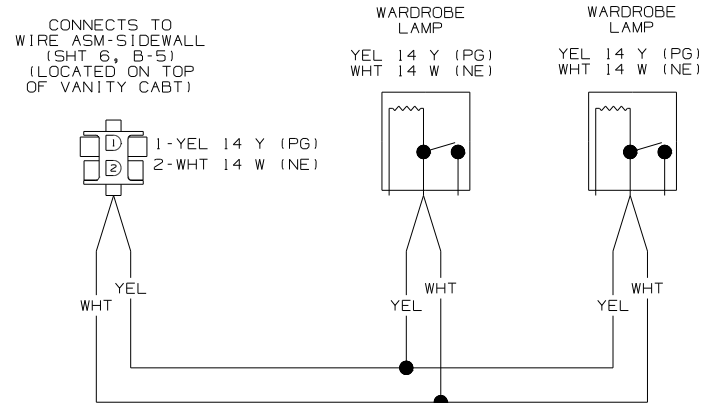

WIRING DIAGRAM-SLIDEOUT ROOF
(WIRE ASM 154747-05 REV-H)


SEE WIRING DIAGRAM-CHASSIS
FOR ADDITIONAL INFORMATION.

NOTES:

FIRST USED	08 M37G		
TITLE	DO NOT SCALE DRAWING		
SHEET 7	PART NO	165938	REV


CONNECTS TO
WIRE ASM-SOFA,
DBL REST EASY
(SHT 8, D-4)
(LOCATED BEHIND
SOFA)

1-GGT 12 Y
2-GGU 12 W
3-GGW 12 Y
4-EED 12 W




CONNECTS TO
FRONT RELAY

30-EEC 12 Y
85-EEJ 12 W
86-EEH 12 Y
87-
87A-GGW 12 Y



CONNECTS TO
REAR RELAY

30-EEC 12 Y
85-GGU 12 W
86-GGT 12 Y
87-
87A-GGV 12 Y



WIRING DIAGRAM-SOFA,DBL REST EASY
(WIRE ASM 139583-01 REV-F)

CONNECTS
TO RECLINER
SWITCH FRONT

1-(GRN)-EEH 12 W
2-(WHT)-EED 12 W
3-(RED)-GGV 12 Y
4-(WHT)-EED 12 W
5-(BLK)-EEJ 12 Y

CONNECTS TO
WIRE ASM-COACH
(SHT 2, D-8)
(LOCATED BEHIND
SOFA)

1-EEC 12 Y
2-EED 12 W

CONNECTS TO
FRONT MOTOR WIRING
(LOCATED BEHIND SOFA)


1-EEH 12 Y
2-EEJ 12 W

CONNECTS TO
HEAT/VIBRATOR WIRES
(LOCATED BEHIND SOFA)

EEC 14 YEL
EED 14 WHT

CONNECTS TO
WIRE ASM-SOFA,
DBL REST EASY
(SHT 8, D-8)
(LOCATED BEHIND
SOFA)

1-GGT 12 Y
2-GGU 12 W
3-GGW 12 Y
4-EED 12 W



CONNECTS
TO RECLINER
SWITCH REAR

1-(GRN)-GGT 12 W
2-(WHT)-EED 12 W
3-(RED)-GGW 12 Y
4-(WHT)-EED 12 W
5-(BLK)-GGU 12 Y

CONNECTS TO
REAR MOTOR WIRING
(LOCATED BEHIND
SOFA)

1-GGT 12 YEL
2-GGU 12 WHT

WIRING DIAGRAM-SOFA,DBL REST EASY
(WIRE ASM 139583-02 REV-F)

CONNECTS TO
MOTOR WIRING
(LOCATED
BEHIND SOFA)

1-EEH 12 Y
2-EEJ 12 Y



CONNECTS
TO RECLINER
SWITCH REAR

1-(GRN)-EEJ 12 Y
2-(WHT)-EED 12 W
3-(RED)-EEC 12 Y
4-(WHT)-EED 12 W
5-(BLK)-EEH 12 Y

1-EEC 12 Y
2-EED 12 W

CONNECTS TO
WIRE ASM-COACH
(SHT 2, D-8)
(LOCATED BEHIND
SOFA)

WIRING DIAGRAM-SOFA,REST EASY
(WIRE ASM 136028 REV-B)

SEE MANUFACTURERS DIAGRAM FOR
ADDITIONAL INFORMATION.

1. SPLICES ARE THEORETICAL AND MAY
DIFFER IN THE HARNESS.

NOTES:

FIRST USED		08 M37GJ3	
TITLE:		DO NOT SCALE DRAWING	
SHEET 8		PART NO 165938	
REV		1 3/5/2008	