





DANGER

Danger of electrical shock, burns or death. Always remove all power sources before attempting any repair, service or diagnostic work. Power can be present from shore power, generator, inverter or battery. All power sources must be disabled and secured before performing any service.



CAUTION

If you lack the skills, tools or equipment to perform diagnostic or repair work leave such work to an authorized Winnebago Industries dealer or other qualified shop.

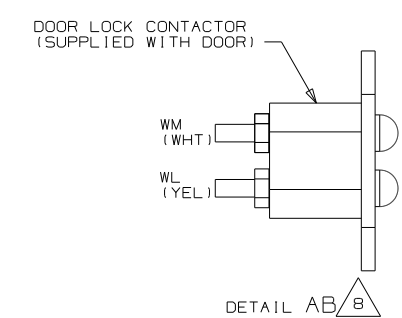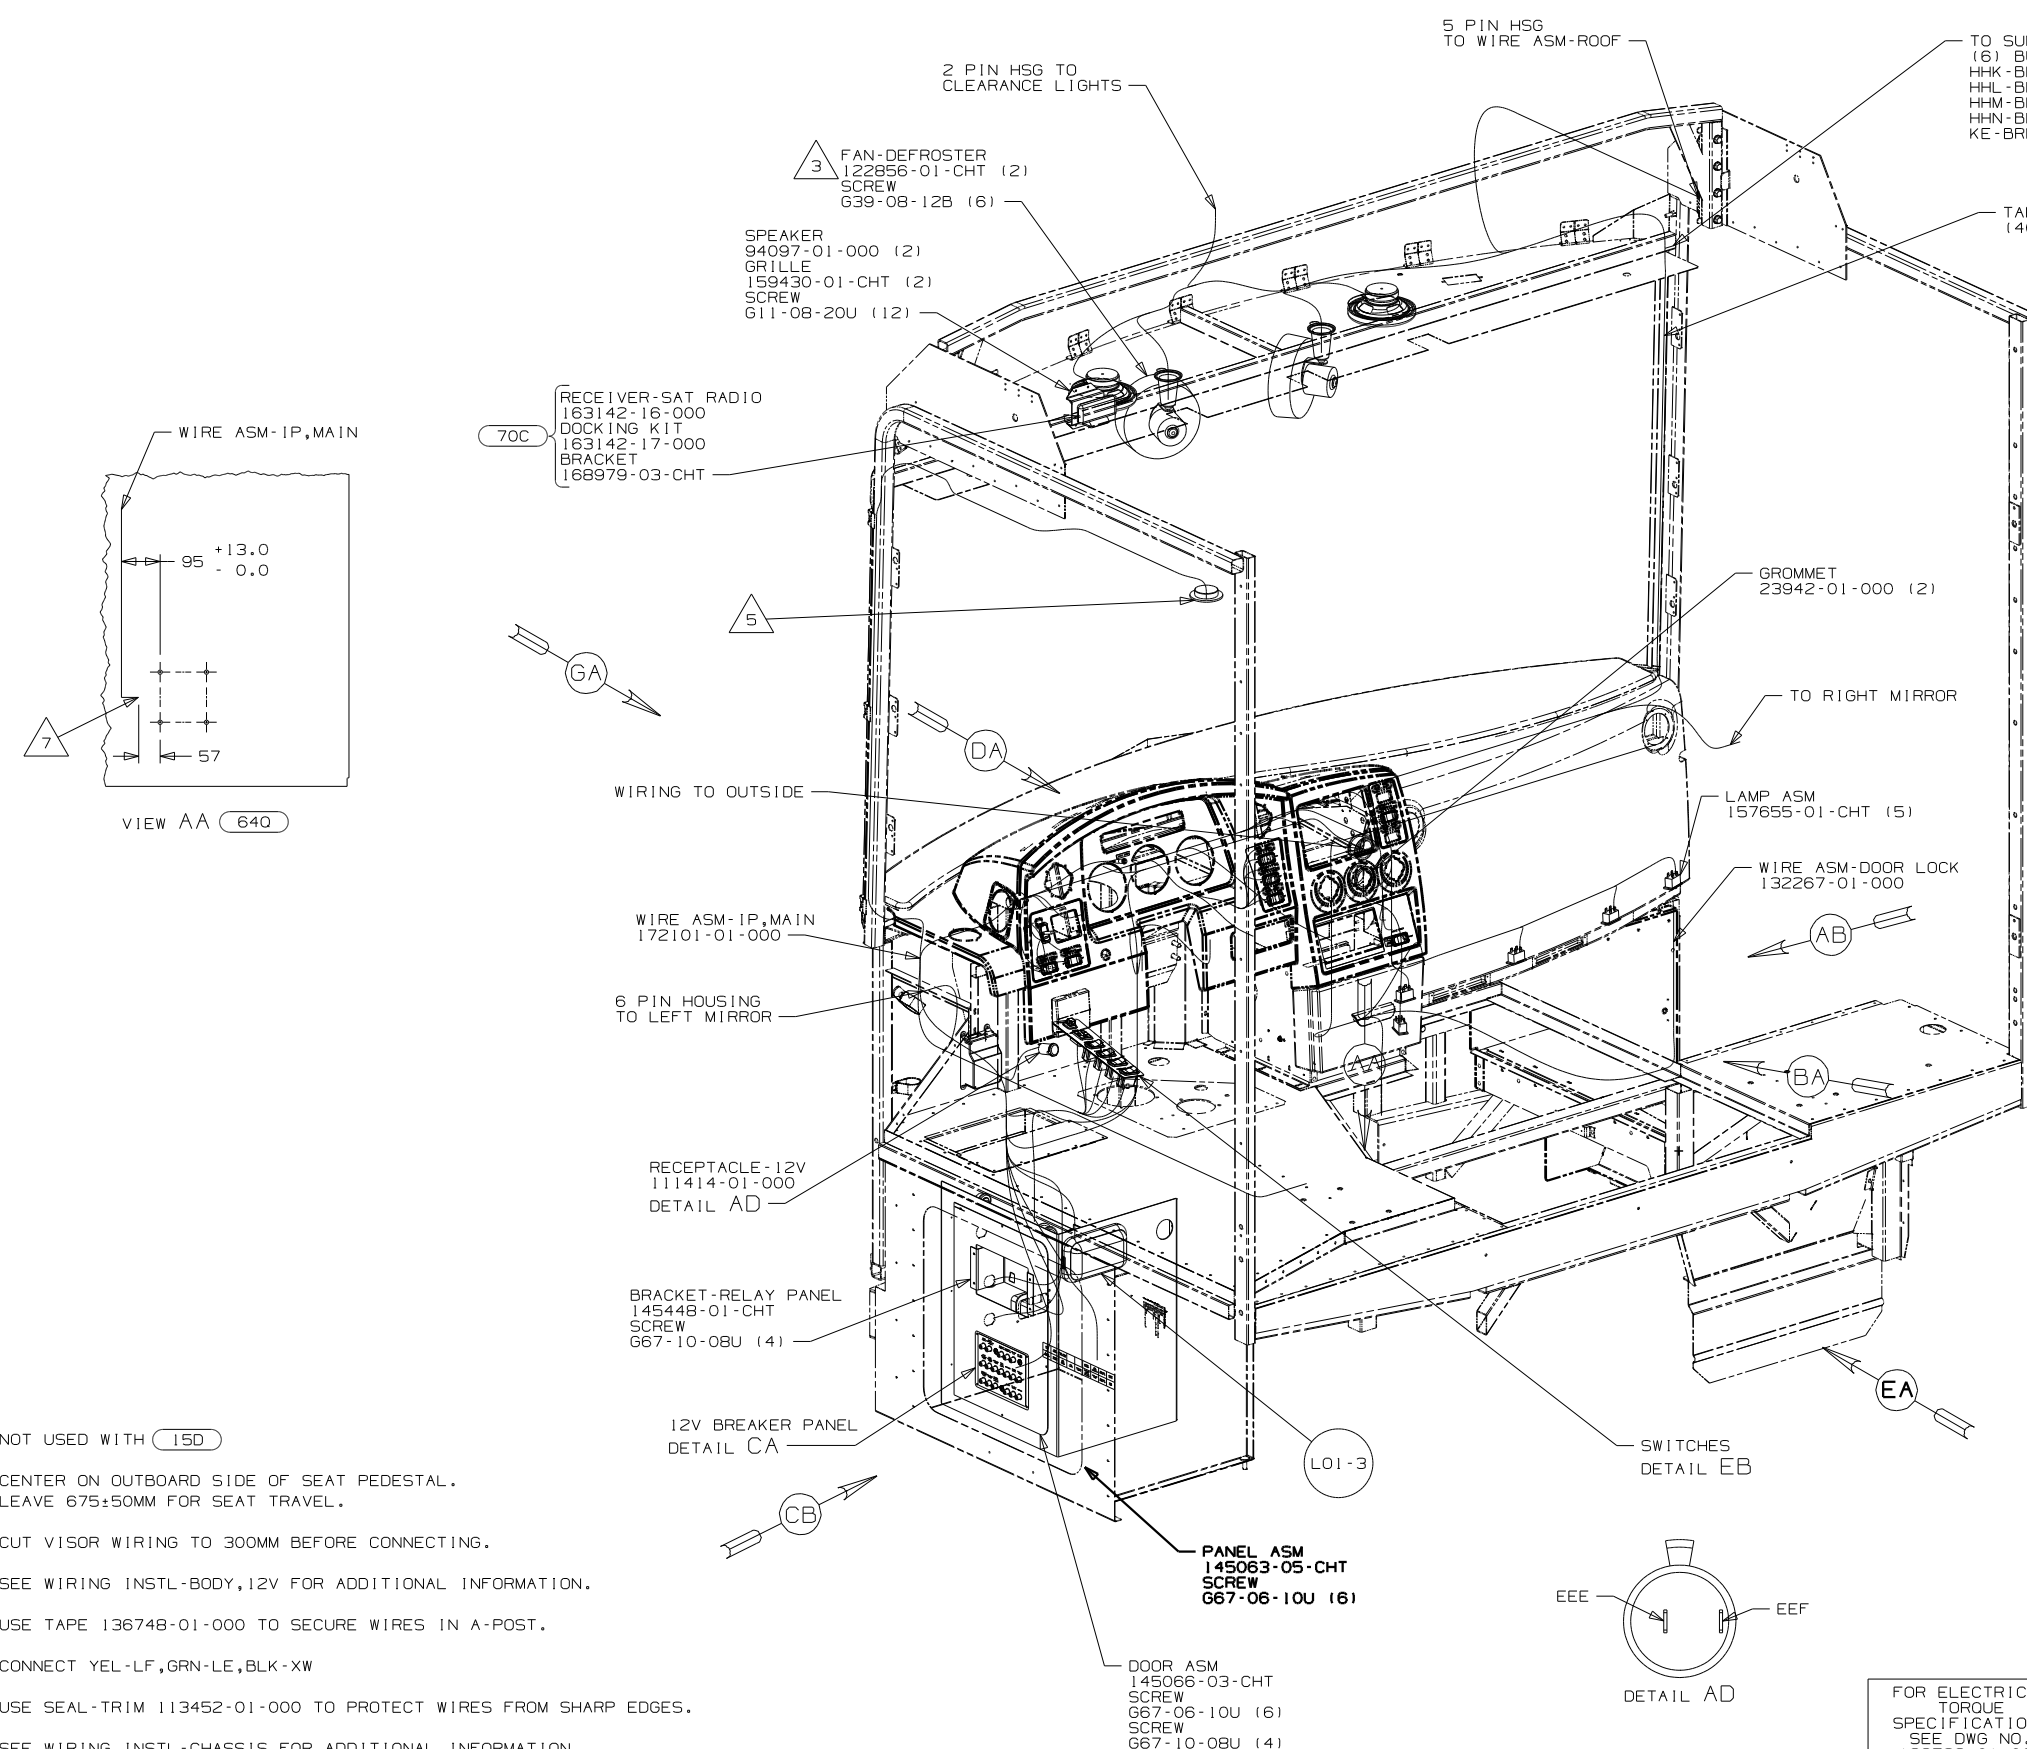

- 70C RADIO - SATELLITE
- 15D GPS-NAVIGATION SYSTEM
- 640 SEAT PED-6-WAY POWER DRIVER
- 265 CODES/STANDARDS-CSA/CMVSS
- 1B1 CODES/STANDARDS USA

WINNEBAGO 0 0 0 0 0 0 0 0 0 0 0 0		COPYRIGHT 2010 WINNEBAGO INDUSTRIES, INC.	
DFTR	ORIG. DATE	ALL DIMENSIONS ARE IN MILLIMETERS	
CHKR		FIRST USED	
P.E.		10 P-SERIES	
M.E.			
DSNR			
UNSPECIFIED TOLERANCES ARE:		MATERIAL:	
WHOLE DIM (X)		:	
ONE-PLACE (X.X)		:	
TWO-PLACE (X.XX)		:	
ANGLE		:	
THIRD ANGLE PROJECTION		:	
DO NOT SCALE DRAWING			
TITLE: WIRING INSTL-FRONT END			
SHEET 1 of 7	PART NO	170221	REV
REF:		12/19/2010	

- 8 NOT USED WITH 15D
 - 7 CENTER ON OUTBOARD SIDE OF SEAT PEDESTAL. LEAVE 675±50MM FOR SEAT TRAVEL.
 - 6 CUT VISOR WIRING TO 300MM BEFORE CONNECTING.
 - 5 SEE WIRING INSTL-BODY,12V FOR ADDITIONAL INFORMATION.
 - 4 USE TAPE 136748-01-000 TO SECURE WIRES IN A-POST.
 - 3 CONNECT YEL-LF,GRN-LE,BLK-XW
2. USE SEAL-TRIM 113452-01-000 TO PROTECT WIRES FROM SHARP EDGES.
1. SEE WIRING INSTL-CHASSIS FOR ADDITIONAL INFORMATION.
- NOTES:

FOR ELECTRICAL TORQUE SPECIFICATIONS SEE DWG NO. 128783-01-000

X-X FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-000

WIRE ASM-IP,MAIN

CB POWER PROVISION
YELLOW +12V
WHITE GROUND
COAX ANTENNA
(SEE REVERSE SIDE ALSO)

LABEL-CB PREP OPTION
104678-01-000



WHT YEL

TO CUSTOMERS
CB RADIO

DETAIL BB 579

2 PIN HOUSING
(2) BUTT SPLICES

2 & 6 PIN HOUSINGS
TO LEFT MIRROR

BUTT SPLICE
SPADE TERMINAL
TO 12V RCP

TO SWITCHES
DETAIL EB

9 PIN HSG
TO WIRE ASM-IP,LEFT

2 & 6 PIN HOUSINGS
TO HEATER/AC CONTROLS

15 PIN HSG
TO WIRE ASM-IP,RIGHT

TO RADIO WIRING

DETAIL BA

ALARM-JACKS DOWN
160876-01-000

(2) BUTT SPLICES
TO CB PREP
DETAIL BB
(5) BUTT SPLICES
TO BRAKE CONTROLLER
DETAIL BC

RING TERMINALS
TO GROUND STUD

3 PIN HOUSING
TO WIRE ASM-REAR MONITOR

15 PIN HSG
TO WIRE ASM-IP,POD



EDGE OF LABEL TO HANG JUST BELOW BOTTOM OF DASH.



ROUTE WIRES UP LEFT A-PILLAR.

NOTES:




FOR ELECTRICAL
TORQUE
SPECIFICATIONS
SEE DWG NO.
128783-01-000

FOR ELECTRICAL
CALLOUTS
SEE DWG NO.
121339-01-000

579 RADIO - CB WIRE PREP
265 CODES/STANDARDS-CSA/CMVSS
1B1 CODES/STANDARDS USA

1B1 265

FIRST USED		
10 P-SERIES		
DO NOT SCALE DRAWING		
TITLE:		
WIRING INSTL-FRONT END		
SHEET 2	PART NO	REV
	170221	

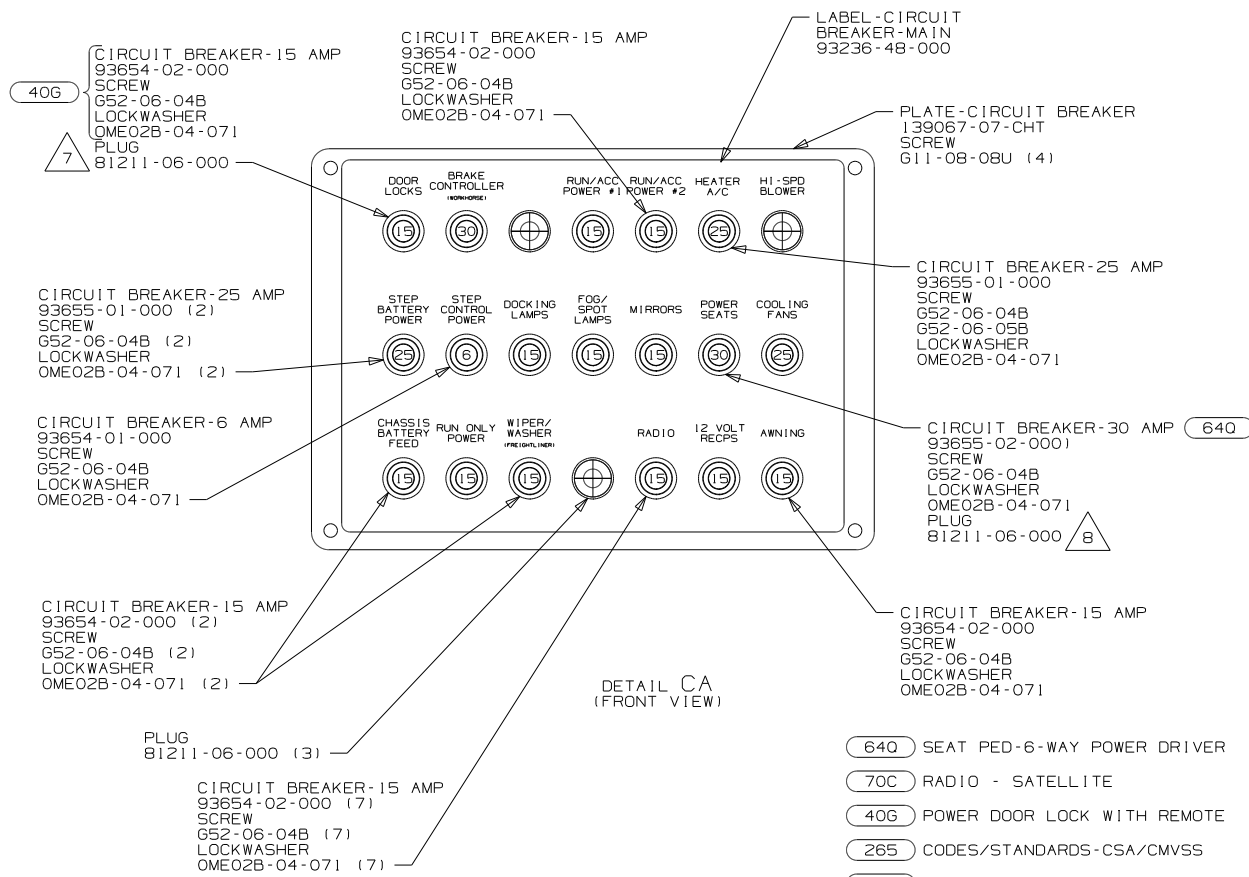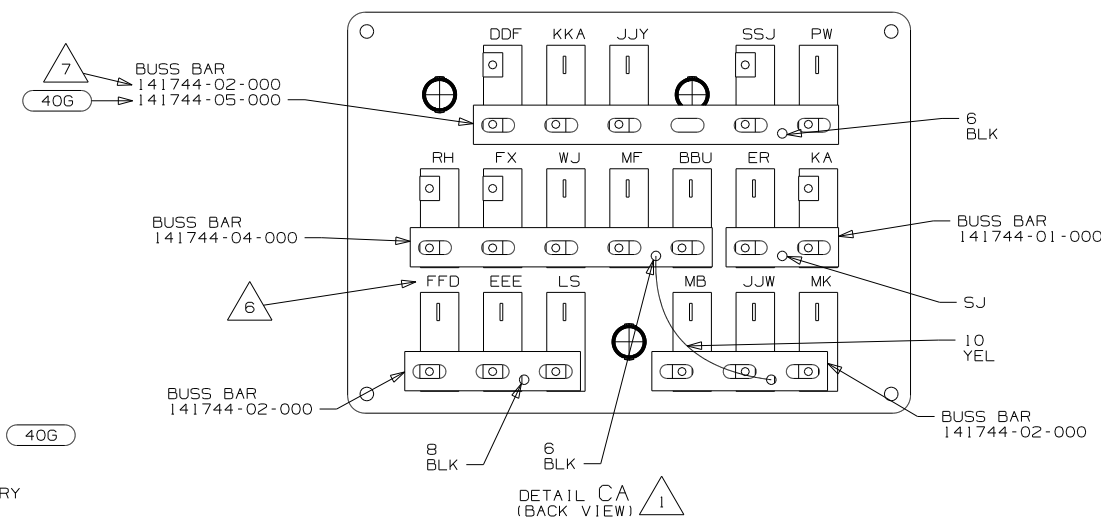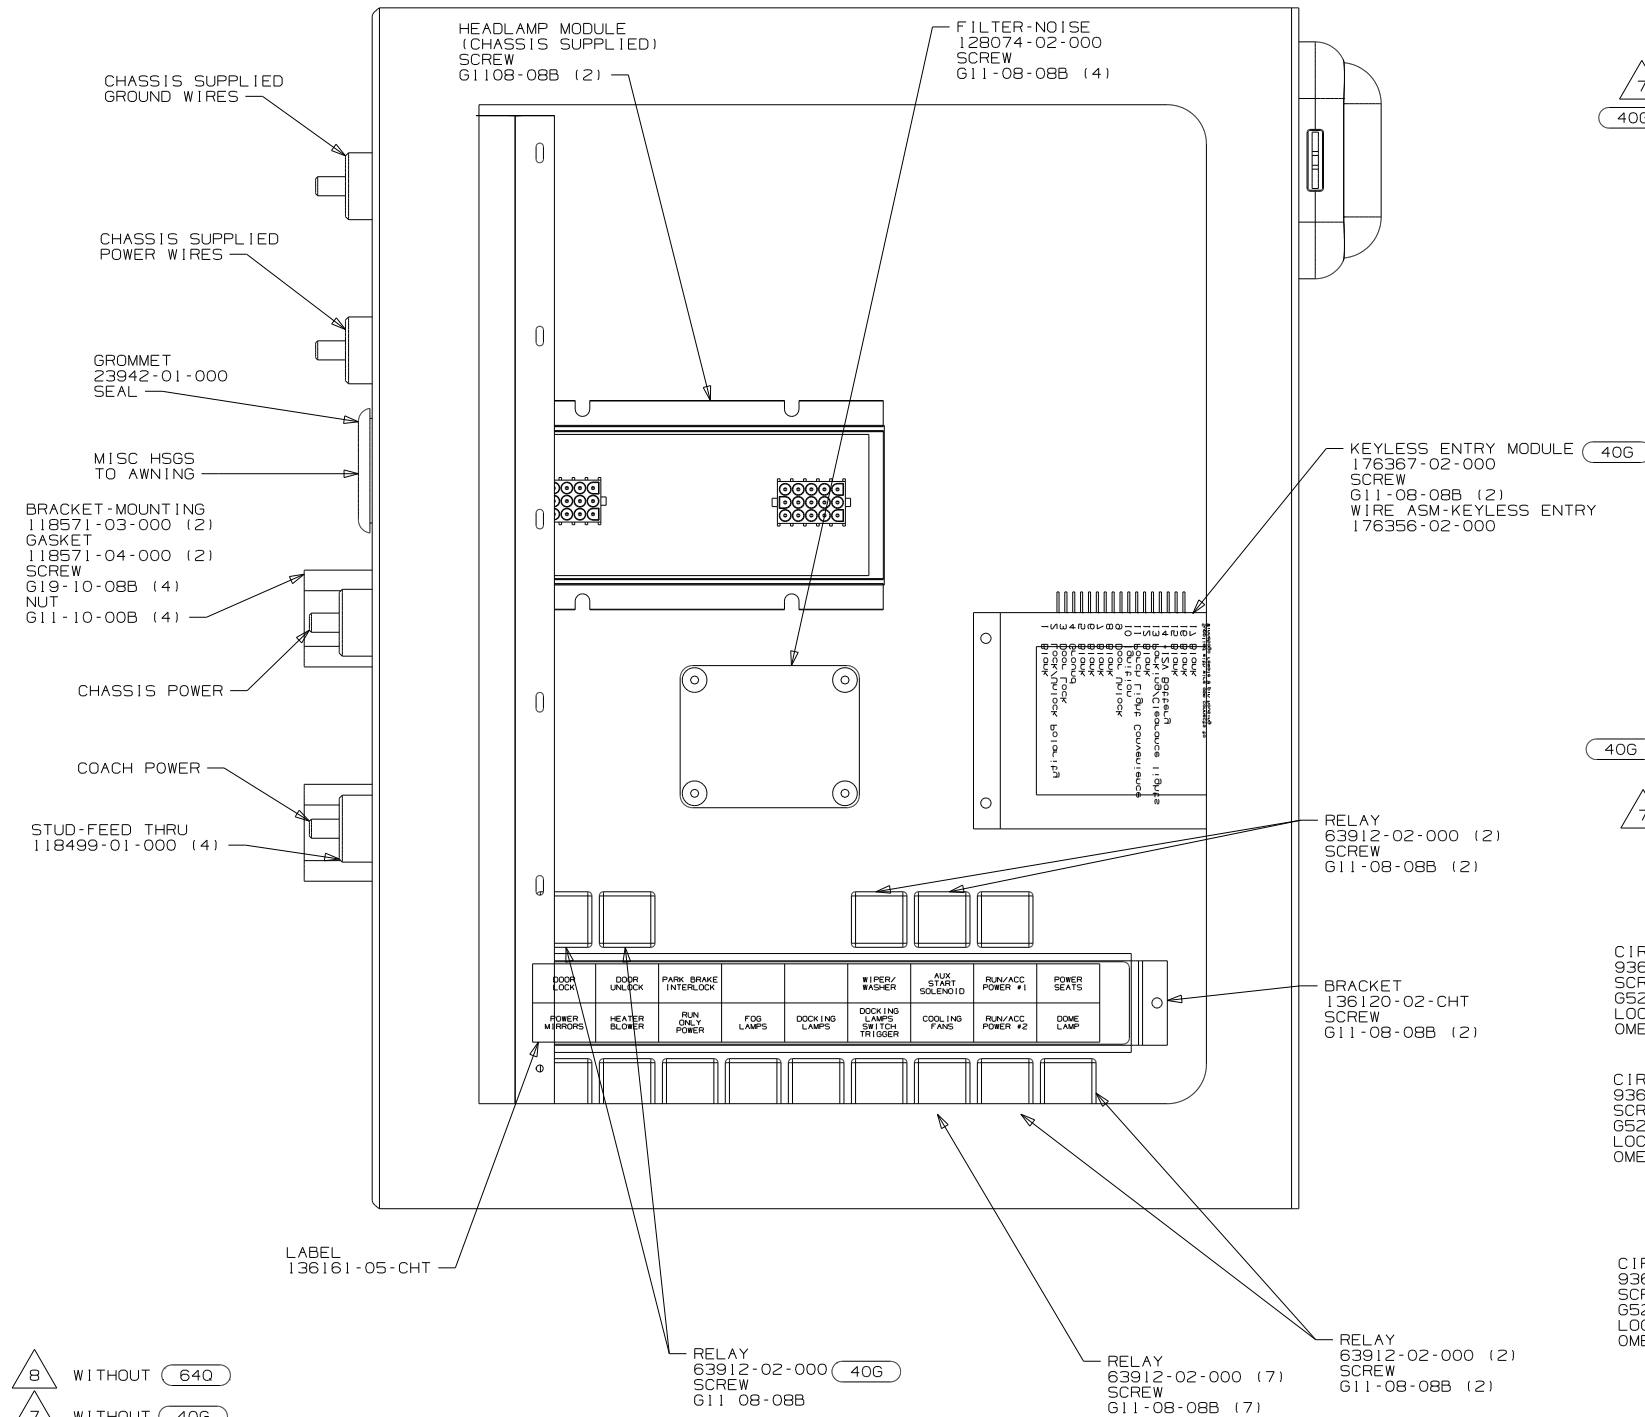


- 8 WITHOUT 640
- 7 WITHOUT 40G
- 6 CIRCUIT FFD IS PART OF WIRE ASM-CHASSIS.
- 5 ROUT UP LEFT A-PILLAR. SEE ANTENNA INSTL-RADIO & CB FOR ADDITIONAL INFORMATION.
- 4 S-SERIES ONLY
- 3 SEAL ALL SCREWS ON EXTERIOR SIDE OF COMPARTMENT. REFER TO SEALANT MANUAL.
- 2 SUPPLIED WITH WIPER CONTROL.
- 1 CIRCUITS LABELED ON BREAKER ARE FROM WIRE ASM-IP, MAIN, UNLESS OTHERWISE SPECIFIED.

NOTES:

FOR ELECTRICAL
TORQUE
SPECIFICATIONS
SEE DWG NO.
128783-01-000

X-X	FOR ELECTRICAL CALLOUTS SEE DWG NO. 121339-01-00
-----	--

FIRST USED			
10 P-SERIES			
DO NOT SCALE DRAWING			
TITLE: WIRING INSTL-FRONT END			
SHEET 3		PART NO 170221	REV

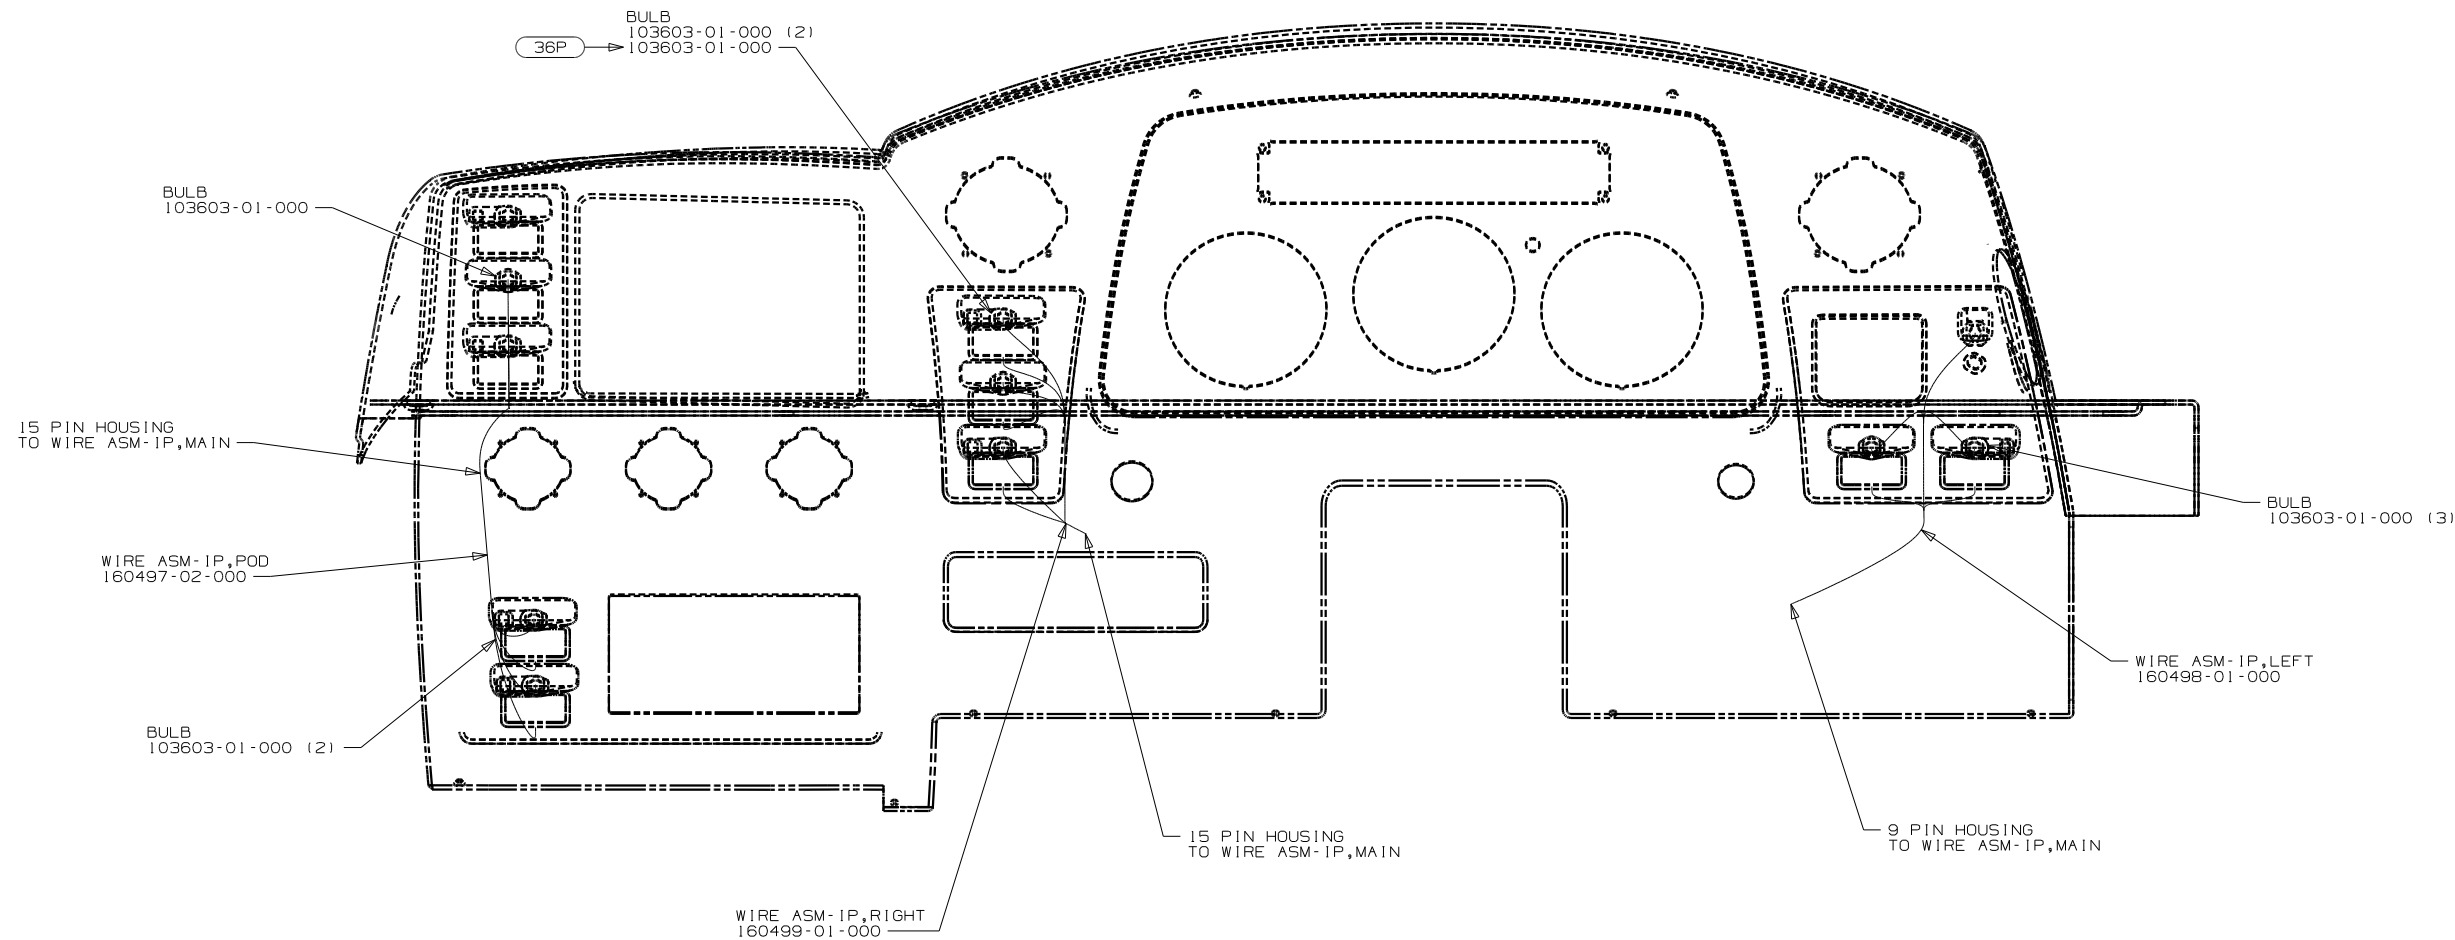


- 36P AIR HORNS
- 265 CODES/STANDARDS-CSA/CMVSS
- 1B1 CODES/STANDARDS USA
- 1B1 265

FOR ELECTRICAL
TORQUE
SPECIFICATIONS
SEE DWG NO.
128783-01-000

FOR
ELECTRICAL
CALLOUTS
SEE DWG NO.
121339-01-000

10 P-SERIES		
DO NOT SCALE DRAWING		
TITLE: WIRING INSTL-FRONT END		
SHEET 4	PART NO 170221	REV

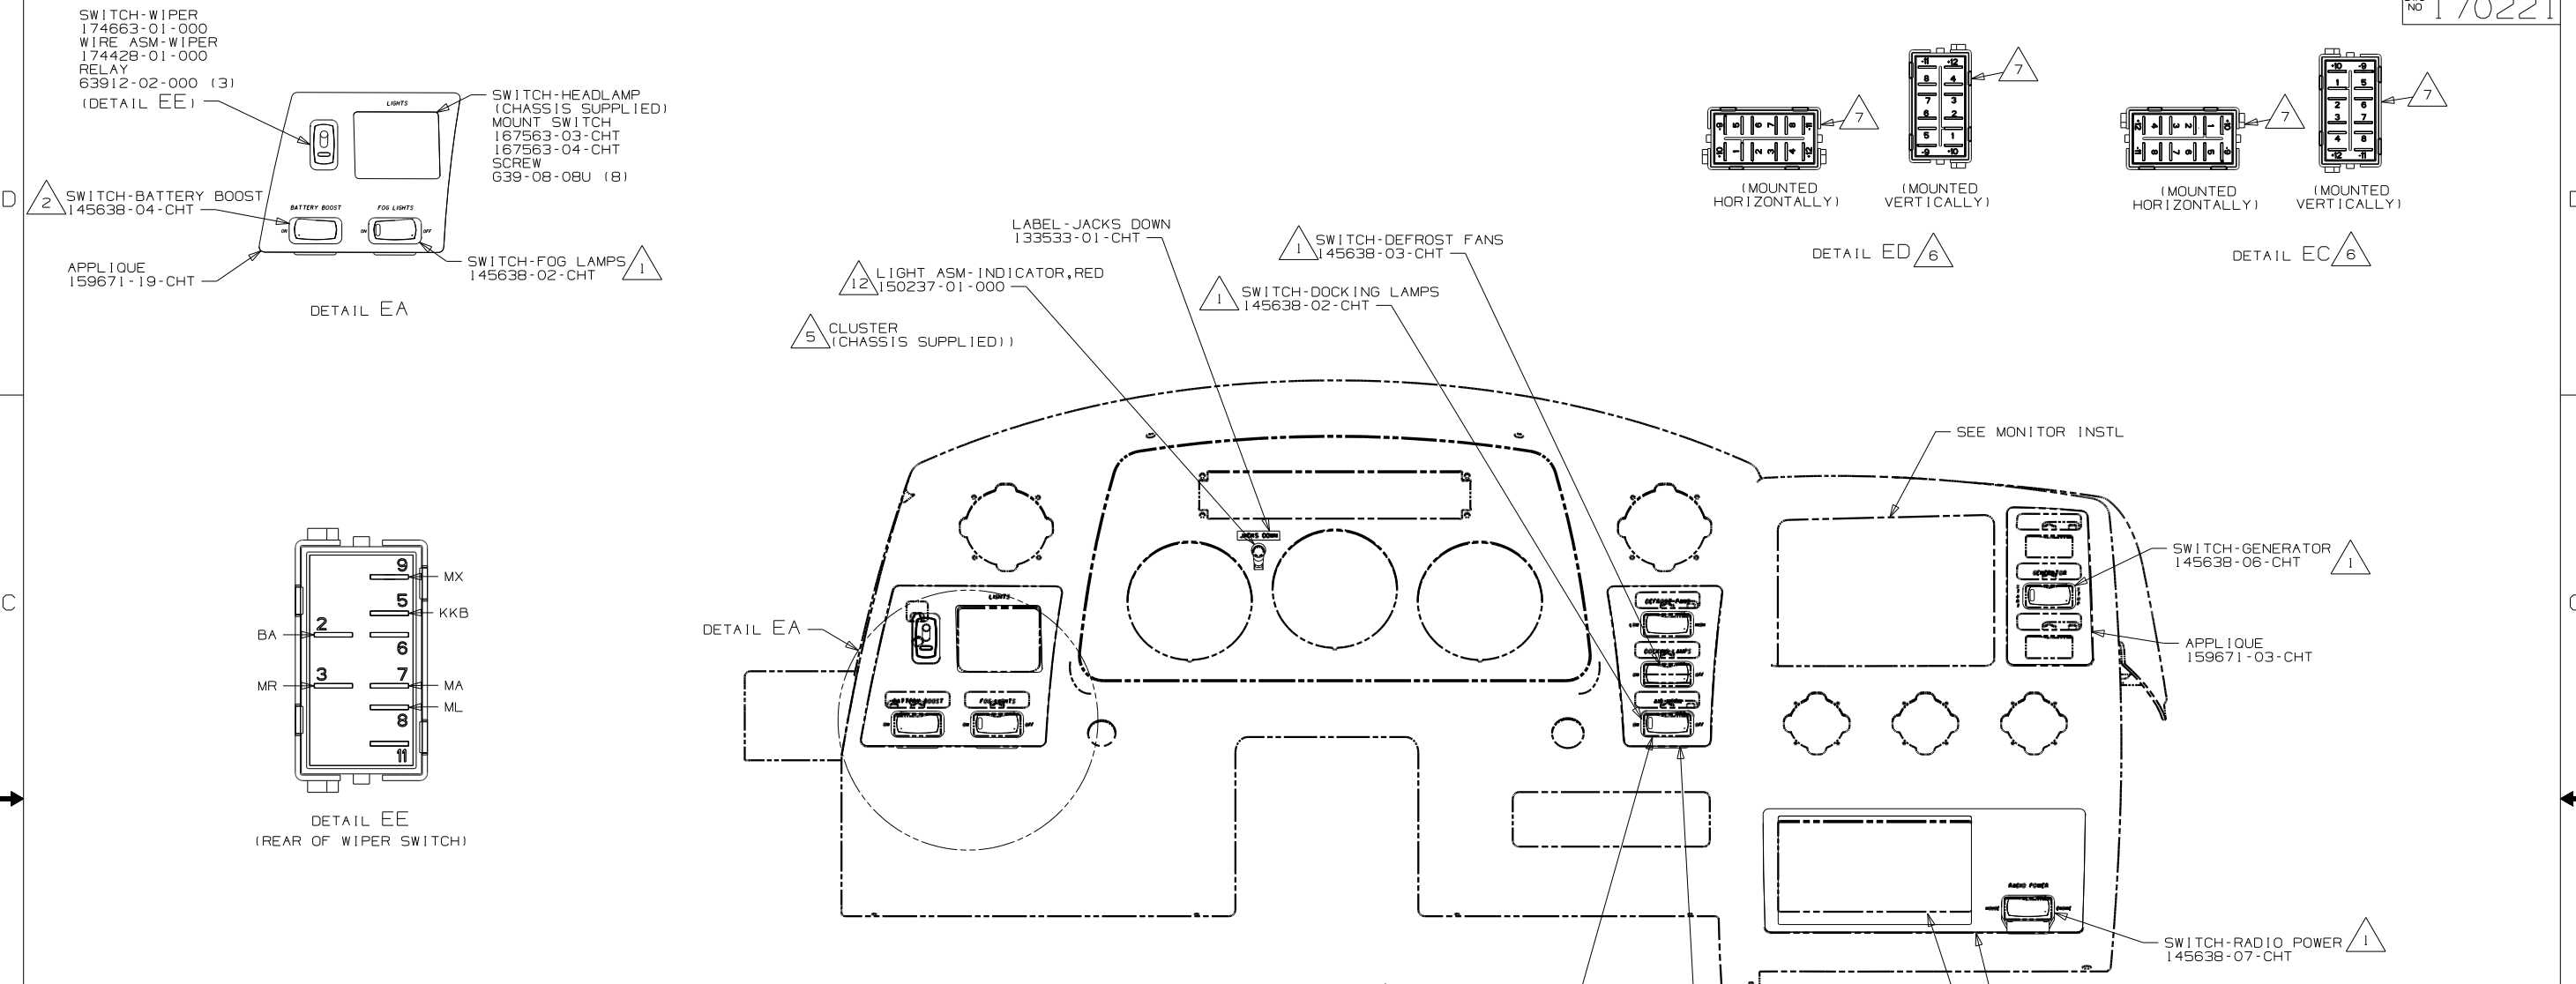

- 13 WITHOUT 36P
- 12 CONNECT POSITIVE WIRE TO TERMINAL MARKED WITH A "+", YEL-WINNEBAGO WIRING
- 11 FOR SWITCH WIRING SEE DETAIL FE.
- 10 FOR SWITCH WIRING SEE DETAIL FD.
- 9 FOR SWITCH WIRING SEE DETAIL FC.
- 8 FOR SWITCH WIRING SEE DETAIL FB.
- 7 WITH SWITCH INSTALLED, THIS SIDE OF SWITCH WILL FACE LEFT SIDEWALL.
- 6 DETAIL IS LOOKING AT SWITCH FROM THE BACK SIDE OF SWITCH AS IT IS INSTALLED.
- 5 SEE SHEET 7 FOR GAUGE PLACEMENT.
- 4 MOUNT SWITCH SO WHEN ACTUATOR IS PUSHED LEFT, THE LETTER L IS SHOWING.
- 3 FOR SWITCH WIRING SEE DETAIL FA.
- 2 FOR SWITCH ORIENTATION SEE DETAIL ED.
- 1 FOR SWITCH ORIENTATION SEE DETAIL EC.


NOTES:


- 28K SUNVISORS - MANUAL (2)
- 28F FRONT SHADE-POWERED
- 36P AIR HORNS
- 265 CODES/STANDARDS-CSA/CMVSS
- 1B1 CODES/STANDARDS USA

FIRST USED		10 P-SERIES	
		DO NOT SCALE DRAWING	
TITLE:		WIRING INSTL-FRONT END	
SHEET 5	PART NO	170221	REV

FOR ELECTRICAL
TORQUE
SPECIFICATIONS
SEE DWG NO.
128783-01-000

FOR ELECTRICAL
CALLOUTS
SEE DWG NO.
121339-01-000

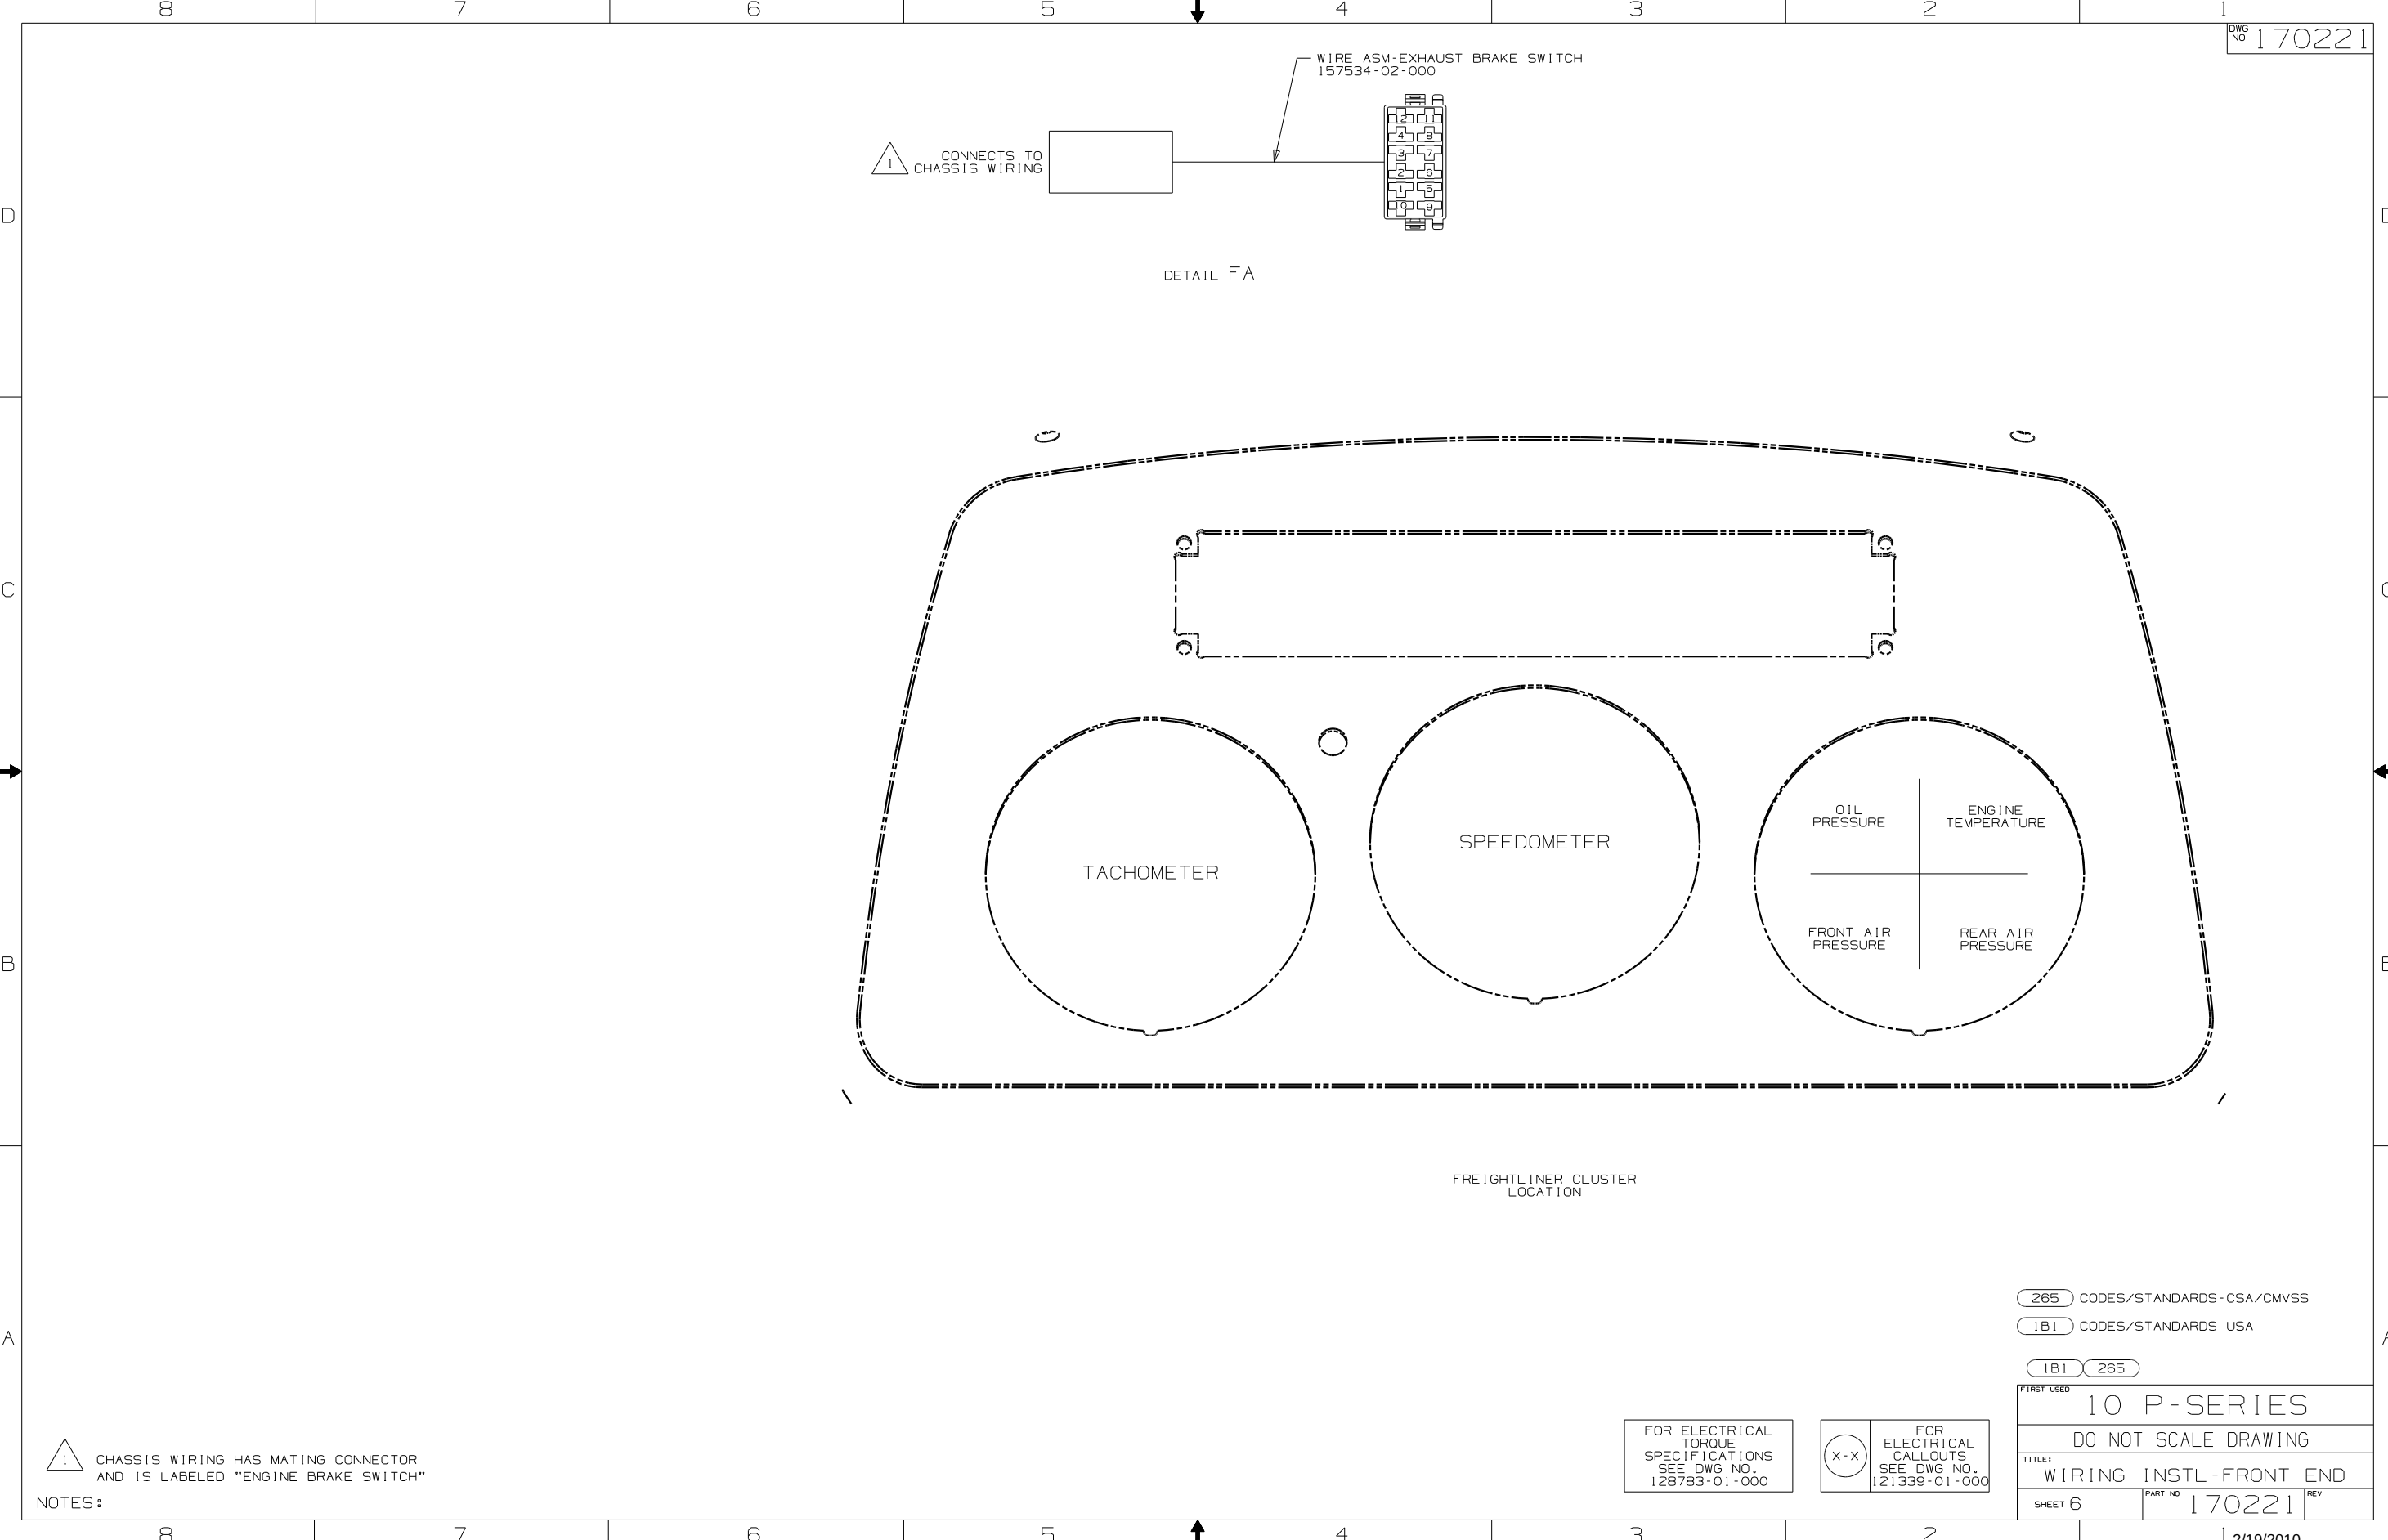

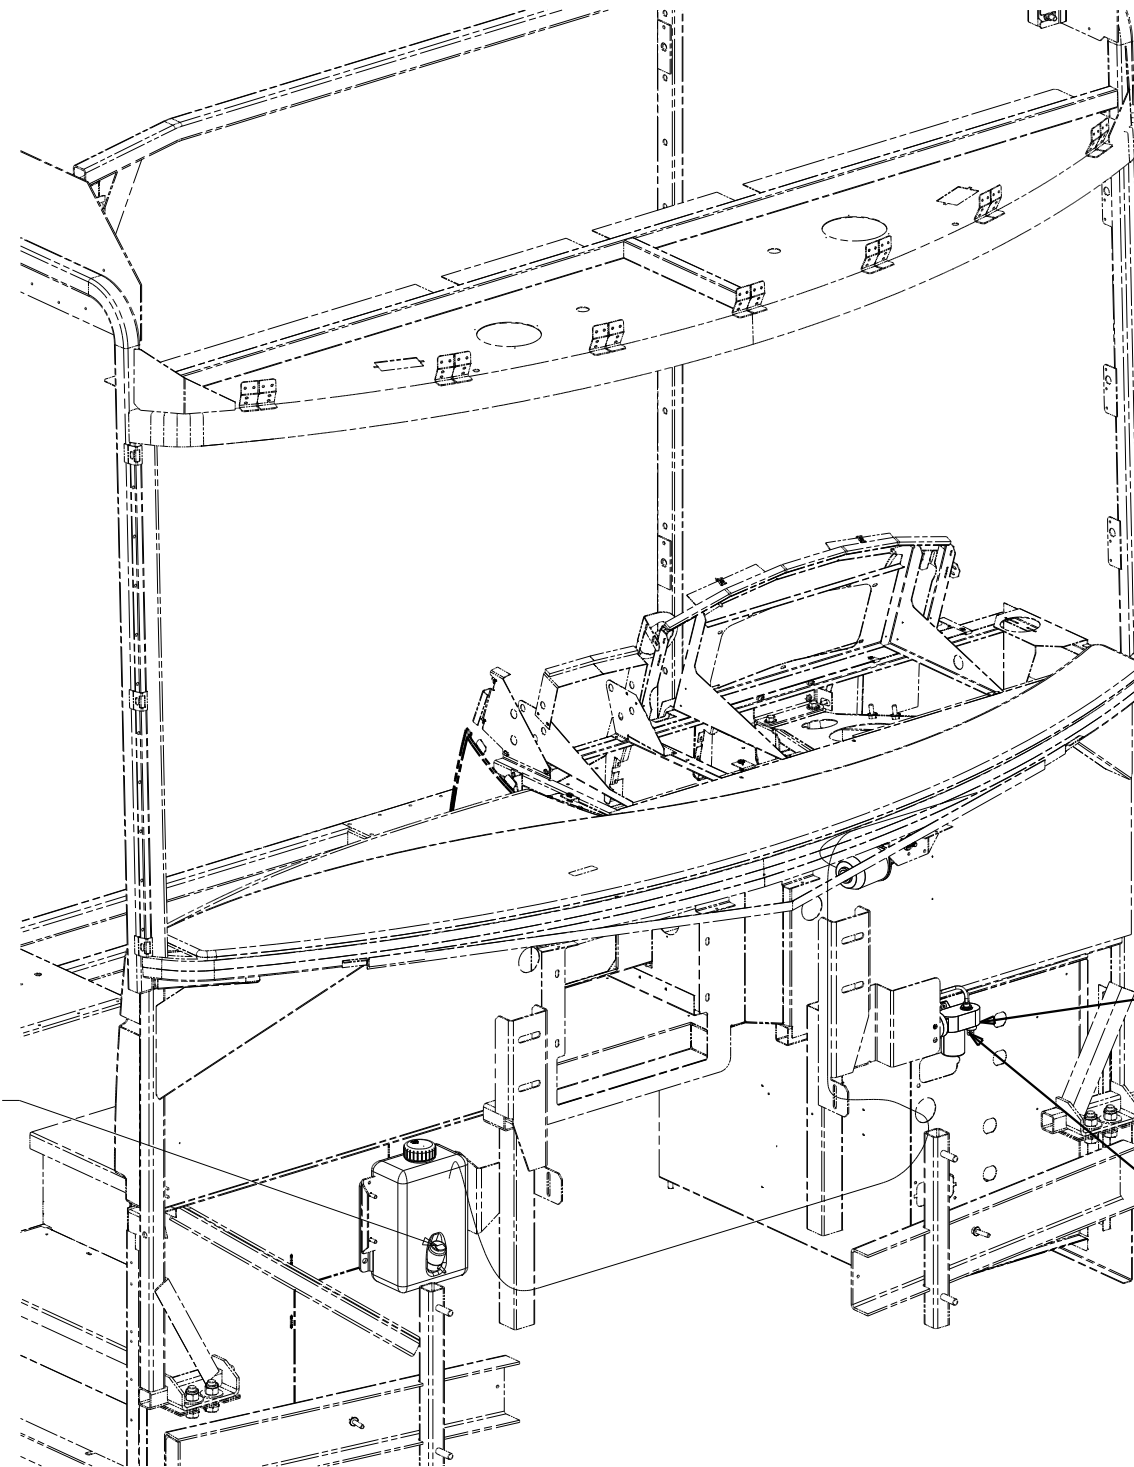

2 PIN HOUSING
TO WASHER BOTTLE

PUMP - VACUUM
114802-01-000
SCREW
611-08-128 (3)

2 PIN HOUSING
TO VACUUM PUMP

VIEW GA

FOR ELECTRICAL
TORQUE
SPECIFICATIONS
SEE DWG NO.
128783-01-000

FOR
ELECTRICAL
CALLOUTS
SEE DWG NO.
121339-01-000

265 CODES/STANDARDS - CSA/CMVSS

1B1 CODES/STANDARDS USA

1B1 265

FIRST USED		
10 P-SERIES		
DO NOT SCALE DRAWING		
TITLE: WIRING INSTL-FRONT END		
SHEET 7	PART NO 170221	REV